




DEATHACE HONDA

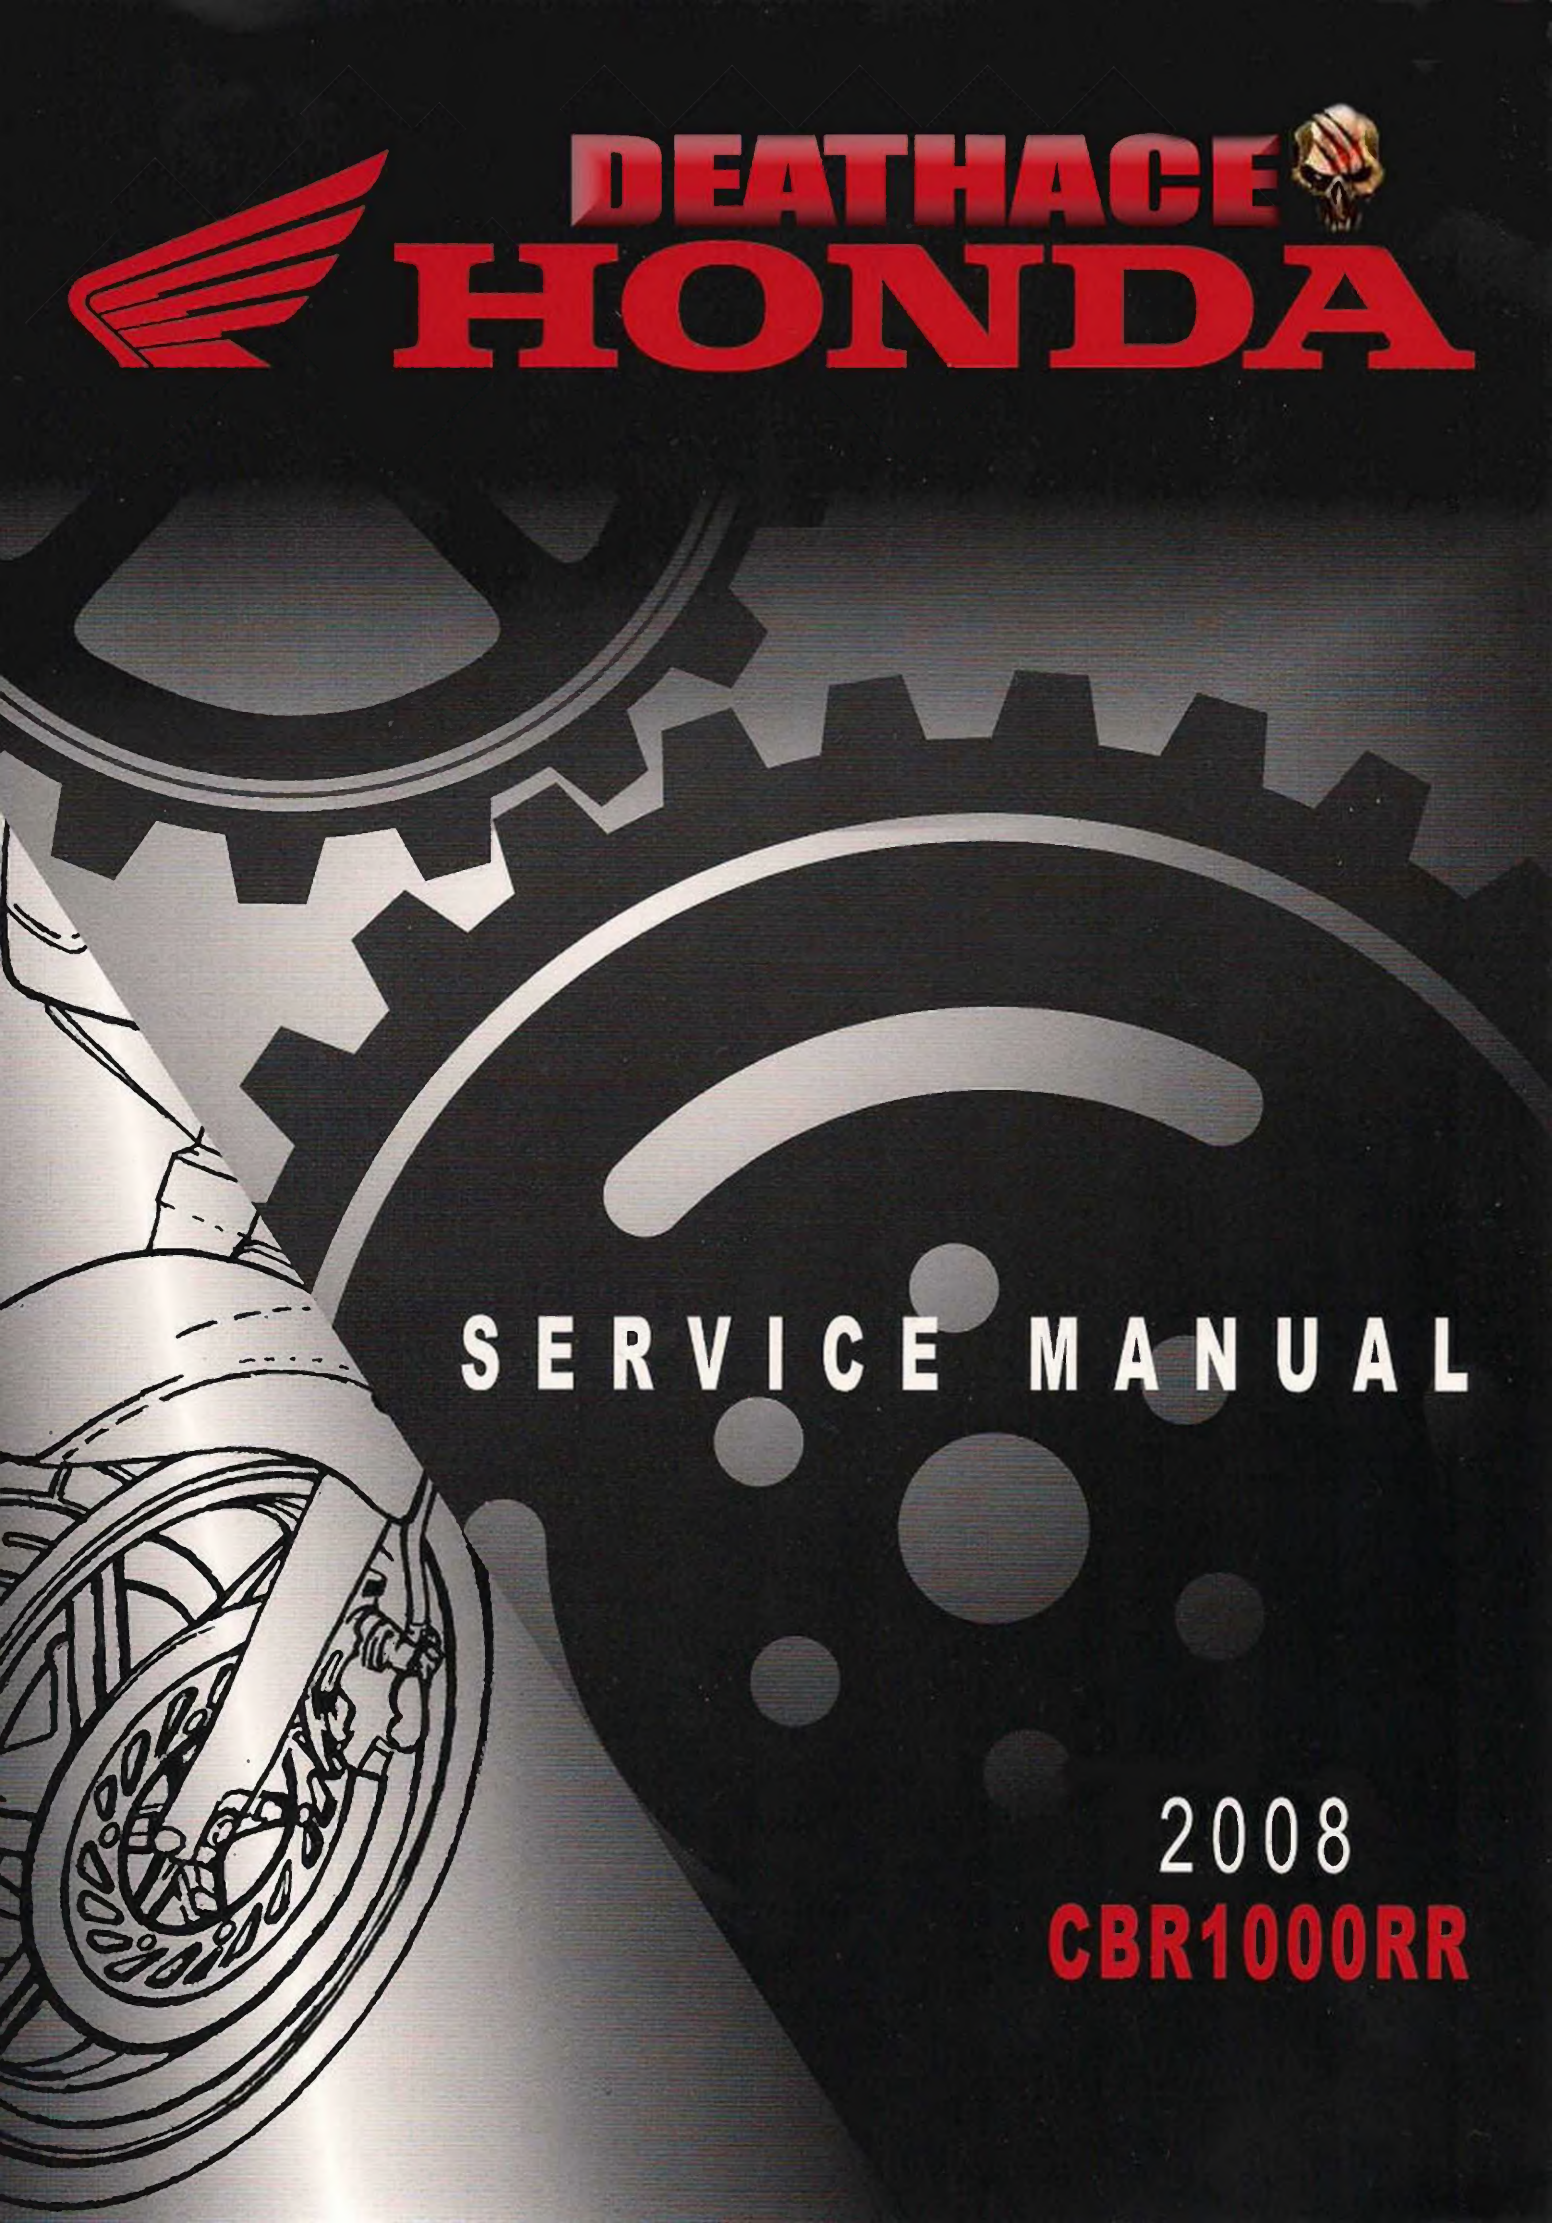

SERVICE MANUAL

2008
CBR1000RR

A Few Words About Safety

Service Information

The service and repair information contained in this manual is intended for use by qualified, professional technicians. Attempting service or repairs without the proper training, tools, and equipment could cause injury to you or others. It could also damage the vehicle or create an unsafe condition.

This manual describes the proper methods and procedures for performing service, maintenance, and repairs. Some procedures require the use of specially designed tools and dedicated equipment. Any person who intends to use a replacement part, service procedure or a tool that is not recommended by Honda, must determine the risks to their personal safety and the safe operation of the vehicle.

If you need to replace a part, use genuine Honda parts with the correct part number or an equivalent part. We strongly recommend that you do not use replacement parts of inferior quality.

For Your Customer's Safety

Proper service and maintenance are essential to the customer's safety and the reliability of the vehicle. Any error or oversight while servicing a vehicle can result in faulty operation, damage to the vehicle, or injury to others.

For Your Safety

Because this manual is intended for the professional service technician, we do not provide warnings about many basic shop safety practices (e.g., Hot parts—wear gloves). If you have not received shop safety training or do not feel confident about your knowledge of safe servicing practice, we recommended that you do not attempt to perform the procedures described in this manual.

Some of the most important general service safety precautions are given below. However, we cannot warn you of every conceivable hazard that can arise in performing service and repair procedures. Only you can decide whether or not you should perform a given task.

Important Safety Precautions

Make sure you have a clear understanding of all basic shop safety practices and that you are wearing appropriate clothing and using safety equipment. When performing any service task, be especially careful of the following:

- Read all of the instructions before you begin, and make sure you have the tools, the replacement or repair parts, and the skills required to perform the tasks safely and completely.
- Protect your eyes by using proper safety glasses, goggles or face shields any time you hammer, drill, grind, pry or work around pressurized air or liquids, and springs or other stored-energy components. If there is any doubt, put on eye protection.
- Use other protective wear when necessary, for example gloves or safety shoes. Handling hot or sharp parts can cause severe burns or cuts. Before you grab something that looks like it can hurt you, stop and put on gloves.
- Protect yourself and others whenever you have the vehicle up in the air. Any time you lift the vehicle, either with a hoist or a jack, make sure that it is always securely supported. Use jack stands.

Make sure the engine is off before you begin any servicing procedures, unless the instruction tells you to do otherwise. This will help eliminate several potential hazards:

- Carbon monoxide poisoning from engine exhaust. Be sure there is adequate ventilation whenever you run the engine.
- Burns from hot parts or coolant. Let the engine and exhaust system cool before working in those areas.
- Injury from moving parts. If the instruction tells you to run the engine, be sure your hands, fingers and clothing are out of the way.

Gasoline vapors and hydrogen gases from batteries are explosive. To reduce the possibility of a fire or explosion, be careful when working around gasoline or batteries.

- Use only a nonflammable solvent, not gasoline, to clean parts.
- Never drain or store gasoline in an open container.
- Keep all cigarettes, sparks and flames away from the battery and all fuel-related parts.

⚠ WARNING

Improper service or repairs can create an unsafe condition that can cause your customer or others to be seriously hurt or killed.

Follow the procedures and precautions in this manual and other service materials carefully.

⚠ WARNING

Failure to properly follow instructions and precautions can cause you to be seriously hurt or killed.

Follow the procedures and precautions in this manual carefully.

HOW TO USE THIS MANUAL

This service manual describes the service procedures for the CBR1000RR.

Follow the Maintenance Schedule (Section 4) recommendations to ensure that the vehicle is in peak operating condition and the emission levels are within the standards set by the U.S. Environmental Protection Agency (EPA) and California Air Resources Board (CARB) and Transport Canada.

Performing the first scheduled maintenance is very important. It compensates for the initial wear that occurs during the break-in period.

Sections 1 and 4 apply to the whole motorcycle. Section 3 illustrates procedures for removal/installation of components that may be required to perform service described in the following sections. Section 5 through 21 describe parts of the motorcycle, grouped according to location.

Find the section you want on this page, then turn to the table of contents on the first page of the section.

Most sections start with an assembly or system illustration, service information and troubleshooting for the section. The subsequent pages give detailed procedure.

If you are not familiar with this motorcycle, read Technical Features in Section 2.

If you don't know the source of the trouble, go to section 23 Troubleshooting.

Your safety, and the safety of others, is very important. To help you make informed decisions we have provided safety messages and other information throughout this manual. Of course, it is not practical or possible to warn you about all the hazards associated with servicing this vehicle. You must use your own good judgement. You will find important safety information in a variety of forms including:

- Safety Labels – on the vehicle
- Safety Messages – preceded by a safety alert symbol (1) and one of three signal words, DANGER, WARNING, or CAUTION.

These signal words mean:

DANGER You WILL be KILLED or SERIOUSLY HURT if you don't follow instructions.

WARNING You CAN be KILLED or SERIOUSLY HURT if you don't follow instructions.

CAUTION You CAN be HURT if you don't follow instructions.

- Instructions – how to service this vehicle correctly and safely.

As you read this manual, you will find information that is preceded by a **NOTICE** symbol. The purpose of this message is to help prevent damage to your vehicle, other property, or the environment.

ALL INFORMATION, ILLUSTRATIONS, DIRECTIONS AND SPECIFICATIONS INCLUDED IN THIS PUBLICATION ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF APPROVAL FOR PRINTING. Honda Motor Co., Ltd. RESERVES THE RIGHT TO MAKE CHANGES AT ANY TIME WITHOUT NOTICE AND WITHOUT INCURRING ANY OBLIGATION WHATSOEVER. NO PART OF THIS PUBLICATION MAY BE REPRODUCED WITHOUT WRITTEN PERMISSION. THIS MANUAL IS WRITTEN FOR PERSONS WHO HAVE ACQUIRED BASIC KNOWLEDGE OF MAINTENANCE ON Honda MOTORCYCLES, MOTOR SCOOTERS OR ATVS.

Honda Motor Co., Ltd.
SERVICE PUBLICATION OFFICE

CONTENTS

	GENERAL INFORMATION	1
	TECHNICAL FEATURES	2
	FRAME/BODY PANELS/EXHAUST SYSTEM	3
	MAINTENANCE	4
ENGINE AND DRIVE TRAIN	LUBRICATION SYSTEM	5
	FUEL SYSTEM (PGM-FI)	6
	COOLING SYSTEM	7
	ENGINE REMOVAL/INSTALLATION	8
	CYLINDER HEAD/VALVES	9
	CLUTCH/STARTER CLUTCH/GEARSHIFT LINKAGE	10
	ALTERNATOR	11
	CRANKCASE/TRANSMISSION/BALANCER	12
	CRANKSHAFT/PISTON/CYLINDER	13
	FRONT WHEEL/SUSPENSION/STEERING	14
CHASSIS	REAR WHEEL/SUSPENSION	15
	HYDRAULIC BRAKE	16
ELECTRICAL	BATTERY/CHARGING SYSTEM	17
	IGNITION SYSTEM	18
	ELECTRIC STARTER	19
	LIGHTS/METERS/SWITCHES	20
	WIRING DIAGRAM	21
	TROUBLESHOOTING	22
	INDEX	23

SYMBOLS

The symbols used throughout this manual show specific service procedures. If supplementary information is required pertaining to these symbols, it would be explained specifically in the text without the use of the symbols.

	Replace the part(s) with new one(s) before assembly.
	Use recommended engine oil, unless otherwise specified.
	Use molybdenum oil solution (mixture of the engine oil and molybdenum grease in a ratio of 1:1).
	Use multi-purpose grease (Lithium based multi-purpose grease NLGI #2 or equivalent).
	Use molybdenum disulfide grease (containing more than 3% molybdenum disulfide, NLGI #2 or equivalent). Example: Molykote® BR-2 plus manufactured by Dow Corning U.S.A. Multi-purpose M-2 manufactured by Mitsubishi Oil, Japan
	Use molybdenum disulfide paste (containing more than 40% molybdenum disulfide, NLGI #2 or equivalent). Example: Molykote® G-n Paste manufactured by Dow Corning U.S.A. Honda Moly 60 (U.S.A. only) Rocol ASP manufactured by Rocol Limited, U.K. Rocol Paste manufactured by Sumico Lubricant, Japan
	Use silicone grease.
	Apply locking agent. Use a middle strength locking agent unless otherwise specified.
	Apply sealant.
	Use DOT 4 brake fluid. Use the recommended brake fluid unless otherwise specified.
	Use Fork or Suspension Fluid.

SERVICE RULES	1-2	FRONT WHEEL/SUSPENSION/STEERING SPECIFICATIONS	1-10
MODEL IDENTIFICATION	1-3	REAR WHEEL/SUSPENSION SPECIFICATIONS	1-10
GENERAL SPECIFICATIONS	1-5	HYDRAULIC BRAKE SPECIFICATIONS ...	1-11
LUBRICATION SYSTEM SPECIFICATIONS	1-7	BATTERY/CHARGING SYSTEM SPECIFICATIONS	1-11
FUEL SYSTEM (PGM-FI) SPECIFICATIONS	1-7	IGNITION SYSTEM SPECIFICATIONS	1-11
COOLING SYSTEM SPECIFICATIONS	1-7	ELECTRIC STARTER SPECIFICATIONS	1-11
CYLINDER HEAD/VALVES SPECIFICATIONS	1-8	LIGHTS/METERS/SWITCHES SPECIFICATIONS	1-12
CLUTCH/STARTER CLUTCH/GEARSHIFT LINKAGE SPECIFICATIONS	1-8	TORQUE VALUES	1-13
CRANKCASE/TRANSMISSION/BALANCER SPECIFICATIONS	1-9	LUBRICATION & SEAL POINTS	1-18
CRANKSHAFT/PISTON/CYLINDER SPECIFICATIONS	1-9	CABLE & HARNESS ROUTING	1-20
		EMISSION CONTROL SYSTEMS	1-37

GENERAL INFORMATION


SERVICE RULES

1. Use genuine Honda or Honda-recommended parts and lubricants or their equivalents. Parts that don't meet Honda's design specifications may cause damage to the motorcycle.
2. Use the special tools designed for this product to avoid damage and incorrect assembly.
3. Use only metric tools when servicing the motorcycle. Metric bolts, nuts and screws are not interchangeable with English fasteners.
4. Install new gaskets, O-rings, cotter pins, and lock plates when reassembling.
5. When tightening bolts or nuts, begin with the larger diameter or inner bolt first. Then tighten to the specified torque diagonally in incremental steps unless a particular sequence is specified.
6. Clean parts in cleaning solvent upon disassembly. Lubricate any sliding surfaces before reassembly.
7. After reassembly, check all parts for proper installation and operation.
8. Route all electrical wires as shown in the Cable and Harness Routing (page 1-20).
9. Do not bend or twist control cables. Damaged control cables will not operate smoothly and may stick or bind.


ABBREVIATION

Throughout this manual, the following abbreviations are used to identify the respective parts or systems.


Abbrev. term	Full term
CKP sensor	Crankshaft Position sensor
CMP sensor	Camshaft Position sensor
DLC	Data Link Connector
DTC	Diagnostic Trouble Code
ECM	Engine Control Module
ECT sensor	Engine Coolant Temperature sensor
EEPROM	Electrically Erasable Programmable Read Only Memory
ECV	Exhaust Control Valve
ECV POT	Exhaust Control Valve Potentiometer
EGBV	Exhaust Gas Bypass Valve
EGCA	Exhaust Gas Control Actuator
EOP switch	Engine Oil Pressure switch
HDS	Honda Diagnostic System
HESD	Honda Electronic Steering Damper
IACV	Idle Air Control Valve
IAT sensor	Intake Air Temperature sensor
IDC solenoid valve	Intake Duct Control solenoid valve
MAP sensor	Manifold Absolute Pressure sensor
MIL	Malfunction Indicator Lamp
PAIR	Pulsed Secondary Air Injection
PGM-FI	Programmed Fuel Injection
SCS connector	Service Check Short connector
TP sensor	Throttle Position sensor
VS sensor	Vehicle Speed sensor

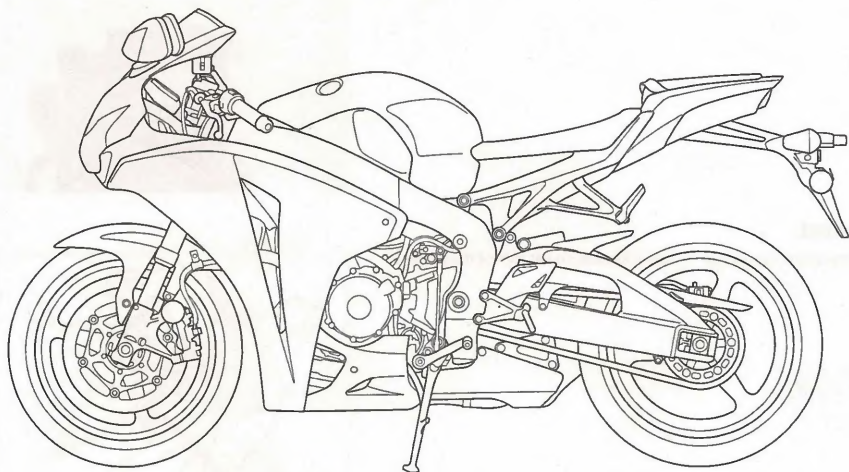MODEL IDENTIFICATION**SERIAL NUMBERS**

The Vehicle Identification Number (VIN) is stamped on the right side of the steering head as shown.

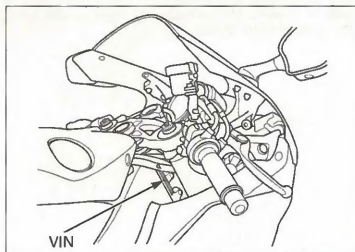

The engine serial number is stamped on the front side of the lower crankcase as shown.

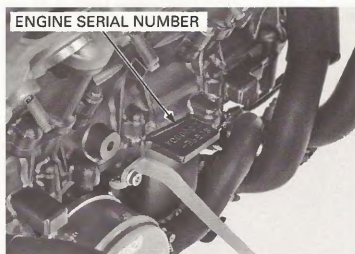

GENERAL INFORMATION

The throttle body identification number is stamped on the left side of the throttle body as shown.

THROTTLE BODY IDENTIFICATION NUMBER




LABEL

The Safety Certification Label is located on left side of the frame.




The color label is attached on the license light stay under the pillion seat as shown. When ordering color-coded parts, always specify the designated color code.

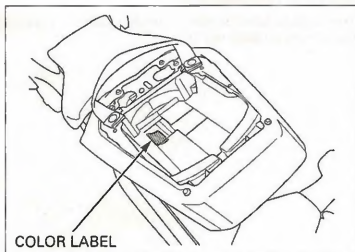

The Emission Control Information Label is located on the license light stay as shown.

EMISSION CONTROL INFORMATION LABEL

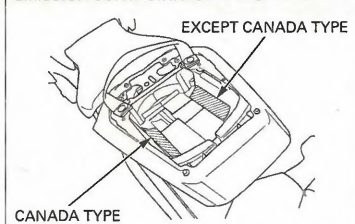

GENERAL SPECIFICATIONS

DIMENSIONS	ITEM	SPECIFICATIONS
	Overall length Overall width Overall height Wheelbase Seat height Footpeg height Ground clearance Curb weight Except California type: California type: Maximum weight capacity	2,080 mm (81.9 in) 685 mm (27.0 in) 1,130 mm (44.5 in) 1,410 mm (55.5 in) 820 mm (32.3 in) 396 mm (15.6 in) 130 mm (5.1 in) 199 kg (439 lbs) 200 kg (441 lbs) 166 kg (366 lbs)
FRAME	Frame type Front suspension Front axle travel Rear suspension Rear axle travel Front tire size Rear tire size Front tire brand Bridgestone Dunlop Bridgestone Dunlop Rear tire brand Front brake Rear brake Caster angle Trail length Fuel tank capacity	Diamond Telescopic fork 110 mm (4.3 in) Swingarm 138 mm (5.4 in) 120/70ZR17 M/C (58W) 190/50ZR17 M/C (73W) BT015F RADIAL F Qualifier PTK 8T015R RADIAL F Qualifier NK Hydraulic double disc Hydraulic single disc 23° 18' 96.3 mm (3.8 in) 17.7 liters (4.68 US gal, 3.89 Imp gal)
ENGINE	Cylinder arrangement Bore and stroke Displacement Compression ratio Valve train Intake valve opens at 1 mm (0.04 in) lift closes at 1 mm (0.04 in) lift Exhaust valve opens at 1 mm (0.04 in) lift closes at 1 mm (0.04 in) lift Lubrication system Oil pump type Cooling system Air filtration Engine dry weight Firing order	4 cylinders in-line, inclined 27.6° from vertical 76.0 x 55.1 mm (2.99 x 2.17 in) 999 cm³ (60.94 cu-in) 12.3 : 1 Chain driven, DOHC 21° BTDC 43° ABDC 41° BBDC 14° ATDC Forced pressure and wet sump Trochoid Liquid cooled Paper element 62.5 kg (137.8 lbs) 1 - 2 - 4 - 3
FUEL DELIVERY SYSTEM	Type Throttle bore	PGM-FI 46 mm (1.8 in)
DRIVE TRAIN	Clutch system Clutch operation system Transmission Primary reduction Final reduction Gear ratio 1st 2nd 3rd 4th 5th 6th Gearshift pattern	Multi-plate, wet Cable operating Constant mesh, 6-speeds 1.717 (79/46) 2.625 (42/16) 2.285 (32/14) 1.777 (32/18) 1.500 (33/22) 1.333 (32/24) 1.214 (34/28) 1.137 (33/29) Left foot operated return system, 1 - N - 2 - 3 - 4 - 5 - 6

GENERAL INFORMATION

ITEM		SPECIFICATIONS
ELECTRICAL	Ignition system	Computer-controlled digital transistorized with electric advance
	Starting system	Electric starter motor
	Charging system	Triple phase output alternator
	Regulator/rectifier	FET shorted/triple phase, full wave rectification
	Lighting system	Battery

LUBRICATION SYSTEM SPECIFICATIONS

ITEM		STANDARD	SERVICE LIMIT
Engine oil capacity	After draining	2.8 liters (3.0 US qt, 2.5 Imp qt)	—
	After oil filter change	3.0 liters (3.2 US qt, 2.6 Imp qt)	—
	After disassembly	3.7 liters (3.9 US qt, 3.3 Imp qt)	—
Recommended engine oil		Pro Honda GN4-4-stroke oil (U.S.A. and Canada) or equivalent motor oil API service classification: SG or Higher JASO T 903 standard: MA Viscosity: SAE 10W-30	—
Oil pressure at EOP switch		590 kPa (6.0 kgf/cm ² , 86 psi) at 6,000 rpm/(80°C/176°F)	—
Oil pump	Tip clearance	0.15 (0.006)	0.20 (0.008)
	Body clearance	0.15 – 0.21 (0.006 – 0.008)	0.35 (0.014)
	Side clearance	0.04 – 0.09 (0.002 – 0.004)	0.17 (0.007)

FUEL SYSTEM (PGM-FI) SPECIFICATIONS

ITEM		SPECIFICATIONS
Throttle body identification number	Except California type	GQ23C
	California type	GQ23B
Idle speed		1,200 ± 100 rpm
Throttle grip freeplay		2 – 5 mm (1/16 – 3/16 in)
IAT sensor resistance (at 20°C/68°F)		1 – 4 kΩ
Fuel injector resistance (at 20°C/68°F)	Primary injector	11 – 13 Ω
	Secondary injector	11 – 13 Ω
PAJR control solenoid valve resistance (at 20°C/68°F)		23 – 27 Ω
IDC solenoid valve resistance (at 20°C/68°F)		28 – 32 Ω
CKP sensor peak voltage (at 20°C/68°F)		0.7 V minimum
Fuel pressure at idle		343 kPa (3.5 kgf/cm ² , 50 psi)
Fuel pump flow (at 12 V)		167 cm ³ (5.6 US oz, 5.9 Imp oz) minimum/10 seconds

COOLING SYSTEM SPECIFICATIONS

ITEM		SPECIFICATIONS
Coolant capacity	Radiator and engine	3.0 liters (3.2 US qt, 2.6 Imp qt)
	Reserve tank	0.34 liter (0.36 US qt, 0.30 Imp qt)
Radiator cap relief pressure		108 – 137 kPa (1.1 – 1.4 kgf/cm ² , 16 – 20 psi)
Thermostat	Begin to open	80 – 84°C (176 – 183°F)
	Fully open	95°C (203°F)
	Valve lift	8 mm (0.3 in) minimum
Recommended antifreeze		Pro Honda HP Coolant or an equivalent high quality ethylene glycol antifreeze containing silicate free corrosion inhibitors
Standard coolant concentration		1:1 (mixture with distilled water)

GENERAL INFORMATION

CYLINDER HEAD/VALVES SPECIFICATIONS

Unit: mm (in)

ITEM			STANDARD	SERVICE LIMIT
Cylinder compression			1,196 kPa (12.2 kgf/cm ² , 174 psi) at 210 rpm	—
Valve clearance		IN	0.16 ± 0.03 (0.006 ± 0.001)	—
		EX	0.30 ± 0.03 (0.012 ± 0.001)	—
Camshaft	Cam lobe height	IN	37.34 – 37.58 (1.470 – 1.480)	37.32 (1.469)
		EX	36.58 – 36.82 (1.440 – 1.450)	36.56 (1.439)
	Runout		—	0.05 (0.002)
			0.020 – 0.062 (0.0008 – 0.0024)	0.10 (0.004)
Valve lifter	Valve lifter O.D.	IN/EX	25.978 – 25.993 (1.0228 – 1.0233)	25.97 (1.022)
	Valve lifter bore I.D.	IN/EX	26.010 – 26.026 (1.0240 – 1.0246)	26.04 (1.025)
Valve, valve guide	Valve stem O.D.	IN	4.475 – 4.490 (0.1762 – 0.1768)	4.465 (0.1758)
		EX	3.965 – 3.980 (0.1561 – 0.1567)	3.955 (0.1557)
	Valve guide I.D.	IN	4.500 – 4.512 (0.1772 – 0.1776)	4.54 (0.179)
		EX	4.000 – 4.012 (0.1575 – 0.1580)	4.04 (0.159)
	Stem-to-guide clearance	IN	0.010 – 0.037 (0.0004 – 0.0015)	0.075 (0.0030)
		EX	0.020 – 0.047 (0.0008 – 0.0019)	0.085 (0.0033)
	Valve guide projection above cylinder head	IN	15.1 – 15.4 (0.59 – 0.61)	—
		EX	15.7 – 16.0 (0.62 – 0.63)	—
Valve spring free length	Valve seat width	IN/EX	0.90 – 1.10 (0.035 – 0.043)	1.5 (0.06)
		Inner	35.25 (1.388)	34.5 (1.36)
	EX	Outer	38.93 (1.533)	38.2 (1.50)
Cylinder head warpage			—	0.10 (0.004)

CLUTCH/STARTER CLUTCH/GEARSHIFT LINKAGE SPECIFICATIONS

Unit: mm (in)

ITEM			STANDARD	SERVICE LIMIT
Clutch lever freeplay			10 – 20 (3/8 – 13/16)	—
Clutch	Spring free height		5.70 (0.224)	4.7 (0.19)
	Disc thickness	Disc A	3.72 – 3.88 (0.146 – 0.153)	3.6 (0.14)
		Disc B	3.22 – 3.38 (0.127 – 0.133)	3.1 (0.12)
		Disc C	3.22 – 3.38 (0.127 – 0.133)	3.1 (0.12)
	Plate warpage			0.30 (0.012)
Clutch outer guide A (Without ID mark)	I.D.	27.993 – 28.003 (1.1021 – 1.1025)	28.012 (1.1028)	
	O.D.	35.004 – 35.012 (1.3781 – 1.3784)	34.994 (1.3777)	
Clutch outer guide B (With ID mark)	I.D.	27.993 – 28.003 (1.1021 – 1.1025)	28.012 (1.1028)	
	O.D.	34.996 – 35.004 (1.3778 – 1.3781)	34.986 (1.3774)	
Primary driven gear I.D.	White	41.008 – 41.016 (1.6145 – 1.6148)	41.026 (1.6152)	
	Black	41.000 – 41.008 (1.6142 – 1.6145)	41.018 (1.6149)	
Oil pump drive sprocket guide	I.D.	28.000 – 28.021 (1.1024 – 1.1032)	28.030 (1.1035)	
	O.D.	34.975 – 34.991 (1.3770 – 1.3776)	34.965 (1.3766)	
Oil pump drive sprocket I.D.			35.025 – 35.145 (1.3789 – 1.3837)	35.155 (1.3841)
Mainshaft O.D. at clutch outer guide			27.980 – 27.990 (1.1016 – 1.1020)	27.96 (1.101)
Mainshaft O.D. at oil pump drive sprocket guide			27.980 – 27.990 (1.1016 – 1.1020)	27.96 (1.101)
Starter driven gear boss O.D.			45.657 – 45.673 (1.7975 – 1.7981)	45.642 (1.7969)

CRANKCASE/TRANSMISSION/BALANCER SPECIFICATIONS

Unit: mm (in)

ITEM			STANDARD	SERVICE LIMIT
Shift fork	I.D.		14.000 – 14.018 (0.5512 – 0.5519)	14.03 (0.552)
	Claw thickness		5.93 – 6.00 (0.233 – 0.236)	5.9 (0.23)
Shift fork shaft O.D.			13.957 – 13.975 (0.5495 – 0.5502)	13.95 (0.549)
Transmission	Gear I.D.	M5, M6	31.000 – 31.025 (1.2205 – 1.2215)	31.04 (1.222)
		C1	28.000 – 28.021 (1.1024 – 1.1032)	28.04 (1.104)
		C2, C3, C4	33.000 – 33.025 (1.2992 – 1.3002)	33.04 (1.301)
		M5	30.955 – 30.980 (1.2187 – 1.2197)	30.935 (1.2179)
	Gear busing O.D.	M6	30.950 – 30.975 (1.2185 – 1.2195)	30.930 (1.2177)
		C2	32.955 – 32.980 (1.2974 – 1.2984)	32.935 (1.2967)
		C3, C4	32.950 – 32.975 (1.2972 – 1.2982)	32.930 (1.2965)
		M5, C2	0.020 – 0.070 (0.0008 – 0.0028)	0.10 (0.004)
	Gear-to-bushing clearance	M6, C3, C4	0.025 – 0.075 (0.0010 – 0.0030)	0.11 (0.004)
	Gear bushing I.D.	M5	27.985 – 28.006 (1.1018 – 1.1026)	28.016 (1.1030)
		C2	29.985 – 30.006 (1.1530 – 1.1813)	30.021 (1.1819)
	Mainshaft O.D.	at M5	27.967 – 27.980 (1.1011 – 1.1016)	27.957 (1.1007)
	Countershaft O.D.	at C2	29.967 – 29.980 (1.1798 – 1.1803)	29.960 (1.1795)
	Bushing to shaft clearance	M5, C2	0.005 – 0.039 (0.0002 – 0.0015)	0.06 (0.002)

CRANKSHAFT/PISTON/CYLINDER SPECIFICATIONS

Unit: mm (in)

ITEM			STANDARD	SERVICE LIMIT
Crankshaft	Connecting rod side clearance		0.15 – 0.30 (0.006 – 0.012)	0.35 (0.014)
	Crankpin bearing oil clearance		0.030 – 0.052 (0.0012 – 0.0020)	0.06 (0.002)
	Main journal bearing oil clearance		0.019 – 0.037 (0.0007 – 0.0015)	0.05 (0.002)
	Runout		–	0.05 (0.002)
Piston, piston rings	Piston O.D. at 5 mm (0.2 in) from bottom		75.965 – 75.985 (2.9907 – 2.9915)	75.895 (2.9880)
	Piston pin bore I.D.		17.002 – 17.008 (0.6694 – 0.6696)	17.030 (0.6705)
	Piston pin O.D.		16.994 – 17.000 (0.6691 – 0.6693)	16.980 (0.6685)
	Piston-to-piston pin clearance		0.002 – 0.014 (0.0001 – 0.0006)	0.04 (0.002)
	Piston ring and gap	Top	0.22 – 0.32 (0.009 – 0.126)	0.52 (0.020)
		Second	0.40 – 0.55 (0.016 – 0.022)	0.74 (0.029)
		Oil (side rail)	0.20 – 0.70 (0.008 – 0.028)	1.00 (0.040)
	Piston ring-to-ring groove clearance	Top	0.040 – 0.080 (0.0016 – 0.0032)	0.120 (0.0050)
		Second	0.015 – 0.050 (0.0006 – 0.0020)	0.075 (0.0030)
Cylinder	I.D.		76.000 – 76.015 (2.9921 – 2.9927)	76.025 (2.9931)
	Out-of-round		–	0.10 (0.004)
	Taper		–	0.10 (0.004)
	Warpage		–	0.10 (0.004)
	Cylinder-to-piston clearance		0.015 – 0.050 (0.0006 – 0.0020)	0.10 (0.004)
Connecting rod small end I.D.			17.030 – 17.042 (0.6705 – 0.6709)	17.048 (0.6712)
Connecting rod-to-piston pin clearance			0.030 – 0.048 (0.0012 – 0.0019)	0.07 (0.003)

GENERAL INFORMATION

FRONT WHEEL/SUSPENSION/STEERING SPECIFICATIONS

Unit: mm (in)

ITEM		STANDARD	SERVICE LIMIT
HESD linear solenoid resistance (at 20°C/68°F)		10 – 15 Ω	–
Minimum tire tread depth		–	1.5 (0.06)
Cold tire pressure	Driver only	250 kPa (2.50 kgf/cm ² , 36 psi)	–
	Driver and passenger	250 kPa (2.50 kgf/cm ² , 36 psi)	–
Axle runout		–	0.2 (0.01)
Wheel rim runout	Radial	–	2.0 (0.08)
	Axial	–	2.0 (0.08)
Wheel balance weight		–	60 g (2.1 oz) max.
Fork	Spring free length	234.0 (9.21)	229.3 (9.03)
	Tube runout	–	0.20 (0.008)
	Recommended fork fluid	Pro Honda Suspension Fluid SS-47 (10 W)	–
	Fluid level	93 (3.7)	–
	Fluid capacity	517 $\pm$ 2.5 cm ³ (17.5 $\pm$ 0.08 US oz, 18.2 $\pm$ 0.09 Imp oz)	–
	Pre-load adjuster initial setting	6 turns from minimum	–
	Rebound damping adjuster initial setting	2-1/4 turns out from full hard	–
	Compression damping adjuster initial setting	2 turns out from full hard	–
Steering head bearing pre-load		12 – 17 N (1.2 – 1.7 kgf)	–

REAR WHEEL/SUSPENSION SPECIFICATIONS

Unit: mm (in)

ITEM			STANDARD	SERVICE LIMIT
Minimum tire tread depth			–	2.0 (0.08)
Cold tire pressure	Driver only		290 kPa (2.90 kgf/cm ² , 42 psi)	–
	Driver and passenger		290 kPa (2.90 kgf/cm ² , 42 psi)	–
Axle runout			–	0.2 (0.01)
Wheel rim runout	Radial		–	2.0 (0.08)
	Axial		–	2.0 (0.08)
Wheel balance weight			–	60 g (2.1 oz) max.
Drive chain	Size/link	DID	DID50VA11-116YB	–
		RK	RK50HFOZ6-116LJFZ	–
	Slack		25 – 35 (1.0 – 1.4 in)	–
Shock absorber	Spring pre-load adjuster standard position		Position 4	–
	Rebound damping adjuster initial setting		2-1/4 turns out from full hard	–
	Compression damping adjuster initial setting		2 turns out from full hard	–

HYDRAULIC BRAKE SPECIFICATIONS

Unit: mm (in)

ITEM		STANDARD	SERVICE LIMIT
Front	Specified brake fluid	DOT 4	—
	Brake disc thickness	4.4 – 4.6 (0.17 – 0.18)	3.5 (0.14)
	Brake disc runout	—	0.30 (0.012)
	Master cylinder I.D.	17.460 – 17.503 (0.6874 – 0.6891)	17.503 (0.6891)
	Master piston O.D.	17.321 – 17.367 (0.6819 – 0.6837)	17.321 (0.6819)
	Caliper cylinder I.D.	A 32.080 – 32.130 (1.2630 – 1.2650)	32.130 (1.2650)
		B 30.280 – 30.330 (1.1921 – 1.1941)	30.330 (1.1941)
	Caliper piston O.D.	A 31.967 – 32.000 (1.2585 – 1.2598)	31.967 (1.2585)
Rear	Caliper piston O.D.	B 30.167 – 30.200 (1.1877 – 1.1890)	30.167 (1.1877)
		DOT 4	—
	Specified brake fluid	DOT 4	—
	Brake disc thickness	4.8 – 5.2 (0.19 – 0.20)	4.0 (0.16)
	Brake disc runout	—	0.30 (0.012)
	Master cylinder I.D.	14.000 – 14.043 (0.5512 – 0.5529)	14.043 (0.5529)
	Master piston O.D.	13.957 – 13.984 (0.5495 – 0.5506)	13.957 (0.5495)
	Caliper cylinder I.D.	30.230 – 30.280 (1.1902 – 1.1921)	30.280 (1.1921)
	Caliper piston O.D.	30.082 – 30.115 (1.1843 – 1.1856)	30.082 (1.1843)

BATTERY/CHARGING SYSTEM SPECIFICATIONS

ITEM			SPECIFICATIONS
Battery	Capacity		12 V – 6 Ah
	Current leakage		2.0 mA max.
	Voltage (at 20°C/68°F)	Fully charged	13.0 – 13.2 V
		Needs charging	Below 12.4 V
	Charging current	Normal	0.6 A/5 – 10 h
		Quick	3 A/1 h
Alternator	Capacity	0.399 kW/5000 rpm	
	Charging coil resistance (at 20°C/68°F)	0.1 – 1.0 Ω	

IGNITION SYSTEM SPECIFICATIONS

ITEM		SPECIFICATIONS
Spark plug (Iridium)	NGK	IMR9E-9HES
	DENSO	VUH27ES
Spark plug gap		0.80 – 0.90 mm (0.031 – 0.035 in)
CKP sensor peak voltage		0.7 V minimum
Ignition timing ("F" mark)		3.3° BTDC at idle

ELECTRIC STARTER SPECIFICATIONS

Unit: mm (in)

ITEM	STANDARD	SERVICE LIMIT
Starter motor brush length	12.0 (0.47)	6.5 (0.26)

GENERAL INFORMATION**LIGHTS/METERS/SWITCHES SPECIFICATIONS**

ITEM			SPECIFICATIONS
Bulbs	Headlight	Hi	12 V – 55 W
		Lo	12 V – 55 W
	Position light		LED x 2
	Brake/tail light		LED
	License light		12 V – 5 W
	Turn signal light		12 V – 21 W x 4
	Instrument light		LED
	Turn signal indicator		LED x 2
	High beam indicator		LED
	Neutral indicator		LED
	MIL		LED
	Fuel indicator		LED
	REV indicator		LED
	Engine oil pressure/ coolant temperature warning indicator		LED
Fuse	Main fuse		30 A
	Sub fuse		10 A x 4, 20 A x 4
Tachometer peak voltage			10.5 V minimum
ECT sensor resistance		50°C (122°F)	6.8 – 7.4 kΩ
		80°C (176°F)	2.1 – 2.7 kΩ

TORQUE VALUES

STANDARD TORQUE VALUES

FASTENER TYPE	TORQUE N-m (kgf-m, lbf-ft)	FASTENER TYPE	TORQUE N-m (kgf-m, lbf-ft)
5 mm bolt and nut	5.2 (0.5, 3.8)	5 mm screw	4.2 (0.4, 3.1)
6 mm bolt and nut	10 (1.0, 7)	6 mm screw	9.0 (1.0, 6.6)
8 mm bolt and nut	22 (2.2, 16)	6 mm flange bolt (8 mm head, large flange)	12 (1.2, 9)
10 mm bolt and nut	34 (3.5, 25)	8 mm flange bolt and nut	27 (2.8, 20)
12 mm bolt and nut	54 (5.5, 40)	10 mm flange bolt and nut	39 (4.0, 29)

ENGINE & FRAME TORQUE VALUES

- Torque specifications listed below are for important fasteners.
- Others should be tightened to standard torque values (page 1-13).

FRAME/BODY PANELS/EXHAUST SYSTEM

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N-m (kgf-m, lbf-ft)	REMARKS
Windscreen mounting bolt	4	5	1.5 (0.2, 1.1)	See page 3-33
Seat rail mounting nut	2	10	54 (5.5, 40)	
Seat rail mounting bolt	2	10	44 (4.5, 32)	
Seat rail assembly bolt	1	8	30 (3.1, 22)	
Air duct resonator mounting screw	2	4	1.1 (0.1, 0.8)	
Vacuum chamber stay mounting screw	2	4	1.1 (0.1, 0.8)	
Lower cowl mounting special screw	2	6	10 (1.0, 7)	
Lower cowl mounting screw	2	5	1.5 (0.2, 1.1)	
Center cross plate mounting bolt	4	6	12 (1.2, 9)	
Exhaust pipe joint nut	8	7	12 (1.2, 9)	
Front fender mounting screw	4	6	12 (1.2, 9)	
Rearview mirror mounting nut	4	6	10 (1.0, 7)	
Rearview mirror front cover screw	2	5	1.0 (0.1, 0.7)	
Main step bracket mounting bolt	4	8	37 (3.8, 27)	
Pillion step bracket mounting bolt	4	8	27 (2.8, 20)	
Exhaust pipe stud bolt	8	8	—	
Air duct mounting screw	4	4	1.1 (0.1, 0.8)	
Air duct cover mounting screw	4	5	1.5 (0.2, 1.1)	
Heat guard mounting screw	3	6	10 (1.0, 7)	
Muffler rear cap mounting screw	3	5	4.2 (0.4, 3.1)	
Middle cowl mounting screw	4	5	1.5 (0.2, 1.1)	
Seat mounting special screw	2	6	4.3 (0.4, 3.2)	
Muffler band bolt	1	8	17 (1.7, 13)	

MAINTENANCE

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N-m (kgf-m, lbf-ft)	REMARKS
Spark plug	4	10	16 (1.6, 12)	Apply grease to the threads.
Timing hole cap	1	45	18 (1.8, 13)	
Oil filter cartridge	1	20	26 (2.7, 19)	Apply oil to the threads and O-ring.
Oil drain bolt	1	12	30 (3.1, 22)	See page 4-19 Apply locking agent to the crankcase side threads.
Oil filter boss	1	20	—	
Air cleaner element mounting screw	2	4	0.8 (0.08, 0.6)	
EGCA cable lock nut	1	10	22 (2.2, 16)	

GENERAL INFORMATION

LUBRICATION SYSTEM

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N-m (kgf-m, lbf-ft)	REMARKS
Oil pump assembly bolt	4	6	12 (1.2, 9)	CT bolt
Oil pump driven sprocket bolt	1	6	15 (1.5, 11)	Apply locking agent to the threads.
Oil cooler bolt	1	20	59 (6.0, 44)	
Oil pipe mounting bolt	2	6	12 (1.2, 9)	Apply locking agent to the threads.

FUEL SYSTEM (PGM-FI)

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N-m (kgf-m, lbf-ft)	REMARKS
Bank angle sensor mounting screw	2	4	1.1 (0.1, 0.8)	
ECT sensor	1	12	23 (2.3, 17)	
Primary fuel rail mounting bolt	4	5	5.1 (0.5, 3.8)	
IACV setting plate torx screw	2	4	2.1 (0.2, 1.5)	
Knock sensor mounting bolt	1	8	22 (2.2, 16)	
Fuel pump mounting nut	6	6	12 (1.2, 9)	See page 6-49
Fuel tank mounting bolt	4	6	10 (1.0, 7)	
IAT sensor mounting screw	2	5	1.1 (0.1, 0.8)	
MAP sensor mounting screw	1	5	5.0 (0.5, 3.7)	
ECM setting plate screw	2	4	0.8 (0.08, 0.6)	
Fuel tank cap socket bolt	6	4	1.8 (0.2, 1.3)	
Air cleaner housing screw	14	4	0.8 (0.08, 0.6)	
Throttle cable adjuster lock nut	1	6	5.5 (0.6, 4.1)	
Canister mounting bolt	2	6	8.0 (0.8, 5.9)	

COOLING SYSTEM

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N-m (kgf-m, lbf-ft)	REMARKS
Water pump assembly bolt	4	6	12 (1.2, 9)	CT bolt
Water pump drain bolt	1	6	12 (1.2, 9)	CT bolt
Thermostat housing cover bolt	2	6	12 (1.2, 9)	CT bolt
Fan motor shroud mounting bolt	6	6	8.4 (0.9, 6.2)	
Left fan motor mounting screw	3	4	2.7 (0.3, 2.0)	
Left cooling fan mounting nut	1	3	1.0 (0.1, 0.7)	Apply locking agent to the threads.
Right fan motor mounting nut	3	5	5.2 (0.5, 3.8)	
Right cooling fan mounting nut	1	5	2.7 (0.3, 2.0)	Apply locking agent to the threads.
Water pump impeller	1	6	12 (1.2, 9)	

ENGINE REMOVAL/INSTALLATION

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N-m (kgf-m, lbf-ft)	REMARKS
Drive sprocket bolt	1	10	54 (5.5, 40)	
Front engine hanger bolt	2	12	64 (6.5, 47)	
Upper engine hanger adjusting bolt	1	20	10 (1.0, 7)	
Upper engine hanger lock nut	1	20	54 (5.5, 40)	
Upper engine hanger nut	1	12	64 (6.5, 47)	
Lower engine hanger nut	1	12	84 (8.6, 62)	

CYLINDER HEAD/VALVES

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N-m (kgf-m, lbf-ft)	REMARKS
Cylinder head nut	10	9	—	See page 9-29
Camshaft holder bolt	20	6	12 (1.2, 9)	Apply oil to the threads and seating surface.
Cylinder head cover bolt	4	6	10 (1.0, 7)	Apply locking agent to the threads.
PAIR check valve cover bolt	4	6	12 (1.2, 9)	
Cam sprocket bolt	4	7	20 (2.0, 15)	Apply locking agent to the threads.
CMP sensor rotor bolt	2	6	12 (1.2, 9)	Apply locking agent to the threads.
Cam chain tensioner A pivot bolt	1	6	10 (1.0, 7)	Apply locking agent to the threads.
Cam chain tensioner B pivot bolt	1	24	74 (7.5, 55)	Apply locking agent to the threads.
Cam chain guide A bolt	1	6	12 (1.2, 9)	
Insulator mounting bolt	6	6	12 (1.2, 9)	Apply locking agent to the threads.
Breather plate mounting bolt	3	6	12 (1.2, 9)	
Cylinder stud bolt	10	9	20 (2.0, 15)	

CLUTCH/STARTER CLUTCH/GEARSHIFT LINKAGE

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N-m (kgf-m, lbf-ft)	REMARKS
Clutch center lock nut	1	25	128 (13.1, 94)	Apply oil to the threads and seating surface. Stake
Shift drum center bolt	1	8	23 (2.3, 17)	ALOC bolt; replace with a new one.
Shift drum stopper arm pivot bolt	1	6	12 (1.2, 9)	Apply locking agent to the threads.
Gearshift spindle stopper pin	1	8	23 (2.3, 17)	Apply oil to the threads and seating surface.
Starter clutch mounting bolt	1	10	93 (9.5, 69)	
Oil pump drive chain guide mounting bolt	1	6	12 (1.2, 9)	Apply locking agent to the threads.
Gearshift spindle setting plate bolt	1	6	12 (1.2, 9)	Apply locking agent to the threads.

ALTERNATOR

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N-m (kgf-m, lbf-ft)	REMARKS
Stator mounting bolt	4	6	12 (1.2, 9)	Apply oil to the threads and seating surface.
Flywheel bolt	1	10	113 (11.5, 83)	

CRANKCASE/TRANSMISSION/BALANCER

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N-m (kgf-m, lbf-ft)	REMARKS
Mainshaft bearing set plate bolt	3	6	12 (1.2, 9)	Apply locking agent to the threads.
Shift drum bearing set bolt	2	6	12 (1.2, 9)	Apply locking agent to the threads.
Crankcase (7 mm bolt)	12	7	18 (1.8, 13)	
(8 mm bolt)	3	8	24 (2.4, 18)	
(10 mm bolt)	1	10	39 (4.0, 29)	
Main journal bolt	10	9	20 (2.0, 15) + 150°	See page 12-23

GENERAL INFORMATION

CRANKSHAFT/PISTON/CYLINDER

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
Crankpin bearing cap bolt (new)	8	8	27.5 (2.8, 20) + 90°	See page 13-8
(retightening)	8	8	21.6 (2.2, 16) + 90°	See page 13-12
Oil jet pipe mounting bolt	2	6	12 (1.2, 9)	Apply locking agent to the threads.

FRONT WHEEL/SUSPENSION/STEERING

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
Handlebar weight mounting screw	2	6	10 (1.0, 7)	ALOC screw; replace with a new one.
Front brake disc bolt	12	6	20 (2.0, 15)	ALOC bolt; replace with a new one.
Front axle bolt	1	18	79 (8.1, 58)	
Front axle holder bolt	4	8	22 (2.2, 16)	
Fork socket bolt	2	10	34 (3.5, 25)	
Fork bolt	2	46	34 (3.5, 25)	
Handlebar pinch bolt	2	8	26 (2.7, 19)	
Top bridge pinch bolt	2	8	22 (2.2, 16)	
Bottom bridge pinch bolt	2	8	27 (2.8, 20)	
Steering stem adjusting nut	1	35	—	See page 14-40
Steering stem adjusting lock nut	1	35	—	See page 14-40
Steering stem nut	1	33	137 (14.0, 101)	
Compression adjuster plug bolt	2	14	17 (1.7, 13)	
HESD mounting bolt	4	6	10 (1.0, 7)	ALOC bolt; replace with a new one.
Second arm nut	2	6	12 (1.2, 9)	U-nut
Fork damper rod lock nut	2	10	20 (2.0, 15)	
Front brake hose clamp bolt	1	6	9.0 (0.9, 6.6)	
HESD torque arm nut	1	6	12.5 (1.3, 9.2)	U-nut

REAR WHEEL/SUSPENSION

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
Rear brake disc bolt	4	8	42 (4.3, 31)	ALOC bolt; replace with a new one.
Driven sprocket nut	6	10	64 (6.5, 47)	U-nut
Rear axle nut	1	22	113 (11.5, 83)	U-nut
Shock absorber mounting nut	2	10	44 (4.5, 32)	U-nut
Shock arm-to-swingarm nut	1	10	44 (4.5, 32)	U-nut
Drive chain case bolt	2	6	12 (1.2, 9)	
Drive chain slider bolt	3	6	9.0 (0.9, 6.6)	ALOC bolt; replace with a new one.
Swingarm pivot nut	1	22	113 (11.5, 83)	U-nut
Shock link nut	2	10	44 (4.5, 32)	U-nut

HYDRAULIC BRAKE

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N-m (kgf-m, lbf-ft)	REMARKS
Reserve tank stopper plate screw	2	4	1.2 (0.1, 0.9)	Apply silicone grease to the sliding surface.
Front brake lever pivot bolt	1	6	1.0 (0.1, 0.7)	
Front brake lever pivot nut	1	6	6.0 (0.6, 4.4)	ALOC bolt; replace with a new one.
Front brake light switch screw	1	4	1.2 (0.1, 0.9)	
Front master cylinder holder bolt	2	6	12 (1.2, 9)	
Front brake caliper mounting bolt	4	10	45 (4.6, 33)	
Front brake reserve tank stay bolt	1	6	12 (1.2, 9)	
Rear master cylinder push rod lock nut	1	8	18 (1.8, 13)	
Rear master cylinder mounting nut	2	6	10 (1.0, 7)	
Front brake caliper pad pin	4	10	15 (1.5, 11)	
Rear brake caliper pad pin	1	10	18 (1.8, 13)	
Brake hose oil bolt	5	10	34 (3.5, 25)	
Front brake hose clamp nut	1	6	10 (1.0, 7)	
Front brake hose 3-way joint bolt	1	6	10 (1.0, 7)	
Front brake caliper bleed valve	2	8	8.0 (0.8, 5.9)	
Rear brake caliper bleed valve	1	8	6.0 (0.6, 4.4)	
Rear brake hose clamp bolt	1	5	4.2 (0.4, 3.1)	
Heat guard mounting screw	2	5	4.2 (0.4, 3.1)	

ELECTRIC STARTER

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N-m (kgf-m, lbf-ft)	REMARKS
Starter motor terminal nut	1	6	12 (1.2, 9)	ALOC bolt; replace with a new one.
Starter motor setting bolt	2	5	4.0 (0.4, 3.0)	
Negative brush mounting screw	1	5	3.7 (0.4, 2.7)	

LIGHTS/METERS/SWITCHES

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N-m (kgf-m, lbf-ft)	REMARKS
EOP switch	1	PT 1/8	12 (1.2, 9)	Apply sealant to the threads.
EOP switch wire terminal bolt	1	4	2.0 (0.2, 1.5)	
Neutral switch	1	10	12 (1.2, 9)	Replace with a new one.
Combination meter screw	8	5	1.0 (0.1, 0.7)	
Ignition switch mounting bolt	2	8	26 (2.7, 19)	
Sidestand switch mounting bolt	1	6	10 (1.0, 7)	ALOC bolt; replace with a new one.
Right handlebar switch housing screw	2	4	0.9 (0.09, 0.7)	
Clutch switch mounting screw	1	3	0.6 (0.06, 0.4)	ALOC screw; replace with a new one.
Combination meter stay mounting bolt	2	8	32 (3.3, 24)	

OTHERS

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N-m (kgf-m, lbf-ft)	REMARKS
Sidestand pivot bolt	1	10	10 (1.0, 7)	
Sidestand pivot nut	1	10	29 (3.0, 21)	
Sidestand spring hook bolt	1	8	21.5 (2.2, 16)	
Gearshift pedal pivot bolt	1	8	22 (2.2, 16)	

GENERAL INFORMATION

LUBRICATION & SEAL POINTS



ENGINE

MATERIAL	LOCATION	REMARKS
Liquid sealant (Three Bond 1207B or equivalent)	Crankcase mating surface Oil pan mating surface Right crankcase cover mating surface Alternator cover mating surface Alternator cover wire grommet Cylinder head semi-circular cut-out	See page 12-22 See page 5-12 See page 10-31 See page 11-7 See page 9-35
Molybdenum disulfide oil (a mixture of 1/2 engine oil and 1/2 molybdenum disulfide grease)	Main journal bearing sliding surface Piston pin sliding surface Crankpin bearing sliding surface Connecting rod small end inner surface Crankshaft thrust surface Camshaft lobes, journals and thrust surface Valve stem sliding surface Valve lifter sliding surface Oil pump drive sprocket guide sliding surface Water pump shaft and thrust washer sliding surface Clutch outer sliding surface Clutch outer guide sliding surface M3/4, C5, C6 shifter gear (shift fork grooves) Starter reduction gear sliding surface Starter idle gear shaft sliding surface	
Engine oil	Cylinder head mounting nut/washer/stud bolt threads and seating surface Piston and piston ring sliding surface Clutch disc surface Starter one-way clutch sliding surface Each gear teeth and rotating surface Each bearing Each O-ring/seal ring Other rotating area and sliding surface	
Multi-purpose grease	Each oil seal lips Balancer rubber damper Oil pipe O-ring Right/left/transmission oil jet pipe O-ring	
Locking agent	CMP sensor rotor bolt threads Oil pump driven sprocket bolt threads Shift drum bearing set bolt threads Mainshaft bearing set plate bolt threads Cam sprocket bolt threads Cam chain tensioner A pivot bolt threads Cam chain tensioner B pivot bolt threads Shift drum stopper arm pivot bolt threads Oil pump drive chain guide mounting bolt threads Shift spindle setting plate bolt threads Oil jet pipe mounting bolt threads Oil filter boss threads (crankcase side) Oil pipe mounting bolt threads Breather plate bolt threads	Coating width: 3.5 ± 0.5 mm Coating width: 6.5 ± 1 mm Coating width: 6.5 ± 1 mm Coating width: 6.5 ± 1 mm Coating width: 6.5 ± 1 mm Coating width: 6.5 ± 1 mm Coating width: 6.5 ± 1 mm Coating width: 6.5 ± 1 mm Coating width: 6.5 ± 1 mm Coating width: 6.5 ± 1 mm Coating width: 6.5 ± 1 mm Coating width: 6.5 ± 1 mm Coating width: 6.5 ± 1 mm Coating width: 6.5 ± 1 mm

FRAME

MATERIAL	LOCATION	REMARKS
Multi-purpose grease	Main step sliding surface Pillion step sliding surface Pillion seat catch hook sliding area Front wheel dust seal lips Rear wheel dust seal lips Throttle pipe sliding surface Clutch lever pivot bolt sliding surface Rear brake pedal pivot sliding surface Gearshift pedal link tie-rod ball joints Gearshift pedal pivot sliding surface Axle surface Swingarm pivot bolt surface Brake pedal-to-master cylinder joint pin Rear wheel O-ring Second arm fitting area	
Urea based multi-purpose grease with extreme pressure (example: EXCELITE EP2 manufactured by KYODO YUSHI, Japan) or equivalent	Steering head bearing sliding surface Steering head dust seal lips Steering stem adjusting nut threads	3 – 5 g 0.1 – 0.3 g
Molybdenum disulfide grease	Sidestand pivot sliding surface Swingarm pivot bearings Swingarm pivot dust seal lips Shock link needle bearings Shock link dust seal lips Shock absorber needle bearing Shock absorber dust seal lips	
Cable lubricant	Throttle cable inside Clutch cable inside EGCA control cable inside	
Honda bond A or equivalent adhesive	Handlebar grip rubber inner surface	
Engine oil	Each O-ring	
Silicone grease	Front brake push rod-to-master piston contact surface Front brake push rod tip Front brake lever pivot bolt sliding surface Rear brake master piston-to-push rod contacting area Rear brake caliper slide pin sliding surface Rear brake caliper pad pin O-ring	
DOT 4 brake fluid	Brake master piston and cups Brake caliper piston and piston seals	
Fork fluid	Fork O-ring Fork dust seal and oil seal lips	
Locking agent	Brake caliper slide pin threads	

CABLE & HARNESS ROUTING

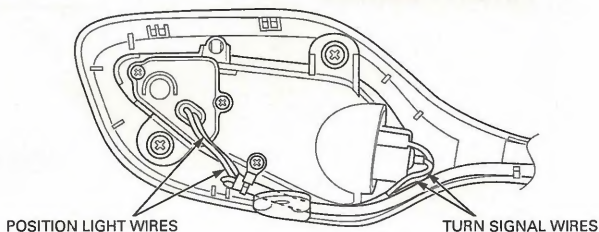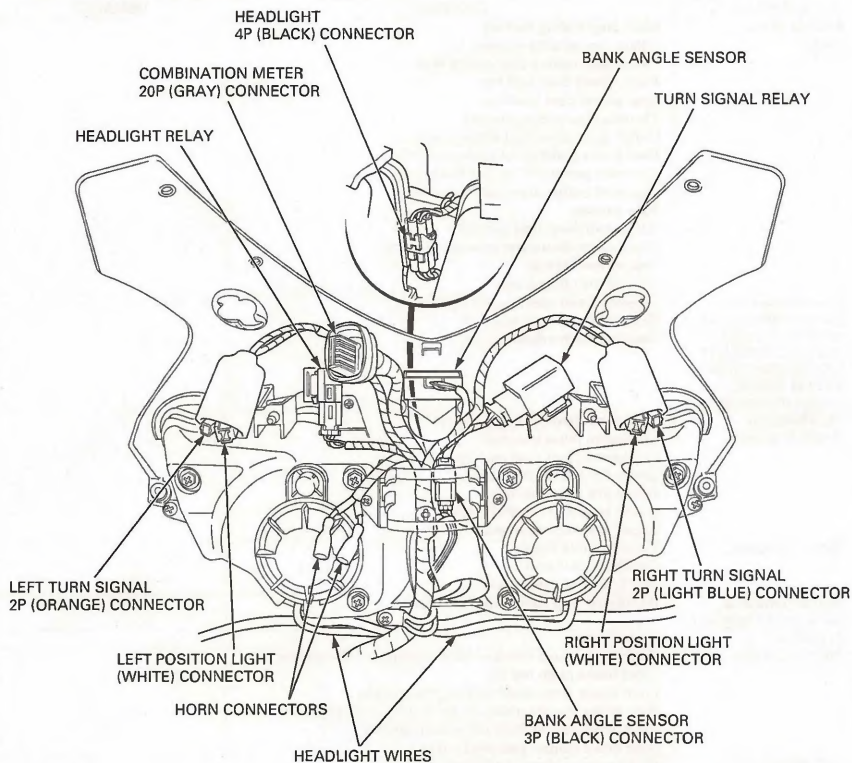

LEFT SIDE:

LEFT IDC SOLENOID VALVE

IDC SOLENOID VALVE
2P (GRAY) CONNECTOR

HEADLIGHT RELAY

HORN WIRE

VACUUM
HOSES

SUB HARNESS

SUB HARNESS
20P (BLACK) CONNECTOR

VACUUM HOSES

LEFT HEADLIGHT
WIRE

IDC SOLENOID WIRE

HEADLIGHT WIRES

VACUUM HOSE

RIGHT SIDE:

RIGHT IDC SOLENOID VALVE

IDC SOLENOID VALVE
2P (GRAY) CONNECTOR

VACUUM HOSE

VACUUM HOSES

VACUUM HOSE



ONE-WAY VALVE
RIGHT HEADLIGHT WIRE


RIGHT HEADLIGHT WIRE


IDC SOLENOID
VALVE WIRE


VACUUM HOSE

GENERAL INFORMATION

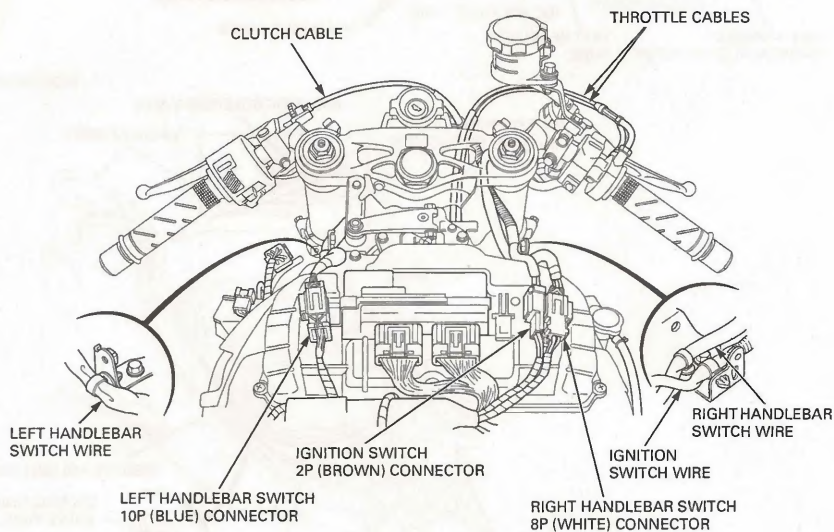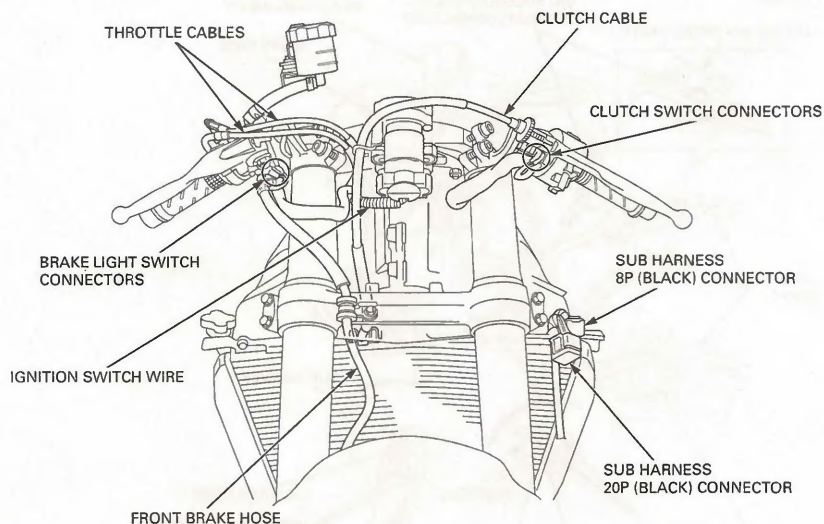


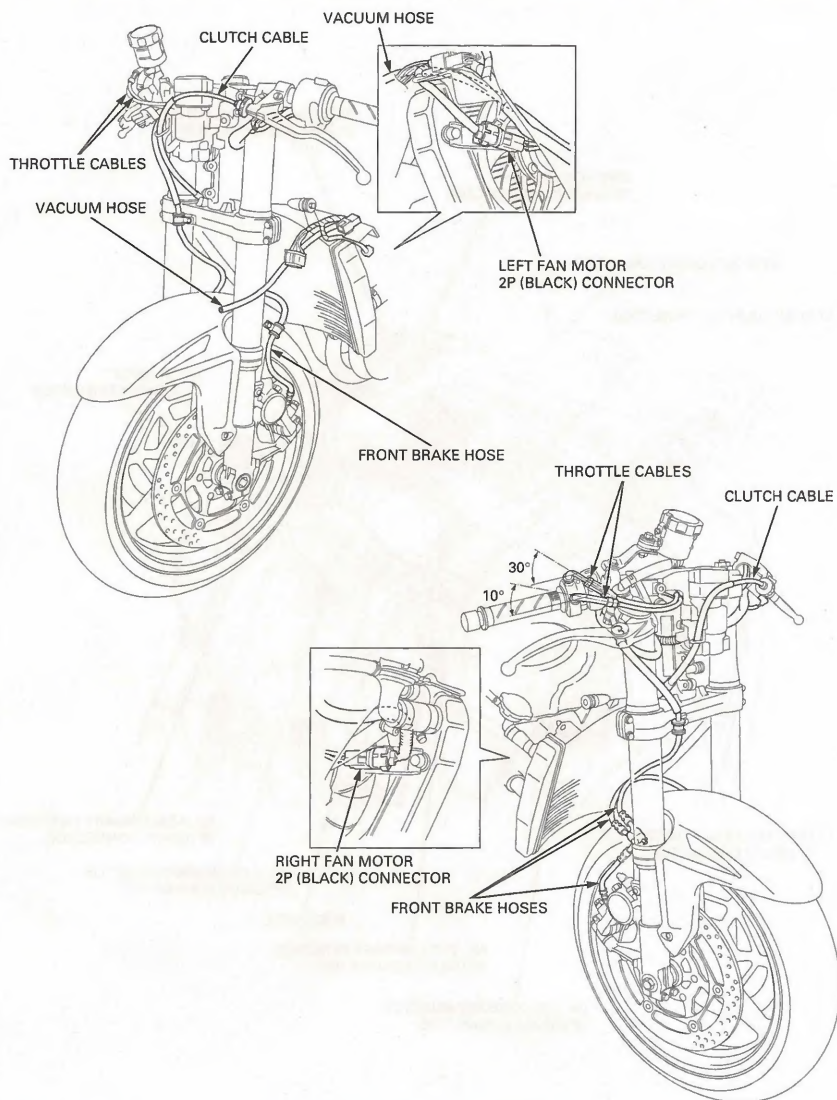

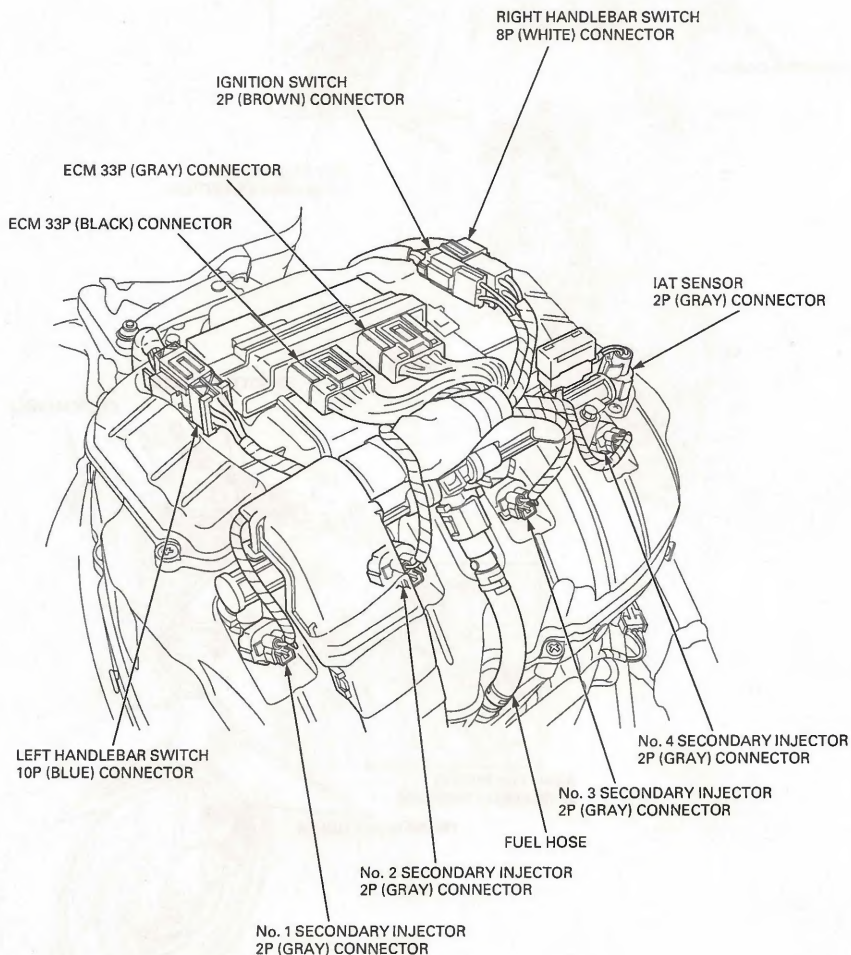


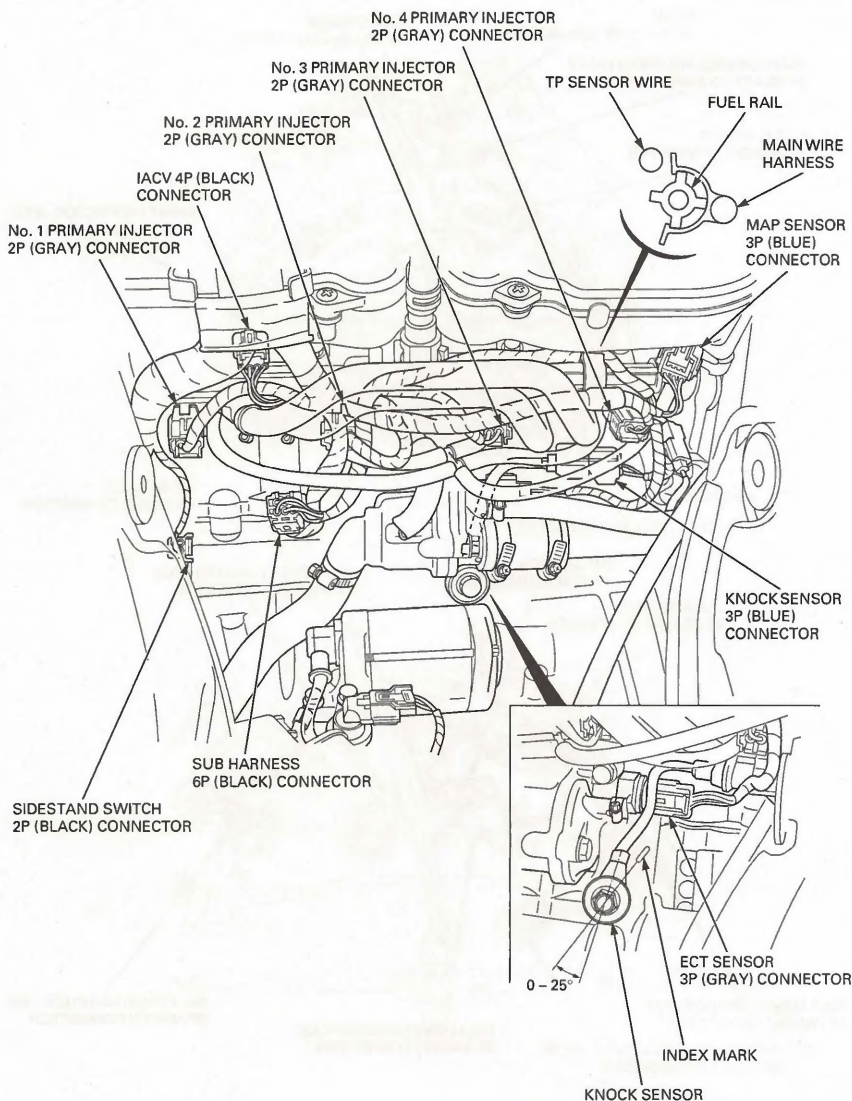


GENERAL INFORMATION

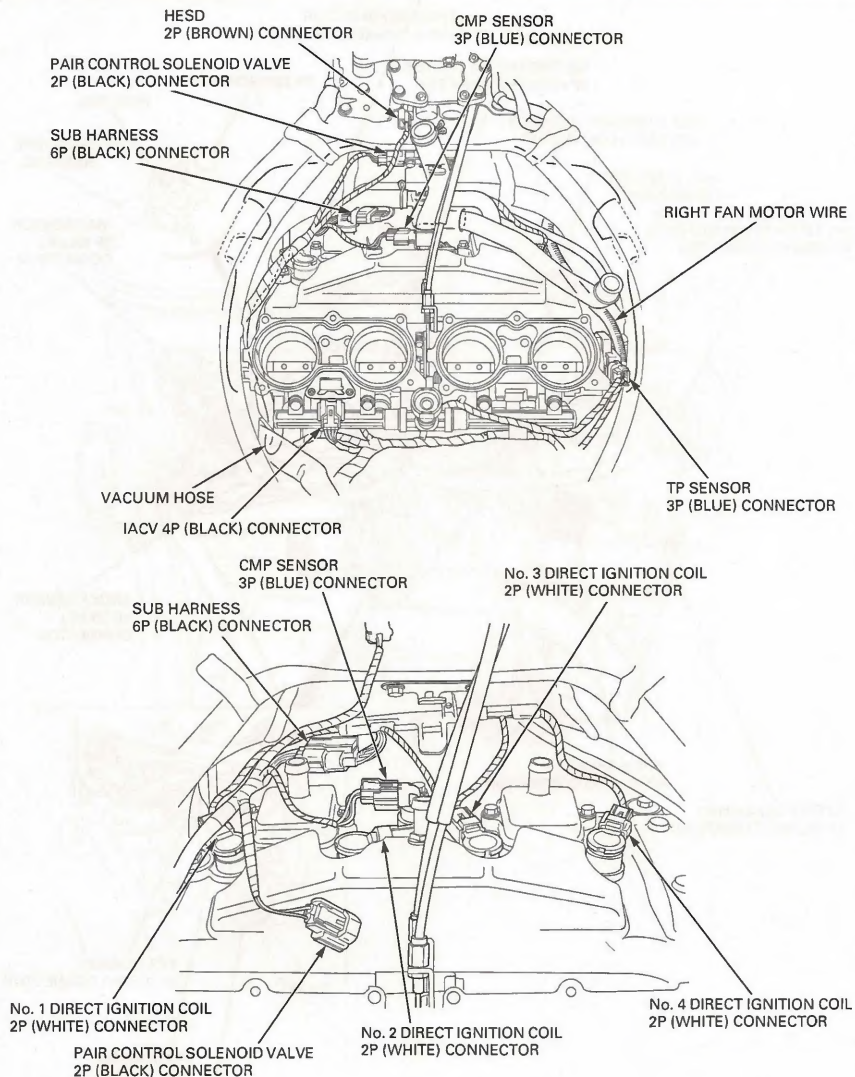



EXCEPT CALIFORNIA TYPE:

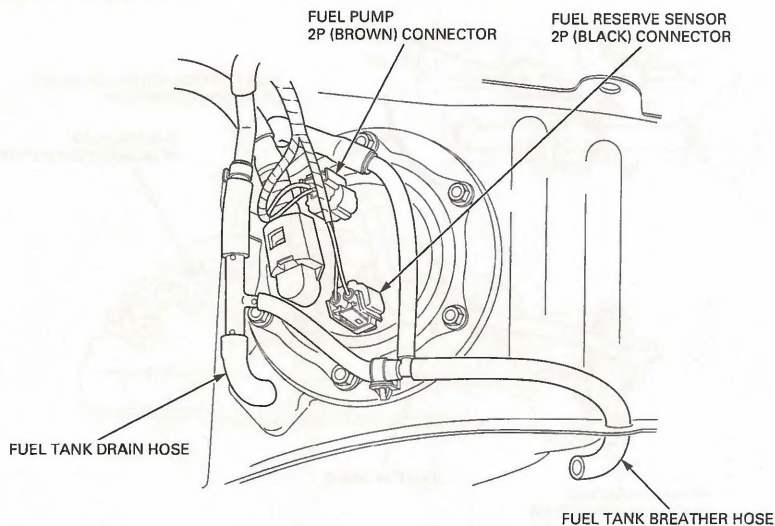




CALIFORNIA TYPE:

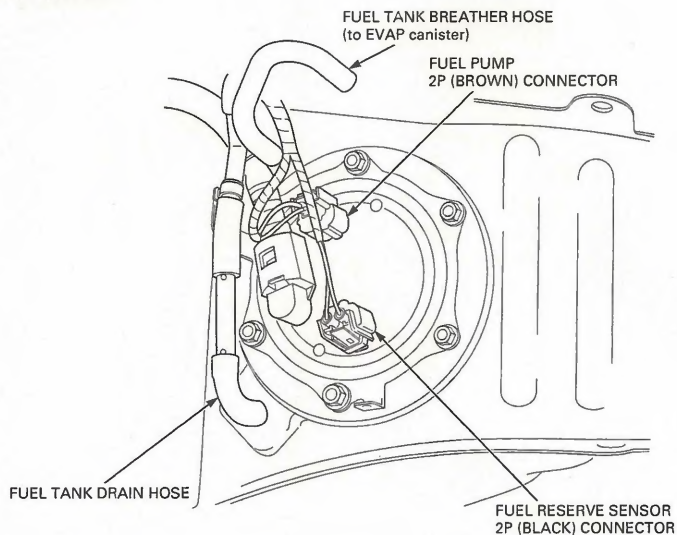



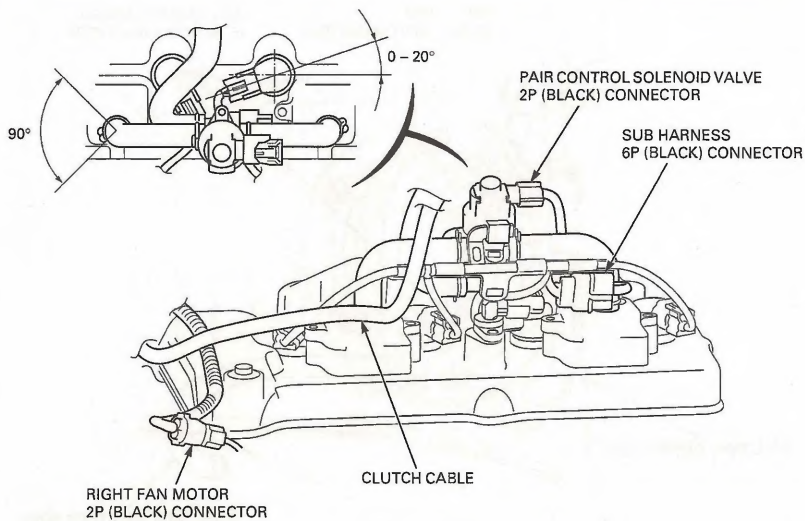



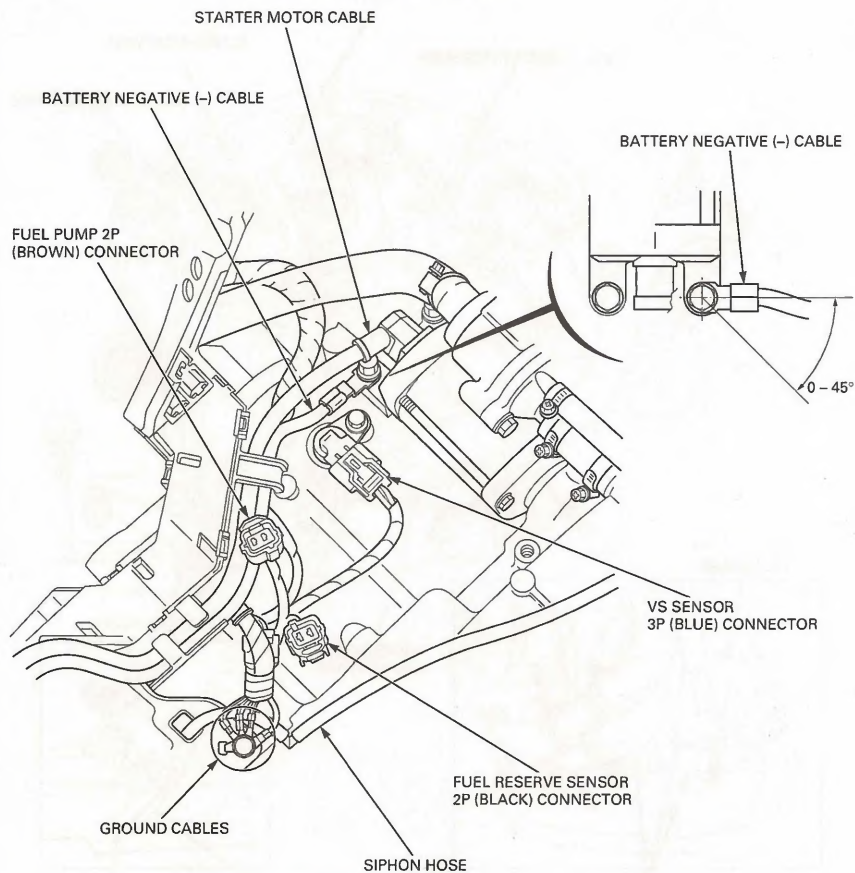


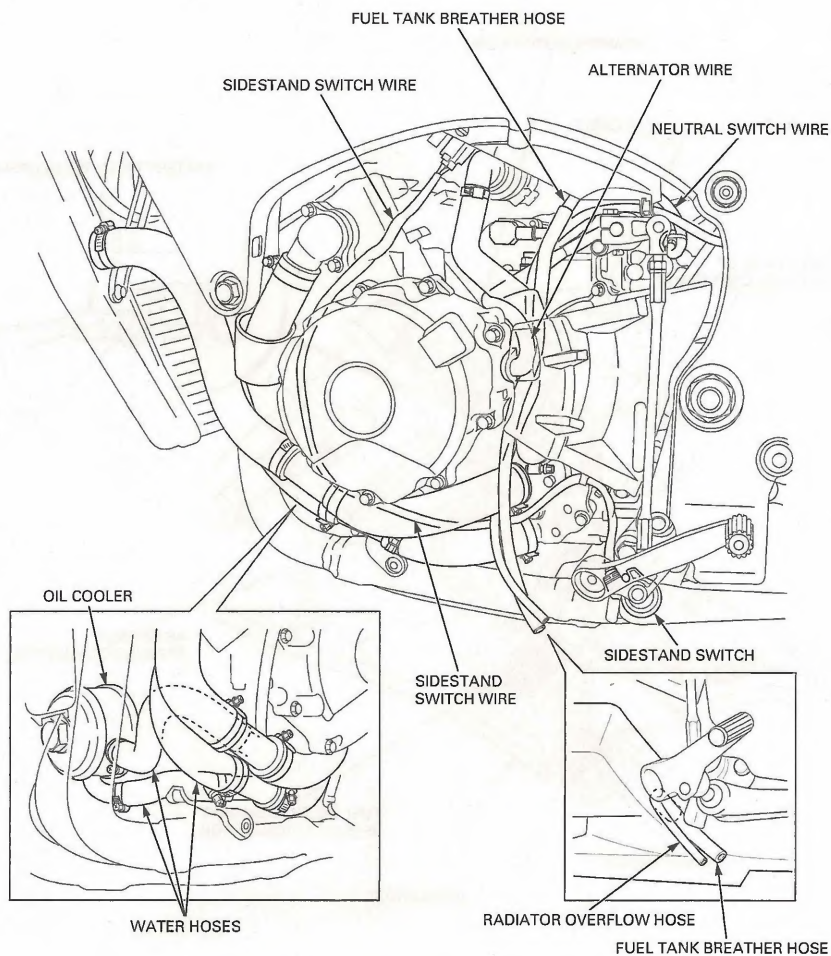


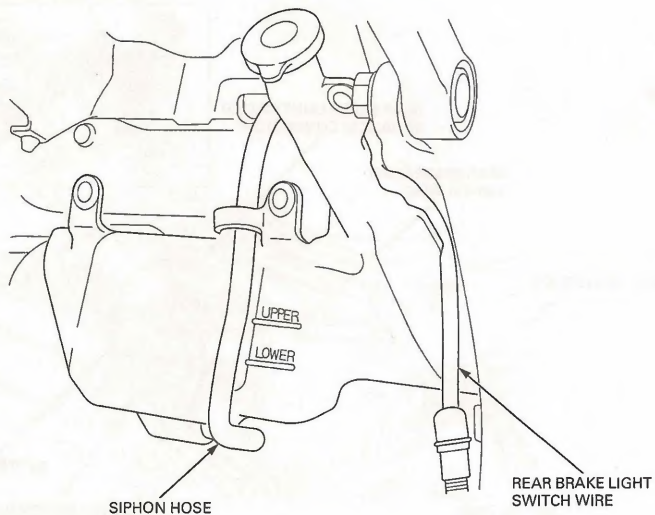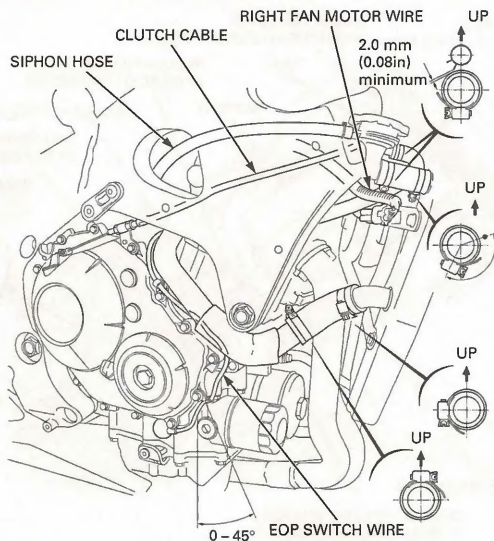


GENERAL INFORMATION

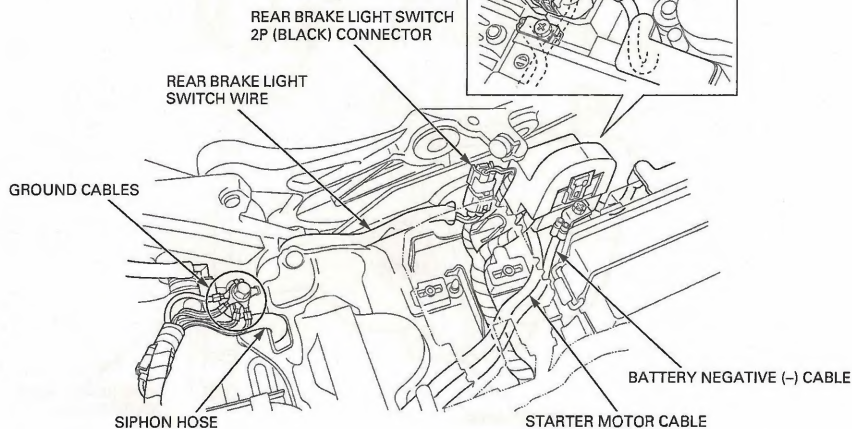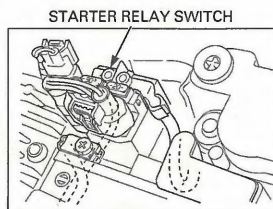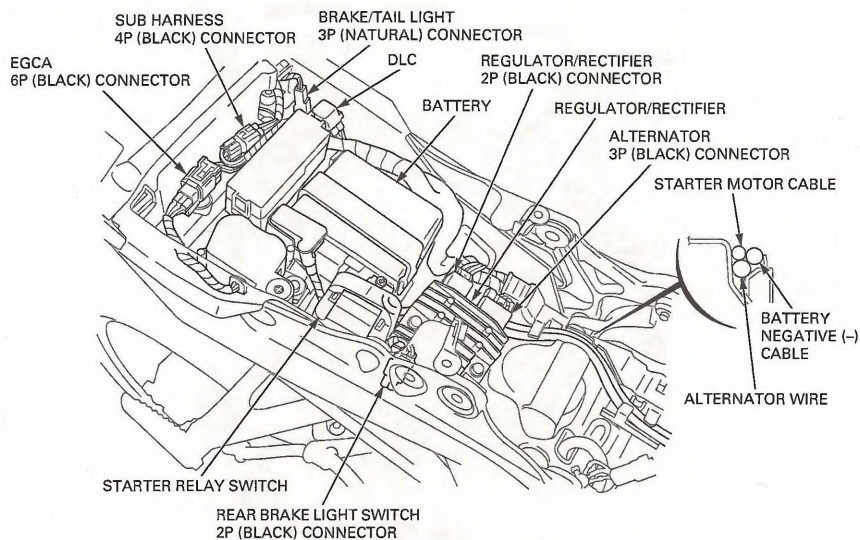

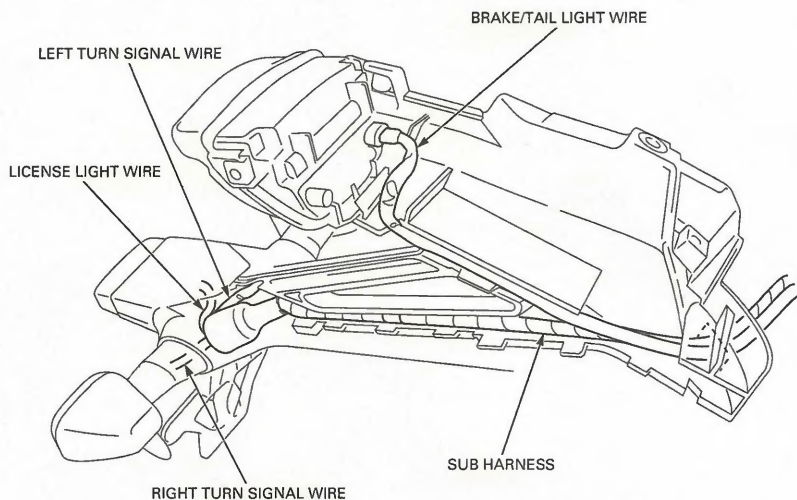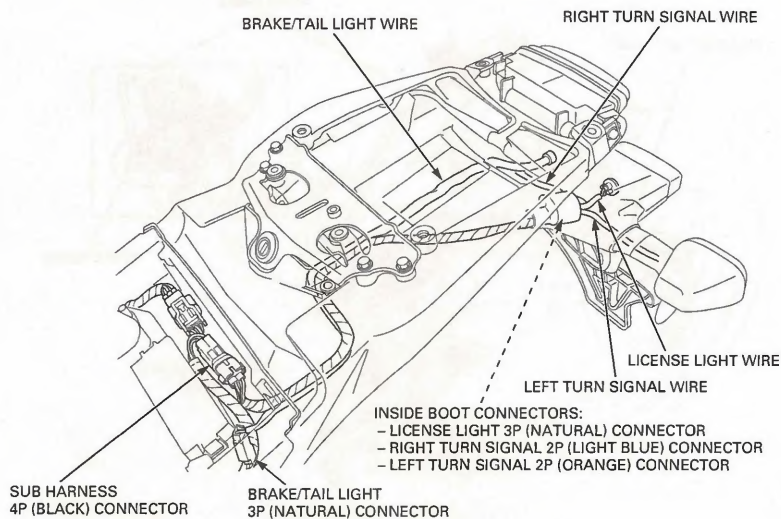

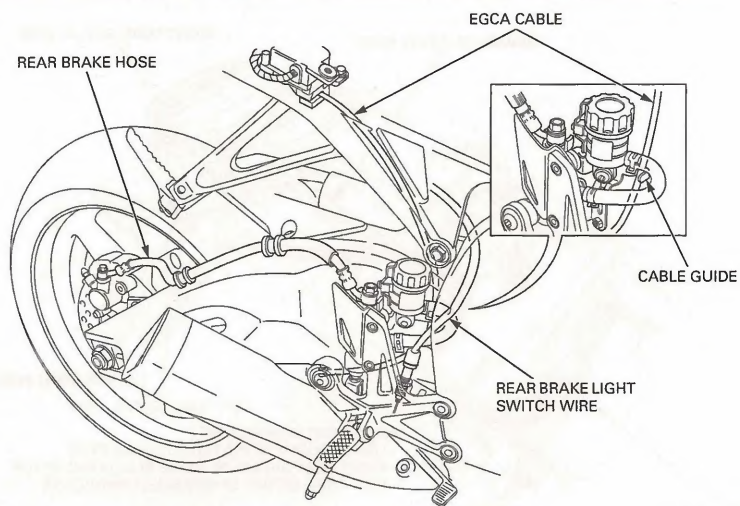


CALIFORNIA TYPE:

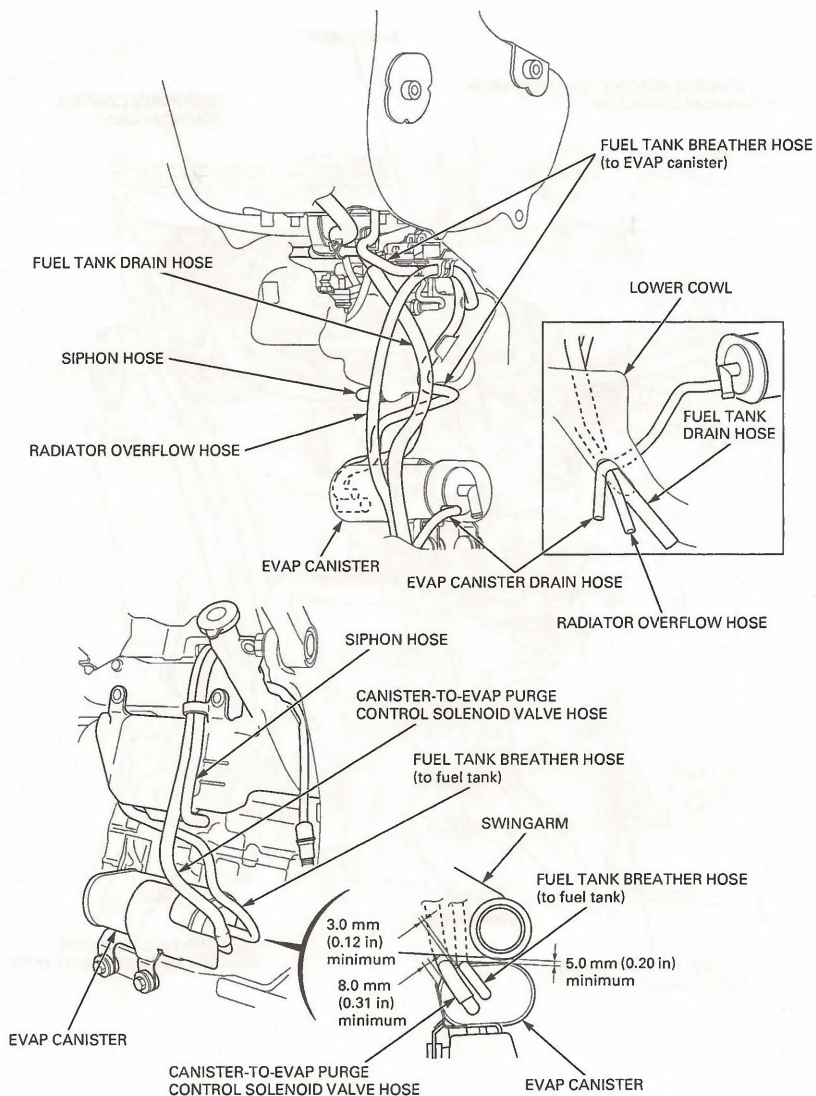

GENERAL INFORMATION

CALIFORNIA TYPE:

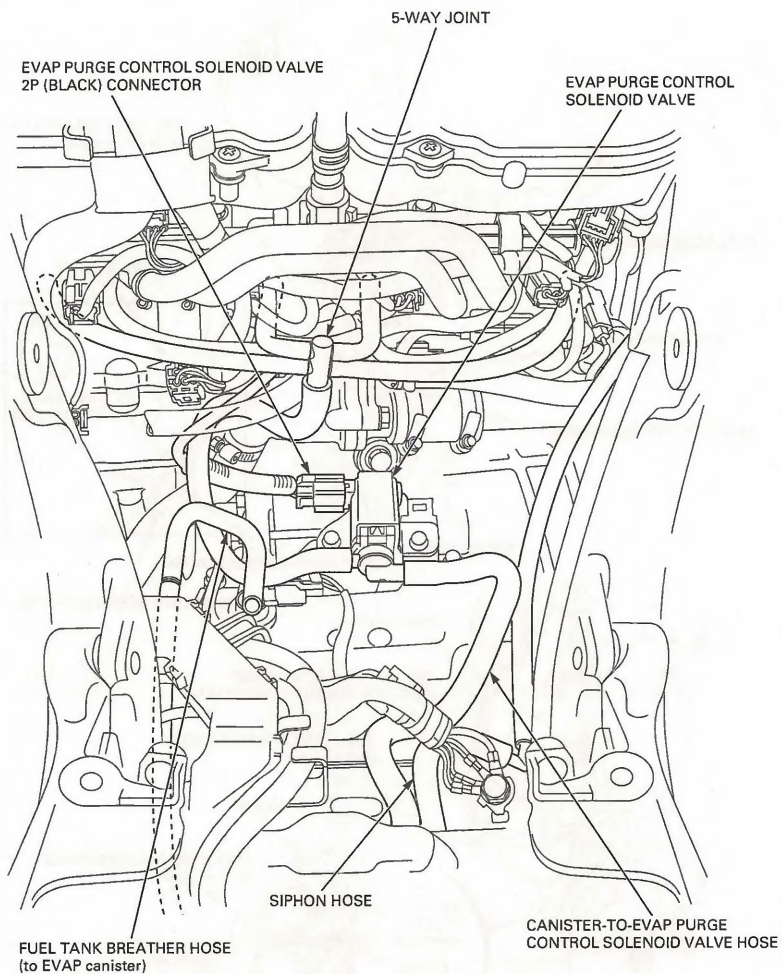

EMISSION CONTROL SYSTEMS

EXHAUST EMISSION REQUIREMENT

The U.S. Environmental Protection Agency (EPA), California Air Resources Board (CARB) and Transport Canada require manufacturers to certify that their motorcycles comply with applicable emissions standards during their useful life, when operated and maintained according to the instructions provided.

NOISE EMISSION REQUIREMENT

The EPA also requires that motorcycles built after January 1, 1983 comply with applicable noise emission standards for one year or 3,730 miles (6,000 km) after the time of sale to the ultimate purchaser, when operated and maintained according to the instructions provided.

WARRANTY COMPLIANCE

Compliance with the terms of the Distributor's Limited Warranty for Honda Motorcycle Emission Control Systems is necessary in order to keep the emissions system warranty in effect.


SOURCE OF EMISSIONS

The combustion process produces carbon monoxide (CO), oxides of nitrogen (NO_x) and hydrocarbons (HC). Control of carbon monoxide, oxides of nitrogen and hydrocarbons is very important because, under certain conditions, they react to form photochemical smog when subject to sunlight. Carbon monoxide does not react in the same way, but it is toxic.

Honda Motor Co., Ltd. utilizes various system (page 1-38) to reduce carbon monoxide, oxides of nitrogen and hydrocarbons.

CRANKCASE EMISSION CONTROL SYSTEM

The engine is equipped with a closed crankcase system to prevent discharging crankcase emissions into the atmosphere. Blow-by gas is returned to the combustion chamber through the air cleaner housing and throttle body.

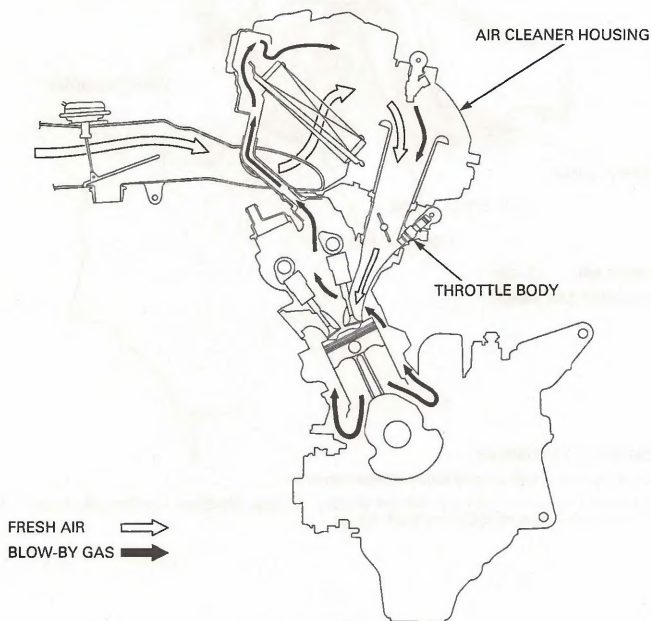

GENERAL INFORMATION

EXHAUST EMISSION CONTROL SYSTEM

The exhaust emission control system is composed of a pulse secondary air supply system, an oxidation catalytic converter and PGM-FI system.


SECONDARY AIR SUPPLY SYSTEM

The pulse secondary air supply system introduces filtered air into the exhaust gases in the exhaust port. Fresh air is drawn into the exhaust port by the function of the PAIR control valve.

This charge of fresh air promotes burning of the unburned exhaust gases and changes a considerable amount of hydrocarbons and carbon monoxide into relatively harmless carbon dioxide and water vapor.

The reed valve prevents reverse air flow through the system. The PAIR control valve is operated by the solenoid valve. The solenoid valve is controlled by the PGM-FI unit, and the fresh air passage is opened/closed according to running conditions (ECT/IAT/TP/MAP sensor and engine revolution).

No adjustments to the secondary air supply system should be made, although periodic inspection of the components is recommended.

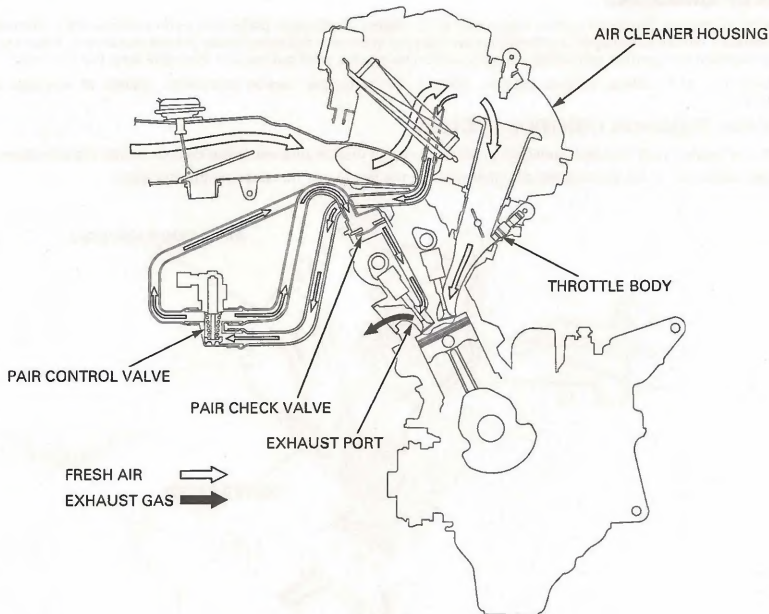


OXIDATION CATALYTIC CONVERTER

This motorcycle is equipped with an oxidation catalytic converter.

The oxidation catalytic converter is in the exhaust system. Through chemical reactions, it converts HC and CO in the engine's exhaust to carbon dioxide (CO₂) and water vapor.

EVAPORATIVE EMISSION CONTROL SYSTEM (CALIFORNIA TYPE)

This model complies with California Air Resources Board (CARB) evaporative emission requirement. Fuel vapor from the fuel tank is routed into the evaporative emission (EVAP) canister where it is absorbed and stored while the engine is stopped. When the engine is running and the evaporative emission (EVAP) purge control solenoid valve is open, fuel vapor in the EVAP canister is drawn into the engine through the throttle body.

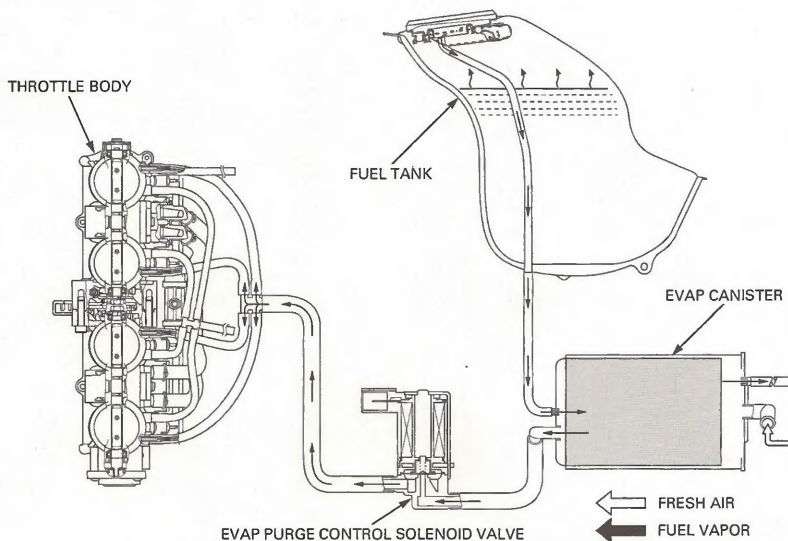**NOISE EMISSION CONTROL SYSTEM**

TAMPERING WITH THE NOISE CONTROL SYSTEM IS PROHIBITED: U.S. Federal law prohibits, and Canadian provincial law may prohibit, the following acts or the causing thereof: (1) The removal or rendering inoperative by any person, other than for purposes of maintenance, repair or replacement, of any device or element of design incorporated into any vehicle for the purpose of noise control prior to its sale or delivery to the ultimate customer or while it is in use; (2) the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

AMONG THOSE ACTS PRESUMED TO CONSTITUTE TAMPERING ARE THE ACTS LISTED BELOW:

1. Removal of, or puncturing of the muffler, baffles, header pipes or any other component which conducts exhaust gases.
2. Removal of, or puncturing of any part of the intake system.
3. Lack of proper maintenance.
4. Replacing any moving parts of the vehicle, or parts of the exhaust or intake system, with parts other than those specified by the manufacturer.

FUEL PERMEATION EMISSION CONTROL SYSTEM

This motorcycle complies with the Fuel Permeation Emission Control regulations of the U.S. Environmental Protection Agency (EPA), California Air Resources Board (CARB), and Environment Canada (EC). The fuel tank, fuel hoses, and fuel vapor charge hoses used on this motorcycle incorporate fuel permeation control technologies. Tampering with the fuel tank, fuel hoses, or fuel vapor charge hoses to reduce or defeat the effectiveness of the fuel permeation technologies is prohibited by federal regulations.

2. TECHNICAL FEATURES

2

EXHAUST SYSTEM..... 2-2

FAN MOTOR CONTROL SYSTEM 2-6

CMP SENSOR 2-5

CLUTCH SYSTEM 2-7


EXHAUST SYSTEM

SUMMARY

This motorcycle is equipped the ECV and EGBV that provides high performance and driveability.

Each component of exhaust system is located as follows:

- EXHAUST PIPE
- MUFFLER
 - The muffler is separated with the chamber (1), (2) and (3).
 - The oxidation catalytic converter is located in the chamber (1).
 - The EGBV is located between the chamber (1) and (3).
 - The ECV is located in the chamber (3).

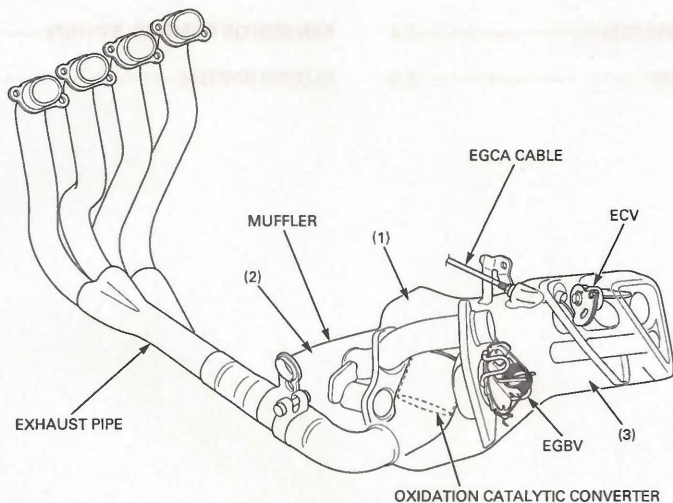


EGBV (Exhaust Gas Bypass Valve)

The EGBV is located between the chamber (1) and (3) in the muffler as shown.

This system consists of the bypass valve and spring.

The EGBV operates with the differential pressure for exhaust gas between the chamber (1) and (3) when the engine rpm is in 7,000 – 8,000 rpm or more.


EGBV CLOSE:

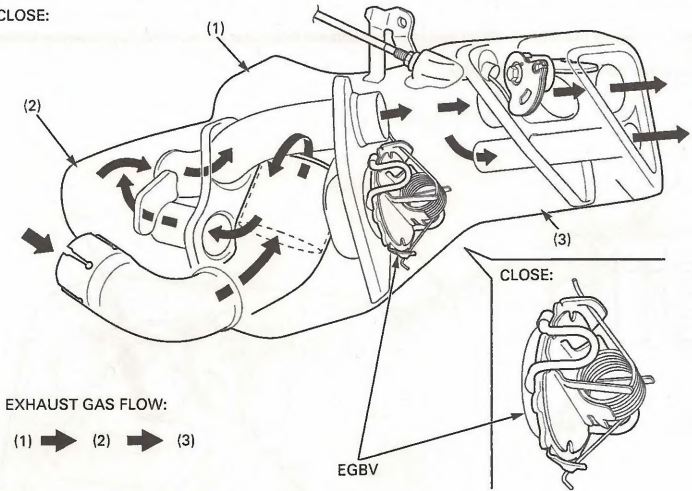

EXHAUST GAS FLOW:

(1) → (2) → (3)

EGBV OPEN: 7,000 – 8,000 rpm or more

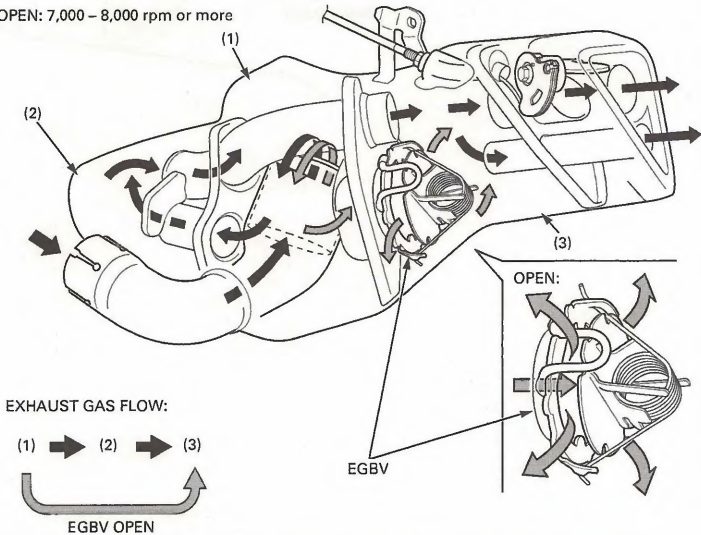

EXHAUST GAS FLOW:

(1) → (2) → (3)



TECHNICAL FEATURES

ECV (Exhaust Control Valve)

This system consists of the ECV, EGCA and single cable.


The ECV locates in the end of the muffler tail, and controls the exhaust gas outflow to close the tail pipe.

The ECV is controlled by the EGCA through the cable.

The ECM sends a signal to control the EGCA when the engine rpm is 3,000 – 6,000 rpm.

NOTE:

- It is necessary to inspect the ECV condition and cable adjustment in accordance with the maintenance schedule (page 4-4).
- The ECV and pulley can not be disassembled.

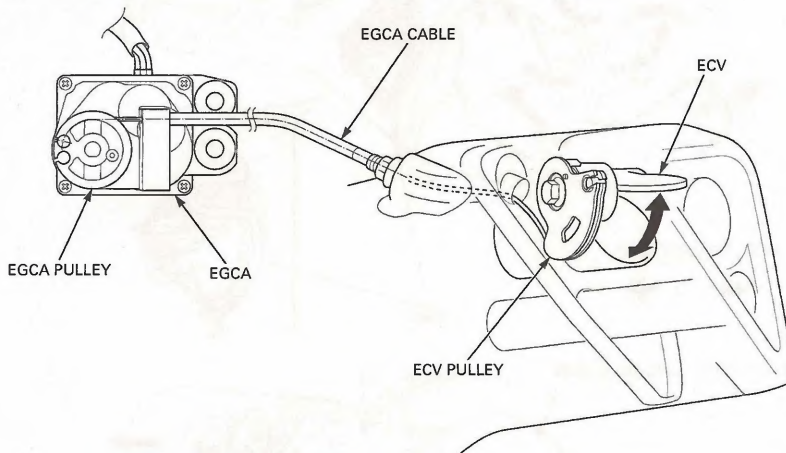

CMP SENSOR

SUMMARY

The CMP sensor is located on the center of the cylinder head cover, and detects the position of the camshaft.

The pick up type CMP sensor comprises a permanent magnet and a coil, and changes in the output voltage are in proportion to the rotational speed of the camshaft.


The HALL IC type CMP sensor used on this motorcycle comprises a permanent magnet, a HALL element, and the input voltage is supplied. The output voltage is not proportional to the rotational speed of the camshaft but is constant.

The detection range of this type of CMP sensor is much wider than the pick up type.




Pick up type CMP sensor:

The output voltage is proportional to the rotational speed of the camshaft.

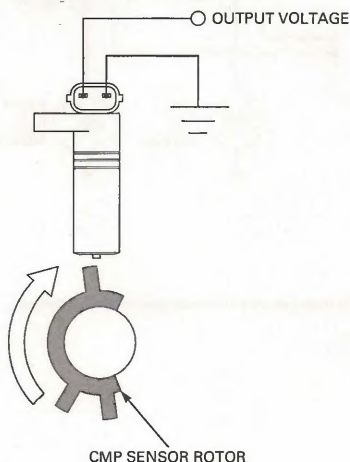

HALL IC type CMP sensor:

The output voltage is constant.

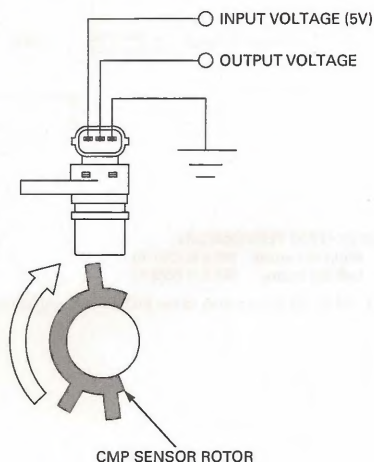


TECHNICAL FEATURES

FAN MOTOR CONTROL SYSTEM

This motorcycle is equipped with right and left fan motors.

The system consists of the right fan motor, fan (R) motor relay, left fan motor, and fan (L) motor relay.

Each fan motor is independently controlled by the ECM according to the engine coolant temperature.

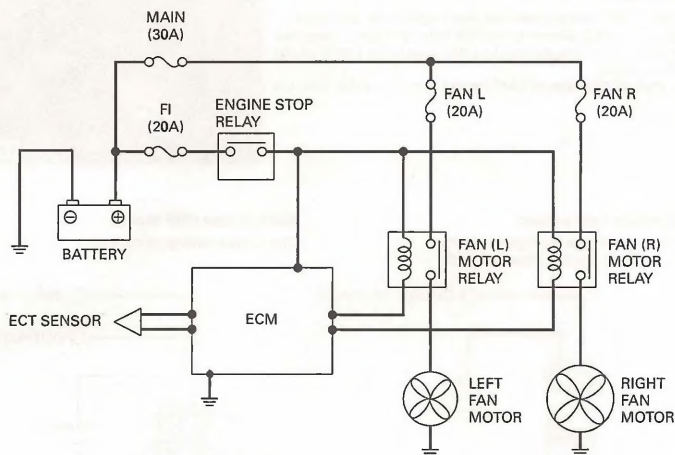

OPERATING TEMPERATURE:

Right fan motor: 102.6°C (217°F)

Left fan motor: 106.2°C (223°F)

- When an abnormality of the ECT sensor and its circuit is detected, the ECM operates both fan motors.


CLUTCH SYSTEM

SUMMARY

This clutch has an assist and back torque limiter function.

The clutch spring is a diaphragm type.

COMPONENT LOCATION

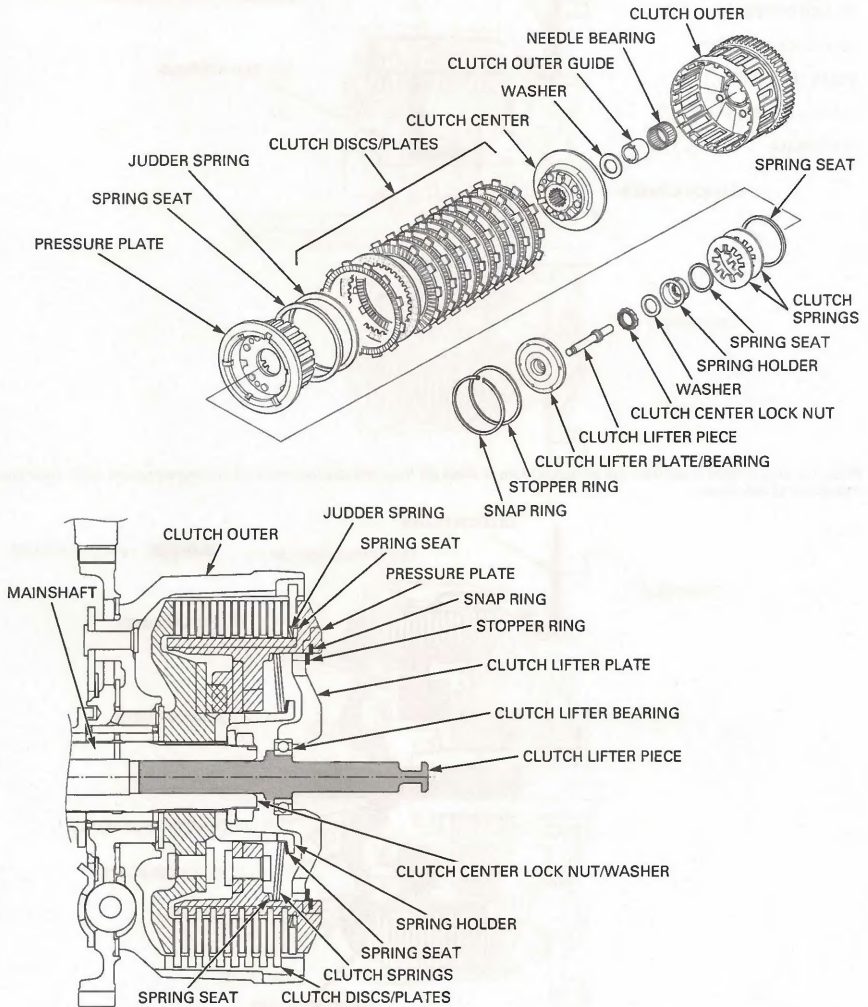


TECHNICAL FEATURES


CLUTCH MECHANISM

OPERATION

When the clutch lever is released, the engine power is transmitted from the crankshaft to mainshaft as follows:

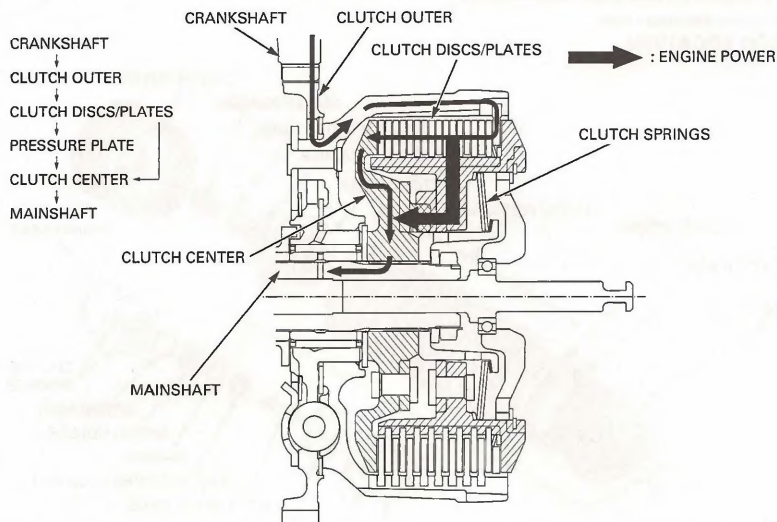


When the clutch lever is applied, the pressure plate is lifted off from the clutch discs and the engine power is cut from the crankshaft to mainshaft.

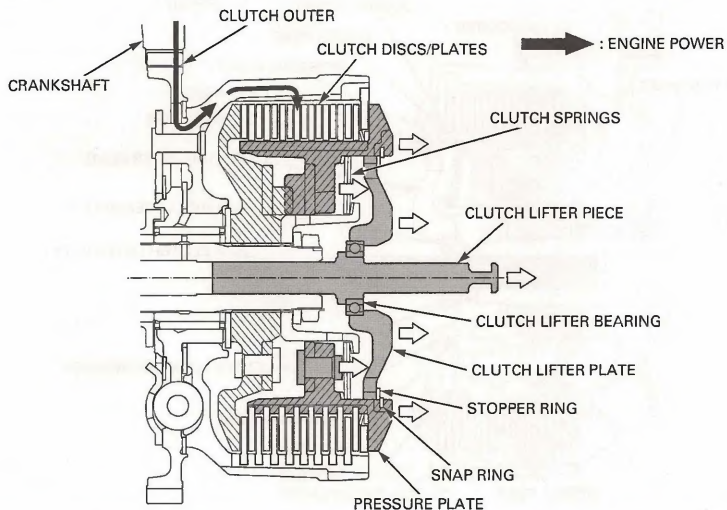

CLUTCH ASSIST

When the motorcycle is accelerating, the pressure plate moves in the direction of the clutch center, causing the pressure plate cams to apply improved compression force against the clutch discs and plates.

When the motorcycle is accelerating:

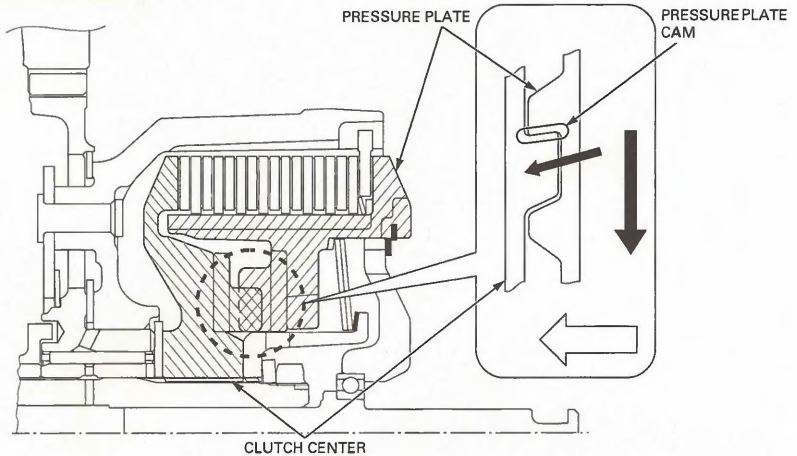


BACK TORQUE LIMITER

When the motorcycle is decelerating, the pressure plate moves away from the clutch center, causing the pressure plate cams to reduce the compression force against the clutch discs and plates.

As a result, the clutch slips, and the reduced engine braking prevents the rear wheel from locking up.

When the motorcycle is decelerating

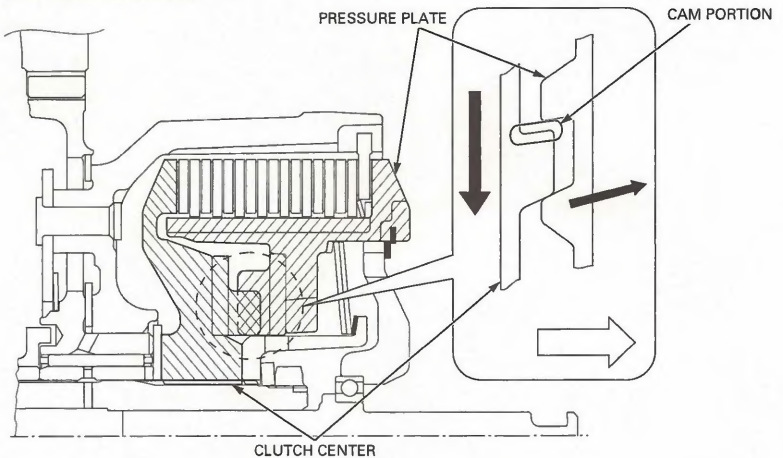


- The specified engine oil (MA) should be used to maintain the performance of the clutch.

3. FRAME/BODY PANELS/EXHAUST SYSTEM

BODY PANEL LOCATIONS	3-2	MIDDLE COWL	3-10
SERVICE INFORMATION	3-3	REARVIEW MIRROR/WINDSCREEN.....	3-11
TROUBLESHOOTING	3-3	UPPER COWL	3-13
TRIM CLIPS	3-4	FRONT FENDER	3-18
SEAT/SIDE COVER.....	3-6	REAR FENDER A	3-19
PILLION SEAT/SEAT BELT	3-6	REAR FENDER B.....	3-19
TOP SHELTER	3-7	REAR FENDER C.....	3-20
REAR SEAT COWL	3-8	LICENSE LIGHT STAY.....	3-21
AIR INTAKE COVER.....	3-8	SEAT RAIL	3-23
UPPER INNER COVER	3-9	MUFFLER	3-24
LOWER COWL	3-9	EXHAUST PIPE.....	3-31

BODY PANEL LOCATIONS

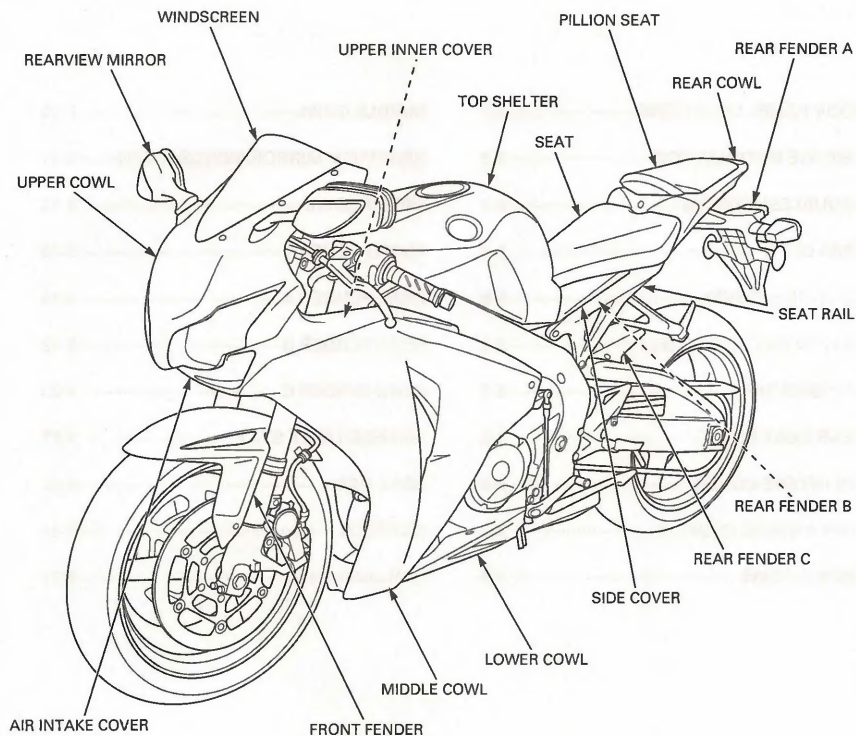

SERVICE INFORMATION

GENERAL

- This section covers removal and installation of the body panels, exhaust system and seat rail.
- Serious burns may result if the exhaust system is not allowed to cool before components are removed or serviced.
- Always replace the exhaust pipe gaskets with new ones after removing the exhaust pipe from the engine.
- When installing the exhaust system, loosely install all of the exhaust pipe fasteners. Always tighten the exhaust clamps first, then tighten the mounting fasteners.
- Always inspect the exhaust system for leaks after installation.

TORQUE VALUES

Windscreen mounting bolt	1.5 N·m (0.2 kgf·m, 1.1 lbf·ft)
Front brake hose clamp nut	10 N·m (1.0 kgf·m, 7 lbf·ft)
Front brake hose 3-way joint bolt	10 N·m (1.0 kgf·m, 7 lbf·ft)
Front fender mounting screw	12 N·m (1.2 kgf·m, 9 lbf·ft)
Seat rail mounting nut	54 N·m (5.5 kgf·m, 40 lbf·ft)
Seat rail mounting bolt	44 N·m (4.5 kgf·m, 32 lbf·ft)
Seat rail assembly bolt	30 N·m (3.1 kgf·m, 22 lbf·ft)
Center cross plate mounting bolt	12 N·m (1.2 kgf·m, 9 lbf·ft)
Exhaust pipe joint nut	12 N·m (1.2 kgf·m, 9 lbf·ft)
Exhaust pipe stud bolt	See page 3-33
Main step bracket mounting bolt	37 N·m (3.8 kgf·m, 27 lbf·ft)
Pillion step bracket mounting bolt	27 N·m (2.8 kgf·m, 20 lbf·ft)
Lower cowl mounting screw	1.5 N·m (0.2 kgf·m, 1.1 lbf·ft)
Lower cowl mounting special screw	10 N·m (1.0 kgf·m, 7 lbf·ft)
Bank angle sensor mounting screw	1.1 N·m (0.1 kgf·m, 0.8 lbf·ft)
Vacuum chamber stay mounting screw	1.1 N·m (0.1 kgf·m, 0.8 lbf·ft)
Air duct resonator mounting screw	1.1 N·m (0.1 kgf·m, 0.8 lbf·ft)
Air duct mounting screw	1.1 N·m (0.1 kgf·m, 0.8 lbf·ft)
Air duct cover mounting screw	1.5 N·m (0.2 kgf·m, 1.1 lbf·ft)
Rearview mirror mounting nut	10 N·m (1.0 kgf·m, 7 lbf·ft)
Rearview mirror front cover screw	1.0 N·m (0.1 kgf·m, 0.7 lbf·ft)
Heat guard mounting screw	10 N·m (1.0 kgf·m, 7 lbf·ft)
Muffler rear cap mounting screw	4.2 N·m (0.4 kgf·m, 3.1 lbf·ft)
Middle cowl mounting screw	1.5 N·m (0.2 kgf·m, 1.1 lbf·ft)
Seat mounting special screw	4.3 N·m (0.4 kgf·m, 3.2 lbf·ft)
Muffler band bolt	17 N·m (1.7 kgf·m, 13 lbf·ft)

TROUBLESHOOTING

Excessive exhaust noise

- Broken exhaust system
- Exhaust gas leak

Poor performance

- Deformed exhaust system
- Exhaust gas leak
- Clogged muffler


TRIM CLIPS

TRIM CLIP 1

REMOVAL

Push the center of the trim clip pin.

Remove the trim clip.

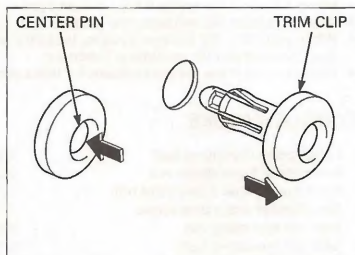


INSTALLATION

Raise the center pin by pushing the center pin back.

Install the trim clip.

Push the center pin until the pin is flush with the outer casing.

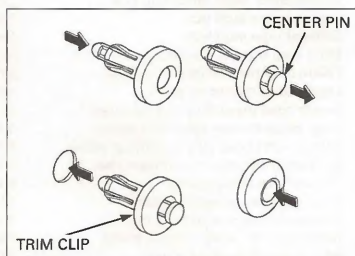

TRIM CLIP 2

REMOVAL

Push the center of the trim clip pin.


Remove the trim clip.

INSTALLATION

Raise the center pin by pushing the retaining tabs back.

Install the trim clip.


Push the center pin until the pin is flush with the outer casing.

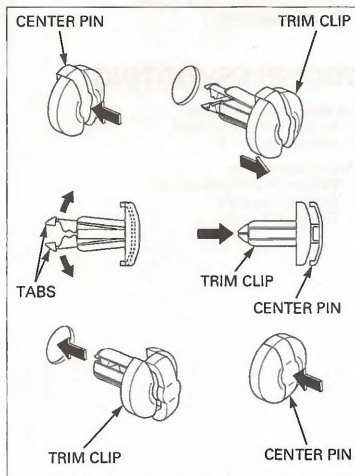

TRIM CLIP 3


REMOVAL

Loosen the center screw.
Remove the trim clip.

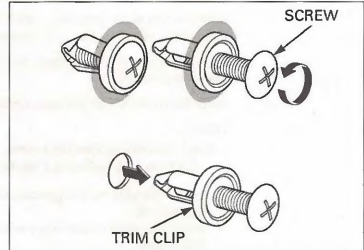

INSTALLATION

Install the trim clip.
Tighten the center screw until the screw is flush with the outer casing.

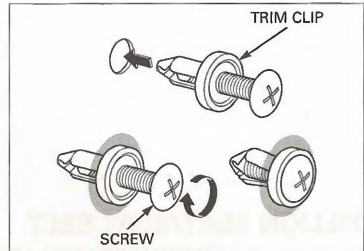

SEAT/SIDE COVER

REMOVAL/INSTALLATION

Release the side cover bosses from the frame grommets then remove the side covers.

Remove the special screws and move the seat forward to remove it.


Installation is in the reverse order of removal.

TORQUE:

Seat mounting special screw:

4.3 N-m (0.4 kgf-m, 3.2 lbf-ft)

- Align the side cover groove with the top shelter tab.
- Align the side cover boss with the frame grommet.

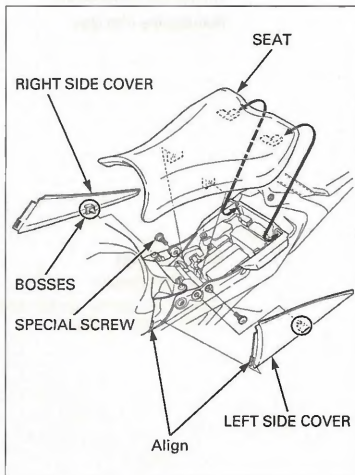

PILLION SEAT/SEAT BELT

REMOVAL/INSTALLATION


Unlock the pillion seat lock using the ignition key. Move the seat belt forward and remove the pillion seat by pulling it forward.

Remove the screws and seat belt.

Install the seat belt and tighten the screws securely.

Install the pillion seat in the reverse order of removal and push it down to lock.

- Align the seat belt mounting plate groove with the seat catch tab.

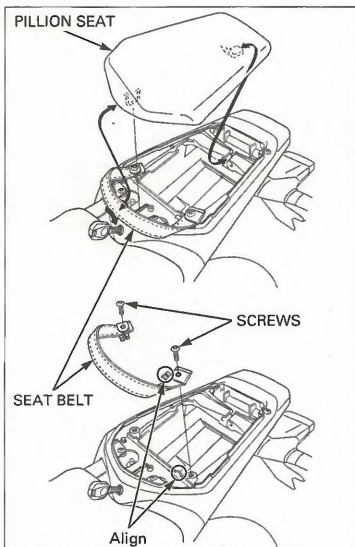

TOP SHELTER


REMOVAL/INSTALLATION

Remove the seat (page 3-6).


Remove the screws, top shelter and collars.

Be careful not to lose the collars.

Installation is in the reverse order of removal.

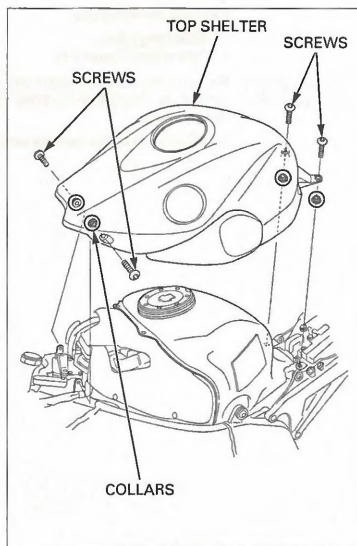

DISASSEMBLY/ASSEMBLY

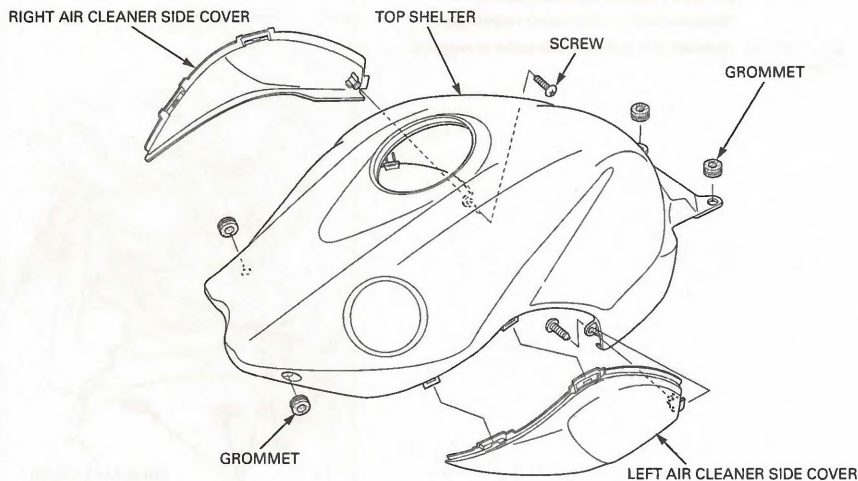

REAR SEAT COWL

REMOVAL/INSTALLATION


Remove the following:

- Seat (page 3-6)
- Pillion seat (page 3-6)

Be careful not to damage the tabs.

Remove the screws, move the rear seat cowl back slightly to disengage the tabs, remove the cowl and special nuts.

Installation is in the reverse order of removal.

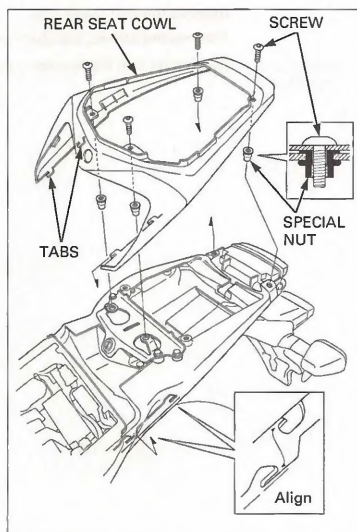


AIR INTAKE COVER

REMOVAL/INSTALLATION

Remove the trim clips and air intake cover.

Be careful not to damage the tabs.

Installation is in the reverse order of removal.

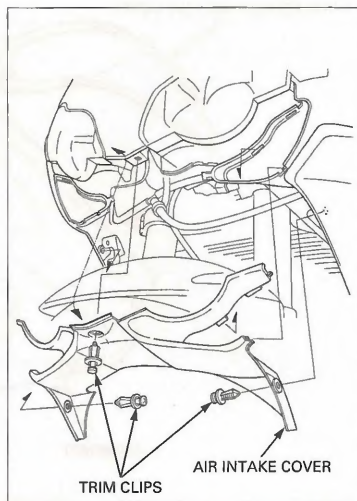

UPPER INNER COVER


REMOVAL/INSTALLATION

Remove the trim clips.

Release the groove from the rubber tab and remove the upper inner cover.

Installation is in the reverse order of removal.

Be careful not to damage the tabs.

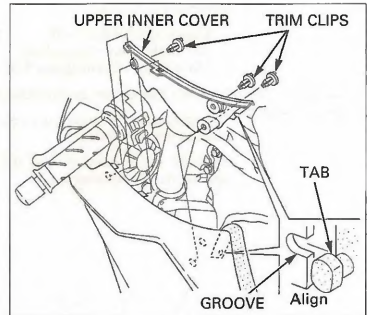

LOWER COWL

REMOVAL/INSTALLATION

Release the hoses from the lower cowl.

Remove the screws and special screws.

Release the front side grooves from the middle cowl tabs.

Slide the lower cowl rearward and remove the lower cowl downward.

Remove the special nuts from the stays.

Installation is in the reverse order of removal.

TORQUE:


Lower cowl mounting screw:

1.5 N-m (0.2 kgf-m, 1.1 lbf-ft)

Lower cowl mounting special screw:

10 N-m (1.0 kgf-m, 7 lbf-ft)

Be careful not to damage the tabs and grooves.

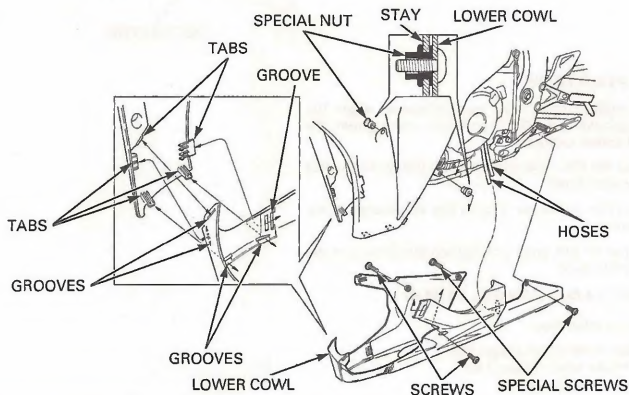

MIDDLE COWL

REMOVAL

Remove the following:


- Lower cowl (page 3-9)
- Air intake cover (page 3-8)
- Upper inner cover (page 3-9)

Be careful not to damage the tabs.

Remove the screws and middle cowl.

Disconnect the IDC solenoid valve 2P (Gray) connector and vacuum hose.

Remove the special screw, middle cowl stay and special nut if necessary.

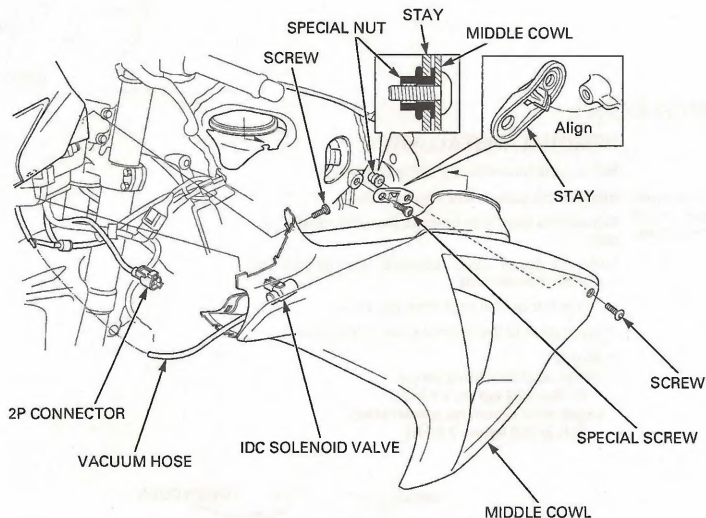

INSTALLATION

If the middle cowl stay was removed, align the stay's groove with the frame tab and tighten the special screw securely.

Connect the IDC solenoid valve 2P (Gray) connector and vacuum hose.

Connect the intake air duct to the air cleaner housing securely.

Align the tabs in the middle cowl with the slots in the upper cowl.

Install the middle cowl and tighten the screws to the specified torque.


TORQUE: 1.5 N·m (0.2 kgf-m, 1.1 lbf-ft)

Correctly route the wires (page 1-20). Be careful not to pinch the wires.

Install the following:

- Upper inner cover (page 3-9)
- Air intake cover (page 3-8)
- Lower cowl (page 3-9)

DISASSEMBLY/ASSEMBLY

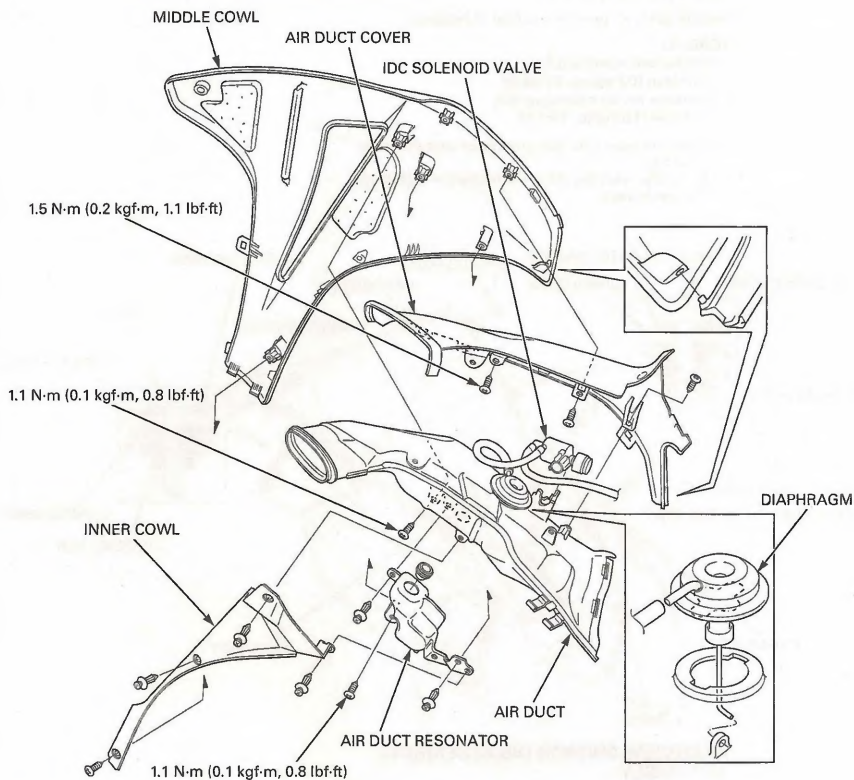


REARVIEW MIRROR/WINDSCREEN

REMOVAL/INSTALLATION

Disconnect the position light and turn signal 2P connectors.

Remove the nuts and rearview mirror.

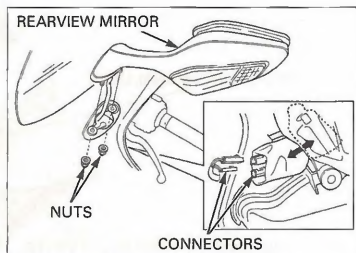

FRAME/BODY PANELS/EXHAUST SYSTEM

Remove the bolts, plastic washers, rubber washers, windscreen and special nuts.

Installation is in the reverse order of removal.

TORQUE:


Windscreen mounting bolt:

1.5 N-m (0.2 kgf-m, 1.1 lbf-ft)

Rearview mirror mounting nut:


10 N-m (1.0 kgf-m, 7 lbf-ft)

- Align the front side two grommets with the front cowl tabs.
- Route the rearview mirror wires before installing the windscreen.

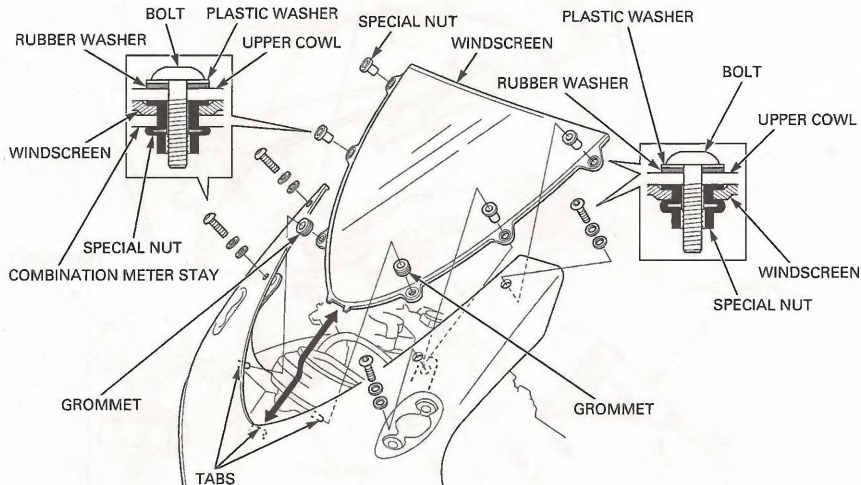

REARVIEW MIRROR DISASSEMBLY/ASSEMBLY

- For rearview mirror front cover removal (page 20-6).

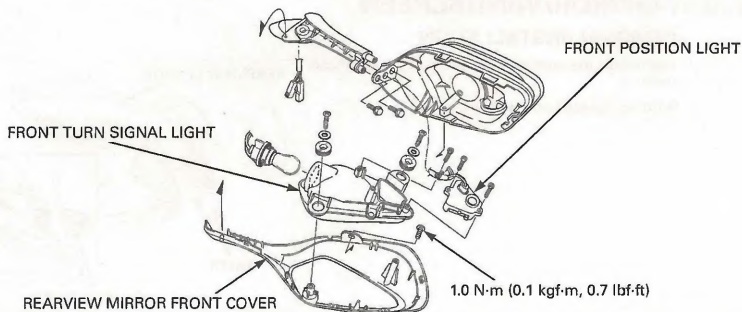

UPPER COWL

REMOVAL/INSTALLATION

Remove the following:

- Middle cowls (page 3-10)
- Upper inner covers (page 3-9)
- Rearview mirrors (page 3-11)
- Windscreen (page 3-11)

Disconnect the sub harness 20P (Black) and 8P (Black) connectors.


Disconnect the vacuum hose from the one-way valve.

Remove the upper cowl from the frame grommets.

Disconnect the horn connectors and combination meter 20P (Gray) connector.

Installation is in the reverse order of removal.


Correctly route the wires (page 1-20).

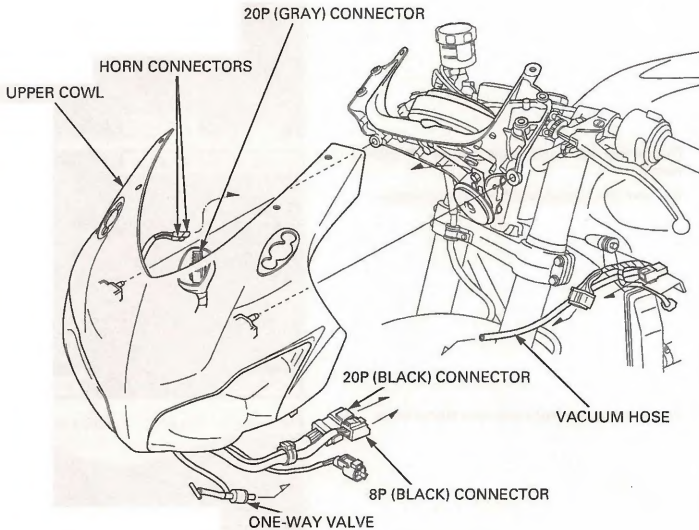

FRAME/BODY PANELS/EXHAUST SYSTEM


DISASSEMBLY

Remove the vacuum chamber from the vacuum chamber stay.

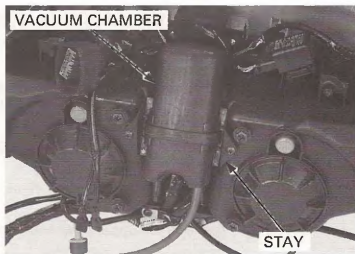


Remove the screws and vacuum chamber stay.

Release the bank angle sensor 3P (Black) connector and wire clamp from the vacuum chamber stay.

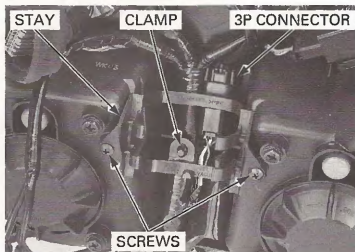


Disconnect the bank angle sensor 3P (Black) connector.


Remove the screws and bank angle sensor.

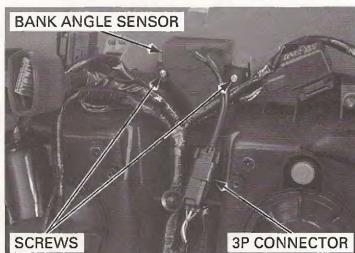


Remove the headlight and turn signal relay.

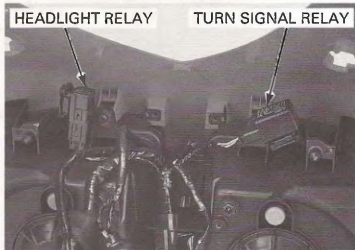

Release the wire harnesses from the wire guide.

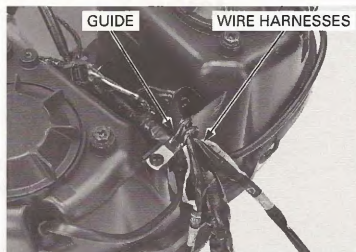


Remove the screws, special screws, and headlight from the upper cowl.

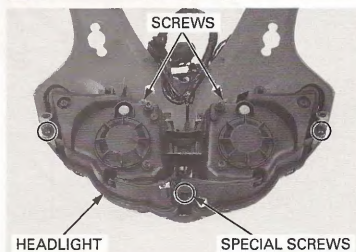


Remove the headlight 4P (Black) connector from the headlight.




ASSEMBLY

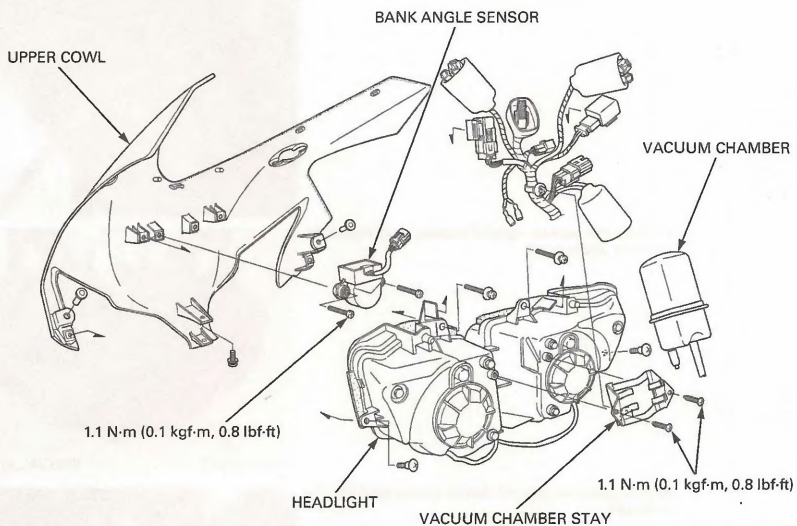

Install the headlight 4P (Black) connector to the headlight.

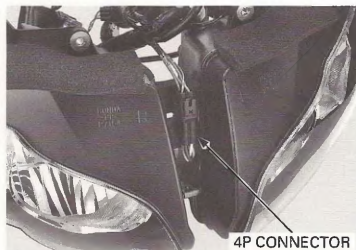


Install the headlight to the upper cowl and tighten the screws and special screws securely.

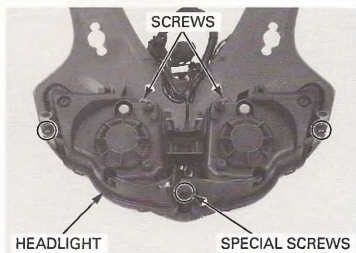


Correctly route the wires (page 1-20).

Install the wire harnesses to the wire guide.

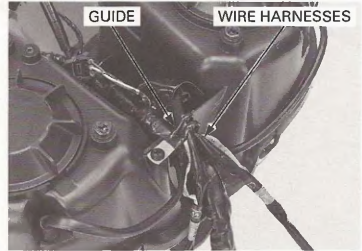


Install the headlight and turn signal relay.

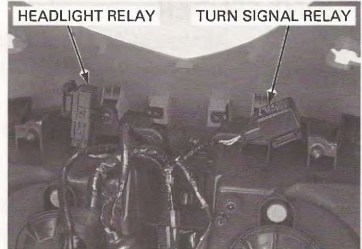

Install the bank angle sensor and tighten the screws to the specified torque.

TORQUE: 1.1 N·m (0.1 kgf·m, 0.8 lbf·ft)


Connect the bank angle sensor 3P (Black) connector.

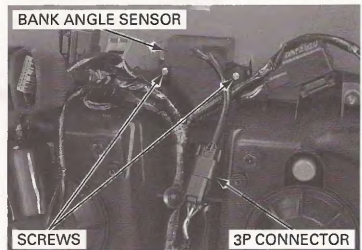

Install the bank angle sensor 3P (Black) connector and wire clamp to the vacuum chamber stay.


Install the vacuum chamber stay and tighten the screws to the specified torque.

TORQUE: 1.1 N·m (0.1 kgf·m, 0.8 lbf·ft)

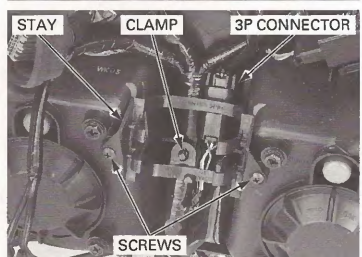

FRAME/BODY PANELS/EXHAUST SYSTEM

Install the vacuum chamber to the vacuum chamber stay securely.

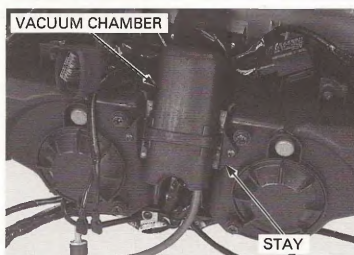

FRONT FENDER

REMOVAL/INSTALLATION

Remove the front brake hose 3-way joint bolt and hose clamp nut.

Remove the screws, grommets, front fender, collars and reflectors from the fork legs.

NOTE:

- Pull the front fender up and then pull it forward between the fork legs.
- Be careful not to damage the fork legs.

Installation is in the reverse order of removal.

TORQUE:

Front fender mounting screw:


12 N·m (1.2 kgf·m, 9 lbf·ft)

Front brake hose clamp nut:

10 N·m (1.0 kgf·m, 7 lbf·ft)

Front brake hose 3-way joint bolt:

10 N·m (1.0 kgf·m, 7 lbf·ft)

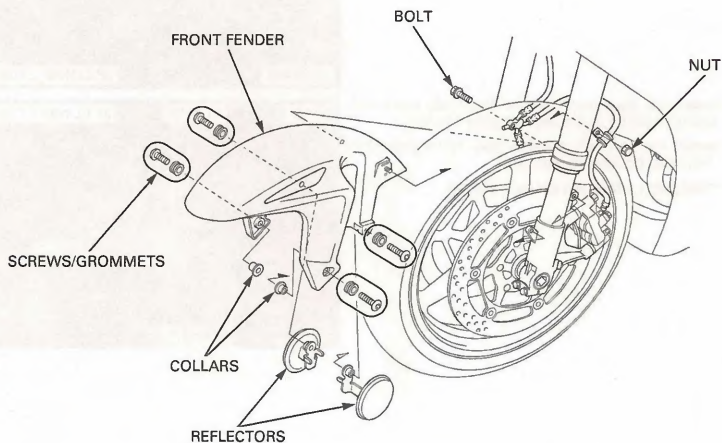

REAR FENDER A

REMOVAL/INSTALLATION

Remove the nuts, bolts and number plate bracket.


Remove the nuts and reflectors from the number plate bracket.

Remove the special screws.

Remove the nut, reflector, collar and rear fender A.

Installation is in the reverse order of removal.

- Align the reflector tab with the license light stay hole.

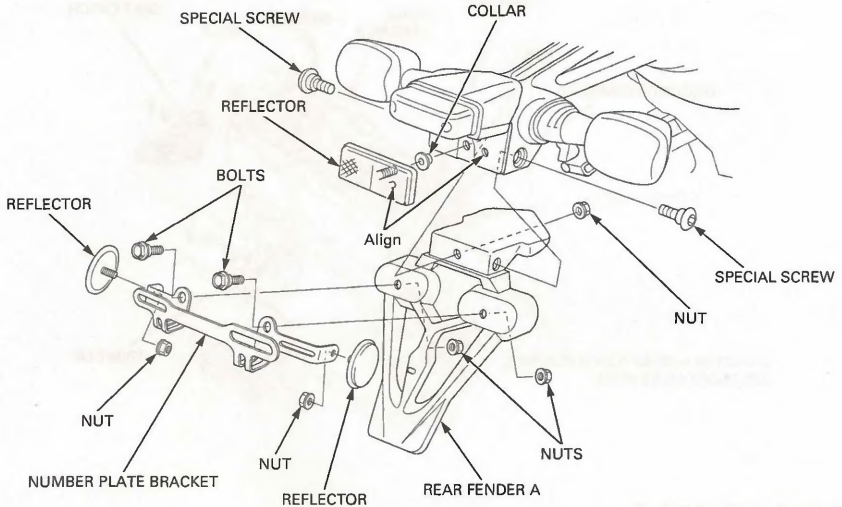

REAR FENDER B


REMOVAL/INSTALLATION

Remove the following:

- Rear seat cowl (page 3-8)
- Fuel tank (page 6-51)
- Battery (page 17-6)
- Regulator/rectifier (page 17-9)
- Starter relay switch (page 19-14)
- EGCA (page 6-79)

Disconnect the brake/tail light 3P (Natural) and sub harness 4P (Black) connectors.

Remove the fuse/relay box from the rear fender B.

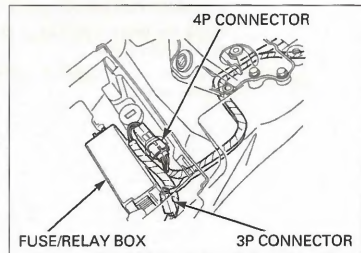

FRAME/BODY PANELS/EXHAUST SYSTEM

Remove the bolts and pillion seat catch.


Remove the bolt and ground terminals.

Disconnect the siphon hose.

California type: Disconnect the canister-to-EVAP purge control solenoid valve hose.

Remove the trim clips, screw and rear fender B.

Correctly route the wires (page 1-20).
Installation is in the reverse order of removal.

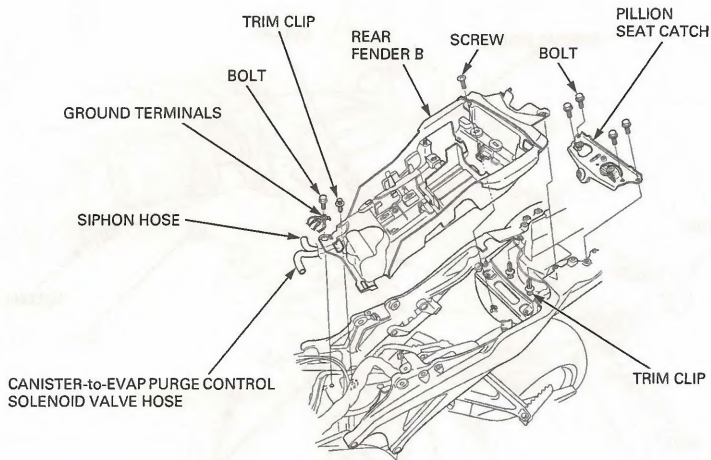


REAR FENDER C

REMOVAL/INSTALLATION

Remove the special screws, rear fender C and brake hose guide from the swingarm.

Install the brake hose clamp by aligning its tab to the swingarm hole.

Install the rear fender C and tighten the special screws securely.

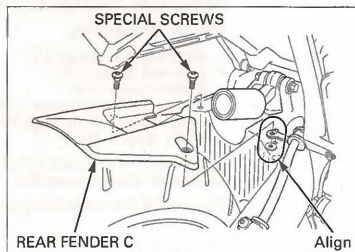


LICENSE LIGHT STAY

REMOVAL/INSTALLATION


Remove the rear fender B (page 3-19).

Remove the screws, bolts, washers, collars and license light stay assembly rearward.

Installation is in the reverse order of removal.

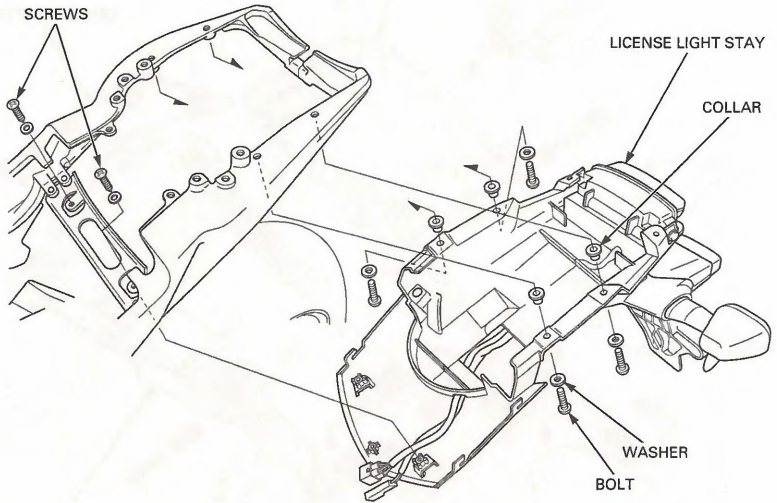

DISASSEMBLY/ASSEMBLY

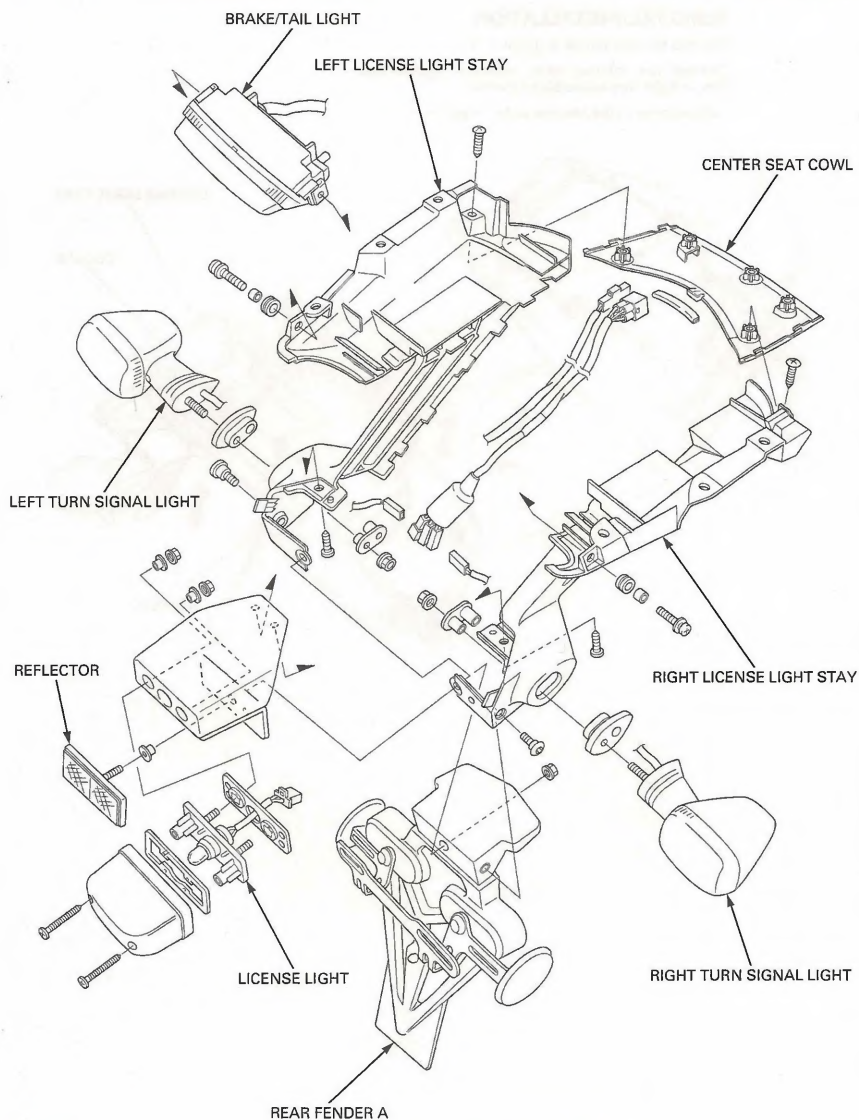

SEAT RAIL

REMOVAL/INSTALLATION

Remove the following:

- Rear fender B (page 3-19)
- License light stay (page 3-21)

Remove the nuts, bolts and seat rail.

Installation is in the reverse order of removal.


TORQUE:

Seat rail mounting nut:


54 N·m (5.5 kgf·m, 40 lbf·ft)

Seat rail mounting bolt:

44 N·m (4.5 kgf·m, 32 lbf·ft)

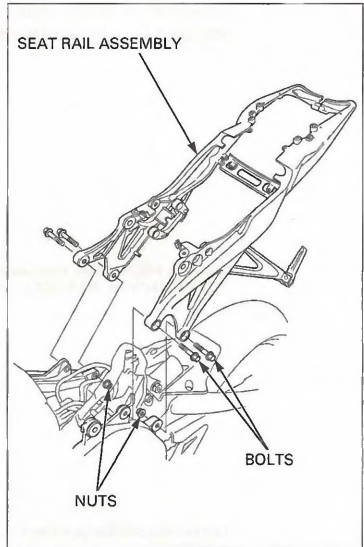

DISASSEMBLY/ASSEMBLY

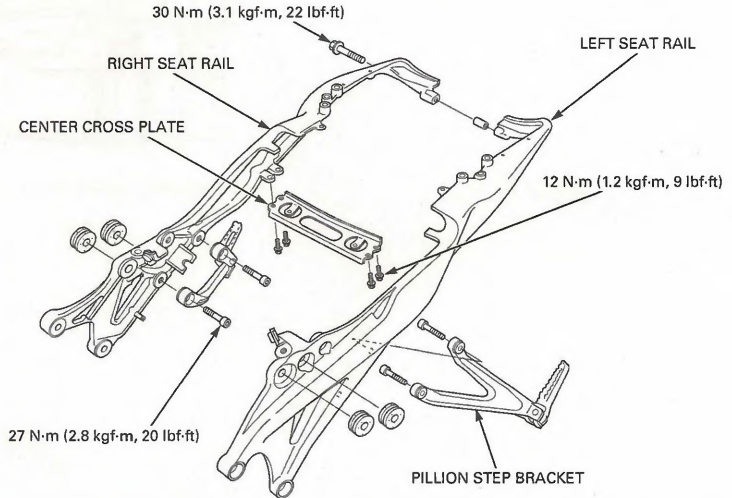


MUFFLER


REMOVAL

Remove the lower cowl (page 3-9).


Remove the trim clips and EGCA cover.

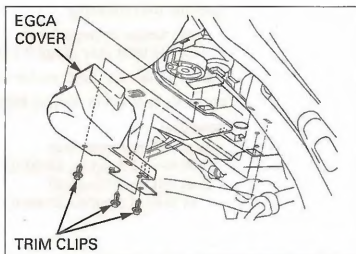

Turn the EGCA pulley clockwise and disconnect the EGCA cable from the EGCA pulley.

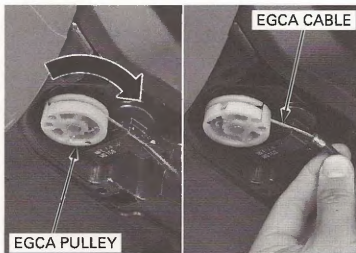


Loosen the muffler band bolt.

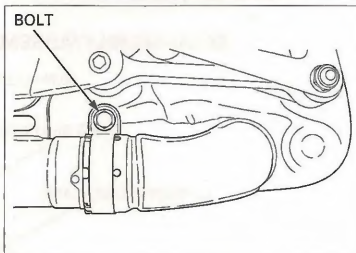


While holding the muffler, remove the muffler mounting nut, bolt and washer.

Release the EGCA cable from the cable guide.

Remove the bolts and right main step bracket assembly.

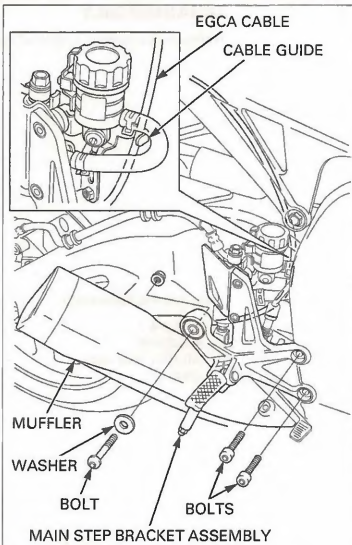


Remove the muffler and gasket from the exhaust pipe.

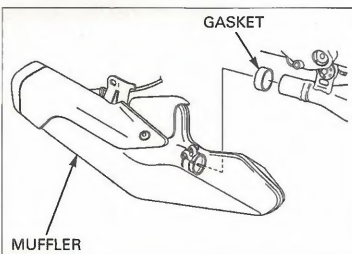


DISASSEMBLY

Remove the screws and heat guard.

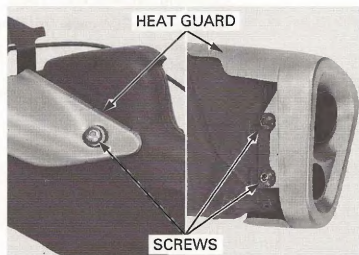


Remove the following:


- Screws
- Washers
- Muffler rear cap
- Gasket

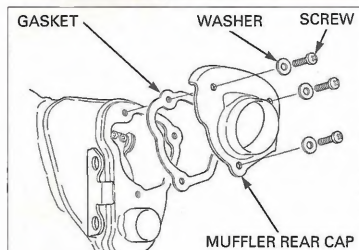


Disconnect the EGCA cable from the ECV pulley.

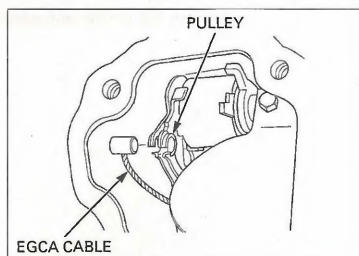


Loosen the lock nut and disconnect the EGCA cable from the muffler.

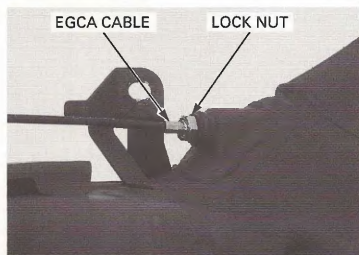


ASSEMBLY

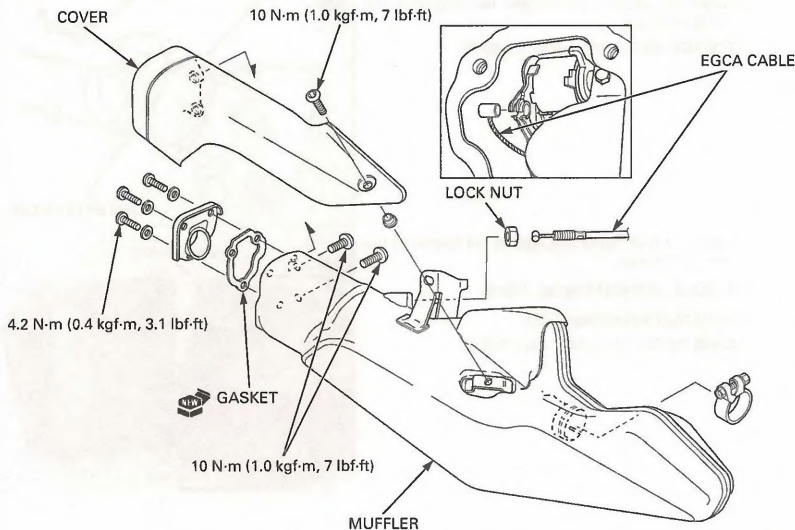

Insert the EGCA cable into the muffler.

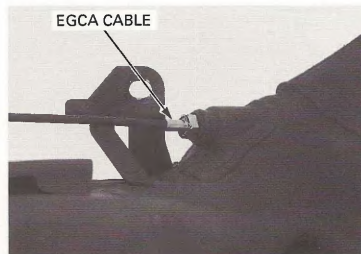

Connect the EGCA cable to the ECV pulley securely. Check the EGCA cable length (page 4-23).

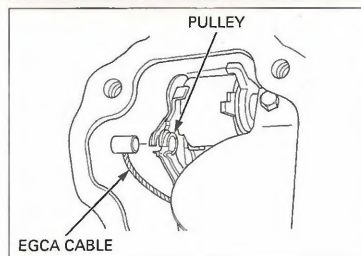


FRAME/BODY PANELS/EXHAUST SYSTEM

Install a new gasket and muffler rear cap.

Install the washers and tighten the screws to the specified torque.

TORQUE: 4.2 N-m (0.4 kgf-m, 3.1 lbf-ft)

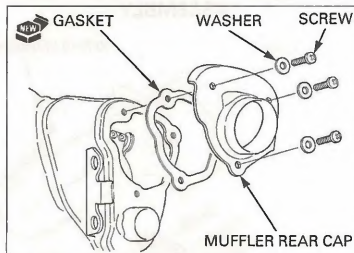


Install the heat guard and tighten the screws to the specified torque.


TORQUE: 10 N-m (1.0 kgf-m, 7 lbf-ft)

Install the muffler (page 3-24).


Check the ECV operation (page 4-23).

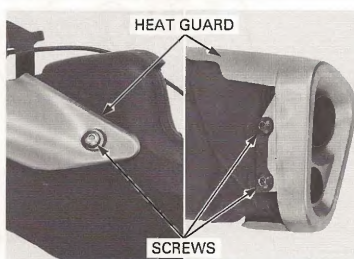

INSTALLATION

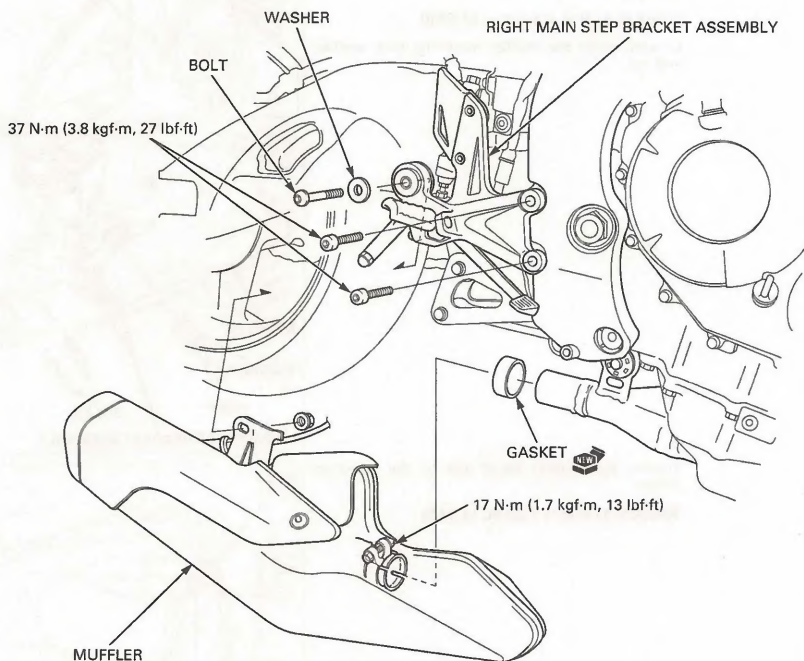

Install a new gasket and the muffler to the exhaust pipe.

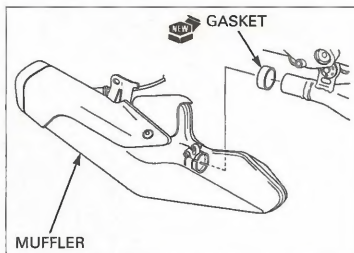


FRAME/BODY PANELS/EXHAUST SYSTEM

Raise the muffler into position while routing the EGCA cable to the cable guide

While holding the muffler, install the right main step bracket assembly and tighten the bolts to the specified torque.


TORQUE: 37 N·m (3.8 kgf·m, 27 lbf·ft)

Loosely install the muffler mounting bolt, washer and nut.

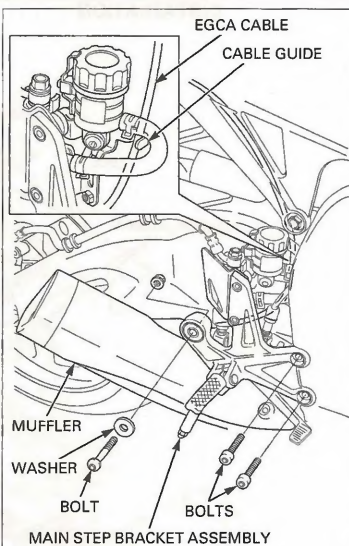


Tighten the muffler band bolt to the specified torque.


TORQUE: 17 N·m (1.7 kgf·m, 13 lbf·ft)

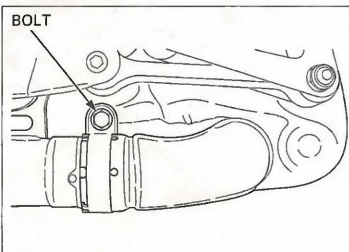


Tighten the muffler mounting nut securely while holding the bolt.

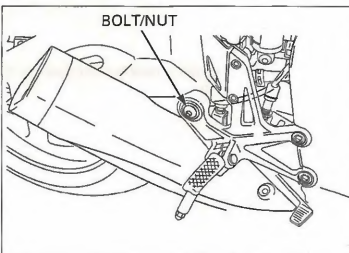


Connect the EGCA cable to the EGCA pulley.
Turn the EGCA pulley counterclockwise to the specified angle as shown.
Check the EGCA and ECV operation (page 4-23).

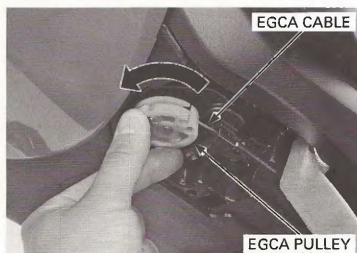

PULLEY ANGLE:

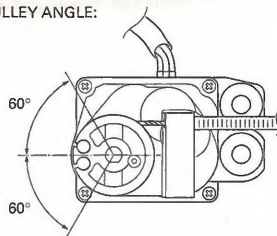

Install the EGCA cover and trim clips securely.
Install the lower cowl (page 3-9).

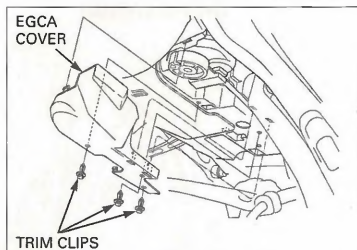


EXHAUST PIPE

REMOVAL

Remove the following:

- Muffler (page 3-24)
- Radiator (page 7-11)

Remove the exhaust pipe joint nuts.

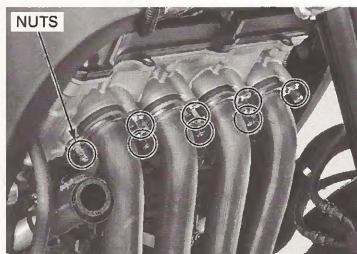


FRAME/BODY PANELS/EXHAUST SYSTEM


Remove the bolt, washer, collar and exhaust pipe.



Remove the exhaust pipe gaskets.

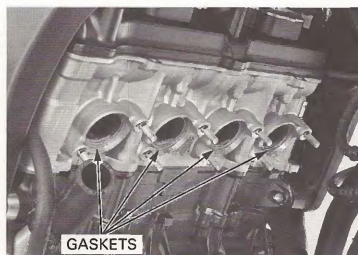


INSTALLATION

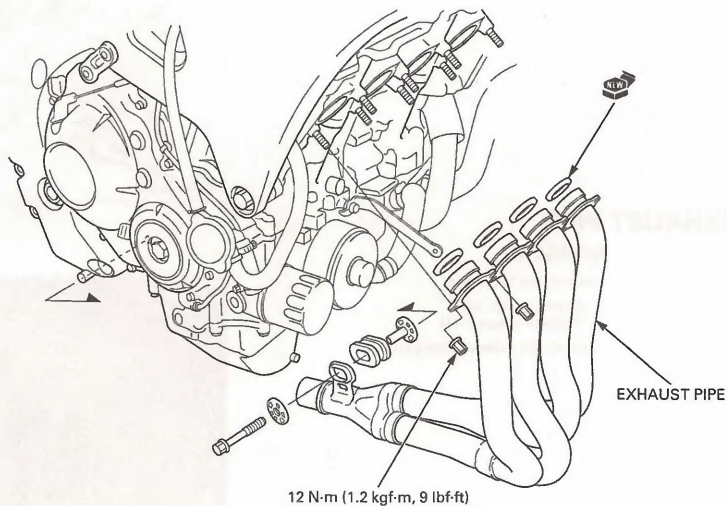

Check that the exhaust pipe stud bolt protrusion from the exhaust port is specified length as shown.


SPECIFIED LENGTH: 37.0 – 38.0 mm (1.46 – 1.50 in)

EXHAUST PIPE STUD BOLT

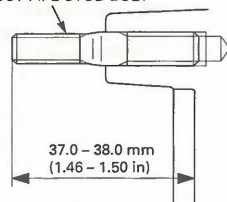


Always replace the exhaust pipe gaskets with new ones.

Install new exhaust pipe gaskets onto the exhaust ports of the cylinder head.

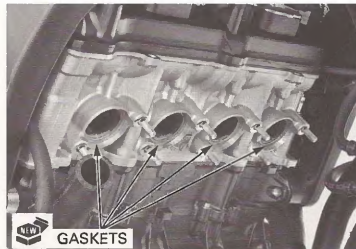


Loosely install the exhaust pipe, collar and mounting bolt/washer.

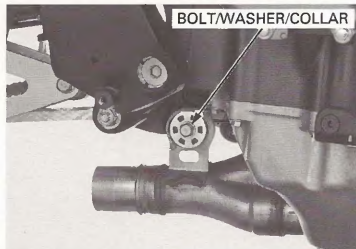

Tighten the exhaust pipe joint nuts to the specified torque.

TORQUE: 12 N·m (1.2 kgf-m, 9 lbf-ft)

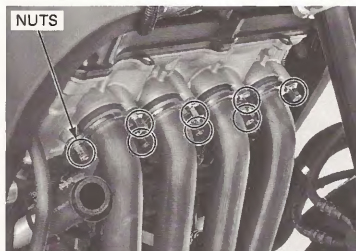

FRAME/BODY PANELS/EXHAUST SYSTEM

Tighten the exhaust pipe mounting bolt securely.

Install the following:

- Radiator (page 7-19)
- Muffler (page 3-24)



SERVICE INFORMATION	4-2	EGCA CABLE	4-23
MAINTENANCE SCHEDULE	4-4	DRIVE CHAIN	4-26
FUEL LINE	4-5	BRAKE FLUID	4-31
THROTTLE OPERATION	4-8	BRAKE PADS WEAR	4-32
AIR CLEANER	4-9	BRAKE SYSTEM	4-32
SPARK PLUG	4-10	BRAKE LIGHT SWITCH	4-33
VALVE CLEARANCE	4-12	HEADLIGHT AIM	4-34
ENGINE OIL/OIL FILTER	4-17	CLUTCH SYSTEM	4-34
RADIATOR COOLANT	4-20	SIDESTAND	4-35
COOLING SYSTEM	4-20	SUSPENSION	4-35
SECONDARY AIR SUPPLY SYSTEM	4-21	NUTS, BOLTS, FASTENERS	4-38
EVAPORATIVE EMISSION CONTROL SYSTEM (CALIFORNIA TYPE)	4-22	WHEELS/TIRES	4-39
		STEERING HEAD BEARINGS	4-40

MAINTENANCE

SERVICE INFORMATION

GENERAL

- Place the motorcycle on level ground before starting any work.
- The exhaust contains poisonous carbon monoxide gas that may cause loss of consciousness and may lead to death. Run the engine in an open area or with an exhaust evacuation system in an enclosed area.
- Serious burns may result if the exhaust system is not allowed to cool before components are removed or serviced.

SPECIFICATIONS


ITEM			SPECIFICATIONS
Throttle grip freeplay			2 – 5 mm (1/16 – 3/16 in)
Spark plug	NGK		IMR9E-9HES
	DENSO		VUH27ES
Spark plug gap			0.80 – 0.90 mm (0.031 – 0.035 in)
Valve clearance	IN		0.16 ± 0.03 mm (0.006 ± 0.001 in)
	EX		0.30 ± 0.03 mm (0.012 ± 0.001 in)
Engine oil capacity	After draining		2.8 liters (3.0 US qt, 2.5 Imp qt)
	After oil filter change		3.0 liters (3.2 US qt, 2.6 Imp qt)
Recommended engine oil			Pro Honda GN4 4-stroke oil (U.S.A. and Canada) or equivalent motor oil API service classification: SG or Higher JASO T 903 standard: MA Viscosity: SAE 10W-30
Recommended antifreeze			Pro Honda HP Coolant or an equivalent high quality ethylene glycol antifreeze containing silicate free corrosion inhibitors
Drive chain	Size/link	DID	DID 50VA11-116YB
		RK	RK 50HFOZ6-116LJFZ
	Slack		25 – 35 mm (1.0 – 1.4 in)
Recommended brake fluid			DOT 4
Clutch lever freeplay			10 – 20 mm (3/8 – 13/16 in)
Tire size	Front		120/70 ZR 17 M/C (58W)
	Rear		190/50 ZR 17 M/C (73W)
Tire brand	Bridgestone	Front	BT015F RADIAL F
		Rear	BT015R RADIAL F
	Dunlop	Front	Qualifier PTK
		Rear	Qualifier NK
Cold tire pressure	Driver only	Front	250 kPa (2.50 kgf/cm ² , 36 psi)
		Rear	290 kPa (2.90 kgf/cm ² , 42 psi)
	Driver and passenger	Front	250 kPa (2.50 kgf/cm ² , 36 psi)
		Rear	290 kPa (2.90 kgf/cm ² , 42 psi)
Minimum tire tread depth	Front		1.5 mm (0.06 in)
	Rear		2.0 mm (0.08 in)

TORQUE VALUES

Spark plug	16 N-m (1.6 kgf-m, 12 lbf-ft)	
Timing hole cap	18 N-m (1.8 kgf-m, 13 lbf-ft)	Apply grease to the threads.
Oil drain bolt	30 N-m (3.1 kgf-m, 22 lbf-ft)	
Oil filter cartridge	26 N-m (2.7 kgf-m, 19 lbf-ft)	Apply oil to the threads and O-ring.
Rear axle nut	113 N-m (11.5 kgf-m, 83 lbf-ft)	U-nut
Drive sprocket bolt	54 N-m (5.5 kgf-m, 40 lbf-ft)	
Driven sprocket nut	64 N-m (6.5 kgf-m, 47 lbf-ft)	U-nut
Rear master cylinder push rod lock nut	18 N-m (1.8 kgf-m, 13 lbf-ft)	
Fuel tank mounting bolt	10 N-m (1.0 kgf-m, 7 lbf-ft)	
Air cleaner element mounting screw	0.8 N-m (0.08 kgf-m, 0.6 lbf-ft)	
Sidestand pivot bolt	10 N-m (1.0 kgf-m, 7 lbf-ft)	
Sidestand pivot nut	29 N-m (3.0 kgf-m, 21 lbf-ft)	
ECM setting plate screw	0.8 N-m (0.08 kgf-m, 0.6 lbf-ft)	
Throttle cable adjuster lock nut	5.5 N-m (0.6 kgf-m, 4.1 lbf-ft)	
EGCA cable lock nut	22 N-m (2.2 kgf-m, 16 lbf-ft)	


TOOLS

 Oil filter wrench
07HAA-PJ70101




or 07AAA-PLCA100 (U.S.A. only)

Drive chain tool set
07HMH-MR10103

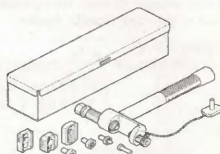


or 07HMH-MR1010C (U.S.A. only)


SCS connector
070PZ-ZY30100

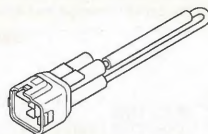

Tensioner stopper
070MG-0010100

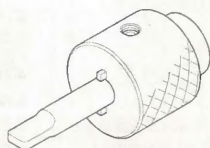

Tensioner stopper
07AMG-MFJA100 (U.S.A. only)

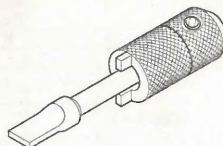

MAINTENANCE

MAINTENANCE SCHEDULE

Perform the Pre-ride inspection in the Owner's Manual at each scheduled maintenance period.

I: Inspect and Clean, Adjust, Lubricate or Replace if necessary. C: Clean, R: Replace, A: Adjust, L: Lubricate.

The following items require some mechanical knowledge. Certain items (particularly those marked * and **) may require more technical information and tools. Consult an authorized Honda dealer.

		FREQUENCY	WHICHEVER COMES FIRST ↓	⇨ ODOMETER READING (NOTE 1)								REFER TO PAGE
ITEMS				X1,000 mi X100 km	0.6 10	4 64	8 128	12 192	16 256	20 320	24 384	
EMISSION RELATED ITEMS	* FUEL LINE								I		I	4-5
	* THROTTLE OPERATION							I			I	4-8
	* AIR CLEANER	NOTE2						I			I	4-9
	* SPARK PLUGS							I				4-10
	* VALVE CLEARANCE											4-12
	ENGINE OIL									I		4-17
									INITIAL = 600 mi (1,000 km) or 1 month: R, REGULAR = EVERY 8,000 mi (12,800 km) or 12 months: R			4-17
	ENGINE OIL FILTER				R			R			R	4-17
	RADIATOR COOLANT	NOTE4						I			I	4-20
	* COOLING SYSTEM							I			I	4-20
* SECONDARY AIR SUPPLY SYSTEM							I			I	4-21	
* EVAPORATIVE EMISSION CONTROL SYSTEM	NOTE3						I				I	4-22
** EGCA CABLE												4-23
DRIVE CHAIN												4-26
BRAKE FLUID	NOTE4					I		R	I	I	R	4-31
BRAKE PADS WEAR						I	I	I	I	I	I	4-32
BRAKE SYSTEM				I			I				I	4-32
* BRAKE LIGHT SWITCH								I			I	4-33
* HEADLIGHT AIM								I			I	4-34
CLUTCH SYSTEM				I	I	I	I	I		I	I	4-34
SIDESTAND							I		I		I	4-35
* SUSPENSION												4-35
* NUTS, BOLTS, FASTENERS				I		I	I	I		I	I	4-38
** WHEELS/TIRES							I				I	4-39
** STEERING HEAD BEARINGS				I		I	I				I	4-40

* Should be serviced by an authorized Honda dealer, unless the owner has proper tools and service data and is mechanically qualified.

** In the interest of safety, we recommend these items be serviced only by an authorized Honda dealer

NOTES:

- At higher odometer reading, repeat at the frequency interval established here.
- Service more frequently when riding in unusually wet or dusty areas.
- California type only.
- Replace every 2 years, or at indicated odometer interval, whichever comes first. Replacement requires mechanical skill.

FUEL LINE

FUEL TANK LIFTING

Remove the top shelter (page 3-7).





Release the fuel tank drain hose.

Remove the fuel tank mounting bolts and collars.

California type: Disconnect the fuel tank breather hose at hose joint.

Except California type: Lift the fuel tank front end and disconnect the fuel tank breather hose.

California type: Lift the fuel tank front end.

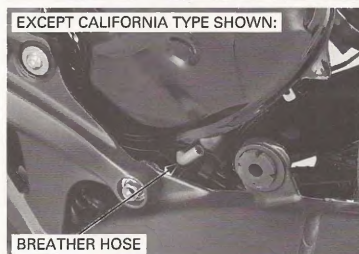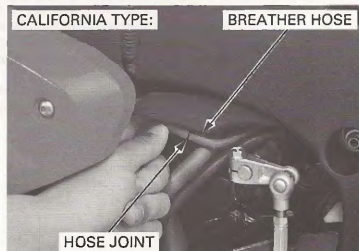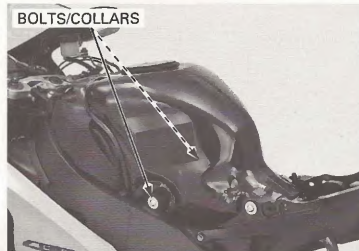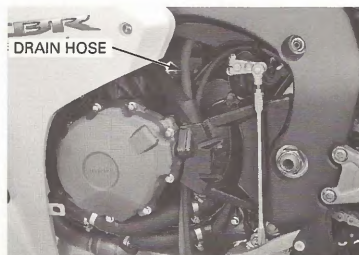


MAINTENANCE

Insert a suitable support into the breather hose hole and support the fuel tank as shown.



Remove the air cleaner cover.

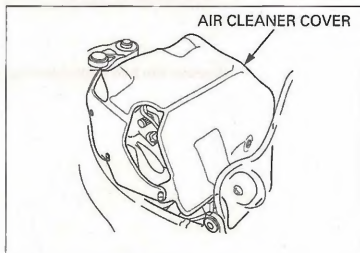


INSPECTION

Check the fuel lines for deterioration, damage or leakage. Replace the fuel line if necessary.

Check the fuel rails and quick connect fittings for damage or leakage. Replace them if necessary.


Check the fuel pump mounting area for leakage. Replace the fuel pump packings if necessary (page 6-47).

Check the primary/secondary injectors for damage or leakage. Replace them if necessary.

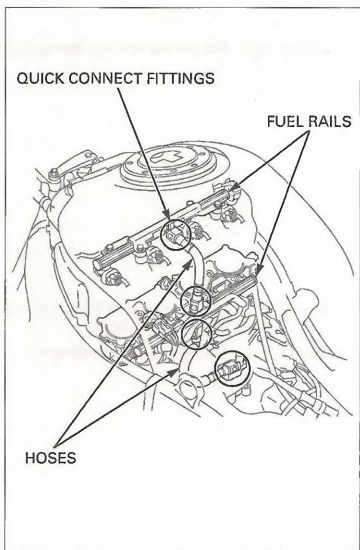


FUEL TANK LOWERING

Install the air cleaner cover securely.

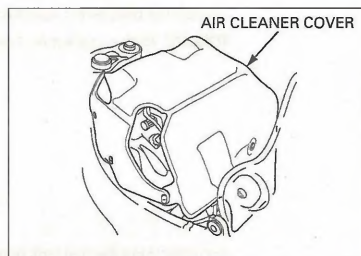

Hold the fuel tank and remove the support.

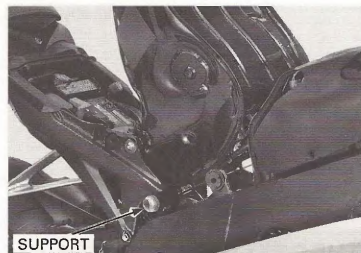

Except California type:

Hold the fuel tank and route the breather hose securely.


Route the drain hose so it doesn't kink or bind.

Lower the fuel tank, leading the drain hose to downward. Then close the fuel tank and route the drain hose.

NOTE:

- Correctly route the drain hose (page 1-20).
- Be careful not to damage the harness and hose.
- After installing the fuel tank, make sure the drain and fuel hoses are not kinked or bound.


EXCEPT CALIFORNIA TYPE:

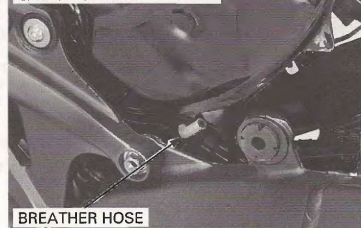

California type:

Connect the fuel tank breather hose to the hose joint securely.

CALIFORNIA TYPE:

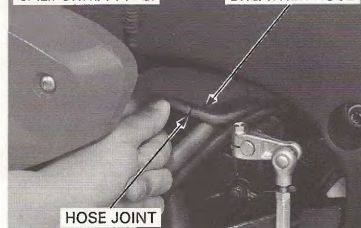


MAINTENANCE

Install the collars and fuel tank mounting bolts.


Tighten the bolts to the specified torque.

TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)

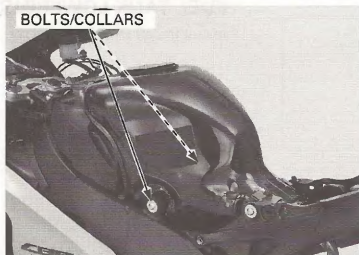

Correctly route the fuel tank drain hose (page 1-20).

Install the top shelter (page 3-7).

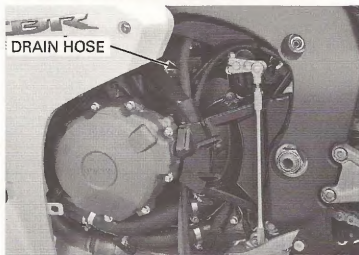

THROTTLE OPERATION


Check for smooth operation of the throttle and that it returns automatically to the fully closed position from any open position and from any steering position.

Check the throttle cables and replace them if they are deteriorated, kinked or damaged.

Lubricate the throttle cables, if throttle operation is not smooth.

Measure the freeplay at the throttle grip flange.

FREEPLAY: 2 – 5 mm (1/16 – 3/16 in)

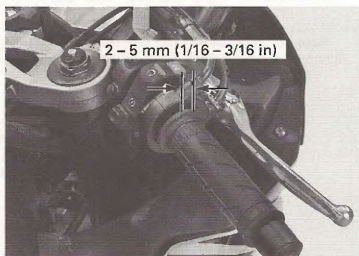


Throttle grip freeplay can be adjusted at either end of the throttle cable.

Minor adjustment is made with the upper adjuster. Adjust the freeplay by loosening the lock nut and turning the adjuster.

After adjustment, tighten the lock nut securely.

Recheck the throttle operation.

If the adjuster cannot be reached the correct freeplay, turn the adjuster all the way in and then turn it out one turn.

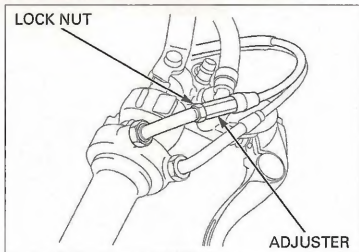

Major adjustment is made with the lower adjuster.

Remove the air cleaner housing (page 6-52).

Adjust the freeplay by loosening the lock nut and turning the adjuster.


After adjustment, tighten the lock nut to the specified torque.

TORQUE: 5.5 N·m (0.6 kgf·m, 4.1 lbf·ft)

Recheck the throttle operation.

Replace any damaged parts, if necessary.

Install the removed parts in the reverse order of removal.

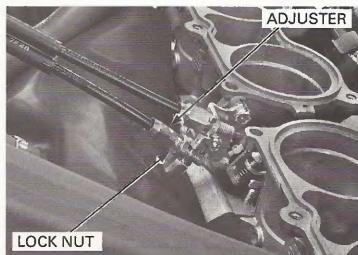


AIR CLEANER

Lift and support the fuel tank (page 4-5).

Disconnect the following:


- Left handlebar switch 10P (Blue) connector
- Right handlebar switch 8P (White) connector
- Ignition switch 2P (Brown) connector

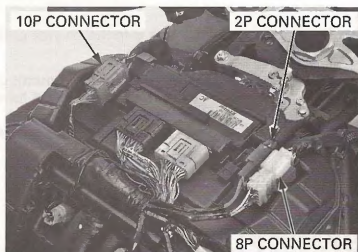


Remove the screws and ECM setting plate.

Pull up the ECM with connectors connected.

Be careful not to damage the ECM and wires.

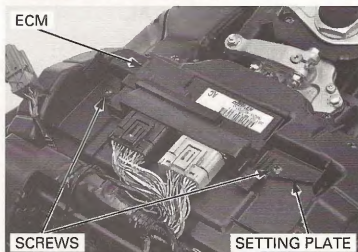


Remove the screws and air cleaner housing upper cover.

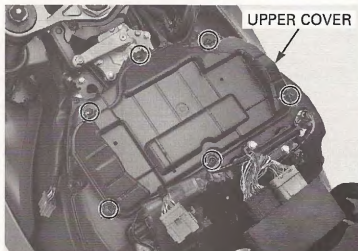

MAINTENANCE

Loosen the screws and remove the air cleaner element as shown.

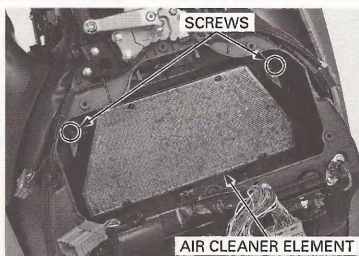

Clean the air cleaner element using compressed air from the throttle body side any time it is excessively dirty.

Installation is in the reverse order of removal.


TORQUE:

Air cleaner element mounting screw:

0.8 N·m (0.08 kgf·m, 0.6 lbf·ft)

ECM setting plate screw:

0.8 N·m (0.08 kgf·m, 0.6 lbf·ft)

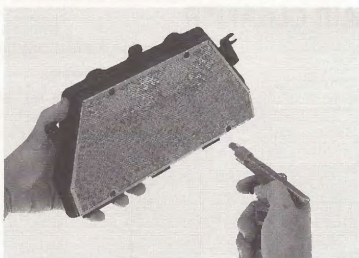


SPARK PLUG

REMOVAL

Remove the following:


- Air cleaner housing (page 6-52)
- Middle cowl (page 3-10)

Pull up the front of the heat guard rubber to access the direct ignition coil.

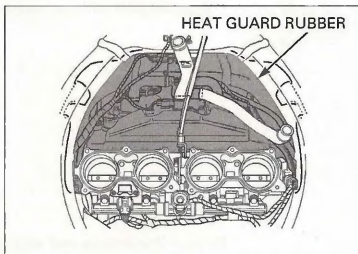

Disconnect the direct ignition coil 2P (White) connectors.


Remove the direct ignition coils from the spark plugs.

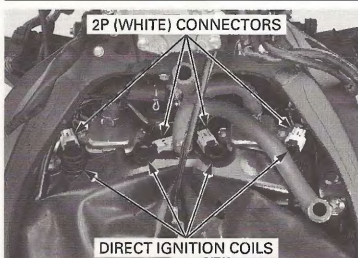

Clean around the spark plug bases with compressed air before removing, and be sure that no debris is allowed to enter the combustion chamber.

Remove the spark plug using the equipped spark plug wrench or an equivalent.

Inspect or replace as described in the maintenance schedule (page 4-4).

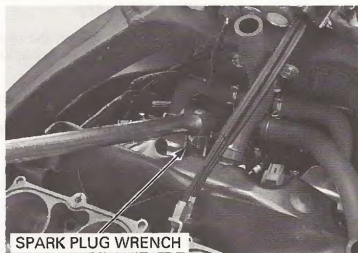

SPARK PLUG WRENCH

INSPECTION

Check the following and replace if necessary (recommended spark plug: page 4-2)

- Insulator for damage
- Electrodes for wear
- Burning condition, coloration

This motorcycle's spark plugs are equipped with an iridium center electrode. Replace spark plugs if their electrodes are contaminated.



Always use the specified spark plugs on this motorcycle.

If the electrodes are contaminated with accumulated objects or dirt, replace the spark plug.

Replace the plug if the center electrode is rounded as shown in the illustration.

SPECIFIED SPARK PLUG:

NGK: IMR9E-9HES
DENSO: VUH27ES

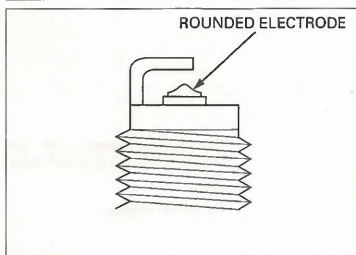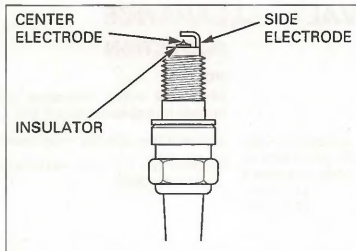


To prevent damaging the iridium center electrode, use a wire type feeler gauge to check the spark plug gap.

Check the spark plug gap between the center and side electrodes with a wire type feeler gauge.

Make sure that a ϕ 1.0 mm (0.04 in) plug gauge does not insert between the gap.

Do not adjust the spark plug gap. If the gap is out of specification, replace with a new one.

If the gauge can be inserted into the gap, replace the plug with a new one.

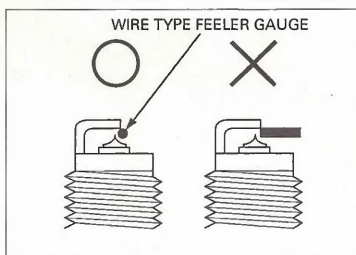

INSTALLATION

Install and hand tighten the spark plug to the cylinder head, then tighten the spark plug to the specified torque.

TORQUE: 16 N·m (1.6 kgf-m, 12 lbf-ft)

Install the removed parts in the reverse order of removal.



VALVE CLEARANCE

INSPECTION

NOTE:

After this valve clearance inspection, check the engine idle speed (page 6-66).

Inspect and adjust the valve clearance while the engine is cold (below 35°C/95°F).

Remove the cylinder head cover (page 9-7).

Remove the bolt and sealing washer from the cam chain tensioner.




Turn the tensioner shaft fully in (clockwise) and secure it using the special tool.


TOOL:

Tensioner stopper


070MG-0010100 or
07AMG-MRJA100
(U.S.A. only)

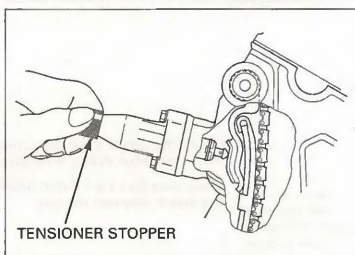

Remove the timing hole cap and O-ring.


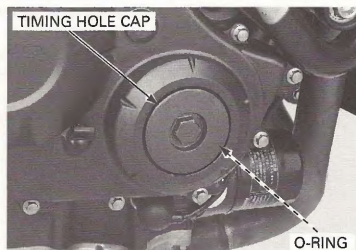


Turn the crankshaft clockwise, align the "T" mark with the index mark on the right crankcase cover.

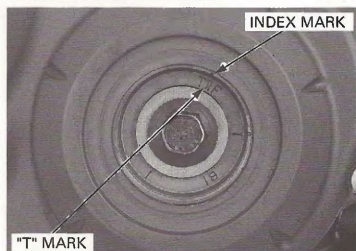

- The inside punch mark of the intake cam sprocket must be flush with the cylinder head upper surface.
- The cam sprocket outside timing marks ("IN" and "EX") must be flush with the cylinder head upper surface and facing outward as shown.

If the timing marks on the cam sprockets are facing inward, turn the crankshaft clockwise one full turn (360°) and realign the timing marks with the cylinder head surface so they are facing outward.

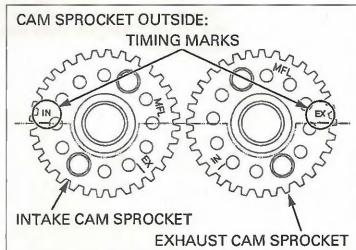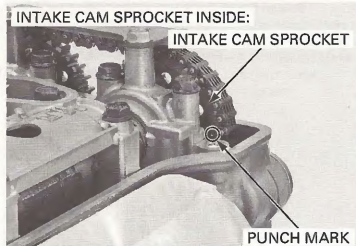

MAINTENANCE


Record the clearance for each valve for reference in shim selection if adjustment is required.

Insert the feeler gauge between the valve lifter and cam lobe.

Check the valve clearance for the No.1 and No.3 cylinder intake valves using a feeler gauge.

VALVE CLEARANCE:

IN: 0.16 ± 0.03 mm (0.006 ± 0.001 in)

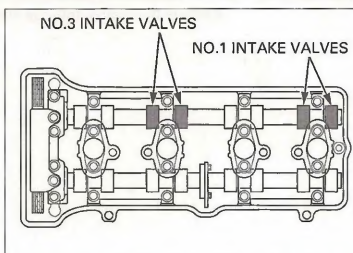

Turn the crankshaft clockwise 1/2 turn (180°).




Record the clearance for each valve for reference in shim selection if adjustment is required.

Check the valve clearance for the No.2 and No.4 cylinder exhaust valves using a feeler gauge.

VALVE CLEARANCE:

EX: 0.30 ± 0.03 mm (0.012 ± 0.001 in)

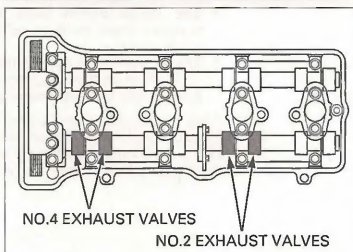

Turn the crankshaft clockwise 1/2 turn (180°), align the "T" mark with the index mark on the right crankcase cover.




Record the clearance for each valve for reference in shim selection if adjustment is required.

Check the valve clearance for the No.2 and No.4 cylinder intake valves using feeler gauge.

VALVE CLEARANCE:

IN: 0.16 ± 0.03 mm (0.006 ± 0.001 in)

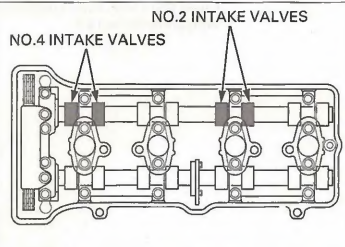

Turn the crankshaft clockwise 1/2 turn (180°).




Record the clearance for each valve for reference in shim selection if adjustment is required.

Check the valve clearance for the No.1 and No.3 cylinder exhaust valves using a feeler gauge.

VALVE CLEARANCE:

EX: 0.30 ± 0.03 mm (0.012 ± 0.001 in)

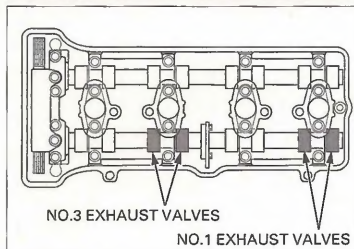

ADJUSTMENT

NOTE:


Use genuine Honda parts shims specific to this model for replacement. In case of wrong shims usage, the intake valve titanium surface may be damaged.

It is not necessary to remove the cam sprocket from the camshaft except when replacing the camshaft and/or cam sprocket.

Remove the camshafts (page 9-9).


Remove the valve lifters and shims.

- The shim may stick to the inside of the valve lifter. Do not allow the shims to fall into the crankcase.
- Mark all valve lifters and shims to ensure correct reassembly in their original locations.
- The valve lifter can be easily removed with a valve lapping tool or magnet.
- The shims can be easily removed with a tweezers or magnet.

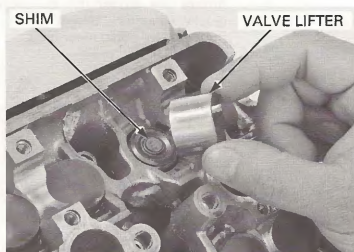

MAINTENANCE

Clean the valve shim contact area in the valve lifter with compressed air.

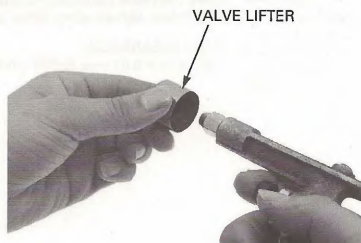

Sixty-five different thickness shims are available from the thinnest 1.200 mm thickness shim to the thickest 2.800 mm thickness shim in increments of 0.025 mm.

Measure the shim thickness and record it.

Calculate the new shim thickness using the equation below.

$$A = (B - C) + D$$



A: New shim thickness

B: Recorded valve clearance

C: Specified valve clearance

D: Old shim thickness

- Make sure of the correct shim thickness by measuring the shim by micrometer.
- Reface the valve seat if carbon deposit result in a calculated dimension of over 2.800 mm.

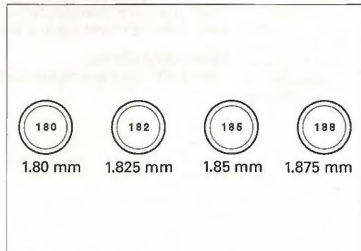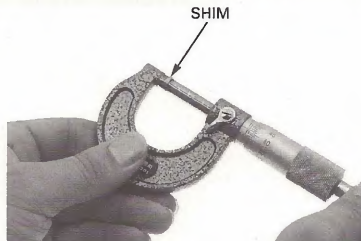

Install the shims and valve lifters in their original locations.

Install the newly selected shim on the valve spring retainer.


Apply molybdenum disulfide oil to the valve lifters sliding surface.

Install the valve lifters into the valve lifter holes.


Install the camshafts (page 9-30).

Rotate the camshafts by rotating the crankshaft clockwise several times.


Recheck the valve clearance.

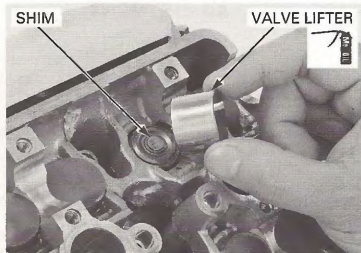

Remove the tensioner stopper.

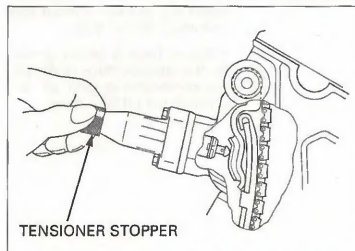


Install a new sealing washer and tighten the bolt securely.

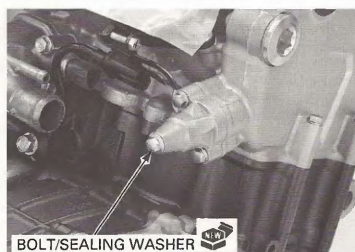

Apply oil to a new O-ring and install it to the timing hole cap.
 Apply grease to the timing hole cap threads.
 Tighten the timing hole cap to the specified torque.

TORQUE: 18 N·m (1.8 kgf-m, 13 lbf-ft)

Install the removed parts in the reverse order of removal.

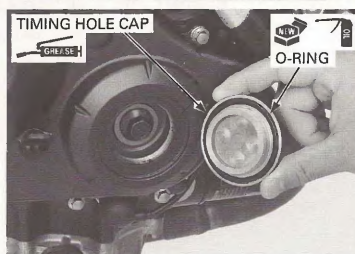


ENGINE OIL/OIL FILTER

OIL LEVEL INSPECTION

Start the engine and let it idle for 3 – 5 minutes.
 Stop the engine and wait 2 – 3 minutes.
 Hold the motorcycle in an upright position.


Remove the dipstick and wipe the oil with a clean cloth.

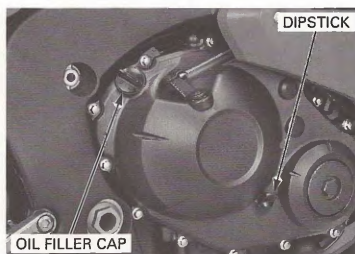

MAINTENANCE

Insert the dipstick without screwing it in, remove it and check the oil level.

If the oil level is below or near the lower level line on the dipstick, remove the oil filler cap and add the recommended engine oil to the upper level line through the oil filler hole.

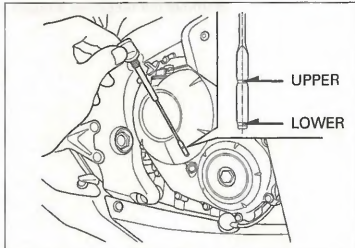


Other viscosities of oil may be used depending upon the average temperature in your riding area. Use the chart as a guide.

RECOMMENDED ENGINE OIL:

Pro Honda GN4 4-stroke oil (U.S.A. and Canada) or equivalent motor oil
API service classification: SG or Higher
JASO T 903 standard: MA
Viscosity: SAE 10W-30

Reinstall the oil filler cap and dipstick.

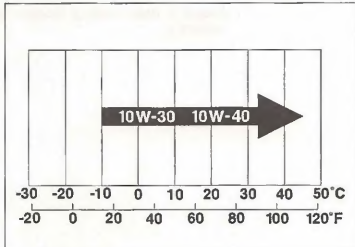


ENGINE OIL & FILTER CHANGE

Remove the right middle cowl (page 3-10).

Remove the oil filler cap.



Remove the drain bolt and sealing washer, drain the oil completely.

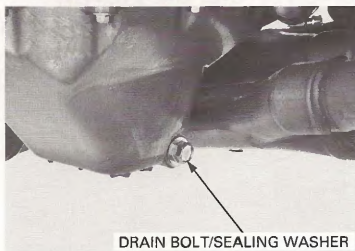


Remove the oil filter cartridge using the special tool.

TOOL:


Oil filter wrench

07HAA-PJ70101 or
07AAA-PLCA100
(U.S.A. only)

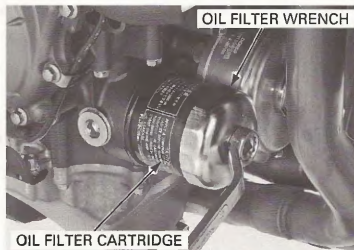


Install a new sealing washer onto the drain bolt.
Tighten the drain bolt to the specified torque.

TORQUE: 30 N·m (3.1 kgf·m, 22 lbf·ft)

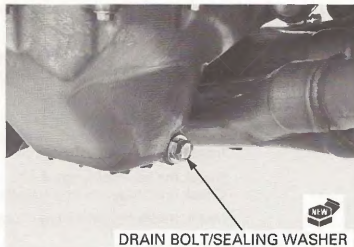

Check that the oil filter boss protrusion from the
crankcase is specified length as shown.

SPECIFIED LENGTH: 15.4 – 16.4 mm (0.61 – 0.65 in)

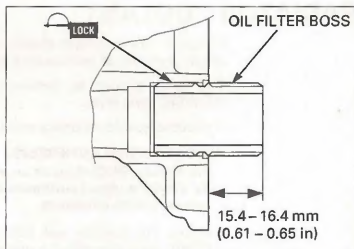

Apply oil to new oil filter cartridge threads and
O-ring.



MAINTENANCE


Install the oil filter cartridge and tighten it to the specified torque.

TOOL:

Oil filter wrench

07HAA-PJ70101 or
07AAA-PLCA100
(U.S.A. only)

TORQUE: 26 N·m (2.7 kgf·m, 19 lbf·ft)

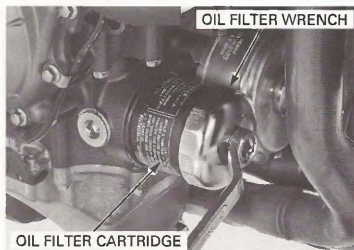

Fill the crankcase with recommended engine oil.


ENGINE OIL CAPACITY:

2.8 liters (3.0 US qt, 2.5 Imp qt) after draining
3.0 liters (3.2 US qt, 2.6 Imp qt) after oil filter
change

Check that the O-ring on the oil filler cap is in good condition, and replace it if necessary.
Install the oil filler cap.

Check the oil level (page 4-17).
Check that there are no oil leaks.

Install the right middle cowl (page 3-10).

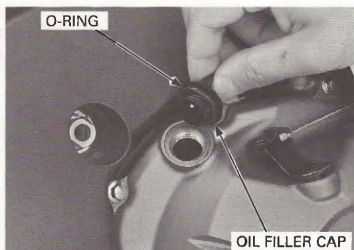

RADIATOR COOLANT

Check the coolant level of the reserve tank with the engine running at normal operating temperature.

The level should be between the "UPPER" and "LOWER" level lines.


If necessary, add recommended coolant.

RECOMMENDED ANTIFREEZE:

Pro Honda HP Coolant or an equivalent high quality ethylene glycol antifreeze containing silicate free corrosion inhibitors

Remove the reserve tank filler cap and fill to the "UPPER" level line with 1:1 mixture of distilled water and antifreeze.

Reinstall the filler cap.

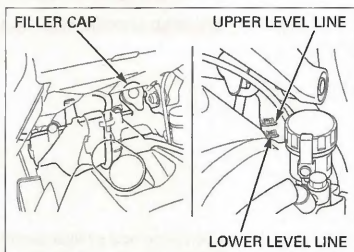


COOLING SYSTEM

Remove the middle cowls (page 3-10).


Check the radiator air passages for clogging or damage.

Straighten bent fins with a small, blade screwdriver and remove insects, mud or other obstructions with compressed air or low water pressure.

Replace the radiator if the air flow is restricted over more than 20 % of the radiating surface.

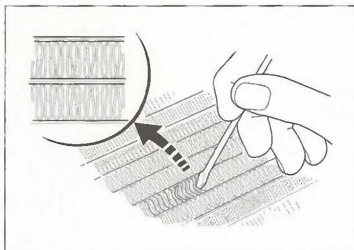


Inspect the water hoses for cracks or deterioration, and replace them if necessary.
Check the tightness of all hose clamps and fasteners.

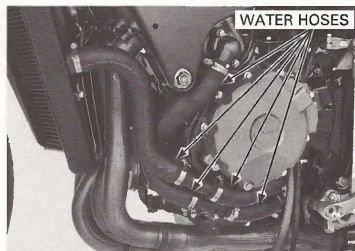

SECONDARY AIR SUPPLY SYSTEM

- This model is equipped with a built-in secondary air supply system. The pulse secondary air supply system is located on the cylinder head cover.
- The secondary air supply system introduces filtered air into the exhaust gases in the exhaust port. The secondary air is drawn into the exhaust port whenever there is negative pressure pulse in the exhaust system. This charged secondary air promotes burning of the unburned exhaust gases and changes a considerable amount of hydrocarbons and carbon monoxide into relatively harmless carbon dioxide and water.

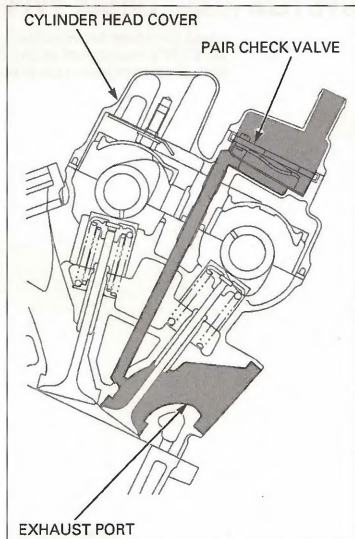


Remove the air cleaner housing (page 6-52).

Pull up the front of the heat guard rubber.


If the hoses show any signs of heat damage, inspect the PAIR check valves for damage (page 9-8).

Check the PAIR hoses between the PAIR control solenoid valve and cylinder head cover for deterioration, damage or loose connections. Make sure that the hoses are not cracked.

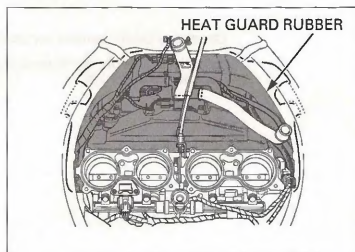


MAINTENANCE

Check the air suction hose between the air cleaner housing and PAIR control solenoid valve for deterioration, damage or loose connections. Check that the hoses are not kinked, pinched or cracked.

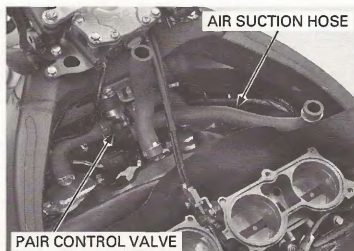


EVAPORATIVE EMISSION CONTROL SYSTEM (CALIFORNIA TYPE)

Check the hoses between the fuel tank, EVAP canister, EVAP purge control solenoid valve for deterioration, damage or loose connection.

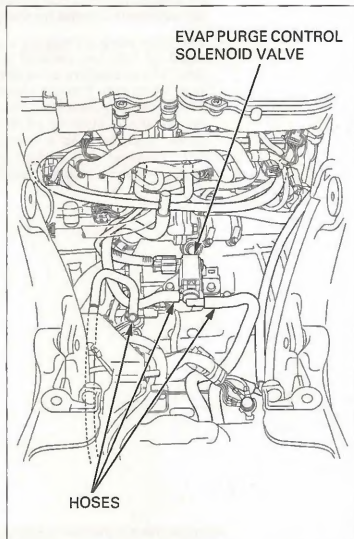

Check the EVAP canister for clacks or other damage. Refer to the Cable & Harness Routing for hose connections (page 1-20).

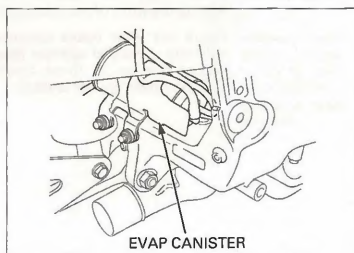

EGCA CABLE

OPERATING INSPECTION


Clear the DTC's (page 6-14).

Start the engine.

Stop the engine and check the ECV is closed fully.

If the ECV is closed fully, it is normal.

If the ECV is not closed fully, adjust the EGCA cable (page 4-24).

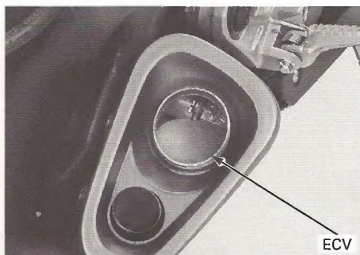


Remove the seat (page 3-6).

Remove the dummy connector and short the DLC terminals using the special tool.

TOOL:


SCS connector

070PZ-ZY30100

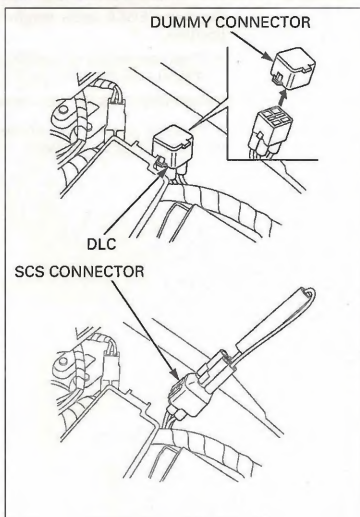


Turn the ignition switch ON and engine stop switch "O".

If the ECV opens fully, it is normal.

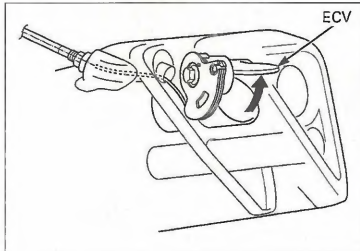

CABLE INSPECTION/ADJUSTMENT

Remove the trim clips and EGCA cover.

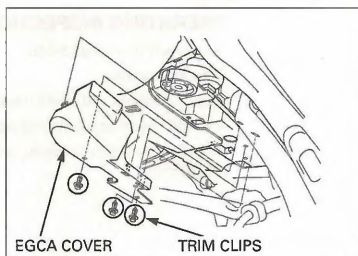



Turn the EGCA pulley clockwise and disconnect the EGCA cable from the EGCA pulley.

Check the EGCA cable length with the ECV closed position.

- Check the length of the EGCA cable with the ECV closed position while pulling the EGCA cable.

STANDARD LENGTH: 46 – 49 mm (1.8 – 1.9 in)

If the cable length is out of the specification, adjust the cable length as follows:

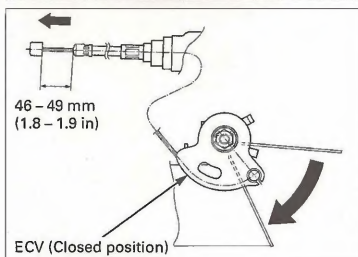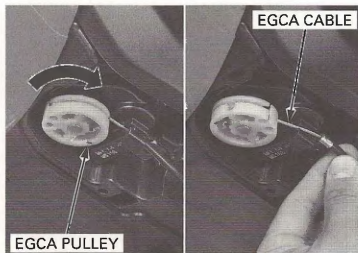

Remove the muffler (page 3-24).



Loosen the lock nut and adjust the EGCA cable length with the ECV closed position.

- Keep the EGCA cable straight when adjust the cable length.
- Check the length of the EGCA cable with the ECV closed position while pulling the EGCA cable.

STANDARD LENGTH: 49 – 52 mm (1.9 – 2.0 in)

Tighten the EGCA cable lock nut to the specified torque.



TORQUE: 22 N-m (2.2 kgf-m, 16 lbf-ft)

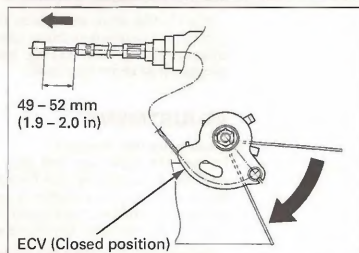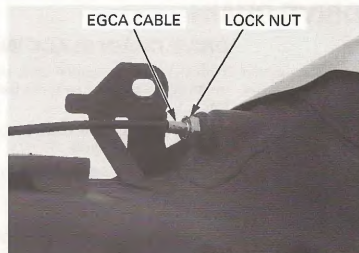

Connect the EGCA cable to the EGCA pulley.

Turn the EGCA pulley counterclockwise to the specified angle as shown.

Installation is in the reverse order of removal.

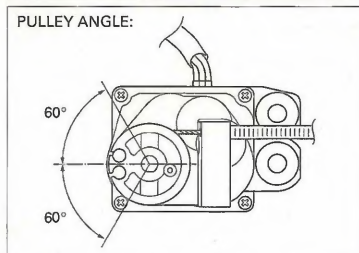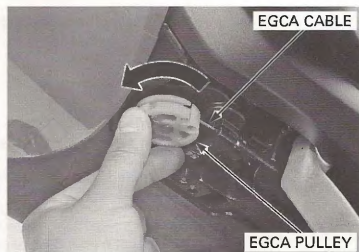

DRIVE CHAIN

DRIVE CHAIN SLACK INSPECTION

Never inspect and adjust the drive chain while the engine is running.

Turn the ignition switch OFF, place the motorcycle on its sidestand and shift the transmission into neutral.


Check the slack in the drive chain lower run midway between the sprockets.

DRIVE CHAIN SLACK: 25 – 35 mm (1.0 – 1.4 in)

NOTICE

Excessive chain slack, 50 mm (2.0 in) or more, may damage the frame.

Lubricate the drive chain with Pro Honda HP Chain Lube or an equivalent chain lubricant designed specifically for use on O-ring chains. Wipe off the excess oil or chain lubricant.

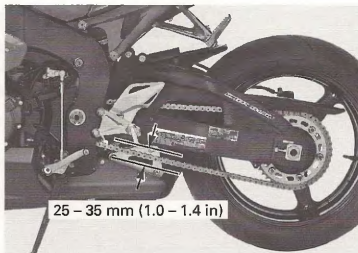

ADJUSTMENT

Loosen the rear axle nut.


Loosen the lock nuts and turn the adjusting bolts until the correct drive chain slack is obtained.

Make sure the index marks on both adjusting plates are aligned with the swingarm index mark.

Tighten the rear axle nut to the specified torque.

TORQUE: 113 N·m (11.5 kgf·m, 83 lbf·ft)


Hold the adjusting bolts and tighten the lock nuts.

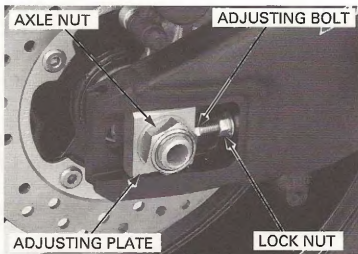

Recheck the drive chain slack and free wheel rotation.

Check the drive chain wear indicator label attached on the left swingarm.

If the drive chain adjusting plate front side face reaches red zone of the indicator label, replace the drive chain with a new one (page 4-29).

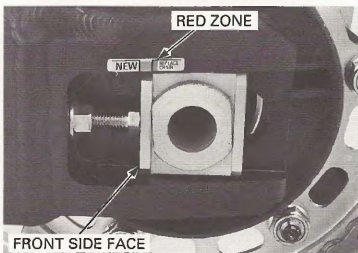


CLEANING AND LUBRICATION

Clean the chain with non-flammable or high flash point solvent and wipe it dry. Be sure the chain has dried completely before lubricating.


Inspect the drive chain for possible damage or wear. Replace any chain that has damaged rollers, loose fitting links, or otherwise appears unserviceable.

Installing a new chain on badly worn sprockets will cause the new chain to wear quickly.

Inspect and replace sprocket as necessary.

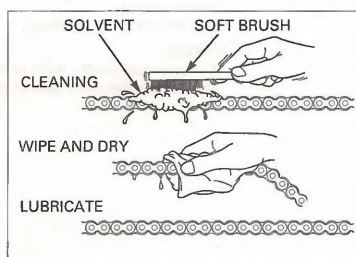


Lubricate the drive chain with Pro Honda HP Chain Lube or an equivalent chain lubricant designed specifically for use on O-ring chains. Wipe off the excess oil or chain lubricant.

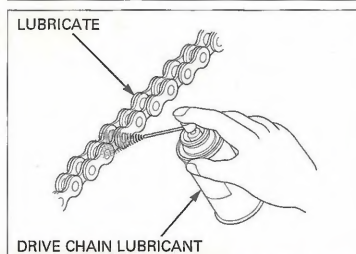

SPROCKET INSPECTION


Remove the bolt and disconnect the gearshift arm from the gearshift spindle.

Remove the bolts, drive sprocket cover and guide plate.

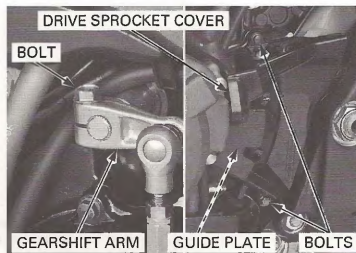

Inspect the drive and driven sprocket teeth for wear or damage, replace if necessary.

Never use a new drive chain on worn sprockets. Both chain and sprockets must be in good condition, or the new replacement chain will wear rapidly.

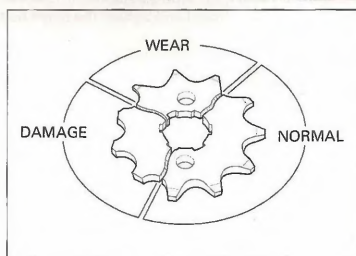

MAINTENANCE



Check the attaching bolts and nuts on the drive and driven sprockets.

If any are loose, torque them.


TORQUE:

Drive sprocket bolt: 54 N·m (5.5 kgf-m, 40 lbf-ft)

Driven sprocket nut: 64 N·m (6.5 kgf-m, 47 lbf-ft)

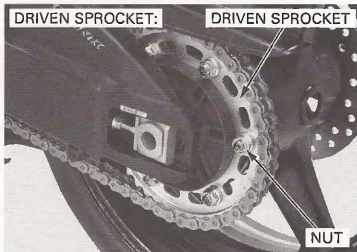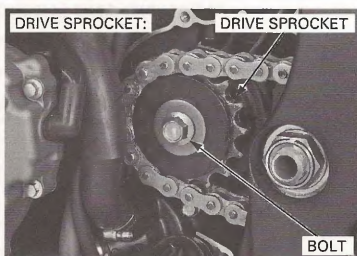


Install the guide plate, drive sprocket cover and tighten the bolts securely.

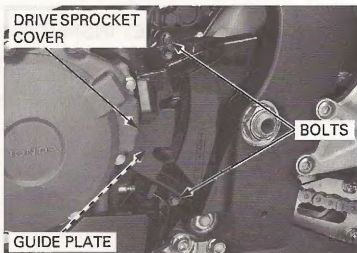

Install the gearshift arm to the gearshift spindle, aligning the arm slit with the punch mark on the gearshift spindle.

Install and tighten the pinch bolt.

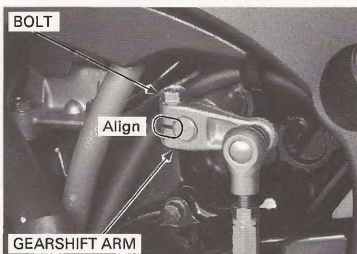

REPLACEMENT

This motorcycle uses a drive chain with a staked master link.

Loosen the drive chain (page 4-26).


Assemble the special tool as shown.

TOOL:

Drive chain tool set

07HMH-MR10103 or
07HMH-MR1010C
(U.S.A. only)

When using the special tool, follow the manufacturer's instruction.

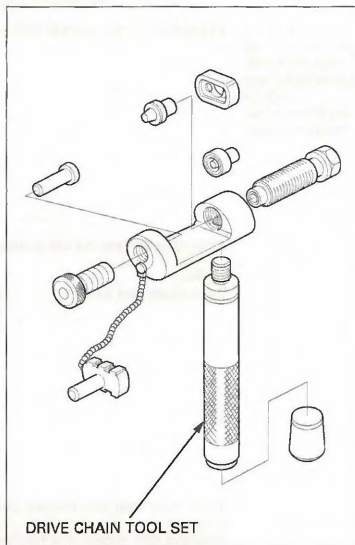


Locate the crimped pin ends of the master link from the outside of the chain, and remove the link with the drive chain tool set.

TOOL:

Drive chain tool set

07HMH-MR10103 or
07HMH-MR1010C
(U.S.A. only)

Remove the drive chain.

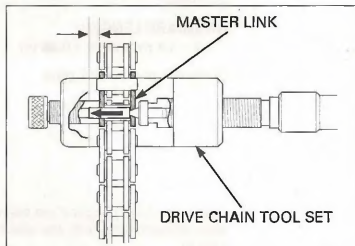

Include the master link when you count the drive chain links.


Remove the excess drive chain links from the new drive chain with the drive chain tool set.

STANDARD LINKS: 116 LINKS

REPLACEMENT CHAIN

DID: DID 50VA11-120ZB

RK: RK 50HFOZ6-120LJFZ

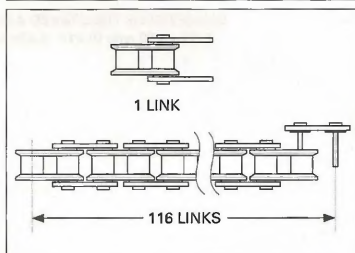


MAINTENANCE

- Never reuse the old drive chain, master link, master link plate and O-rings.

Insert the master link from the inside of the drive chain, and install the plate with the identification mark facing the outside.

Assemble the new master link, O-rings and plate.

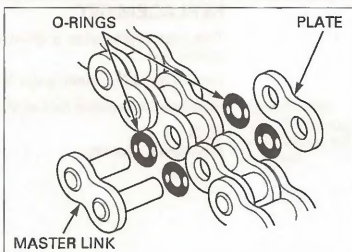


Assemble and set the drive chain tool set.

TOOL:

Drive chain tool set

07HMH-MR10103 or
07HMH-MR1010C
(U.S.A. only)

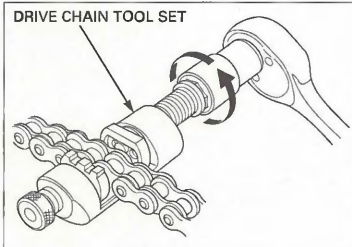


Make sure that the master link pins are installed properly.
Measure the master link pin length projected from the plate.

STANDARD LENGTH:

1.2 – 1.4 mm (0.05 – 0.06 in)


Stake the master link pins.

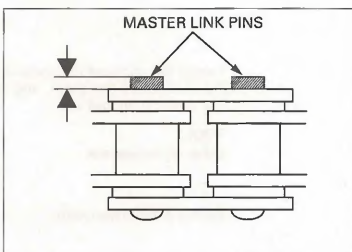

Make sure that the pins are staked properly by measuring the diameter of the staked area using a slide caliper.


DIAMETER OF THE STAKED AREA:

5.50 – 5.80 mm (0.217 – 0.228 in)

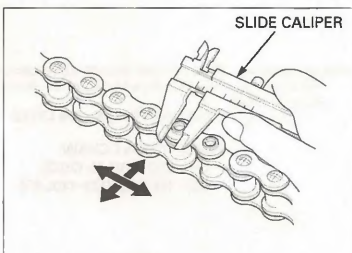

A drive chain with a clip-type master link must not be used.

After staking, check the staked area of the master link for cracks. If there is any cracking, replace the master link, O-rings and plate.

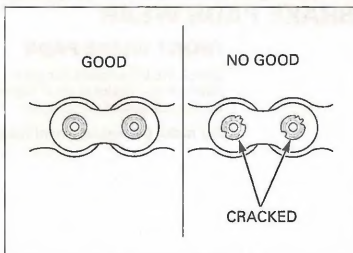

BRAKE FLUID

NOTICE

Spilled fluid can damage painted, plastic or rubber parts. Place a rag over these parts whenever the system is serviced.

- Do not mix different types of fluid, as they are not compatible with each other.
- Do not allow foreign material to enter the system when filling the reserve tank.

When the fluid level is low, check the brake pads for wear (page 4-32). A low fluid level may be due to wear of the brake pads.

If the brake pads are worn, the caliper piston is pushed out, and this accounts for a low fluid level. If the brake pads are not worn and the fluid level is low, check entire system for leaks (page 4-32).

FRONT BRAKE

Turn the handlebar so that the reserve tank is level and check the front brake fluid level. If the level is near the lower level line, check the brake pad wear (page 4-32).



REAR BRAKE

Place the motorcycle on a level surface, and support it an upright position. Check the rear brake fluid level. If the level is near the lower level line, check the brake pad wear (page 4-32).




BRAKE PADS WEAR

FRONT BRAKE PADS

Check the brake pads for wear.
Replace the brake pads if either pad is worn to the bottom of wear limit groove.


For brake pad replacement (page 16-8).

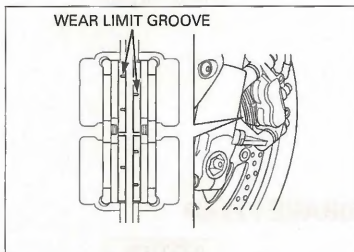

REAR BRAKE PADS

Check the brake pads for wear.
Replace the brake pads if either pad is worn to the bottom of wear limit groove.

For brake pad replacement (page 16-10).

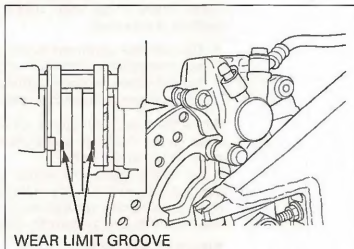

BRAKE SYSTEM

INSPECTION

Firmly apply the brake lever or pedal, and check that no air has entered the system.


If the lever or pedal feels soft or spongy when operated, bleed the air from the system (page 16-7).

Inspect the brake hose and fittings for deterioration, cracks and signs of leakage.

Tighten any loose fittings.

Replace hoses and fittings as required.


For brake air bleeding (page 16-7).

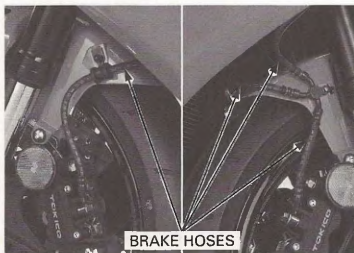

BRAKE LEVER ADJUSTMENT


Align the "Δ" mark on the brake lever with the index number on the adjuster.

The distance between the brake lever and the grip can be adjusted by turning the adjuster.

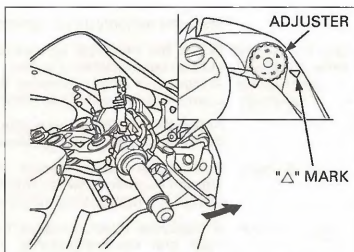

BRAKE PEDAL HEIGHT ADJUSTMENT


Loosen the lock nut and turn the push rod until the correct pedal height is obtained.

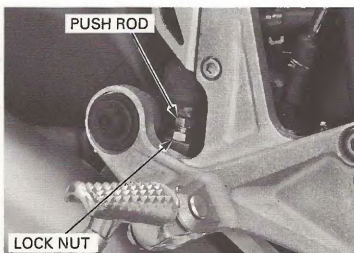

- When adjusting the push rod length, do not extend it more than 5.5 mm (0.22 in).

After adjustment, tighten the lock nut to the specified torque.

TORQUE: 18 N·m (1.8 kgf·m, 13 lbf·ft)

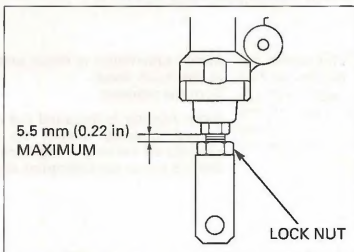


BRAKE LIGHT SWITCH

The front brake light switch does not require adjustment.

Adjust the brake light switch so that the brake light comes on just prior to the brake actually being engaged.

If the light fails to come on, adjust the switch so that the light comes on at the proper time. Hold the switch body and turn the adjuster. Do not turn the switch body.

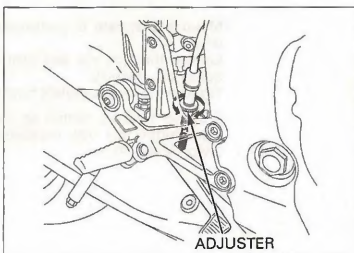

MAINTENANCE

HEADLIGHT AIM

Place the motorcycle on a level surface.

Adjust the headlight aim as specified by local laws and regulations.

Adjust the headlight aim vertically by turning the vertical beam adjusting screw.

A clockwise rotation moves the beam down and counterclockwise rotation moves the beam up.

Adjust the headlight aim horizontally by turning the horizontal beam adjusting screw.


Left Headlight:

A clockwise rotation moves the beam toward the left and counterclockwise rotation moves the beam toward the right side of the rider.

Right Headlight:

A clockwise rotation moves the beam toward the right and counterclockwise rotation moves the beam toward the left side of the rider.

HORIZONTAL BEAM ADJUSTING SCREWS

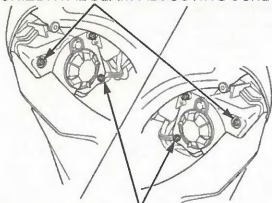


VERTICAL BEAM ADJUSTING SCREWS

CLUTCH SYSTEM

Measure the clutch lever freeplay at the end of the clutch lever.

FREEPLAY: 10 – 20 mm (3/8 – 13/16 in)

10 – 20 mm (3/8 – 13/16 in)

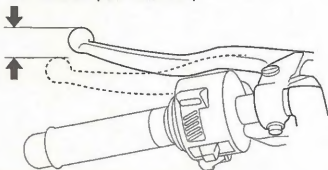

The adjuster may be damaged if it is positioned too far out, leaving minimal thread engagement.


Minor adjustment is made with the upper adjuster at the clutch lever.

Turn the adjuster.

If the adjuster is threaded out near its limit and the correct freeplay cannot be obtained, turn the adjuster all the way in and back out one turn.

Make a major adjustment as described as follows:

ADJUSTER

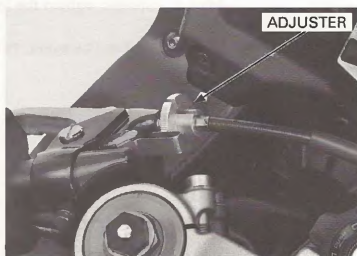


Major adjustment is performed at the clutch lifter lever.

Loosen the lock nut and turn the adjusting nut to adjust the freeplay.

Tighten the lock nut while holding the adjusting nut.

If proper freeplay cannot be obtained, or the clutch slips during test ride, disassemble and inspect the clutch (page 10-7).

LOCK NUT

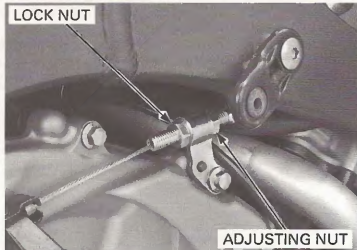

ADJUSTING NUT

SIDESTAND

Check the sidestand spring for damage or loss of tension.

Check the sidestand for movement and lubricate the sidestand pivot if necessary.

TORQUE:



Sidestand pivot bolt: 10 N·m (1.0 kgf-m, 7 lbf-ft)

Sidestand pivot nut: 29 N·m (3.0 kgf-m, 21 lbf-ft)

Check the sidestand ignition cut-off system:

- Sit astride the motorcycle and raise the sidestand.
- Start the engine with the transmission in neutral, then, with the clutch lever fully squeezed, shift the transmission into gear.
- Move the sidestand full down.
- The engine should stop as the sidestand is lowered.

If there is a problem with the system, check the sidestand switch (page 20-20).

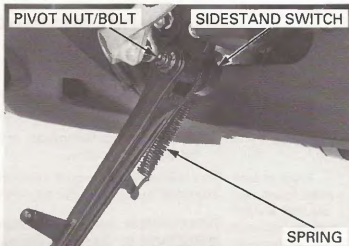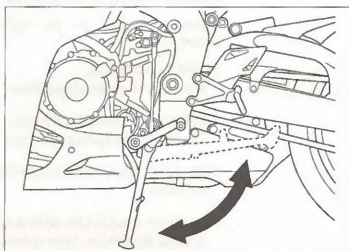

SUSPENSION

FRONT SUSPENSION INSPECTION

Check the action of the forks by operating the front brakes and compressing the front suspension several times.

Check the entire assembly for signs of leaks, damage or loose fasteners.

Loose, worn or damaged suspension parts impair motorcycles stability and control.

Replace damaged components that cannot be repaired.

Tighten all nuts and bolts.

For fork service (page 14-22).



FRONT SUSPENSION ADJUSTMENT

SPRING PRE-LOAD ADJUSTER

Spring pre-load can be adjusted by turning the adjuster.

TURN CLOCKWISE:

Increase the spring pre-load

TURN COUNTERCLOCKWISE:


Decrease the spring pre-load

PRE-LOAD ADJUSTER ADJUSTABLE RANGE:

15 turns

PRE-LOAD ADJUSTER STANDARD POSITION:

6 turns clockwise from minimum

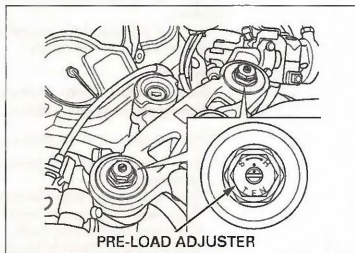

COMPRESSION AND REBOUND DAMPING ADJUSTERS

NOTICE

Do not turn the adjusters more than the given positions or the adjusters may be damaged.

- All damping adjustments are referenced from the fully hard position.

To adjust both sides equally, set the right and left damping adjusters to the same position.

The compression and rebound damping can be adjusted by turning the adjusters.

DIRECTION H: Increase the damping force (harder)

DIRECTION S: Decrease the damping force (softer)


Turn the compression adjuster clockwise until it stops (fully hard position), then turn the adjuster counterclockwise.

COMPRESSION ADJUSTER ADJUSTABLE RANGE:

3 turns

COMPRESSION ADJUSTER STANDARD POSITION:

2 turns out from full hard

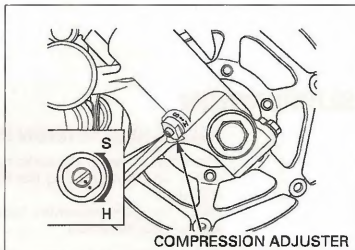


Turn the rebound adjuster clockwise until it stops (fully hard position), then turn the adjuster counterclockwise.

REBOUND ADJUSTER ADJUSTABLE RANGE:

3 turns


REBOUND ADJUSTER STANDARD POSITION:

2-1/4 turns out from fully hard

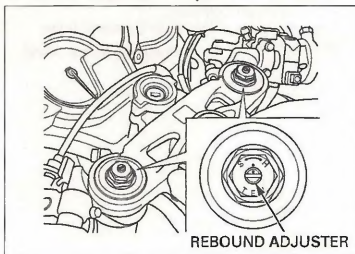

REAR SUSPENSION INSPECTION

Support the motorcycle securely and raise the rear wheel off the ground.
Check for worn swingarm bearings by grabbing the rear end of the swingarm and attempting to move the swingarm side to side.
Replace the bearings if any looseness is felt.

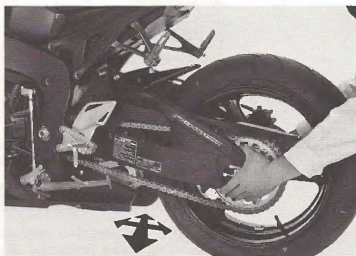

Check the action of the shock absorber by compressing it several times.
Check the entire shock absorber assembly for signs of leaks, damage or loose fasteners.
Replace damaged components that cannot be repaired.
Tighten all nuts and bolts.
For shock absorber service (page 15-14).




REAR SUSPENSION ADJUSTMENT

SPRING PRE-LOAD ADJUSTER

Spring pre-load can be adjusted by turning the adjuster.

PRE-LOAD ADJUSTER ADJUSTABLE RANGE:
10 positions

PRE-LOAD ADJUSTER STANDARDS POSITION:
4 position from minimum

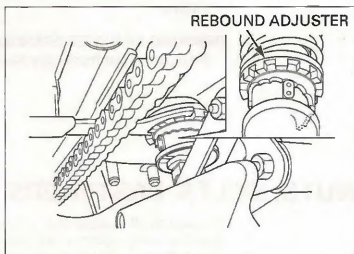

COMPRESSION AND REBOUND DAMPING ADJUSTERS

NOTICE

Do not turn the adjusters more than the given positions or the adjusters may be damaged.

- All damping adjustments are referenced from the fully hard position.

The compression and rebound damping can be adjusted by turning the adjusters.

DIRECTION H: Increase the damping force (harder)

DIRECTION S: Decrease the damping force (softer)


Turn the compression adjuster clockwise until it stops (fully hard position), then turn the adjuster counterclockwise.

COMPRESSION ADJUSTER ADJUSTABLE RANGE:

3 turns

COMPRESSION ADJUSTER STANDARD POSITION:

2 turns out from fully hard

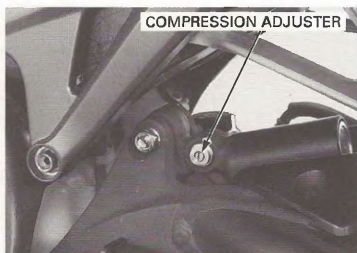


Turn the rebound adjuster clockwise until it stops (fully hard position), then turn the adjuster counterclockwise.

REBOUND ADJUSTER ADJUSTABLE RANGE:

3 turns

REBOUND ADJUSTER STANDARD POSITION:

2-1/4 turns out from fully hard

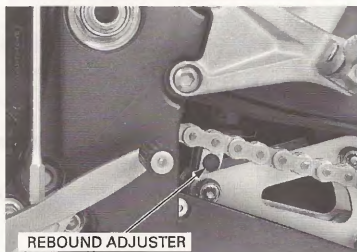

NUTS, BOLTS, FASTENERS


Check that all chassis nuts and bolts are tightened to their correct torque values (page 1-13).

Check that all safety clips, hose clamps and cable stays are in place and properly secured.

WHEELS/TIRES


Support the motorcycle securely and raise the front wheel off the ground.
Hold the front fork leg and move the front wheel sideways with force to see if the wheel bearings are worn.

For front wheel service (page 14-16).

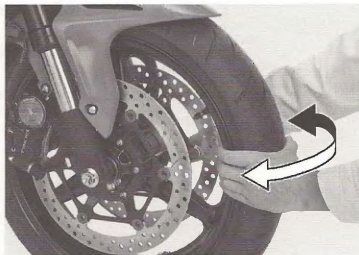

Support the motorcycle securely and raise the rear wheel off the ground.
Hold the swingarm and move the rear wheel sideways with force to see if the wheel bearings are worn.

For rear wheel service (page 15-6).

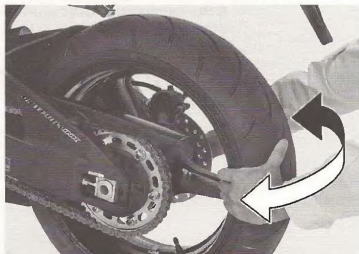

Tire pressure should be checked when the tires are COLD.

RECOMMENDED TIRE PRESSURE AND TIRE SIZE:

		FRONT	REAR
Tire pressure kPa (kgf/cm ² , psi)		250 (2.50, 36)	290 (2.90, 42)
Tire size		120/70 ZR 17 M/C (58W)	190/50 ZR 17 M/C (73W)
Tire brand	Bridgestone	BT015F RADIAL F	BT015R RADIAL F
	Dunlop	Qualifier PTK	Qualifier NK



Check the tires for cuts, embedded nails, or other damage.

Measure the tread depth at the center of the tires.
Replace the tires when the tread depth reaches the following limits.

MINIMUM TIRE TREAD DEPTH:

FRONT: 1.5 mm (0.06 in)
REAR: 2.0 mm (0.08 in)




STEERING HEAD BEARINGS

Check that the control cables do not interfere with handlebar rotation.

Support the motorcycle securely and raise the front wheel off the ground.


Check that the handlebar moves freely from side to side.

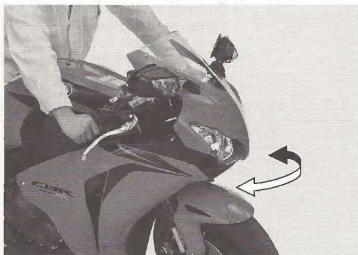

If the handlebar moves unevenly, binds, or has vertical movement, inspect the steering head bearings (page 14-34).

Check for worn steering head bearings by grabbing the front fork leg and attempting to move the fork side to side.

Replace the bearings if any looseness is noted.

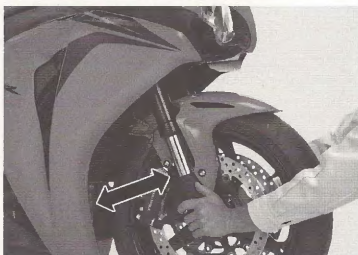


5. LUBRICATION SYSTEM

5

LUBRICATION SYSTEM DIAGRAM	5-2	OIL PRESSURE INSPECTION	5-5
SERVICE INFORMATION	5-3	OIL PUMP	5-5
TROUBLESHOOTING	5-4	OIL COOLER	5-13

LUBRICATION SYSTEM DIAGRAM

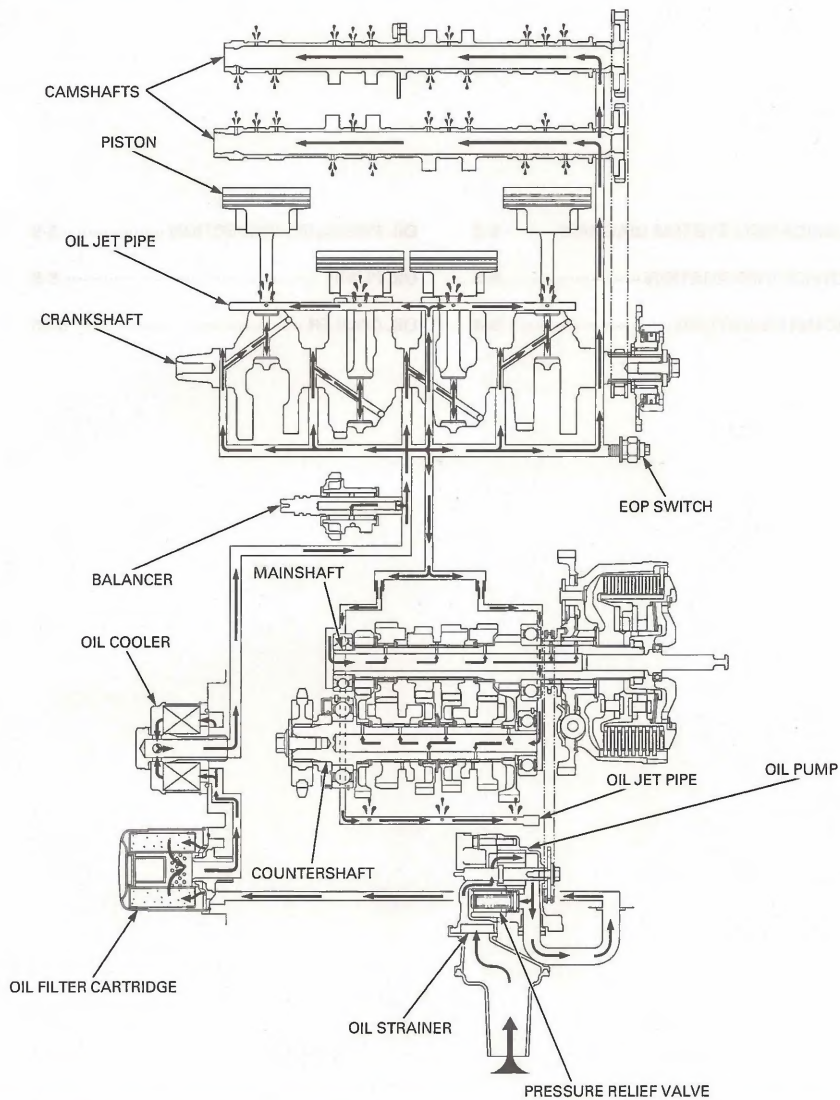

SERVICE INFORMATION

GENERAL

⚠ CAUTION

Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.

- This section covers service of the oil pump and oil cooler.
- The oil pump can be serviced with the engine installed in the frame.
- The service procedures in this section must be performed with the engine oil drained.
- When removing and installing the oil pump, use care not to allow dust or dirt to enter the engine.
- If any portion of the oil pump is worn beyond the specified service limits, replace the oil pump as an assembly.
- After the oil pump has been installed, check that there are no oil leaks and that oil pressure is correct.

SPECIFICATIONS

Unit: mm (in)

ITEM		STANDARD	SERVICE LIMIT
Engine oil capacity	After draining	2.8 liters (3.0 US qt, 2.5 Imp qt)	—
	After oil filter change	3.0 liters (3.2 US qt, 2.6 Imp qt)	—
	After disassembly	3.7 liters (3.9 US qt, 3.3 Imp qt)	—
Recommended engine oil		Pro Honda GN4 4-stroke oil (U.S.A. and Canada) or equivalent motor oil API service classification: SG or Higher JASO T 903 standard: MA Viscosity: SAE 10W-30	—
Oil pressure at EOP switch		590 kPa (6.0 kgf/cm ² , 86 psi) at 6,000 rpm/(80°C/176°F)	—
Oil pump	Tip clearance	0.15 (0.006)	0.20 (0.008)
	Body clearance	0.15 – 0.21 (0.006 – 0.008)	0.35 (0.014)
	Side clearance	0.04 – 0.09 (0.002 – 0.004)	0.17 (0.007)

TORQUE VALUES

Oil pump assembly bolt
Oil pump driven sprocket bolt
Oil cooler bolt
Oil pipe mounting bolt

 
12 N·m (1.2 kgf·m, 9 lbf·ft)
15 N·m (1.5 kgf·m, 11 lbf·ft)
59 N·m (6.0 kgf·m, 44 lbf·ft)
12 N·m (1.2 kgf·m, 9 lbf·ft)

CT bolt
Apply locking agent to the threads.

Apply locking agent to the threads.

LUBRICATION SYSTEM

TOOLS

Oil pressure gauge set 07506-3000001  or equivalent commercially available	Oil pressure gauge attachment 07406-0030000  or equivalent commercially available
--	--

TROUBLESHOOTING

Oil level too low

- Oil consumption
- External oil leak
- Worn piston rings
- Improperly installed piston rings
- Worn cylinders
- Worn valve stem seals
- Worn valve guide

Low oil pressure

- Oil level low
- Clogged oil strainer
- Internal oil leak
- Incorrect oil being used

No oil pressure

- Oil level too low
- Oil pressure relief valve stuck open
- Broken oil pump drive chain
- Broken oil pump drive or driven sprocket
- Damaged oil pump
- Internal oil leak

High oil pressure

- Oil pressure relief valve stuck closed
- Clogged oil filter, oil cooler gallery or metering orifice
- Incorrect oil being used

Oil contamination

- Oil or filter not changed often enough
- Worn piston rings

Oil emulsification

- Blown cylinder head gasket
- Leaky coolant passage
- Entry of water

OIL PRESSURE INSPECTION

If the oil pressure indicator remains on while the engine is running, check the indicator system (page 20-14) before checking the oil pressure.

Remove the EOP switch (page 20-14).

Install the oil pressure gauge attachment to the switch base.

Connect the oil pressure gauge to the oil pressure gauge attachment.

TOOLS:

Oil pressure gauge set

07506-3000001 or equivalent commercially available

Oil pressure gauge attachment 07406-0030000 or equivalent commercially available

Check the engine oil level (page 4-17).


Warm the engine to normal operating temperature (approximately 80°C/176°F) and increase the engine speed to 6,000 min⁻¹ (rpm) and read the oil pressure.

Standard:

590 kPa (6.0 kgf/cm², 86 psi) at 6000 rpm/ (80°C/176°F)

Stop the engine and remove the tools.

Install the EOP switch (page 20-14).

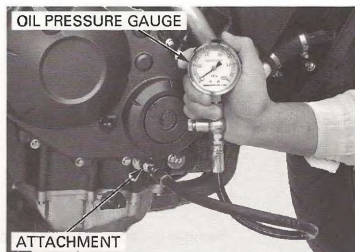


OIL PUMP

REMOVAL


Drain the engine oil (page 4-18).

Remove the exhaust pipe (page 3-31).

Remove the screws and lower cowl stays.

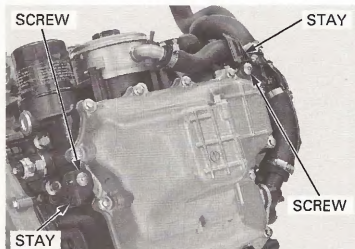


Remove the bolts and oil pan.

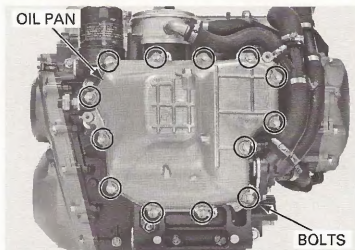


LUBRICATION SYSTEM

Remove the oil strainer and seal ring.

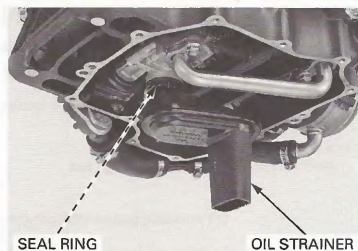


Remove the bolts, oil pipe and seal rings.


Clean the oil pipe in solvent thoroughly and check for damage.

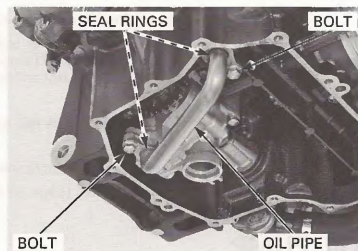


Remove the bolt, washer and oil pump driven sprocket.

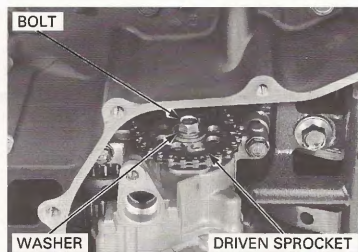

Remove the bolts and oil pump assembly.

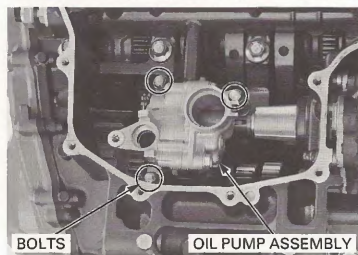


Remove the dowel pins.

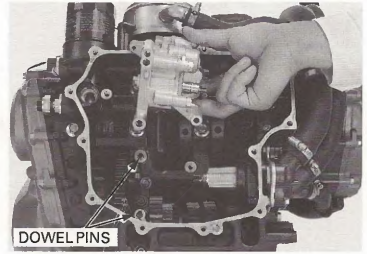


DISASSEMBLY


Remove the bolts and separate the oil pump assembly.

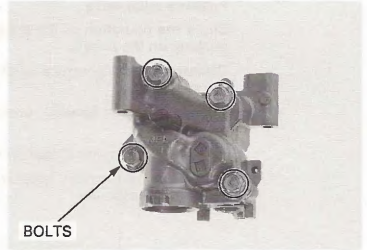

Remove the dowel pins.

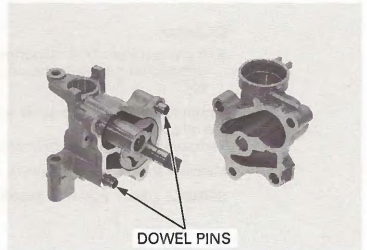

Remove the pressure relief valve and O-ring.

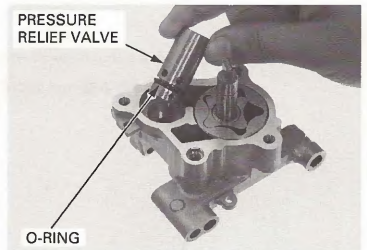


LUBRICATION SYSTEM

Remove the following:

- Oil pump shaft
- Thrust washer
- Drive pin
- Outer rotor
- Inner rotor

Clean all disassembled parts in solvent thoroughly.

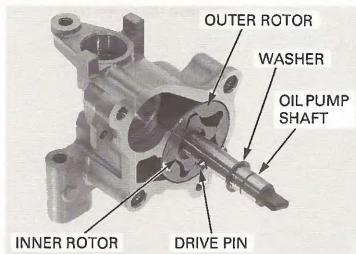

INSPECTION

Pressure relief valve


Check the operation of the pressure relief valve by pushing on the piston.

Disassemble the pressure relief valve by removing the snap ring.

Inspect the piston for wear, unsmooth movement or damage.

Inspect the spring for fatigue or damage.

Assemble the pressure relief valve in the reverse order of disassembly.

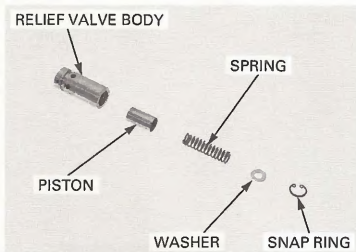

Oil pump

- If any portion of the oil pump is worn beyond the service limit, replace the oil pump as an assembly.


Temporarily install the outer and inner rotors into the oil pump body.

Temporarily install the drive pin and oil pump shaft.

Measure the rotor tip clearance.

SERVICE LIMIT: 0.20 mm (0.008 in)


TIP CLEARANCE:

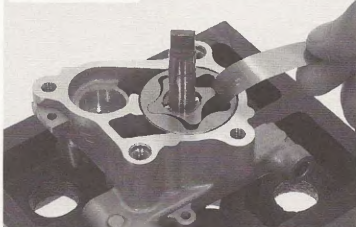

Measure the pump body clearance.

SERVICE LIMIT: 0.35 mm (0.014 in)


BODY CLEARANCE:

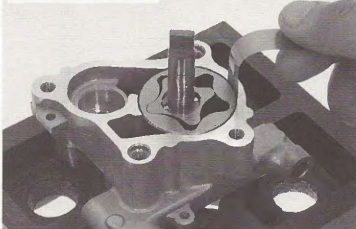

Measure the side clearance using a straight edge and feeler gauge.


SERVICE LIMIT: 0.17 mm (0.007 in)

SIDE CLEARANCE:

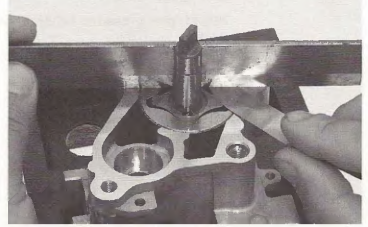


ASSEMBLY

Dip all parts in clean engine oil.

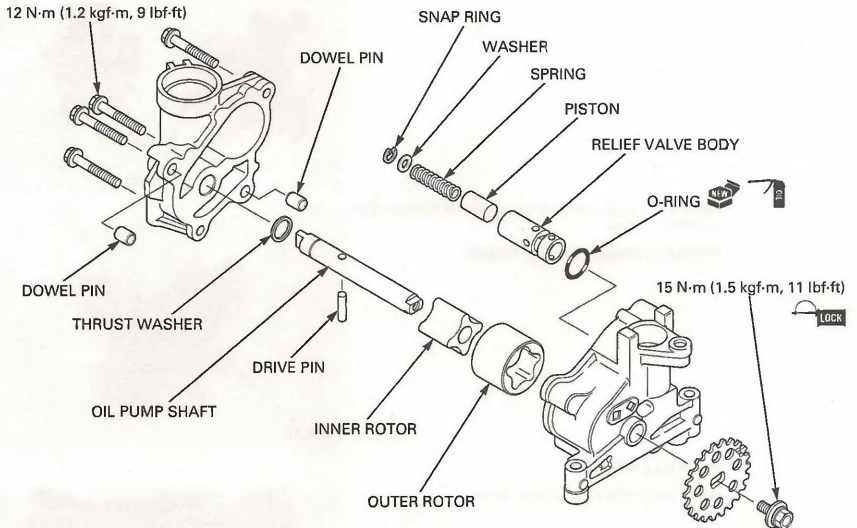


Install the outer rotor into the oil pump body.
Install the inner rotor into the outer rotor with its drive pin groove facing the drive pin.
Install the oil pump shaft through the inner rotor and oil pump body.
Install the drive pin into the oil pump shaft hole and align it with the inner rotor groove.
Install the thrust washer.

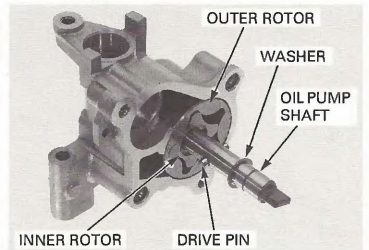


LUBRICATION SYSTEM

Apply oil to a new O-ring and install it to the pressure relief valve.

Install the pressure relief valve to the oil pump body.

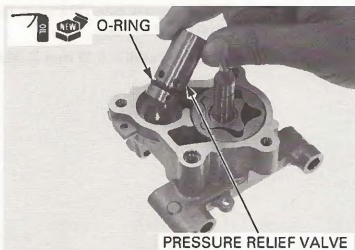


Install the dowel pins to the oil pump body.

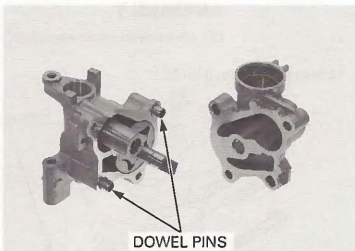


Assemble the oil pump and tighten the bolts to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

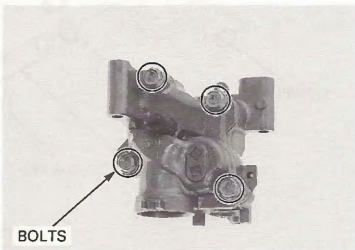


INSTALLATION


Install the dowel pins to the crankcase.

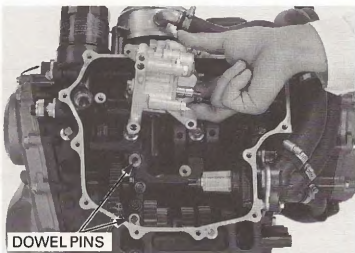

Install the oil pump assembly and tighten the bolts securely.

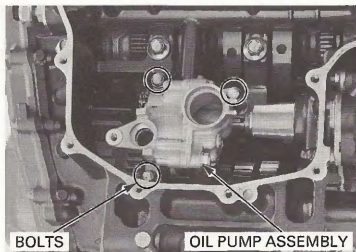

Install the driven sprocket with its "OUT" mark facing out by aligning the flat surfaces.

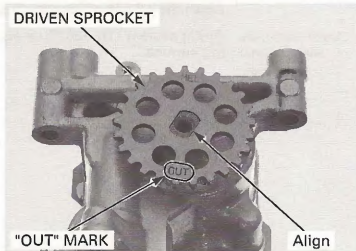


Apply locking agent to the oil pump driven sprocket bolt threads (page 1-18).

Tighten the driven sprocket bolt/washer to the specified torque.

TORQUE: 15 N·m (1.5 kgf·m, 11 lbf·ft)

Apply oil to the oil pump driven sprocket.

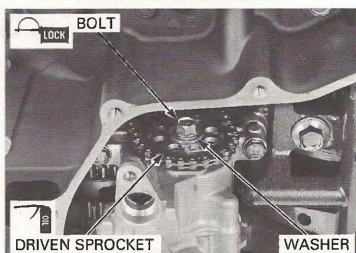


Apply oil to new seal rings and install them to the oil pipe.

Apply locking agent to the oil pipe mounting bolt threads (page 1-18).

Install the oil pipe and tighten the bolts to the specified torque.


TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

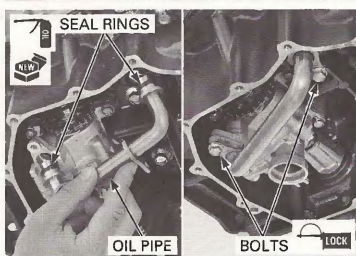

LUBRICATION SYSTEM

Apply oil to a new seal ring and install it to the oil strainer as shown.


Install the oil strainer by aligning its boss to the crankcase groove.

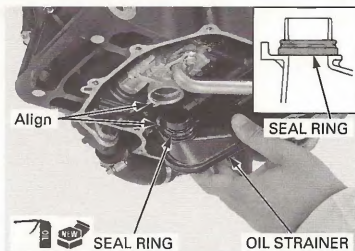


Clean the oil pan mating surface thoroughly.

Do not apply more sealant than is necessary.

Apply sealant (TB 1207B or equivalent) to the mating surface.

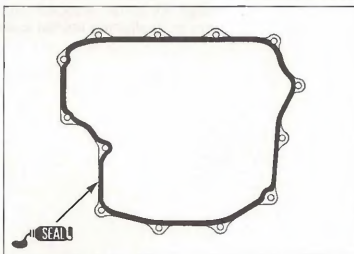

Install the oil pan and tighten the bolts in a criss-cross pattern in two or three steps.

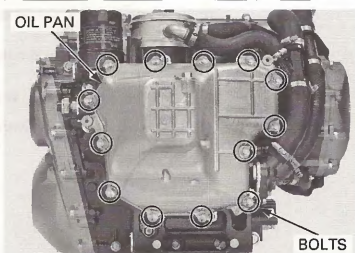


Install the lower cowl stays and tighten the screws securely.

Install the exhaust pipe (page 3-32).

Fill the crankcase with the recommended oil (page 4-17).

Start the engine and check that there are no oil leaks.

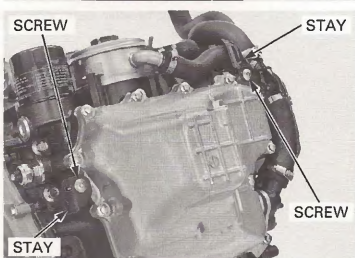

OIL COOLER

REMOVAL

Drain the engine oil (page 4-18).

Drain the coolant (page 7-7).




Remove the exhaust pipe (page 3-31).

Loosen the hose clamp screws and disconnect the water hoses from the oil cooler.

Remove the bolt, sealing washer, oil cooler and O-ring.

INSPECTION

Check the oil cooler for damage.

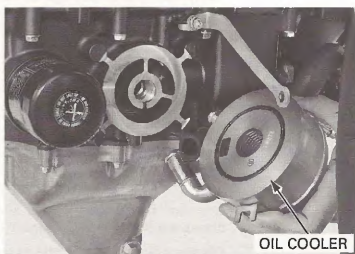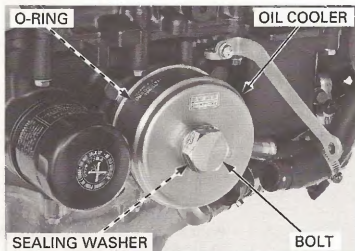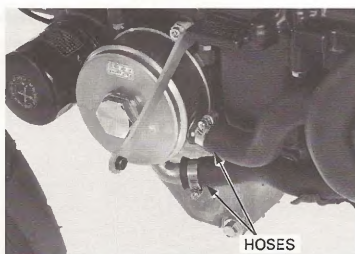


INSTALLATION

Apply oil to a new O-ring and install it into the oil cooler groove.

Apply oil to a new sealing washer seating surface.


Install the oil cooler to the crankcase by aligning the oil cooler groove with the crankcase boss.

Install the sealing washer and oil cooler bolt.

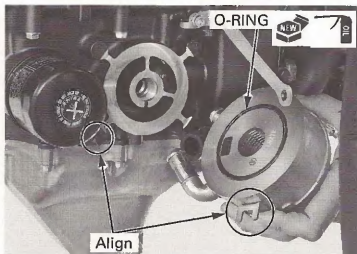

Hold the oil cooler by your hand and tighten the bolt to the specified torque.

TORQUE: 59 N·m (6.0 kgf·m, 44 lbf·ft)

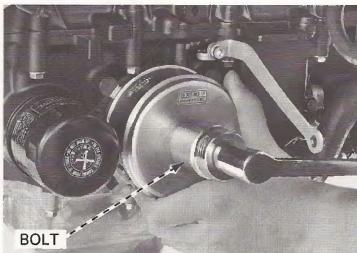


Connect the water hoses and tighten the hose clamp screws securely (page 7-23).

Fill the crankcase with the recommended oil (page 4-17).

Install the exhaust pipe (page 3-32).


Fill the cooling system and bleed any air (page 7-7).

Check for coolant and oil leaks.

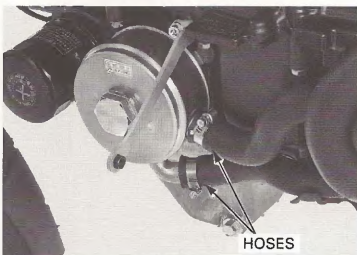

COMPONENT LOCATION	6-2	THROTTLE BODY	6-58
SERVICE INFORMATION	6-3	PRIMARY INJECTOR	6-63
PGM-FI SYMPTOM TROUBLESHOOTING	6-7	ENGINE IDLE SPEED	6-66
PGM-FI SYSTEM LOCATION	6-8	IACV	6-66
PGM-FI SYSTEM DIAGRAM	6-9	KNOCK SENSOR	6-68
CONNECTOR LOCATION	6-10	MAP SENSOR	6-69
PGM-FI TROUBLESHOOTING INFORMATION	6-12	IAT SENSOR	6-70
DTC INDEX	6-15	ECT SENSOR	6-70
DTC TROUBLESHOOTING	6-17	CMP SENSOR	6-71
MIL CIRCUIT TROUBLESHOOTING	6-40	BANK ANGLE SENSOR	6-71
FUEL LINE INSPECTION	6-41	ENGINE STOP RELAY	6-73
FUEL PUMP UNIT	6-47	ECM	6-74
FUEL PUMP RELAY	6-50	SECONDARY AIR SUPPLY SYSTEM	6-77
FUEL TANK	6-51	EGCA	6-79
AIR CLEANER HOUSING	6-52	INTAKE AIR DUCT CONTROL	6-81
SECONDARY INJECTOR	6-55	EVAP PURGE CONTROL SOLENOID VALVE/ CANISTER (CALIFORNIA TYPE)	6-83

COMPONENT LOCATION

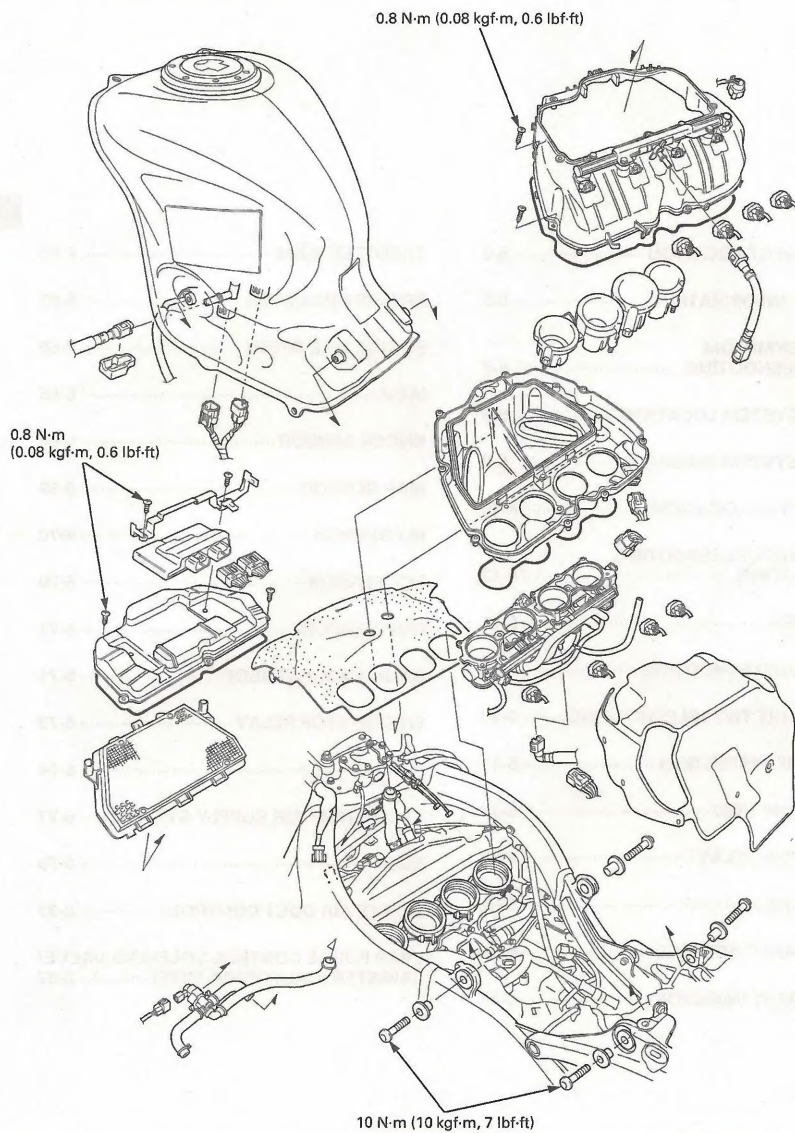

SERVICE INFORMATION

GENERAL

- Be sure to relieve the fuel pressure while the engine is OFF.
- Bending or twisting the control cables will impair smooth operation and could cause the cables to stick or bind, resulting in loss of vehicle control.
- Work in a well ventilated area. Smoking or allowing flames or sparks in the work area or where gasoline is stored can cause a fire or explosion.
- Do not snap the throttle valve from full open to full close after the throttle cable has been removed. It may cause incorrect idle operation.
- Seal the cylinder head intake ports with tape or a clean cloth to keep dirt and debris from entering the intake ports after the throttle body has been removed.
- Do not apply excessive force to the fuel rail on the throttle body while removing or installing the throttle body.
- Do not damage the throttle body. It may cause incorrect throttle valve operation.
- Prevent dirt and debris from entering the engine, clean the throttle bore and fuel hose with compressed air.
- A faulty PGM-FI system is often related to poorly connected or corroded connectors. Check those connections before proceeding.
- For fuel reserve sensor inspection (page 20-15).
- Before disconnecting the fuel hose, relieve fuel pressure from the system by disconnecting the quick connect fitting (page 6-41).
- Do not loosen or tighten the white painted bolts and screws of the throttle body. Loosening or tightening them can cause throttle valve and idle control failure.

FUEL SYSTEM (PGM-FI)

SPECIFICATIONS

ITEM		SPECIFICATIONS
Throttle body identification number	Except California type	GQ23C
	California type	GQ23B
Idle speed		1,200 ± 100 rpm
Throttle grip freeplay		2 – 5 mm (1/16 – 3/16 in)
IAT sensor resistance (at 20°C/68°F)		1 – 4 kΩ
Fuel injector resistance (at 20°C/68°F)	Primary injector	11 – 13 Ω
	Secondary injector	11 – 13 Ω
PAIR control solenoid valve resistance (at 20°C/68°F)		23 – 27 Ω
IDC solenoid valve resistance (at 20°C/68°F)		28 – 32 Ω
CKP sensor peak voltage (at 20°C/68°F)		0.7 V minimum
Fuel pressure at idle		343 kPa (3.5 kgf/cm ² , 50 psi)
Fuel pump flow (at 12 V)		167 cm ³ (5.6 US oz, 5.9 Imp oz) minimum/10 seconds


TORQUE VALUES

ECT sensor	23 N·m (2.3 kgf·m, 17 lbf·ft)
Primary fuel rail mounting bolt	5.1 N·m (0.5 kgf·m, 3.8 lbf·ft)
Fuel tank mounting bolt	10 N·m (1.0 kgf·m, 7 lbf·ft)
Fuel pump mounting nut	12 N·m (1.2 kgf·m, 9 lbf·ft)
Bank angle sensor mounting screw	1.1 N·m (0.1 kgf·m, 0.8 lbf·ft)
IACV setting plate torx screw	2.1 N·m (0.2 kgf·m, 1.5 lbf·ft)
Knock sensor mounting bolt	22 N·m (2.2 kgf·m, 16 lbf·ft)
IAT sensor mounting screw	1.1 N·m (0.1 kgf·m, 0.8 lbf·ft)
MAP sensor mounting screw	5.0 N·m (0.5 kgf·m, 3.7 lbf·ft)
ECM setting plate screw	0.8 N·m (0.08 kgf·m, 0.6 lbf·ft)
Air cleaner housing screw	0.8 N·m (0.08 kgf·m, 0.6 lbf·ft)
Heat guard mounting screw	10 N·m (1.0 kgf·m, 7 lbf·ft)
Throttle cable adjuster lock nut	5.5 N·m (0.6 kgf·m, 4.1 lbf·ft)
Canister mounting bolt	8.0 N·m (0.8 kgf·m, 5.9 lbf·ft)
Shock absorber mounting nut	44 N·m (4.5 kgf·m, 32 lbf·ft)

For tightening sequence (page 6-49)

TOOLS

Peak voltage adaptor
07HGJ-0020100 (Not available in
U.S.A.)

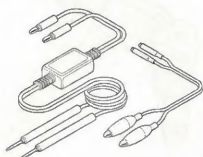


with commercially available digital
multimeter (impedance 10 M Ω /DCV
minimum)

IgnitionMate peak voltage tester
MTP07-0286 (U.S.A. only)



 
SCS connector
070PZ-ZY30100



Test probe
07ZAJ-RDJA110




Fuel pressure gauge
07406-0040004

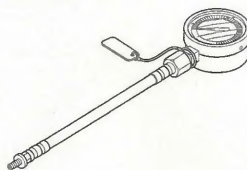


or 07406-004000B
or 07406-004000A (U.S.A. only)

Pressure gauge manifold
07ZAJ-S5A0111

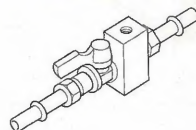


(Not available in U.S.A.)

Hose attachment, 8 mm/9 mm
07ZAJ-S7C0100

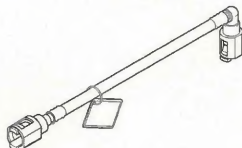

(Not available in U.S.A.)

Hose attachment, 9 mm/9 mm
07ZAJ-S5A0120

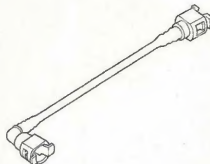

(Not available in U.S.A.)

Attachment joint, 8 mm/9 mm
07ZAJ-S7C0200




(Not available in U.S.A.)

FUEL SYSTEM (PGM-FI)


HDS pocket tester
TDS3557-0112-01 (U.S.A. only)




Pressure manifold hose
07AMJ-HW3A100 (U.S.A. only)

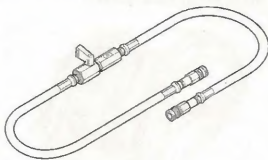

Adaptor, male
07AAJ-S6MA200 (U.S.A. only)

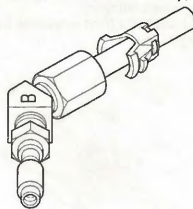

 Adaptor, female
07AAJ-S6MA400 (U.S.A. only)




PGM-FI SYMPTOM TROUBLESHOOTING


When the motorcycle has one of these symptoms, check the DTC or MIL blinking, refer to the DTC index (page 6-15) and begin the appropriate troubleshooting procedure. If there are no DTC/MIL blinking stored in the ECM memory, do the diagnostic procedure for the symptom, in sequence listed below, until you find the cause.

Symptom	Diagnosis procedure	Also check for
Engine cranks but won't start (No DTC and MIL blinking)	1. Crank the starter for more than 10 seconds and check the DTC (page 6-13) and execute the troubleshooting according to the DTC. 2. Inspect the fuel supply system (page 6-41).	• No fuel to injector – Clogged fuel strainer screen – Pinched or clogged fuel hose – Pinched or clogged fuel tank breather hose – Faulty fuel pump – Faulty fuel pump circuits • Intake air leak • Contaminated/deteriorated fuel • Faulty injector • IACV stuck closed • Faulty ignition system • Faulty CKP sensor • Faulty CMP sensor
Engine cranks but won't start (No fuel pump operation sound when the turning the ignition ON)	1. ECM power/ground circuits malfunction (page 6-75) 2. Inspect the fuel supply system (page 6-41).	• Open circuit in the power input and/or ground wire of the ECM • Faulty bank angle sensor or related circuit • Faulty engine stop relay or related circuit • Faulty engine stop switch or related circuit • Blown fuse (BANK ANGLE 10 A) • Blown fuse (FI 20 A)
Engine stalls, hard to start, rough idling	1. Check the idle speed. 2. Check the IACV. 3. Inspect the fuel supply system (page 6-41). 4. Inspect the battery charging system (page 17-7).	• Restricted fuel hose • Contaminated/deteriorated fuel • Intake air leak • Faulty IACV • Restricted fuel tank breather hose • Faulty ignition system • Faulty battery charging system
Afterburn when engine braking is used	Check the PAIR system (page 6-77).	• Faulty PAIR system – Faulty PAIR control solenoid valve – Faulty PAIR check valve – Clogged hose of the PAIR system • Faulty ignition system
Backfiring or misfiring during acceleration	Check the ignition system.	• Faulty ignition system
Poor performance (drivability) and poor fuel economy	1. Inspect the fuel supply system (page 6-41). 2. Inspect the air cleaner element (page 4-9).	• Pinched or clogged fuel hose • Faulty pressure regulator • Faulty injector • Faulty ignition system • Clogged air cleaner element • Faulty MAP sensor • Pinched or clogged MAP sensor hose
Idle speed is below specifications or fast idle too low (No DTC and MIL blinking)	1. Check the idle speed. 2. Check the IACV.	• IACV stuck closed • Faulty fuel supply system • Faulty ignition system
Idle speed is above specifications or fast idle too high (No DTC and MIL blinking)	1. Check the idle speed. 2. Check the throttle operation and freeplay 3. Check the IACV.	• IACV stuck opened • Faulty ignition system • Intake air leak • Engine top end problem • Air cleaner condition
MIL stays ON but no DTCs set, or MIL never comes ON at all	Troubleshoot the MIL circuit (page 6-40).	• Faulty MIL circuit
MIL stays ON at all (No DTC set)	Inspect the DLC circuit.	• Short circuit in the DLC related wire

PGM-FI SYSTEM LOCATION

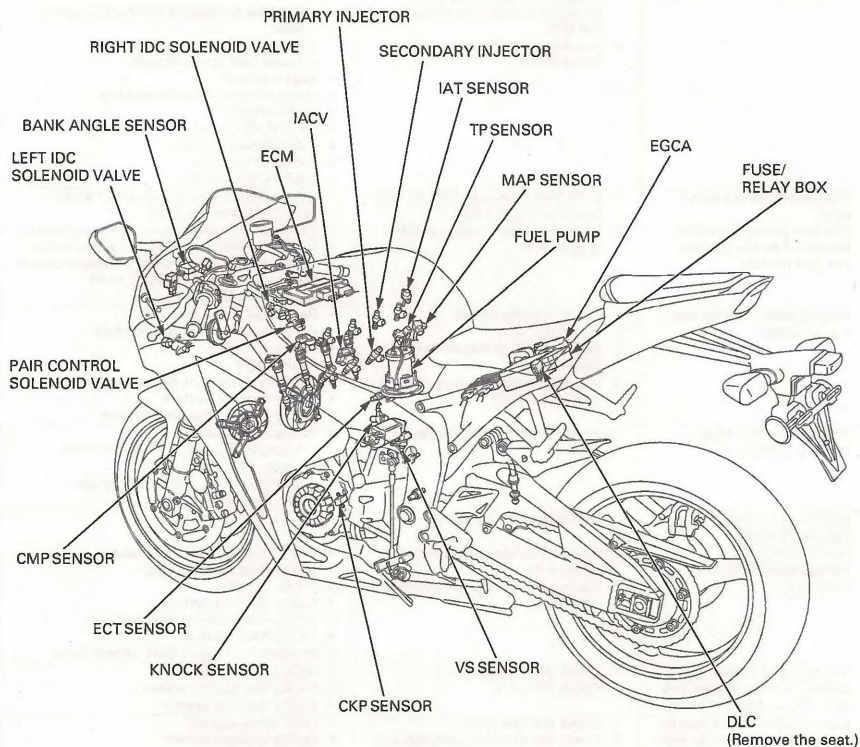


PGM-FI SYSTEM DIAGRAM

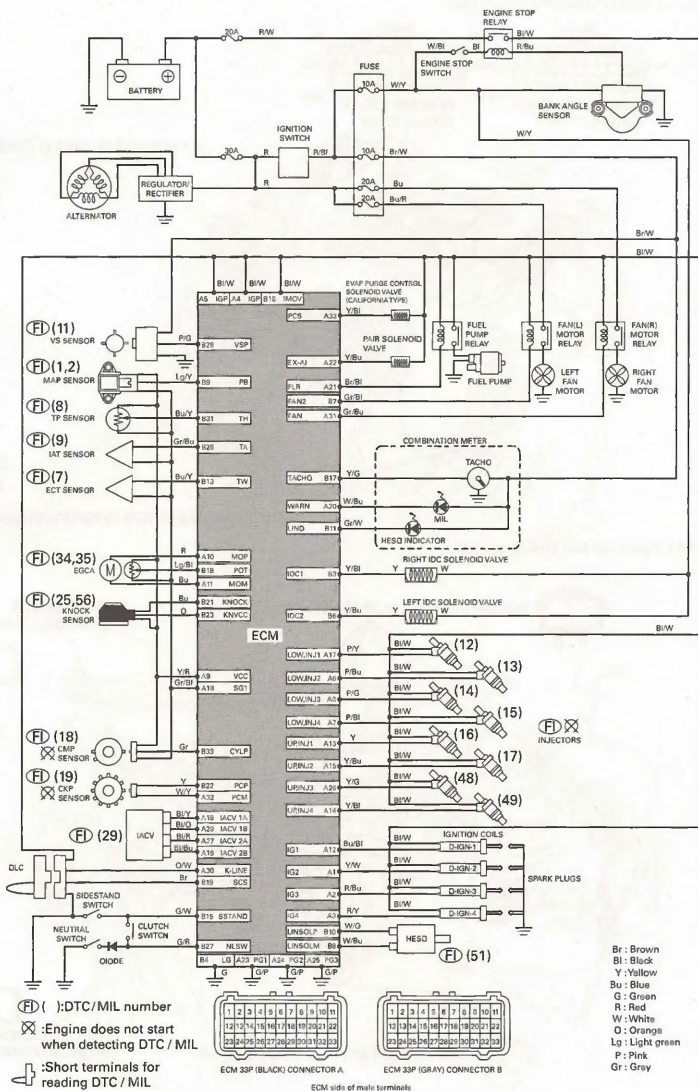


CONNECTOR LOCATION


NOTE: Lift and support the fuel tank (page 4-5).

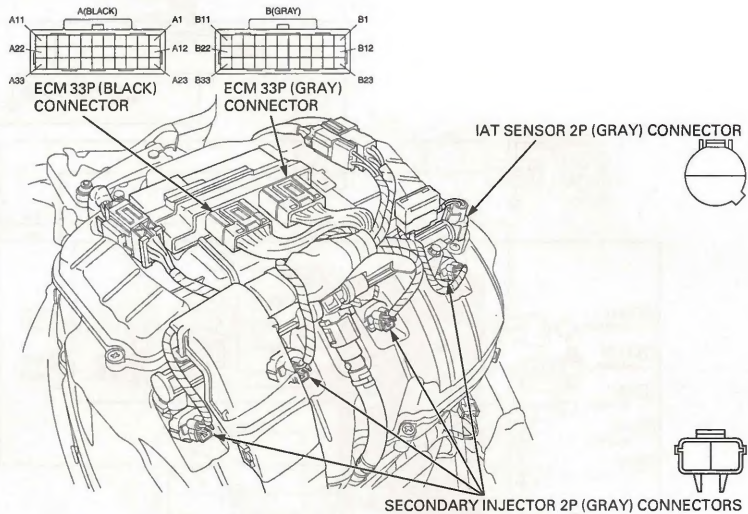


NOTE: Lift and support the fuel tank (page 4-5).

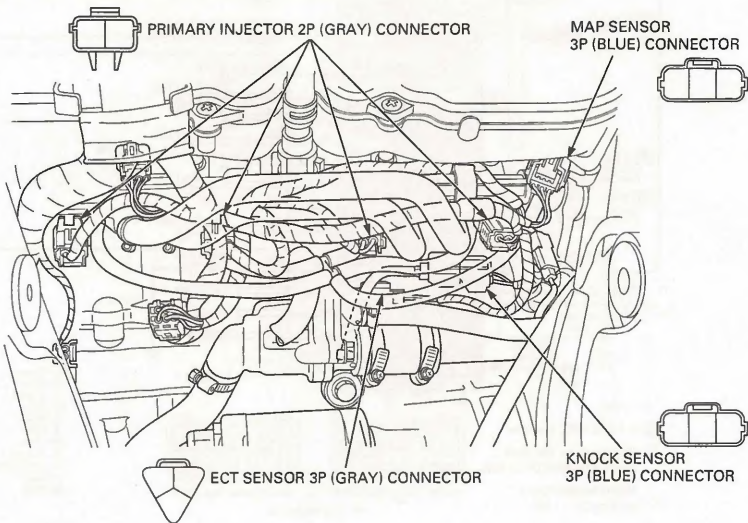

NOTE: Remove the air cleaner housing (page 6-52).

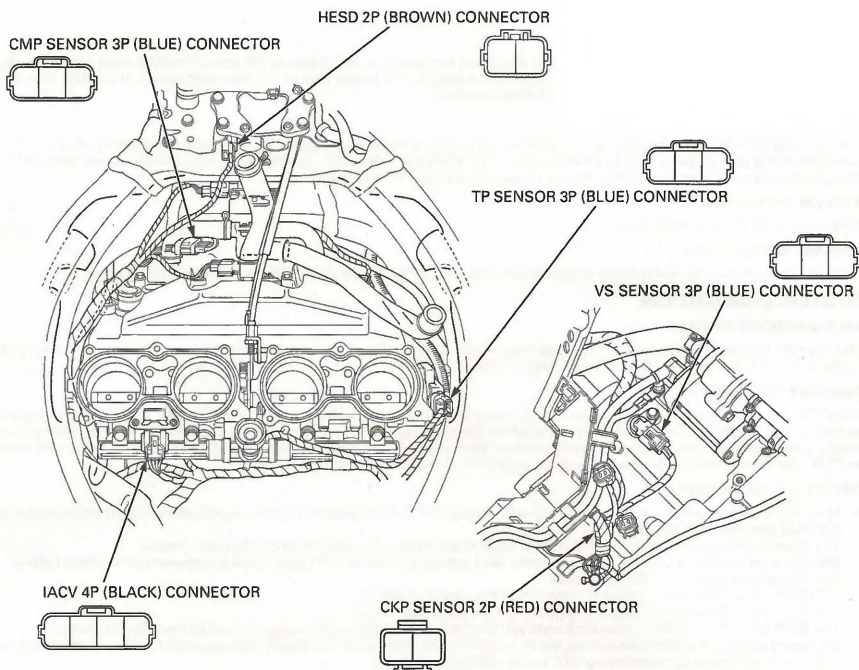

NOTE: Remove the seat (page 3-6).

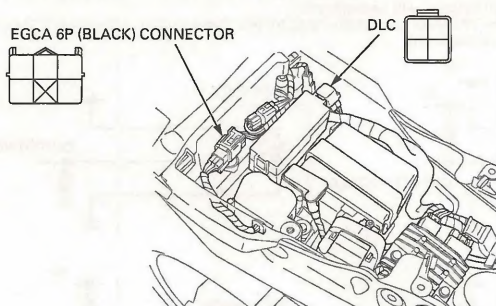

PGM-FI TROUBLESHOOTING INFORMATION

GENERAL TROUBLESHOOTING

Intermittent Failure

The term "intermittent failure" means a system may have had a failure, but it checks OK now. If the MIL does not come on, check for poor contact or loose pins at all connectors related to the circuit that of the troubleshooting. If the MIL was on, but then went out, the original problem may be intermittent.

Opens and Shorts

"Opens" and "Shorts" are common electrical terms. An open is a break in a wire or at a connection. A short is an accidental connection of a wire to ground or to another wire. In simple electronics, this usually means something will not work at all. With ECMs this can mean something may work, but not the way it's supposed to.

If the MIL has come on

Refer to DTC READOUT (page 6-13).

If the MIL did not stay on

If the MIL did not stay on, but there is a driveability problem, do the SYMPTOM TROUBLESHOOTING (page 6-7).

SYSTEM DESCRIPTION

SELF-DIAGNOSIS SYSTEM





The PGM-FI system is equipped with the self-diagnostic system. When any abnormality occurs in the system, the ECM turns on the MIL and stores a DTC in its erasable memory.

FAIL-SAFE FUNCTION

The PGM-FI system is provided with a fail-safe function to secure a minimum running capability even when there is trouble in the system. When any abnormality is detected by the self-diagnosis function, running capability is maintained by pre-programmed values in the simulated program map. When any abnormality is detected in the injector(s), CKP sensor and/or CMP sensor, the fail-safe function stops the engine to protect it from damage.


DTC (Diagnostic Trouble Code)

- The DTC is composed of a main code and a sub code and it is displayed as a hyphenated number when retrieved from the ECM with the HDS pocket tester.
The digits in front of the hyphen are the main code, they indicate the component or function failure.
The digits behind the hyphen are the sub code, they detail the specific symptom of the component or function failure.
For example, in the case of the TP sensor:
 - DTC 08 - 1 = (TP sensor voltage) - (lower than the specified value)
 - DTC 08 - 2 = (TP sensor voltage) - (higher than the specified value).
- The MAP, ECT, TP and IAT sensor diagnosis will be made according to the voltage output of the affected sensor.
If a failure occurs, the ECM determines the Function Failure, compares the sensor voltage output to the standard value, and then outputs the corresponding DTC to the HDS Pocket Tester.
For example:
 - If the input voltage line (A) on the MAP sensor is opened, the ECM detects the output voltage is about 5 V, then the DTC 1-2 (MAP sensor circuit high voltage) will be displayed.
 - If the input voltage line (B) on the TP sensor is opened, the ECM detects the output voltage is 0 V, then the DTC 8-1 (TP sensor circuit low voltage) will be displayed.

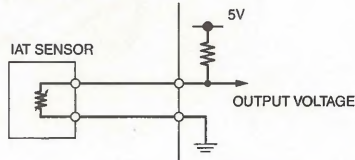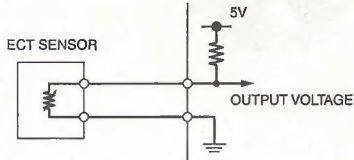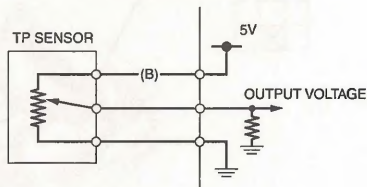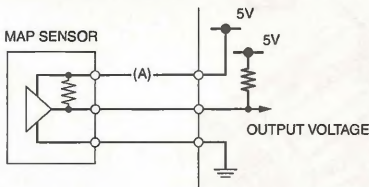

MIL Blink Pattern

- If the HDS pocket tester is not available, DTC can be read from the ECM memory by the MIL blink pattern.
- The number of MIL blinks is the equivalent to the main code of the DTC (the sub code cannot be displayed by the MIL).
- The MIL will blink the current DTC, in case the ECM detects the problem at present, when the ignition switch ON or idling with the sidestand down. The MIL will stay ON when the engine speed is over 5,000 rpm or with the sidestand up.
- The MIL has two types of blinks, a long blink and short blink. The long blinking lasts for 1.3 seconds, the short blinking lasts for 0.5 seconds. One long blink is the equivalent of ten short blinks. For example, when two long blinks are followed by five short blinks, the MIL is 25 (two long blinks = 20 blinks, plus five short blinks).
- When the ECM stores more than one DTC, the MIL will indicate them by blinking in the order from the lowest number to highest number.

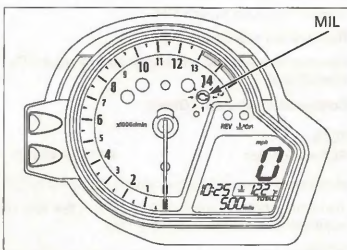**MIL Check**

When the ignition switch is turned ON and engine stop switch "O", the MIL will stay on for a few seconds, then go off. If the MIL does not come on, troubleshoot the MIL circuit (page 6-40).

CURRENT DTC/FREEZE DTC

The DTC is indicated in two ways according to the failure status.

- In the case that the ECM detects a problem at present, the MIL will come on and will start to blink the DTC when the sidestand is lowered.
- In the case that the ECM does not detect any problem at present but has a problem stored in its memory, the MIL will not light and blink. To retrieve the past problem code, readout the freeze DTC by following the DTC readout procedure.

HDS POCKET TESTER INFORMATION

- The HDS can readout the DTC, freeze data, current data and other ECM condition.

How to connect the HDS Pocket Tester

Remove the seat (page 3-6).

Turn the ignition switch OFF.

Remove the dummy connector from the DLC.

Connect the HDS pocket tester to the DLC.


Turn the ignition switch ON, check the DTC and freeze data.

NOTE:

- Freeze data indicates the engine conditions when the first malfunction was detected.

ECM reset

The HDS can reset the ECM data including the DTC, freeze data and some learning memory.

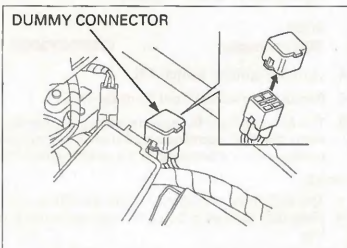
**DTC READOUT**

Start the engine and check the MIL.

- If the engine will not start, turn the starter motor for more than 10 seconds and check that the MIL blinks.
- When the ignition switch is turned ON, the MIL will stay on for a few seconds, then go off.

If the MIL stays on or blinks, connect the HDS Pocket Tester to the DLC (page 6-13), read the DTC, freeze data and follow the troubleshooting index (page 6-15).

To read the DTC with the MIL blinking, refer to the following procedure.

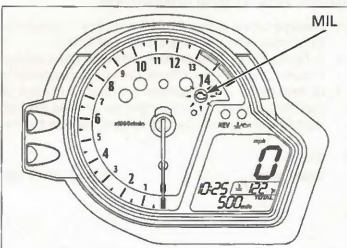

FUEL SYSTEM (PGM-FI)

Reading DTC with the MIL

Turn the ignition switch OFF.

Remove the seat (page 3-6).

Remove the dummy connector and short the DLC terminals using the special tool.

Connection: Brown – Green

TOOL:


SCS connector 070PZ-ZY30100

Make sure the engine stop switch is turned to "O".

Turn the ignition switch ON, and note the MIL blinks, and refer to the troubleshooting index (page 6-15).

NOTE:

If the ECM has any DTC in its memory, the MIL will start blinking.

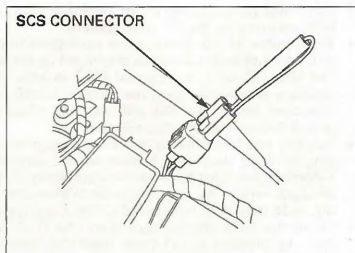

CLEARING DTC

Connect the HDS Pocket Tester to the DLC (page 6-13).

Clear the DTC with the HDS while the engine is stopped.

To clear the DTC without HDS, use the following procedure.

How to clear the DTC with SCS connector

1. Remove the seat (page 3-6).

2. Turn the ignition switch OFF.

3. Make sure the engine stop switch is turned to "O".
Remove the dummy connector and short the Brown and Green wire terminals of the DLC using the special tool.

Connection: Brown – Green

TOOL:

SCS connector 070PZ-ZY30100


4. Turn the ignition switch ON.

5. Remove the special tool from the DLC.

6. The MIL will light for approximately 5 seconds. While the MIL lights, short the DLC terminals again with the special tool. The self-diagnostic memory is erased if the malfunction indicator goes off and starts blinking.

NOTE:

- The DLC must be jumped while the MIL is illuminated. If not, the MIL will not start blinking.
- Note that the self-diagnostic memory cannot be erased if the ignition switch is turned OFF before the MIL starts blinking.

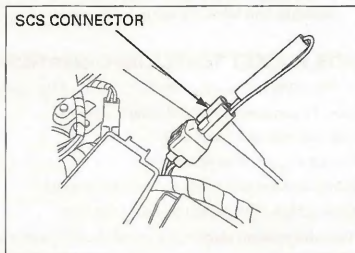


CIRCUIT INSPECTION

INSPECTION AT ECM CONNECTOR

- Always clean around and keep any foreign material away from the ECM connector before disconnecting it.
- A faulty PGM-FI system is often related to poorly connected or corroded connections. Check those connections before proceeding.
- In testing at ECM connector (wire harness side) terminal, always use the test probe. Insert the test probe into the connector terminal, then attach the digital multimeter probe to the test probe.

TOOL:

Test probe 07ZAJ-RDJA110

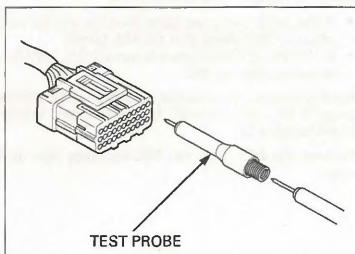

DTC INDEX

DTC (MIL blinks)	Function Failure	Symptom/Fail-safe function	Refer to (DTC)
1-1 (1)	MAP sensor circuit low voltage (less than 0.2 V) • MAP sensor or its circuit malfunction	• Engine operates normally	6-17
1-2 (1)	MAP sensor circuit high voltage (more than 3.9 V) • Loose or poor contact of the MAP sensor connector • MAP sensor or its circuit malfunction	• Engine operates normally	6-18
2-1 (2)	MAP sensor performance problem • Loose or poor connection of the MAP sensor vacuum hose • MAP sensor malfunction	• Engine operates normally	6-19
7-1 (7)	ECT sensor circuit low voltage (less than 0.07 V) • ECT sensor or its circuit malfunction	• Hard start at a low temperature • Pre-program value: 90°C/194°F • Cooling fan turns on	6-20
7-2 (7)	ECT sensor circuit high voltage (more than 4.93 V) • Loose or poor contact of the ECT sensor connector • ECT sensor or its circuit malfunction	• Hard start at a low temperature • Pre-program value: 90°C/194°F • Cooling fan turns on	6-21
8-1 (8)	TP sensor circuit low voltage (less than 0.3 V) • Loose or poor contact of the TP sensor connector • TP sensor or its circuit malfunction	• Poor engine acceleration • Pre-program value: 0°	6-22
8-2 (8)	TP sensor circuit high voltage (more than 4.93 V) • TP sensor or its circuit malfunction	• Poor engine acceleration • Pre-program value: 0°	6-24
9-1 (9)	IAT sensor circuit low voltage (less than 0.07 V) • IAT sensor or its circuit malfunction	• Engine operates normally • Pre-program value: 25°C/77°F	6-25
9-2 (9)	IAT sensor circuit high voltage (more than 4.93 V) • Loose or poor contact of the IAT sensor connector • IAT sensor or its circuit malfunction	• Engine operates normally • Pre-program value: 25°C/77°F	6-25
11-1 (11)	VS sensor no signal • Loose or poor contact of the VS sensor connector • VS sensor or its circuit malfunction	• Engine operates normally	6-26
12-1 (12)	No. 1 primary injector circuit malfunction • Loose or poor contact of the injector connector • Injector or its circuit malfunction	• Engine does not start • Injectors, fuel pump and ignition shut down	6-28
13-1 (13)	No. 2 primary injector circuit malfunction • Loose or poor contact of the injector connector • Injector or its circuit malfunction	• Engine does not start • Injectors, fuel pump and ignition shut down	6-30
14-1 (14)	No. 3 primary injector circuit malfunction • Loose or poor contact of the injector connector • Injector or its circuit malfunction	• Engine does not start • Injectors, fuel pump and ignition shut down	6-30
15-1 (15)	No. 4 primary injector circuit malfunction • Loose or poor contact of the injector connector • Injector or its circuit malfunction	• Engine does not start • Injectors, fuel pump and ignition shut down	6-30
16-1 (16)	No. 1 secondary injector circuit malfunction • Loose or poor contact of the injector connector • Injector or its circuit malfunction	• Engine does not start • Injectors, fuel pump and ignition shut down	6-30
17-1 (17)	No. 2 secondary injector circuit malfunction • Loose or poor contact of the injector connector • Injector or its circuit malfunction	• Engine does not start • Injectors, fuel pump and ignition shut down	6-30
18-1 (18)	CMP sensor no signal • Loose or poor contact of the CMP sensor connector • CMP sensor or its circuit malfunction	• Engine does not start • Injectors, fuel pump and ignition shut down	6-30
19-1 (19)	CKP sensor no signal • Loose or poor contact of the CKP sensor connector • CKP sensor or its circuit malfunction	• Engine does not start • Injectors, fuel pump and ignition shut down	6-31
25-2 (25)	Knock sensor circuit malfunction • Loose or poor contact of the Knock sensor connector • Knock sensor or its circuit malfunction	• Engine operates normally	6-32
25-3 (25)	Knock sensor circuit malfunction • Knock sensor or its circuit malfunction	• Engine operates normally	6-34
29-1 (29)	IACV circuit malfunction • Loose or poor contact of the IACV connector • IACV or its circuit malfunction	• Engine stalls, hard to start, rough idling	6-34
33-2 (-)	ECM EEPROM malfunction	• Engine operates normally	6-36
34-1 (34)	ECV POT low voltage malfunction • Loose or poor contact of the EGCA connector • ECV or its circuit malfunction	• Engine operates normally	6-36

FUEL SYSTEM (PGM-FI)

DTC (MIL blinks)	Function Failure	Symptom/Fail-safe function	Refer to (DTC)
34-2 (34)	ECV POT high voltage malfunction • ECV or its circuit malfunction	• Engine operates normally	6-38
35-1 (35)	EGCA malfunction • Loose or poor contact of the EGCA connector • ECV or its circuit malfunction • EGCA lock	• Engine operates normally	6-39
48-1 (48)	No. 3 secondary injector circuit malfunction • Loose or poor contact of the injector connector • Injector its circuit malfunction	• Engine does not start • Injectors, fuel pump and ignition shut down	6-30
49-1 (49)	No. 4 secondary injector circuit malfunction • Loose or poor contact of the injector connector • Injector its circuit malfunction	• Engine does not start • Injectors, fuel pump and ignition shut down	6-30
51-1 (51)	HESD linear solenoid malfunction • Loose or poor contact of the HESD solenoid connector • HESD solenoid or its circuit	• Engine operates normally • HESD does not function	14-8
56-1 (56)	Knock sensor IC malfunction • Knock sensor or its circuit malfunction	• Engine operates normally	6-40

DTC TROUBLESHOOTING

DTC 1-1 (MAP SENSOR LOW VOLTAGE)

- Before starting the inspection, check for loose or poor contact on the MAP sensor 3P (Blue) connector and ECM 33P connectors, then recheck the DTC.

1. MAP Sensor System Inspection

Turn the ignition switch ON and engine stop switch "O".

Check the MAP sensor with the HDS.

Is about 0 V indicated?

YES - GO TO STEP 2.

NO - Intermittent failure

2. MAP Sensor Input Voltage Inspection

Turn the ignition switch OFF.

Disconnect the MAP sensor 3P (Blue) connector.

Turn the ignition switch ON and engine stop switch "O".

Measure the voltage at the wire side.


Connection: Yellow/red (+) - Gray/black (-)

Is the voltage within 4.75 - 5.25 V?

YES - GO TO STEP 4.

NO - GO TO STEP 3.

3P CONNECTOR
(Wire side/female terminals)

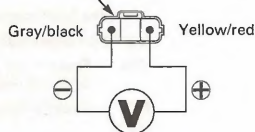

3. MAP Sensor Input Line Inspection

Turn the ignition switch OFF.

Disconnect the ECM 33P (Black) connector.

Check for continuity at the Yellow/red wire between the MAP sensor 3P (Blue) connector and ECM 33P (Black) connector.

Connection: A9 - Yellow/red

TOOL:

Test probe


07ZAJ-RDJA110

Is there continuity?

YES - Replace the ECM with a known good one, and recheck.

NO - Open circuit in Yellow/red wire

3P CONNECTOR
(Wire side/female terminals)

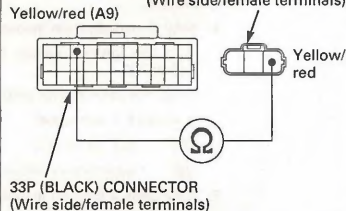

4. MAP Sensor Output Line Short Circuit Inspection


Check for continuity between the MAP sensor 3P (Blue) connector at the wire side and ground.

Connection: Light green/yellow – Ground

Is there continuity?

YES – Short circuit in Light green/yellow wire

NO – GO TO STEP 5.

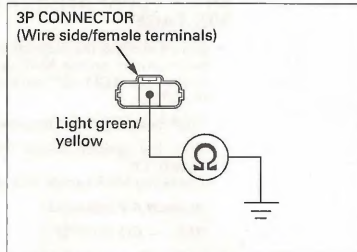

5. MAP Sensor Inspection

Replace the MAP sensor with a known good one (page 6-69).

Clear the DTC's (page 6-14).

Turn the ignition switch ON and engine stop switch "O".

Check the MAP sensor with the HDS.

Is DTC 1-1 indicated?

YES – Replace the ECM with a known good one, and recheck.

NO – Faulty original MAP sensor

DTC 1-2 (MAP SENSOR HIGH VOLTAGE)

- Before starting the inspection, check for loose or poor contact on the MAP sensor 3P (Blue) connector and ECM 33P connectors, then recheck the DTC.

1. MAP Sensor System Inspection 1

Turn the ignition switch ON and engine stop switch "O".

Check the MAP sensor with the HDS.

Is about 5 V indicated?

YES – GO TO STEP 2.

NO – Intermittent failure

2. MAP Sensor System Inspection 2

Turn the ignition switch OFF.

Disconnect the MAP sensor 3P (Blue) connector. Connect the MAP sensor 3P (Blue) connector terminals at the wire side with a jumper wire.

Connection: Light green/yellow – Gray/black


Turn the ignition switch ON and engine stop switch "O".

Check the MAP sensor with the HDS.

Is about 0 V indicated?

YES – Faulty MAP sensor

NO – GO TO STEP 3.

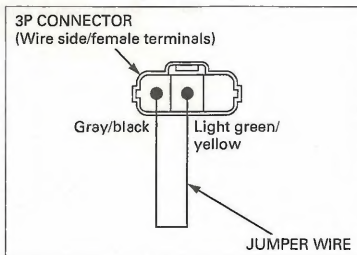

3. MAP Sensor Input Voltage Inspection

Turn the ignition switch OFF.
Remove the jumper wire.

Turn the ignition switch ON and engine stop switch "O".
Measure the voltage at the wire side.

 
Connection: Yellow/red (+) – Gray/black (-)

Is the voltage within 4.75 – 5.25 V?

YES – GO TO STEP 4.

NO – • Open circuit in Yellow/red wire
• Open circuit in Gray/black wire

3P CONNECTOR
(Wire side/female terminals)

**4. MAP Sensor Output Line Open Circuit Inspection**

Turn the ignition switch OFF.

Disconnect the ECM 33P (Gray) connector.
Check for continuity at the Light green/yellow wire between the MAP sensor 3P (Blue) connector and ECM 33P (Gray) connector.

Connection: B9 – Light green/yellow

TOOL:


Test probe 07ZAJ-RDJA110

Is there continuity?

YES – Replace the ECM with a known good one, and recheck.

NO – Open circuit in Light green/yellow wire

3P CONNECTOR
(Wire side/female terminals)

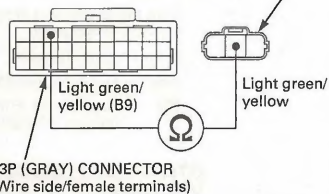**DTC 2-1 (MAP SENSOR)**

- Before starting the inspection, check for loose or poor contact on the MAP sensor 3P (Blue) connector and ECM 33P connectors, then recheck the DTC.

1. MAP Sensor System Inspection

Turn the ignition switch ON and engine stop switch "O".

Start the engine and check the MAP sensor with the HDS at idle speed.

Is the reading changed?

YES – Intermittent failure

NO – GO TO STEP 2.

2. Manifold Absolute Pressure Test


Turn the ignition switch OFF.

Check for connection and installation of the MAP sensor vacuum hose.

Is the MAP sensor vacuum hose connection correct?

YES - GO TO STEP 3.

NO - Correct the hose installation.

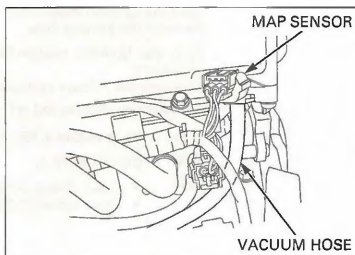

3. MAP Sensor System Inspection

Replace the MAP sensor with a known good one (page 6-69).

Turn the ignition switch ON and engine stop switch "O".

Start the engine and check the MAP sensor with the HDS at idle speed.

Is the reading changed?

YES - Faulty original MAP sensor

NO - Replace the ECM with a known good one, and recheck.

DTC 7-1 (ECT SENSOR LOW VOLTAGE)

- Before starting the inspection, check for loose or poor contact on the ECT sensor 3P (Gray) connector and ECM 33P connectors, then recheck the DTC.

1. ECT Sensor System Inspection

Turn the ignition switch ON and engine stop switch "O".

Check the ECT sensor with the HDS.

Is about 0 V indicated?

YES - GO TO STEP 2.

NO - Intermittent failure

2. ECT Sensor Inspection

Turn the ignition switch OFF.

Disconnect the ECT sensor 3P (Gray) connector.

Turn the ignition switch ON and engine stop switch "O".

Check the ECT sensor with the HDS.

Is about 0 V indicated?

YES - GO TO STEP 4.

NO - GO TO STEP 3.

3. ECT Sensor Resistance Inspection

Measure the resistance at the ECT sensor terminals.

Connection: Blue/yellow – Gray/black

 
Standard: 2.3 – 2.6 k Ω (20°C/68°F)
(Sensor side terminals)

Is the resistance within 2.3 – 2.6 k Ω ?

YES – Replace the ECM with a known good one, and recheck.

NO – Faulty ECT sensor

3P CONNECTOR
(Sensor side/male terminals)

**4. ECT Sensor Output Line Short Circuit Inspection**

Turn the ignition switch OFF.

Check for continuity between the ECT sensor 3P (Gray) connector at the wire end and ground.

Connection: Blue/yellow – Ground

 
Is there continuity?

YES – Short circuit in Blue/yellow wire

NO – Replace the ECM with a known good one, and recheck.

3P CONNECTOR
(Wire side/female terminals)

Blue/yellow

**DTC 7-2 (ECT SENSOR HIGH VOLTAGE)**

- Before starting the inspection, check for loose or poor contact on the ECT sensor 3P (Gray) connector and ECM 33P connectors, then recheck the DTC.

1. ECT Sensor System Inspection

Turn the ignition switch ON and engine stop switch "O".

Check the ECT sensor with the HDS.

Is about 5 V indicated?

YES – GO TO STEP 2.

NO – Intermittent failure

2. ECT Sensor Inspection

Turn the ignition switch OFF.

Disconnect the ECT sensor 3P (Gray) connector. Connect the ECT sensor 3P (Gray) connector terminals with a jumper wire.

Connection: Blue/yellow – Gray/black

Turn the ignition switch ON and engine stop switch "O".

Check the ECT sensor with the HDS.

Is about 0 V indicated?

YES – Inspect the ECT sensor (page 20-13).


NO – GO TO STEP 3.

Blue/yellow

Gray/black

3P CONNECTOR
(Wire side/female terminals)

JUMPER WIRE

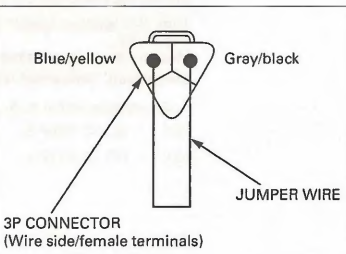

3. ECT Sensor Output Line Inspection

Turn the ignition switch OFF.
Remove the jumper wire.

Disconnect the ECM 33P connectors.
Check for continuity at the Blue/yellow and Gray/black wires between the ECT sensor 3P (Gray) connector and ECM 33P connectors.

Connection: B13 – Blue/yellow
A18 – Gray/black


TOOL:

Test probe 07ZAJ-RDJA110

Is there continuity?

YES – Replace the ECM with a known good one, and recheck.

NO – • Open circuit in Blue/yellow wire
• Open circuit in Gray/black wire

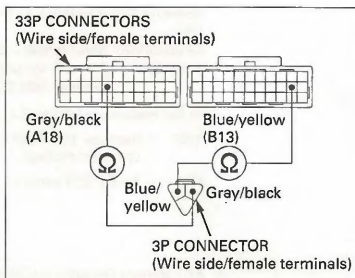

DTC 8-1 (TP SENSOR LOW VOLTAGE)

- Before starting the inspection, check for loose or poor contact on the TP sensor 3P (Blue) connector and ECM 33P connectors, then recheck the DTC.

1. TP Sensor System Inspection

Turn the ignition switch ON and engine stop switch "O".

Check the TP sensor with the HDS when the throttle is fully closed.

Is about 0 V indicated?

YES – GO TO STEP 3.

NO – GO TO STEP 2.

2. TP Sensor Inspection

Check that the TP sensor voltage increases continuously when moving the throttle from fully closed to fully opened using the data list menu of the HDS.

Does the voltage increase continuously?

YES – Intermittent failure

NO – Faulty TP sensor

3. TP Sensor Input Voltage Inspection

Turn the ignition switch OFF.

Disconnect the TP sensor 3P (Blue) connector.

Turn the Ignition switch ON and engine stop switch "O".


Measure the voltage at the wire side.

Connection: Yellow/red (+) – Gray/black (–)

Is the voltage within 4.75 – 5.25 V?

YES – GO TO STEP 5.

NO – GO TO STEP 4.

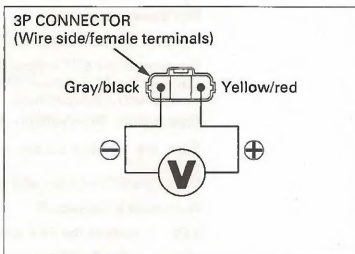

4. TP Sensor Circuit Inspection

Turn the ignition switch OFF.
Disconnect the ECM 33P (Black) connector.
Check for continuity at the Yellow/red wire between the TP sensor 3P (Blue) connector and ECM 33P (Black) connector.

Connection: A9 – Yellow/red

TOOL:


Test probe

07ZAJ-RDJA110

Is there continuity?

YES – Replace the ECM with a known good one, and recheck.

NO – Open circuit in Yellow/red wire

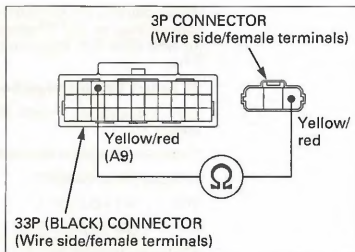**5. TP Sensor Output Line Open Circuit Inspection**

Turn the ignition switch OFF.
Disconnect the ECM 33P (Gray) connector.
Check for continuity at the Blue/yellow wire between the TP sensor 3P (Blue) connector and ECM 33P (Gray) connector.

Connection: B31 – Blue/yellow

TOOL:


Test probe

07ZAJ-RDJA110

Is there continuity?

YES – GO TO STEP 6.

NO – Open circuit in Blue/yellow wire

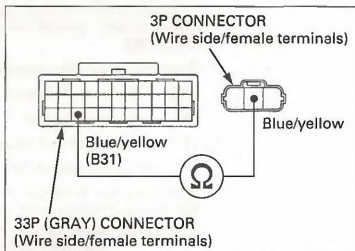**6. TP Sensor Output Line Short Circuit Inspection**


Disconnect the TP sensor 3P (Blue) connector.
Connect the ECM 33P (Gray) connector.
Check for continuity between the TP sensor 3P (Blue) connector of the wire side and ground.

Connection: Blue/yellow – Ground

Is there continuity?

YES – Short circuit in Blue/yellow wire

NO – GO TO STEP 7.

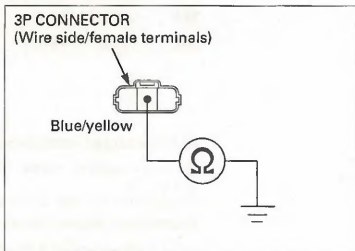**7. TP Sensor Inspection**

Replace the throttle body (page 6-58).
Clear the DTC's (page 6-14).

Turn the ignition switch ON and engine stop switch "C".

Check the TP sensor with the HDS.

Is DTC 8-1 indicated?

YES – Replace the ECM with a known good one, and recheck.

NO – Faulty original TP sensor

DTC 8-2 (TP SENSOR HIGH VOLTAGE)

- Before starting the inspection, check for loose or poor contact on the TP sensor 3P (Blue) connector and ECM 33P connectors, then recheck the DTC.

1. TP Sensor System Inspection

Turn the ignition switch ON and engine stop switch "O".

Check the TP sensor with the HDS.

Is about 5 V Indicated?

YES – GO TO STEP 3.

NO – GO TO STEP 2.

2. TP Sensor Inspection

Check that the TP sensor voltage increases continuously when moving the throttle from fully closed to fully opened using the data list menu of the HDS.

Does the voltage increase continuously?

YES – Intermittent failure

NO – Faulty TP sensor

3. TP Sensor Resistance Inspection

Turn the ignition switch OFF.


Disconnect the TP sensor 3P (Blue) connector. Measure the resistance at the TP sensor side.

Connection: Blue/yellow – Gray/black
(Sensor side terminals)

Is the resistance within 0.5 – 1.5 k Ω ?

YES – GO TO STEP 4.

NO – Faulty TP sensor

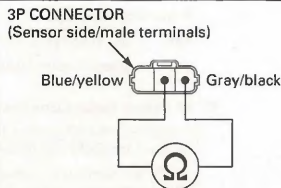

4. TP Sensor Input Voltage Inspection

Turn the ignition switch ON and engine stop switch "O".


Measure the voltage at the wire side.

Connection: Yellow/red (+) – Gray/black (-)

Is the voltage within 4.75 – 5.25 V?

YES – Replace the ECM with a known good one, and recheck.

NO – Open circuit in Gray/black wire

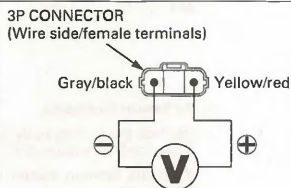

DTC 9-1 (IAT SENSOR LOW VOLTAGE)

- Before starting the inspection, check for loose or poor contact on the IAT sensor 2P (Gray) connector and ECM 33P connectors, then recheck the DTC.

1. IAT Sensor System Inspection

Turn the ignition switch ON and engine stop switch "O".

Check the IAT sensor with the HDS.

Is about 0 V indicated?

YES – GO TO STEP 2.

NO – Intermittent failure

2. IAT Sensor Inspection

Turn the ignition switch OFF.

Disconnect the IAT sensor 2P (Gray) connector.

Turn the ignition switch ON and engine stop switch "O".

Check the IAT sensor with the HDS.

Is about 0 V indicated?

YES – GO TO STEP 3.

NO – Faulty IAT sensor

3. IAT Sensor Output Line Short Circuit Inspection

Turn the ignition switch OFF.


Check for continuity between the IAT sensor 2P (Gray) connector at the wire side and ground.

Connection: Gray/blue – Ground

Is there continuity?

YES – Short circuit in Gray/blue wire

NO – Replace the ECM with a known good one, and recheck.

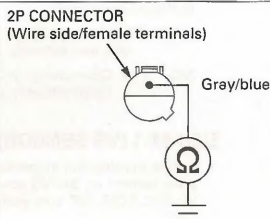**DTC 9-2 (IAT SENSOR HIGH VOLTAGE)**

- Before starting the inspection, check for loose or poor contact on the IAT sensor 2P (Gray) connector and ECM 33P connectors, then recheck the DTC.

1. IAT Sensor System Inspection

Turn the ignition switch ON and engine stop switch "O".

Check the IAT sensor with the HDS.

Is about 5 V indicated?

YES – GO TO STEP 2.

NO – Intermittent failure

2. IAT Sensor Inspection

Turn the ignition switch OFF.

Disconnect the IAT sensor 2P (Gray) connector.
Connect the IAT sensor 2P (Gray) connector terminals with a jumper wire.

Connection: Gray/blue – Gray/black


Turn the ignition switch ON and engine stop switch "O".

Check the IAT sensor with the HDS.

Is about 0 V indicated?

YES – Faulty IAT sensor

NO – GO TO STEP 3.

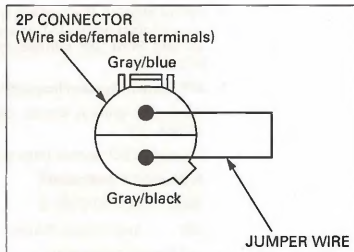

3. IAT Sensor Line Inspection

Turn the ignition switch OFF.

Disconnect the ECM 33P connectors.

Check for continuity at the Gray/blue and Gray/black wire between the IAT sensor 2P (Gray) connector and ECM 33P connectors.

Connection: B29 – Gray/blue
A18 – Gray/black


TOOL:

Test probe 07ZAJ-RDJA110

Is there continuity?

YES – Replace the ECM with a known good one, and recheck.

NO – • Open circuit in Gray/blue wire
• Open circuit in Gray/black wire

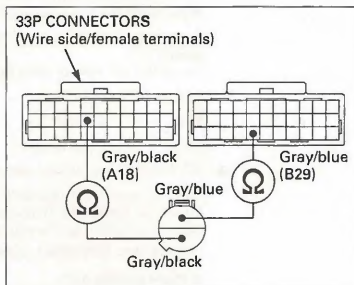

DTC 11-1 (VS SENSOR)

- Before starting the inspection, check for loose or poor contact on the VS sensor 3P (Blue) connector and ECM 33P connectors, then recheck the DTC.

1. VS Sensor System Inspection

Clear the DTC's (page 6-14).

Test ride the motorcycle.

Stop the engine.

Turn the ignition switch ON and engine stop switch "O".

Check the VS sensor with the HDS.

Is DTC 11-1 indicated?

YES – GO TO STEP 2.

NO – Intermittent failure

2. Combination Meter Inspection

Check for operation of speedometer.

Does the speedometer operate normally?

YES – Open or short circuit in Pink/green wire

NO – GO TO STEP 3.

3. VS Sensor Input Voltage Inspection

Turn the ignition switch OFF.

Disconnect the VS sensor 3P (Blue) connector.

Turn the ignition switch ON and engine stop switch "O".

Measure the voltage at the wire harness side.


Connection: Violet (+) – Green/black (–)

Is the voltage within 9.5 – 10.5 V?

YES – GO TO STEP 4.

NO – • Open circuit in Violet wire
• Open circuit in Green/black wire

3P CONNECTOR
(Wire side/female terminals)

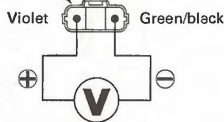**4. VS Sensor Signal Line Open Circuit Inspection**

Turn the ignition switch OFF.

Disconnect the ECM 33P (Gray) connector.

Check the continuity between the ECM 33P (Gray) connector and VS sensor 3P (Blue) connector.

Connection: B28 – Pink/green

TOOL:

Test probe


07ZAJ-RDJA110

Is there continuity?

YES – Open circuit in Pink/green wire

NO – GO TO STEP 5.

33P (GRAY) CONNECTOR
(Wire side/female terminals)

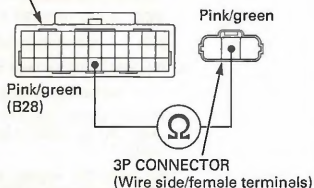**5. VS Sensor Signal Line Short Circuit Inspection**

Turn the ignition switch OFF.

Connect the ECM 33P (Gray) connector.

Check for continuity between the VS sensor 3P (Blue) connector at the wire side and ground.


Connection: Pink/green – Ground

Is there continuity?

YES – Short circuit in Pink/green wire

NO – Inspect VS sensor (page 20-11).

3P CONNECTOR
(Wire side/female terminals)

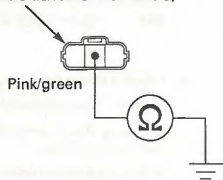

DTC 12-1 (No.1 PRIMARY INJECTOR)

- Before starting the inspection, check for loose or poor contact on the injector 2P (Gray) connectors and ECM 33P connectors, then recheck the DTC.

DTC	INJECTOR	POWER INPUT LINE	SIGNAL LINE	SIGNAL AT ECM
12-1	No.1 Primary	Black/white	Pink/yellow	A17
13-1	No.2 Primary	Black/white	Pink/blue	A6
14-1	No.3 Primary	Black/white	Pink/green	A8
15-1	No.4 Primary	Black/white	Pink/black	A7
16-1	No.1 Secondary	Black/white	Yellow	A13
17-1	No.2 Secondary	Black/white	Yellow/blue	A15
48-1	No.3 Secondary	Black/white	Yellow/green	A26
49-1	No.4 Secondary	Black/white	Yellow/black	A14

1. Injector System Inspection

Clear the DTC's (page 6-14).

Start the engine and check the injector with the HDS.

Is DTC 12-1 indicated?

YES – GO TO STEP 2.

NO – Intermittent failure

2. Injector Input Voltage Inspection

Turn the ignition switch OFF.

Disconnect the injector 2P (Gray) connector.
Turn the ignition switch ON and engine stop switch "O".


Measure the voltage between the injector 2P (Gray) connector of the wire side and ground.

Connection: Black/white (+) – Ground (-)

Is there battery voltage?

YES – GO TO STEP 3.

NO – Open circuit in Black/white wire

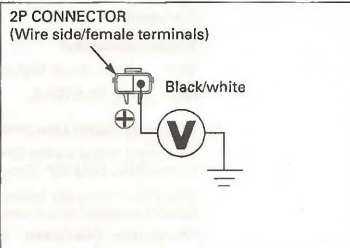
3. Injector Resistance Inspection


Turn the ignition switch OFF.

Measure the resistance of the injector 2P connector terminals.

Is the resistance within 11 – 13 Ω (20°C/68°F)?

YES – GO TO STEP 4.

NO – Faulty injector

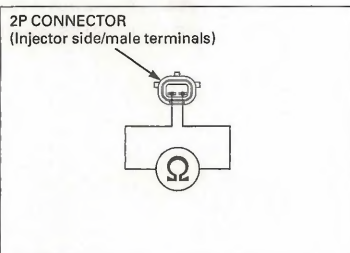

4. Injector Signal Line Open Circuit Inspection

Disconnect the ECM 33P (Black) connector.
Check for continuity between the ECM 33P (Black) connector and injector 2P (Gray) connector.

Connection: SIGNAL LINE – SIGNAL AT ECM

TOOL:

Test probe


07ZAJ-RDJA110

Is there continuity?

YES – GO TO STEP 5.

NO – Open circuit in SIGNAL LINE wire

No.1 PRIMARY SHOWN:

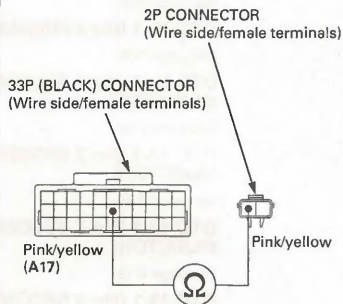**5. Injector Signal Line Short Circuit Inspection**


Connect the ECM 33P (Black) connector.
Check for continuity between the injector 2P (Gray) connector at the wire side and ground.

Connection: SIGNAL LINE – Ground

Is there continuity?

YES – • Short circuit in SIGNAL LINE wire
• Faulty injector

NO – Replace the ECM with a known good one, and recheck.

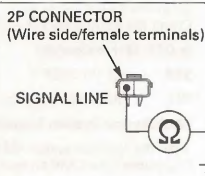

DTC 13-1 (No.2 PRIMARY INJECTOR)

See page 6-28

DTC 14-1 (No.3 PRIMARY INJECTOR)

See page 6-28

DTC 15-1 (No.4 PRIMARY INJECTOR)

See page 6-28

DTC 16-1 (No.1 SECONDARY INJECTOR)

See page 6-28

DTC 17-1 (No.2 SECONDARY INJECTOR)

See page 6-28

DTC 48-1 (No.3 SECONDARY INJECTOR)

See page 6-28

DTC 49-1 (No.4 SECONDARY INJECTOR)

See page 6-28

DTC 18-1 (CMP SENSOR)

- Before starting the inspection, check for loose or poor contact on the CMP sensor 3P (Blue) connector and ECM 33P connectors, then recheck the DTC.

1. CMP Sensor System Inspection 1

Clear the DTC's (page 6-14).

Crank the engine for ten seconds or more.

Is DTC 18-1 indicated?

YES - GO TO STEP 2.

NO - Intermittent failure

2. CMP Sensor System Inspection 2

Turn the ignition switch OFF.

Disconnect the CMP sensor 3P (Blue) connector.

Turn the ignition switch ON and engine stop switch "O".

Measure the voltage at the wire side.


Connection: Gray (+) - Ground (-)

Is the voltage within 4.75 - 5.25 V?

YES - GO TO STEP 3.

NO - GO TO STEP 4.

3P CONNECTOR
(Wire side/female terminals)

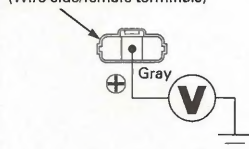

3. CMP Sensor Input Voltage Inspection

Measure the voltage at the wire side.


Connection: Yellow/red (+) – Gray/black (–)

Is the voltage within 4.75 – 5.25 V?

YES – Faulty CMP sensor

NO –

- Open circuit in Yellow/red wire
- Open circuit in Gray/black wire

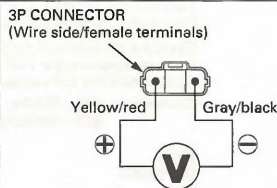

4. CMP Sensor signal line open Circuit Inspection

Turn the ignition switch OFF.

Disconnect the ECM 33P (Gray) connector.


Check for continuity at the Gray wire between the CMP sensor 3P (Blue) connector and ECM 33P (Gray) connector.

Connection: B33 – Gray

Is there continuity?

YES – Replace the ECM with a known good one, and recheck.

NO – Open circuit in Gray wire

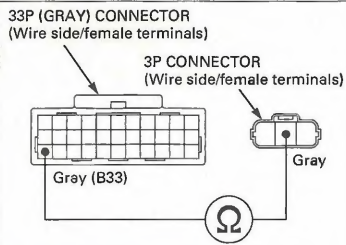

DTC 19-1 (CKP SENSOR)

- Before starting the inspection, check for loose or poor contact on the CKP sensor 2P (Red) connector and ECM 33P connectors, then recheck the DTC.

1. CKP Sensor Peak Voltage Inspection

Turn the ignition switch OFF.

Disconnect the CKP sensor 2P (Red) connector.

Turn the ignition switch ON.

Crank the engine and measure the CKP sensor peak voltage at the CKP sensor 2P (Red) connector.

Connection: Yellow (+) – White/yellow (–)
(Sensor side terminals)

TOOL:

IgnitionMate peak voltage tester

Peak voltage adaptor


MTP07-0286
(U.S.A. only) or
07HGJ-0020100
(Not available in
U.S.A.)

with commercially available digital multimeter
(impedance 10 MΩ/DCV minimum)

Is the voltage more than 0.7 V (20°C/68°F)?

YES – GO TO STEP 2.

NO – Faulty CKP sensor

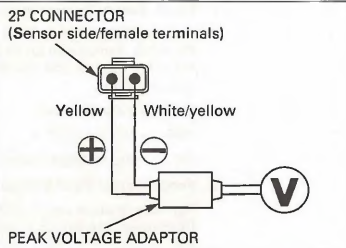

FUEL SYSTEM (PGM-FI)

2. CKP sensor Circuit Inspection

Turn the ignition switch OFF.
Disconnect the ECM 33P connectors.

Check for continuity at the Yellow and White/yellow wire between the CKP sensor 2P (Red) connector and ECM 33P connectors.

Connection: B22 – Yellow
A32 – White/yellow

TOOL:


Test probe

07ZAJ-RDJA110

Is there continuity?

YES – Short circuit in Yellow wire

NO – • Open circuit in Yellow wire
• Open circuit in White/yellow wire

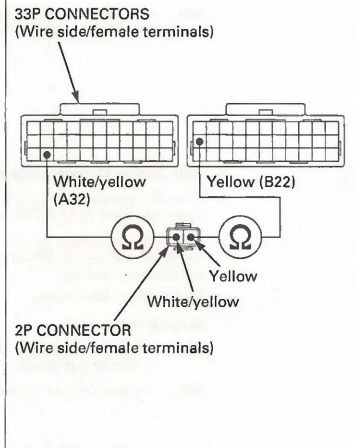

DTC 25-2 (KNOCK SENSOR NO INPUT VOLTAGE)

- Before starting the inspection, check for loose or poor contact on the Knock sensor 3P (Blue) connector and ECM 33P connectors, then recheck the DTC.

1. Knock Sensor System Inspection

Clear the DTC's (page 6-14).
Place the motorcycle on its sidestand.
Start the engine and recheck the Knock sensor with the HDS.

Is DTC 25-2 indicated?

YES – GO TO STEP 2.

NO – Intermittent failure

2. Knock Sensor Input Voltage Inspection

Turn the ignition switch OFF.
Disconnect the Knock sensor 3P (Blue) connector.


Turn the ignition switch ON and engine stop switch "O".
Measure the voltage at the wire side.

Connection: Yellow/red (+) – Ground (-)

Is the voltage within 4.75 – 5.25 V?

YES – GO TO STEP 4.

NO – GO TO STEP 3.

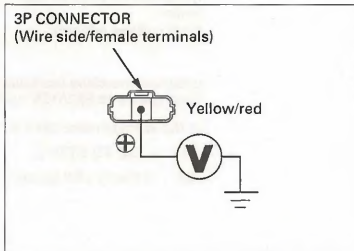

3. Knock Sensor Input Line Inspection

Turn the ignition switch OFF.
Disconnect the ECM 33P (Black) connector.

Check for continuity at the Yellow/red wire between the Knock sensor 3P (Blue) connector and ECM 33P (Black) connector.

Connection: A9 - Yellow/red

TOOL:

Test probe

07ZAJ-RDJA110

Is there continuity?

YES - Replace the ECM with a known good one, and recheck.

NO - Open circuit in Yellow/red wire

4. Open Circuit Detection Line Inspection

Turn the ignition switch OFF.

Disconnect the ECM 33P (Gray) connector.

Check for continuity between the Knock sensor 3P (Blue) connector and ECM 33P (Gray) connector.

Connection: B23 - Orange

TOOL:



Test probe

07ZAJ-RDJA110

Is there continuity?

YES - GO TO STEP 5.

NO - Open circuit in Orange wire

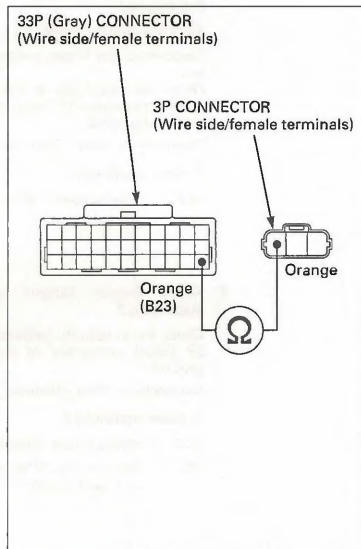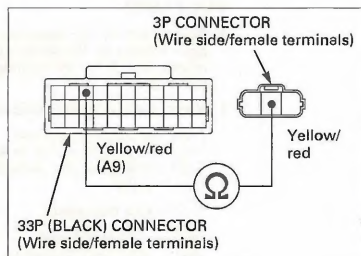

5. Knock Sensor Inspection


Check for continuity at the Knock sensor 3P (Blue) connector terminals.

Connection: Yellow/red - Blue
(Sensor side terminals)

Is there continuity?

YES - Replace the ECM with a known good one, and recheck.

NO - Faulty Knock sensor

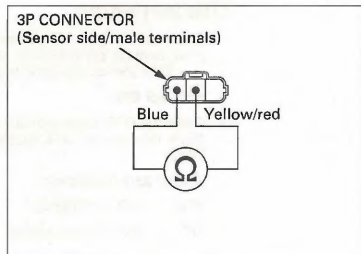

DTC 25-3 (KNOCK SENSOR LOW VOLTAGE)

- Before starting the inspection, check for loose or poor contact on the Knock sensor 3P (Blue) connector and ECM 33P connectors, then recheck the DTC.

1. Knock Sensor System Inspection

Clear the DTC's (page 6-14).

Place the motorcycle on its sidestand.

Start the engine and recheck the Knock sensor with the HDS.

Is DTC 25-3 indicated?

YES - GO TO STEP 2.

NO - Intermittent failure

2. Knock Sensor Output Line Short Circuit Inspection 1

Turn the ignition switch OFF.

Disconnect the Knock sensor 3P (Blue) connector.


Check for continuity at the Blue wire between the Knock sensor 3P (Blue) connector of the wire side and ground.

Connection: Blue - Ground

Is there continuity?

YES - Short circuit in blue wire

NO - GO TO STEP 3.

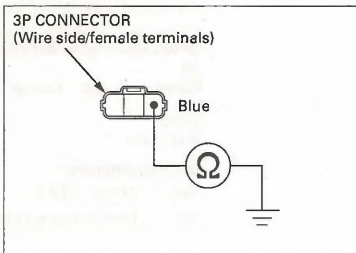**3. Knock Sensor Output Line Short Circuit Inspection 2**


Check for continuity between the Knock sensor 3P (Blue) connector of the sensor side and ground.

Connection: Blue - Ground

Is there continuity?

YES - Faulty Knock sensor

NO - Replace the ECM with a known good one, and recheck.

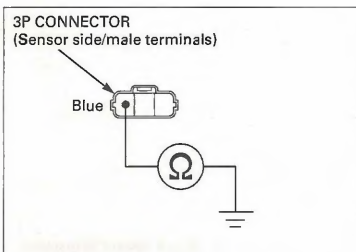**DTC 29-1 (IACV)**

- Before starting the inspection, check for loose or poor contact on the IACV 4P (Black) connector and ECM 33P connectors, then recheck the DTC.

1. Recheck DTC

Clear the DTC's (page 6-14).

Start the engine and check the IACV with the HDS.

Is DTC 29-1 indicated?

YES - GO TO STEP 2.

NO - Intermittent failure

2. IACV Short Circuit Inspection


Turn the ignition switch OFF.
Disconnect the IACV 4P (Black) connector.
Check for continuity between the IACV 4P (Black) connector at the wire side and ground.

Connection: Black/blue – Ground
Black/orange – Ground
Black/yellow – Ground
Black/red – Ground

Is there continuity?

YES – • Short circuit in Black/blue or Black/orange wire
• Short circuit in Black/yellow or Black/red wire

NO – GO TO STEP 3.

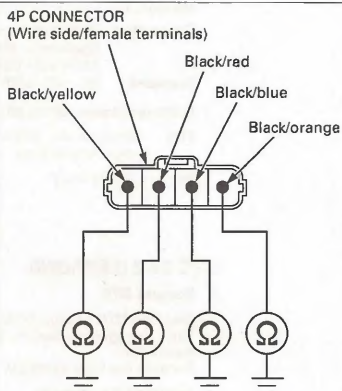

3. IACV Circuit Continuity Inspection

Disconnect the IACV 4P (Black) connector.
Check for continuity between the ECM 33P (Black) connector and IACV 4P (Black) connector.

Connection: A16 – Black/blue
A29 – Black/orange
A19 – Black/yellow
A27 – Black/red

TOOL:


Test probe

07ZAJ-RDJA110

Is there continuity?

YES – GO TO STEP 4.

NO – • Open circuit in Black/blue or Black/orange wire
• Open circuit in Black/yellow or Black/red wire

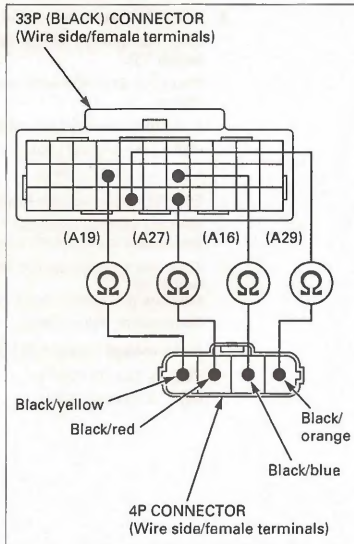

4. IACV Resistance Inspection

Measure the resistance at the IACV motor side.


Connection: Black/yellow – Black/orange
Black/red – Black/blue
(IACV side terminals)

Standard: 99 – 121 Ω (20°C/68°F)

Is the resistance within 99 – 121 Ω (20°C/68°F)?

YES – Replace the ECM with a known good one, and recheck.

NO – Faulty IACV

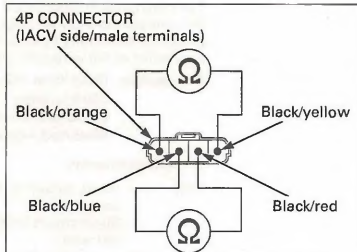

DTC 33-2 (EEPROM)

1. Recheck DTC

Clear the DTC's (page 6-14).

Turn the ignition switch ON and engine stop switch "O".

Recheck the ECM EEPROM.

Is DTC 33-2 indicated?

YES – Replace the ECM with a known good one, and recheck.

NO – Intermittent failure

DTC 34-1 (ECV POT LOW VOLTAGE)

- Before starting the inspection, check for loose or poor contact on the EGCA 6P (Black) connector and ECM 33P connectors, then recheck the DTC.

1. ECV POT System Inspection

Turn the ignition switch ON and engine stop switch "O".

Check the ECV POT with the HDS provided ECV closed.

Is the indicated voltage within 0.6 – 2.2 V?

YES – Intermittent failure

NO – GO TO STEP 2.

2. ECV POT Input Voltage Inspection

Turn the ignition switch OFF.

Disconnect the EGCA 6P (Black) connector.

Turn the ignition switch ON and engine stop switch "O".


Measure the voltage at the wire side.

Connection: Yellow/red (+) – Gray/black (–)

Is the voltage within 4.75 – 5.25 V?

YES – GO TO STEP 4.

NO – GO TO STEP 3.

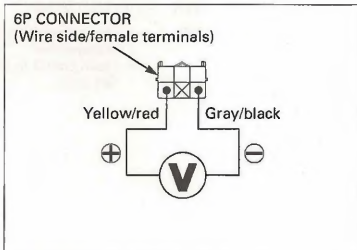

3. ECV POT Circuit Inspection

Turn the ignition switch OFF.

Disconnect the ECM 33P (Black) connector.
Check for continuity between the EGCA 6P (Black) connector and ECM 33P (Black) connector.

Connection: A9 – Yellow/red

TOOL:

Test probe 07ZAJ-RDJA110

Is there continuity?

YES – Replace the ECM with a known good one, and recheck.

NO – Open circuit in Yellow/red wire

4. ECV POT Output Line Open Circuit Inspection

Turn the ignition switch OFF.

Disconnect the ECM 33P (Gray) connector.
Check for continuity at the Light green/black wire between the EGCA 6P (Black) connector and ECM 33P (Gray) connector.

Connection: B18 – Light green/black

TOOL:

Test probe 07ZAJ-RDJA110

Is there continuity?

YES – GO TO STEP 5.

NO – Open circuit in Light green/black wire

5. ECV POT Output Line Short Circuit Inspection

Connect the ECM 33P connectors.

Check for continuity between the EGCA 6P (Black) connector at the wire side and ground.
Connection: Light green/black – Ground

Is there continuity?

YES – Short circuit in Light green/black wire

NO – GO TO STEP 6.

6. ECV POT Inspection

Replace the EGCA with a known good one.

Clear the DTC's (page 6-14).




Turn the ignition switch ON and engine stop switch "C".

Check the ECV POT with the HDS.

Is DTC 34-1 indicated?

YES – Replace the ECM with a known good one, and recheck.

NO – Faulty original EGCA

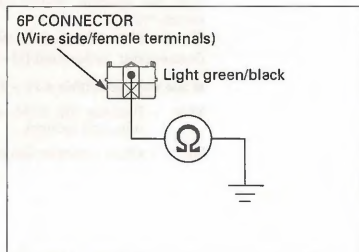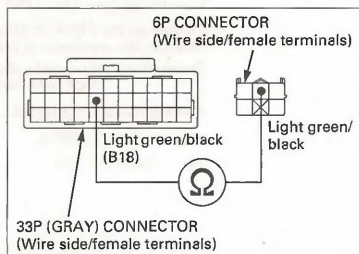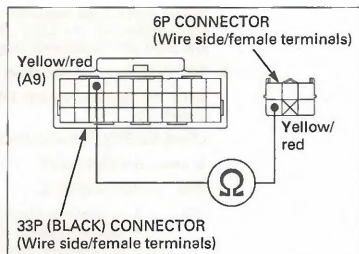

DTC 34-2 (ECV POT HIGH VOLTAGE)

- Before starting the inspection, check for loose or poor contact on the EGCA 6P (Black) connector and ECM 33P connectors, then recheck the DTC.

1. ECV POT System Inspection

Turn the ignition switch ON and engine stop switch "O".

Check the ECV POT with the HDS.

Is about 5 V indicated?

YES - GO TO STEP 2.

- NO
- Intermittent failure
 - Loose or poor contact on the EGCA 6P (Natural) connector

2. ECV POT Resistance Inspection

Turn the ignition switch OFF.

Disconnect the EGCA 6P (Black) connector. Measure the resistance at the ECV POT side.


Connection: Yellow/red - Gray/black (EGCA side terminals)

Is the resistance within 3.5 - 6.5 k Ω (20°C/68°F)?

YES - GO TO STEP 3.

NO - Faulty EGCA

6P CONNECTOR
(EGCA side/male terminals)

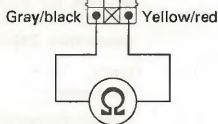

3. ECV POT Input Voltage Inspection

Turn the ignition switch ON and engine stop switch "O".

Measure the voltage at the wire side.

 
Connection: Yellow/red (+) - Gray/black (-)

Is the voltage within 4.75 - 4.25 V?

YES - Replace the ECM with a known good one, and recheck.

NO - Open circuit in Gray/black wire

6P CONNECTOR
(Wire side/female terminals)



DTC 35-1 (EGCA LOCK)

- Before starting the inspection, check for loose or poor contact on the EGCA 6P (Black) connector and ECM 33P connectors, then recheck the MIL blinking.

1. EGCA Operating Inspection

Disconnect the EGCA cable from the EGCA pulley (page 6-79).

Turn the ignition switch ON.

Check the EGCA pulley rotation when shorting the DLC with the SCS connector (page 4-23).

Does the EGCA pulley operate correctly?

- YES** – • Check the EGCA cable binding, sticking or lock.
• Check the ECV at muffler side.

NO – GO TO STEP 2.

2. EGCA Inspection

Turn the ignition switch OFF.

Remove the EGCA (page 6-79).


Connect a 12 V battery to the EGCA 6P (Black) connector terminals and check the EGCA function.

Connection: Red (+) – Blue (–)
(EGCA side terminals)

Does the EGCA operate normally?

YES – GO TO STEP 3.

NO – Faulty EGCA

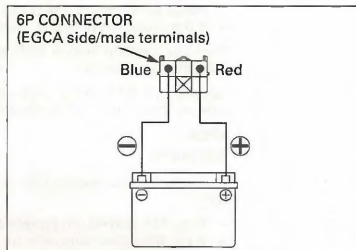**3. ECM Output Line Inspection**

Disconnect the ECM 33P (Black) connector.

Check for continuity at the Red and Blue wires between the EGCA 6P (Black) connector and ECM 33P (Black) connector.

Connection: Red – A10
Blue – A11

TOOL:


Test probe

07ZAJ-RDJA110

Is there continuity?

YES – Replace the ECM with a known good one, and recheck.

- NO** – • Open circuit in Red wire
• Open circuit in Blue wire

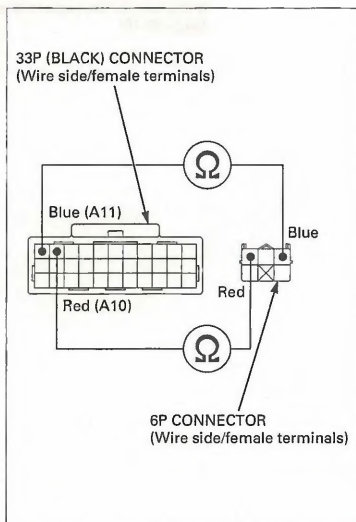

DTC 56-1 (KNOCK SENSOR IC)**1. Knock Sensor System Inspection**

Clear the DTC's (page 6-14).

Place the motorcycle on its sidestand.

Start the engine and recheck the Knock sensor with the HDS.

Is DTC 56-1 indicated?

YES – Replace the ECM with a known good one, and recheck.

NO – Intermittent failure

MIL CIRCUIT TROUBLESHOOTING

If the engine can be started but the MIL does not come on when the ignition switch is ON and engine stop switch "O", check as follows:

- If they do not function, check the combination meter power input line (page 20-8).
- If they function properly, check as follows:

Turn the ignition switch OFF, disconnect the ECM 33P (Black) connector.

Ground the White/blue wire terminal of the wire side connector with a jumper wire.

TOOL:


Test probe

07ZAJ-RDJA110

Turn the ignition switch ON, the MIL should come on.

- If the MIL comes on, replace the ECM.
- If the MIL does not come on, check for open circuit in the White/blue wire between the combination meter and ECM.

If the wire is OK, replace the combination meter (page 20-10).

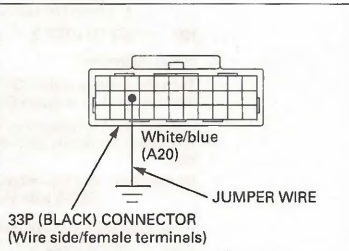


FUEL LINE INSPECTION

QUICK CONNECT FITTING LOCATION

The quick connect fittings are located as shown.

NOTE:

The quick connect fitting cover is only installed on the fuel pump side joint. The rubber caps are installed in the other quick connect fittings.

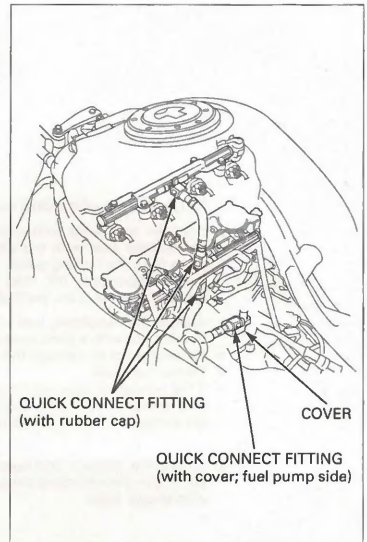

FUEL PRESSURE RELIEVING/QUICK CONNECT FITTING REMOVAL

- Before disconnecting the fuel hose, relieve pressure from the system as follows.

1. Turn the ignition switch OFF.

Lift and support the fuel tank (page 4-5).


Remove the quick connect fitting cover (fuel pump side only).

2. Disconnect the fuel pump 2P (Brown) connector.

3. Start the engine, and let it idle until the engine stalls.

4. Turn the ignition switch OFF.

5. Disconnect the battery negative (-) cable (page 17-6).

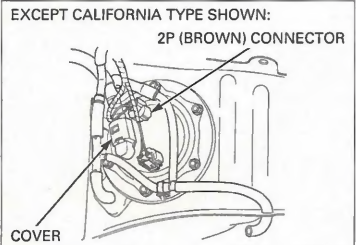


FUEL SYSTEM (PGM-FI)

6. Check the fuel quick connect fitting for dirt, and clean if necessary.

Place a shop towel over the quick connect fitting.

SECONDARY FUEL RAIL SIDE:

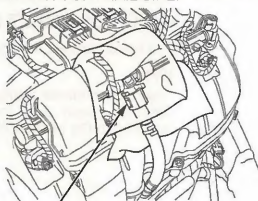

QUICK CONNECT FITTING


7. Pull and release the rubber cap from the retainer.

8. Hold the connector with one hand and squeeze the retainer tabs with the other hand to release them from the locking pawls.

Pull the connector off, then remove the rubber cap and retainer from the fuel joint.

- Absorb the remaining fuel in the fuel hose from flowing out with a shop towel.
- Be careful not to damage the hose or other parts.
- Do not use tools.
- If the connector does not move, keep the retainer tabs pressed down, and alternately pull and push the connector until it comes off easily.

RUBBER CAP RETAINER TABS

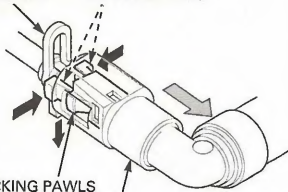


LOCKING PAWLS

CONNECTOR

9. To prevent damage and keep foreign matter out, cover the disconnected connector and fuel joint with plastic bags.

PLASTIC BAGS

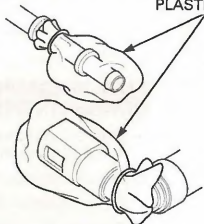


QUICK CONNECT FITTING INSTALLATION

- Always replace the retainer of the quick connect fitting when the fuel hose is disconnected.
- If the rubber cap is damaged or cut, replace it with a new one.
- Do not bend or twist the fuel hose.
- If any retainer needs replacing, use the same manufacturer's retainer as the ones being removed (The various manufactures feature different retainer specification).

1. Insert a new retainer into the connector.


- Align the retainer locking pawls with the connector grooves.

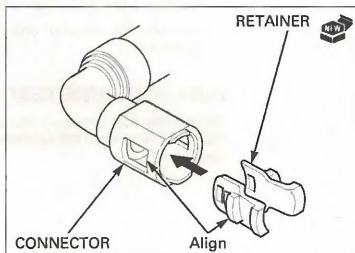

2. Install the rubber cap and seat it onto the fuel joint as shown.


Align the quick connect fitting with the fuel joint. Then press the quick connect fitting onto the pipe until both retainer pawls lock with a "click".

If it is hard to connect, put a small amount of engine oil on the pipe end.

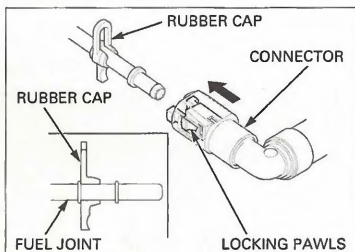

3. Make sure the connection is secure and that the pawls are firmly locked into place; check visually and by pulling the connector.

4. Make sure the rubber cap is in place (between the flange and retainer tab).

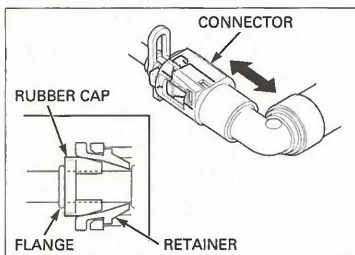

FUEL SYSTEM (PGM-FI)


5. Connect the fuel pump 2P (Brown) connector.
Install the quick connect fitting cover (fuel pump side only).
6. Connect the battery negative (-) cable to the battery (page 17-6).
7. Turn the ignition switch ON and engine stop switch "C".

The fuel pump will run for about 2 seconds, and fuel pressure will rise.
Repeat 2 or 3 times, and check that there is no leakage in the fuel supply system.

Remove the support and close the fuel tank (page 4-7).


EXCEPT CALIFORNIA TYPE SHOWN:

2P (BROWN) CONNECTOR

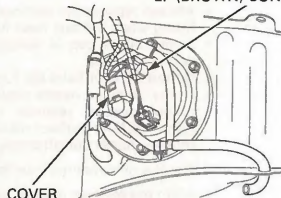

FUEL PRESSURE TEST

Relieve the fuel pressure and disconnect the quick connect fitting from the secondary fuel rail (page 6-41).

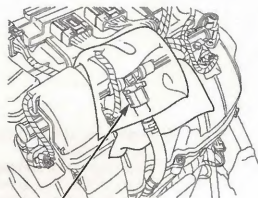

Attach the fuel pressure gauge, hoses, attachment joint and manifold.

TOOLS:

(1): Fuel pressure gauge	07406-0040004
(2): Pressure gauge manifold	07ZAJ-S5A0111
(3): Hose attachment, 9 mm/9 mm	07ZAJ-S5A0120
(4): Hose attachment, 8 mm/9 mm	07ZAJ-S7C0100
(5): Attachment joint, 8 mm/9 mm	07ZAJ-S7C0200

U.S.A. TOOLS:

Fuel pressure gauge	07406-004000B or 07406-004000A
Pressure manifold hose	07AMJ-HW3A100
Adaptor, male	07AAJ-S6MA200
Adaptor, female	07AAJ-S6MA400

Temporarily connect the battery negative (-) cable to the battery (page 17-6).
Connect the fuel pump 2P (Brown) connector.
Start the engine and let it idle.
Read the fuel pressure.

Standard: 343 kPa (3.5 kgf/cm², 50 psi)

If the fuel pressure is higher than specified, replace the fuel pump assembly (faulty fuel pump or fuel pressure regulator).

If the fuel pressure is lower than specified, inspect the following:



- Fuel line leaking
- Pinched or clogged fuel hose or fuel tank breather hose
- Fuel pump (page 6-47)
- Clogged fuel strainer screen (Assembly of the fuel pump: page 6-48)

Wrap a shop towel around the attachment to soak up any spilled fuel.

After inspection, relieve the fuel pressure by disconnecting the quick connect fitting (page 6-41).

Remove the fuel pressure gauge, hose attachments, attachment joint and manifold.

Connect the quick connect fitting (page 6-43).

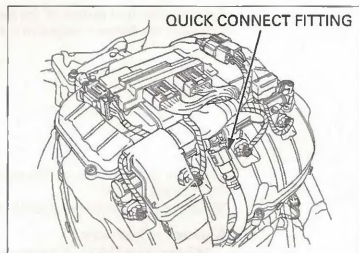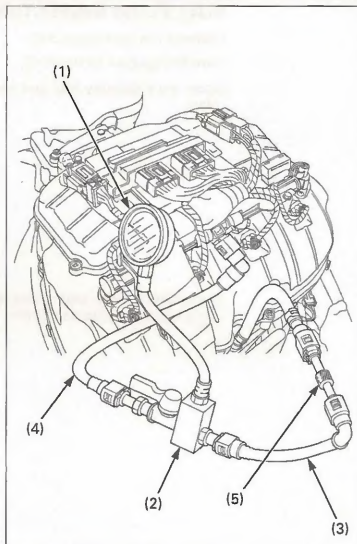


FUEL FLOW INSPECTION

Remove the seat (page 3-6).

Turn the ignition switch OFF.

Open the fuse/relay box and remove the fuel pump relay.

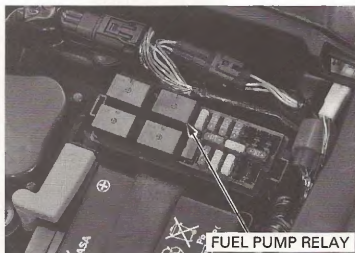

Jump the Brown and Black/white wire terminals using a jumper wire as shown.

RELAY TERMINALS




JUMPER WIRE

Disconnect the quick connect fitting from the secondary fuel rail (page 6-41).

- Place an approved gasoline container and drain the gasoline.
- Wipe off spilled gasoline.

Connect the fuel pump 2P (Brown) connector.
Connect the battery negative (-) cable (page 17-6).

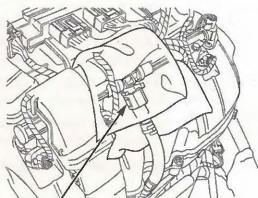

QUICK CONNECT FITTING

Turn the ignition switch ON and engine stop switch "O" for 10 seconds.

Measure the amount of fuel flow.


Amount of fuel flow:

167 cm³ (5.6 US oz, 5.9 Imp oz) minimum/10 seconds at 12 V

If the fuel flow is less than specified, inspect the following:

- Pinched or clogged fuel hose
- Fuel pump unit (page 6-47)

Connect the quick connect fitting (page 6-43).

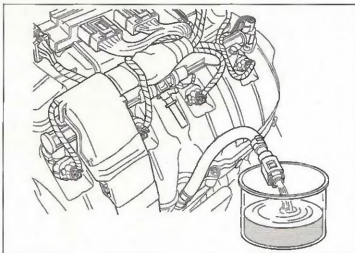

FUEL PUMP UNIT

INSPECTION

Turn the ignition switch ON and engine stop switch "O" then confirm that the fuel pump operates for a few seconds.

If the fuel pump does not operate, inspect as follows:

Turn the ignition switch OFF.

Lift and support the fuel tank (page 4-5).

Disconnect the fuel pump unit 2P (Brown) connector.

Turn the ignition switch ON and engine stop switch "O", measure the voltage between the terminals on the wire side.

Connection: Brown (+) – Green (–)

There should be battery voltage for a few seconds.


If there is battery voltage for a few seconds, replace the fuel pump unit.

If there is no battery voltage, inspect the following:

- Main fuse (30 A)
- Sub fuse (FI 20 A)
- Sub fuse (BANK ANGLE 10 A)
- Engine stop switch (page 20-17)
- Ignition switch (page 20-16)
- Fuel pump relay (page 6-50)
- Engine stop relay (page 6-73)
- Bank angle sensor (page 6-71)
- ECM (page 6-75)


EXCEPT CALIFORNIA TYPE SHOWN:

2P (BROWN) CONNECTOR

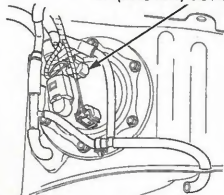

2P CONNECTOR

(Wire side/female terminals)

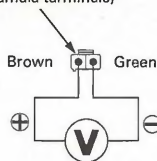


FUEL SYSTEM (PGM-FI)

REMOVAL


Remove the fuel tank (page 6-51).

Disconnect the breather and drain hoses from the fuel tank.


EXCEPT CALIFORNIA TYPE:

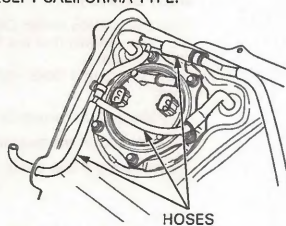

CALIFORNIA TYPE: HOSES

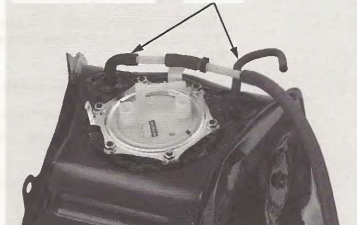


Remove the fuel pump unit mounting nuts and setting plate.

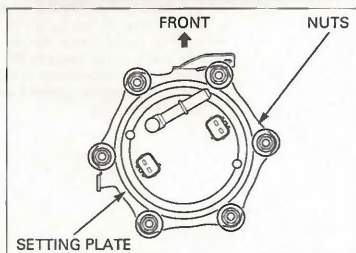

Be careful not to damage the pump wire and fuel level gauge.

Remove the fuel pump unit and packing.

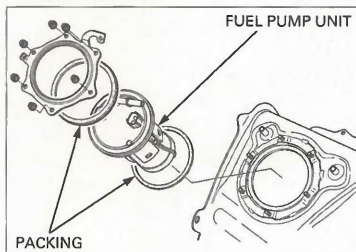

INSPECTION

Check the fuel pump unit for wear or damage, replace it if necessary.

Clean the fuel strainer screen with non-flammable or high flash point solvent.



FUEL STRAINER SCREEN


INSTALLATION

Always replace the old packing with new packing.

Place new packing onto the fuel pump unit.


Be careful not to damage the pump wire and fuel level gauge.

Install the fuel pump unit to the fuel tank.

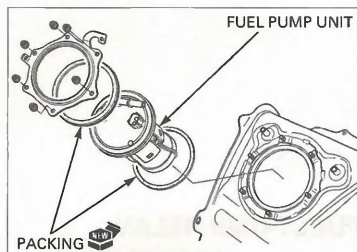

Install the setting plate and tighten the fuel pump mounting nuts to the specified torque in the specified sequence as shown.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

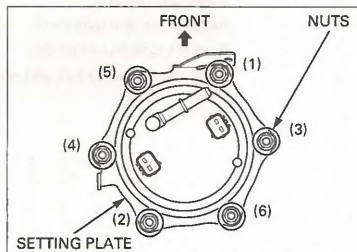


FUEL SYSTEM (PGM-FI)

Correctly route the hoses (page 1-20).


Connect the breather and drain hoses to the fuel tank securely.

Install the fuel tank (page 6-51).

EXCEPT CALIFORNIA TYPE:

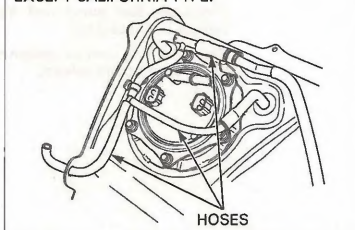

CALIFORNIA TYPE: HOSES

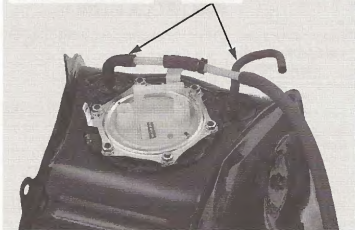


FUEL PUMP RELAY

INSPECTION

Remove the seat (page 3-6).

Turn the ignition switch OFF.

Open the fuse/relay box and remove the fuel pump relay.

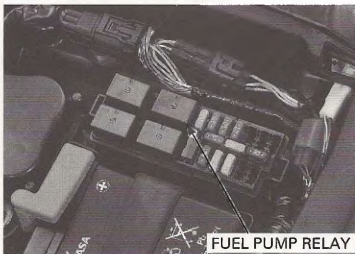


Connect an ohmmeter to the fuel pump relay terminals.

Connect a 12 V battery to the following fuel pump relay terminals.

There should be continuity only when the 12 V battery is connected. If there is no continuity when the 12 V battery is connected, replace the fuel pump relay.

FUEL PUMP RELAY

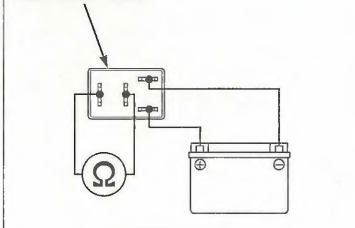


FUEL TANK

REMOVAL

Relieve the fuel pressure (page 6-41) and disconnect the quick connect fitting from the fuel tank.


Disconnect the fuel reserve sensor 2P (Black) connector.

EXCEPT CALIFORNIA TYPE SHOWN:
QUICK CONNECT FITTING

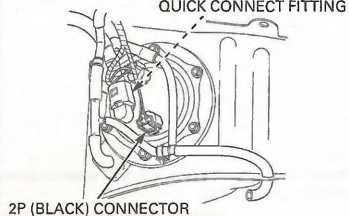


Remove the support, fuel tank pivot bolts, collars and fuel tank.

For fuel pump unit removal (page 6-48).

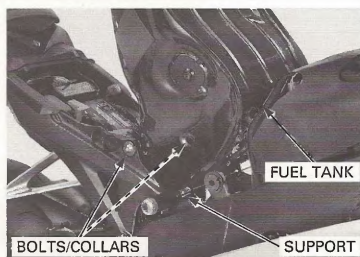


INSTALLATION

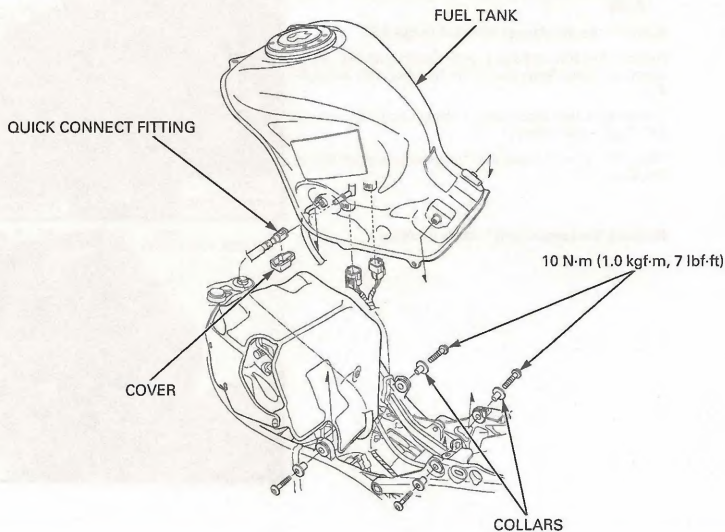

FUEL SYSTEM (PGM-FI)

Install the fuel tank, collars, support and pivot bolts into the frame and tighten the bolts to the specified torque.

TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)

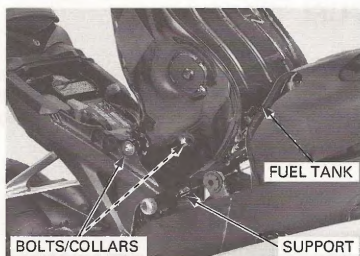


Correctly route the hoses (page 1-20).

Connect the fuel reserve sensor 2P (Black) connector.

Connect the quick connect fitting (page 6-43).

EXCEPT CALIFORNIA TYPE SHOWN:

QUICK CONNECT FITTING

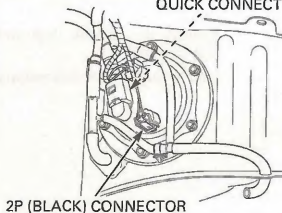

AIR CLEANER HOUSING

REMOVAL


- For MAP sensor removal/installation (page 6-69)
- For secondary injector removal/installation (page 6-55)

Remove the air cleaner element (page 4-9).


Relieve the fuel pressure and disconnect the quick connect fitting from the secondary fuel rail (page 6-41).

Disconnect the secondary injector and IAT sensor 2P (Gray) connectors.


Move the wire harness and harness protector out of the way.

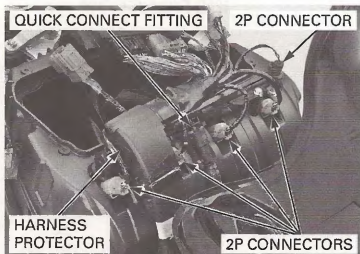

Remove the screws and middle housing.

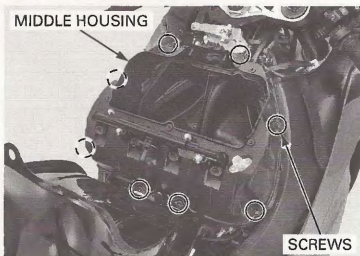

Remove the screws and air funnels.


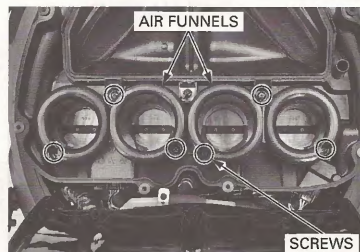


Right side: Disconnect the MAP sensor 3P (Blue) connector and vacuum hose.


Disconnect the PAIR air suction hose from the lower housing.

Front side: Disconnect the crankcase breather hose from the lower housing.

- Be careful not to allow dirt into the intake port.

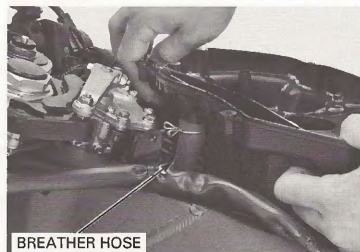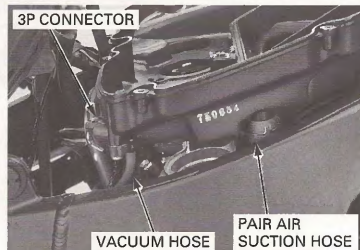

INSTALLATION

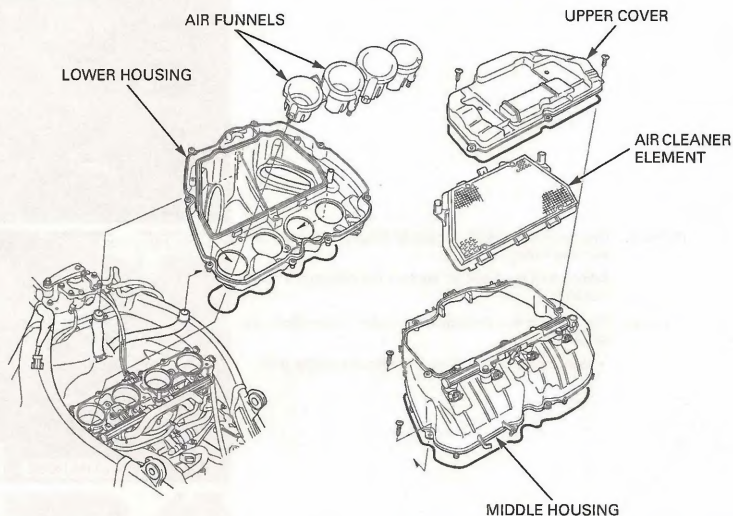



Front side: Connect the crankcase breather hose to the lower housing.

Right side: Connect the PAIR air suction hose to the lower housing.

Connect the MAP sensor 3P (Blue) connector and vacuum hose.

Install the lower housing onto the throttle body.

Be careful not to allow dirt into the intake port.

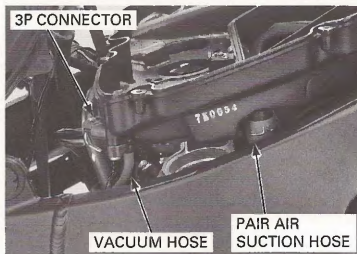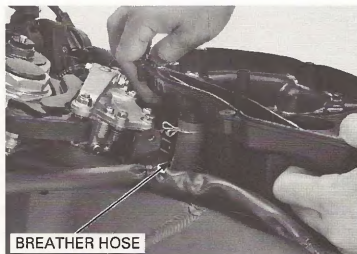

Install the air funnels onto the lower housing ensuring that the taller funnels are located on the two inner throttle bodies.

Install and tighten the air funnel/lower housing mounting screws securely.

Correctly route the wires (page 1-20).

Install the middle housing and tighten the screws to the specified torque.




TORQUE: 0.8 N·m (0.08 kgf·m, 0.6 lbf·ft)

Connect the harness protector to the middle housing and secondary injector plate.

Connect the secondary injector and IAT sensor 2P (Gray) connectors.

Connect the quick connect fitting to the secondary fuel rail (page 6-43).

Install the air cleaner element (page 4-9).

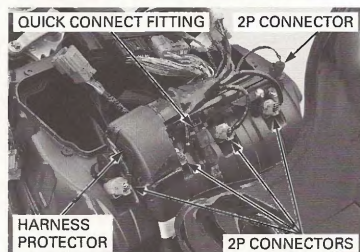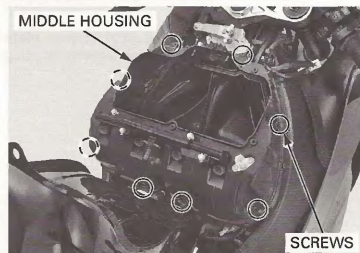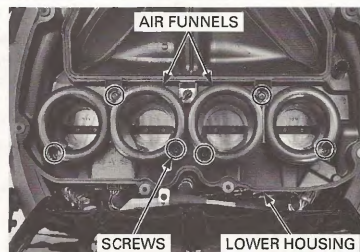

SECONDARY INJECTOR

INSPECTION

Lift and support the fuel tank (page 4-5).


Start the engine and let it idle.

Confirm the injector operating sounds with a sounding rod or stethoscope.

NOTE:

The secondary injectors operate with following conditions.

- Engine speed is over 5,000 rpm.
- Throttle opening is over 10°.

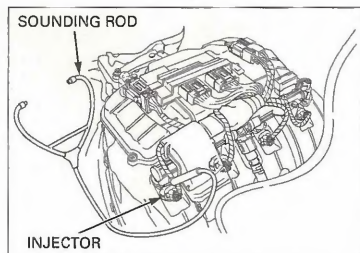

REMOVAL

Lift and support the fuel tank (page 4-5).

Relieve the fuel pressure and disconnect the quick connect fitting from the secondary fuel rail (page 6-41).

Remove the ECM setting plate (page 6-74).





Disconnect the secondary injector and IAT sensor 2P (Gray) connectors.

Move the wire harness and harness protector out of the way.

Remove the bolts, injector plate and fuel rail assembly from the air cleaner housing.

Remove the retainers and injectors from the fuel rail.

Remove the O-ring and seal ring.

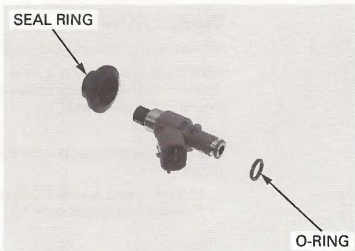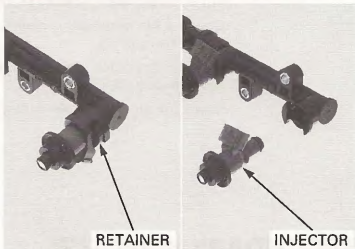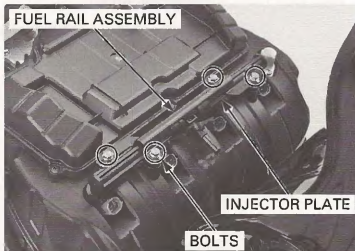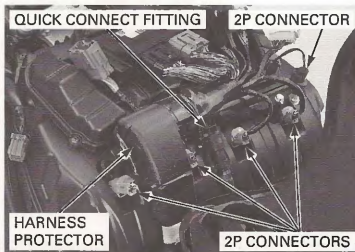


Remove the fuel rails and O-rings from the fuel rail joint.

INSTALLATION

Apply oil to new O-rings and install them to the fuel rail joint.


Install the fuel rails to the fuel rail joint.

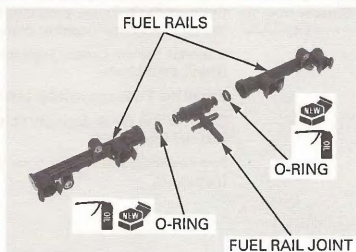

Apply oil to a new O-ring and install it to the injector, being careful not to damage the O-ring.


Install a new seal ring to the injector.

Replace the seal ring and O-ring with new ones as a set.

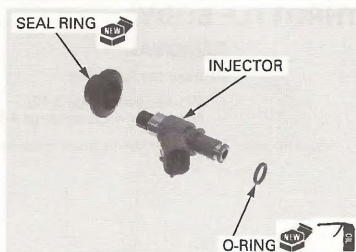


Install the injectors to the fuel rail, being careful not to damage the O-rings.

Install the retainers securely.

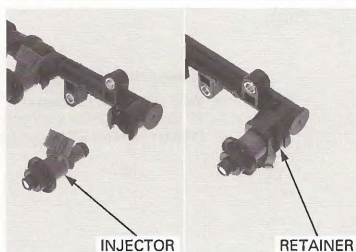

Install the fuel rail assembly, injector plate and tighten the bolts securely.

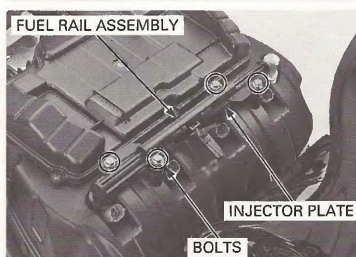

FUEL SYSTEM (PGM-FI)

Correctly route the wire (page 1-20).


Connect the harness protector to the middle housing and secondary injector plate.

Connect the secondary injector and IAT sensor 2P (Gray) connectors.

Install the ECM and setting plate (page 6-74).

Connect the quick connect fitting to the secondary fuel rail (page 6-43).

Remove the support and close the fuel tank (page 4-7).

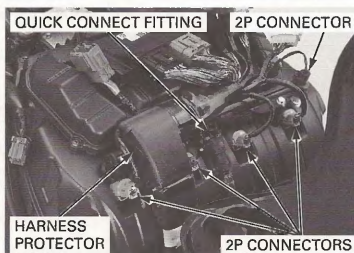


THROTTLE BODY

REMOVAL

Remove the following:


- Middle cowl (page 3-10)
- Air cleaner housing (page 6-52)

California type: Disconnect the vacuum hose from the 5-way joint.

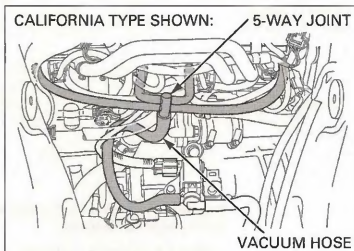

Disconnect the following:


- IACV 4P (Black) connector
- TP sensor 3P (Blue) connector
- Primary injector 2P (Gray) connectors

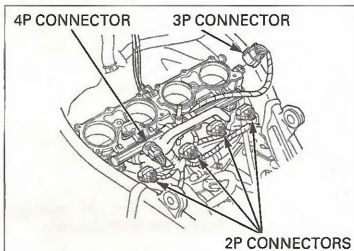

Loosen the insulator band screws using a long type phillips screwdriver.

Remove the throttle body from the cylinder head.

Do not hold the fuel rail on the throttle body to remove the throttle body, or it may be damaged.



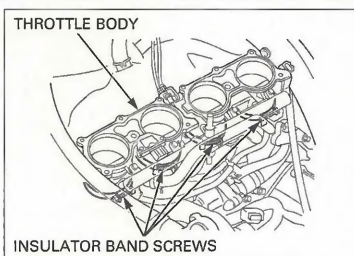



Do not snap the throttle valve from fully open to fully closed after the throttle cable has been removed. It may cause incorrect idle operation.


Loosen the lock nut, adjusting nuts and disconnect the throttle cables from the throttle drum.

- Seal the cylinder head intake ports with tape or a clean cloth to keep dirt and debris from entering the intake ports after the throttle body has been removed. If debris is allowed to enter the ports the engine may be damaged.
- The throttle body is factory pre-set. Do not disassemble in a way other than shown in this manual.
- Do not loosen or tighten the white painted bolts and screws of the throttle body. Loosening or tightening them can cause throttle valve and idle control failure.

Remove the heat guard rubber from the insulator.

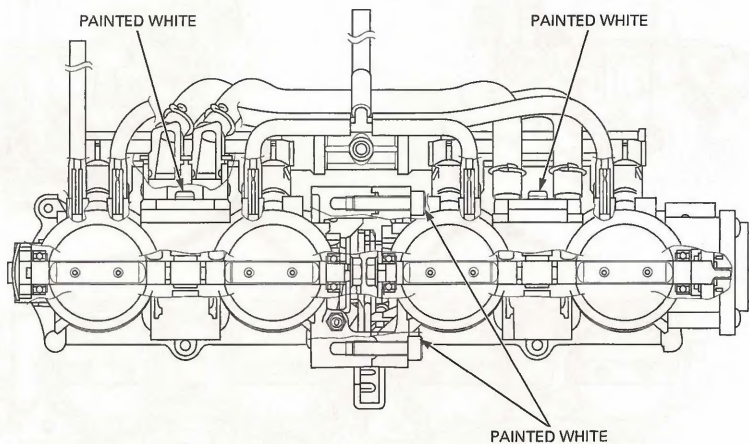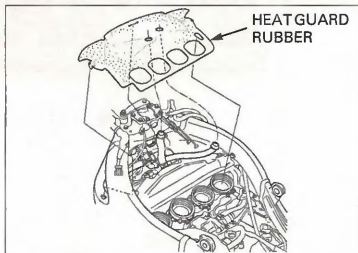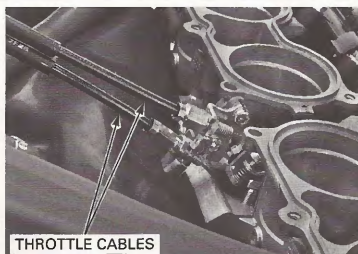


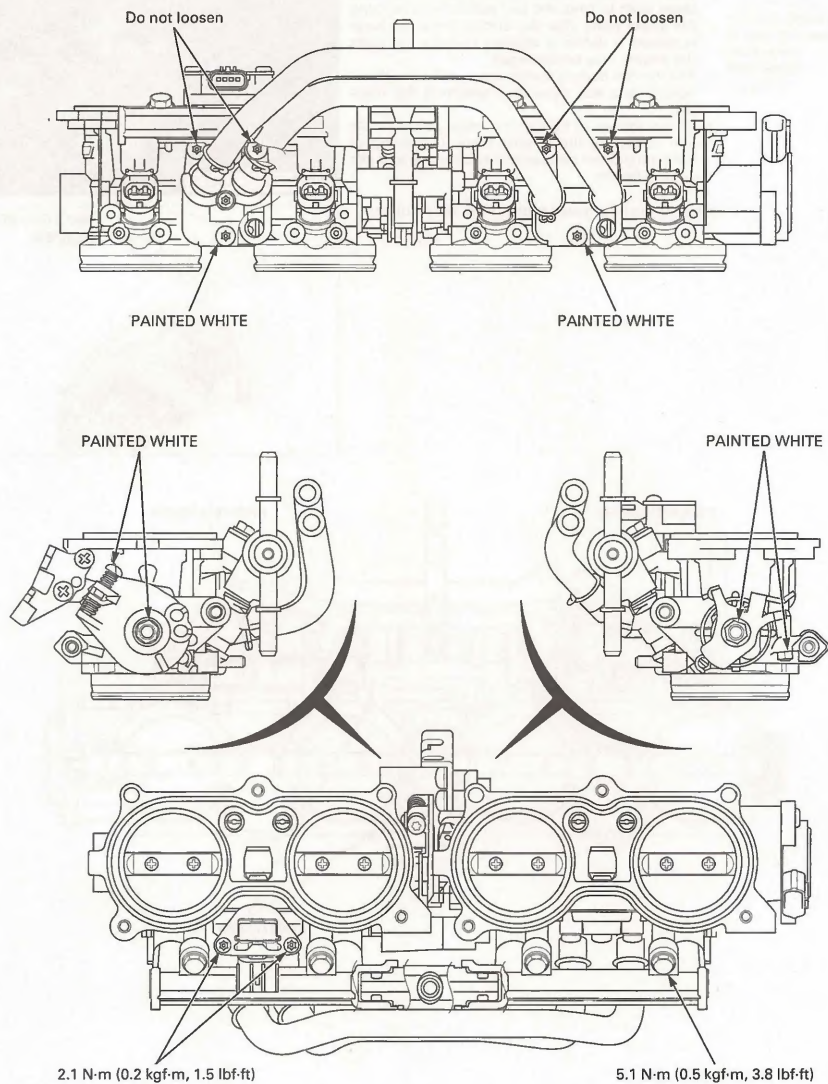

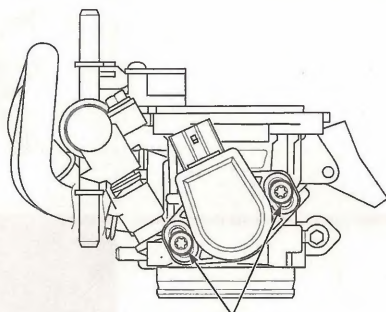


PAINTED WHITE

THROTTLE BODY VACUUM HOSE ROUTING (CALIFORNIA TYPE)

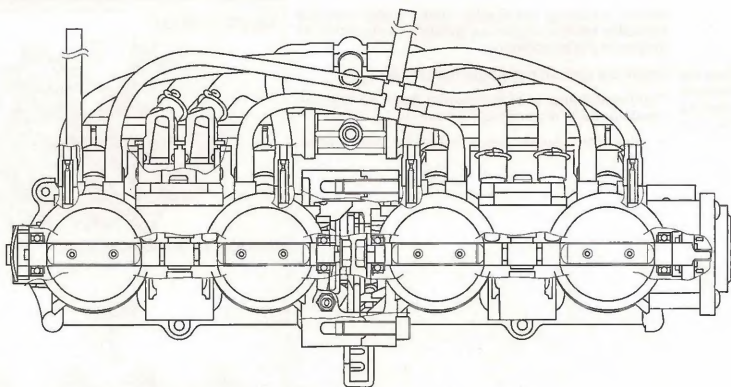


INSTALLATION

Install the heat guard rubber to the insulator securely.

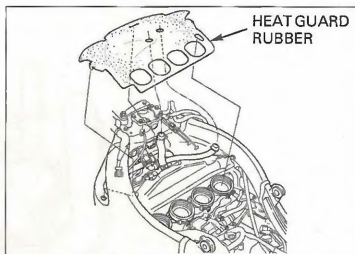

Correctly route the throttle cables (page 1-20). Connect the throttle cable ends to the throttle drum.

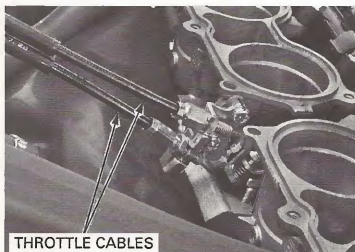

Before installing the throttle body, make sure the insulator band's screws are positioned correctly, as shown in the illustration.


Do not hold the fuel rail on the throttle body to install the throttle body.

Install the throttle body onto the cylinder head.


Tighten the engine side insulator band so that the insulator band distance is 7 ± 1 mm (0.3 ± 0.04 in).

- Align the insulator band hole with the insulator boss.

THROTTLE BODY

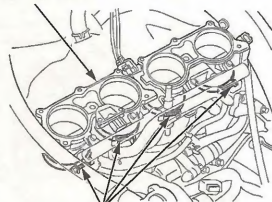


INSULATOR BAND SCREWS

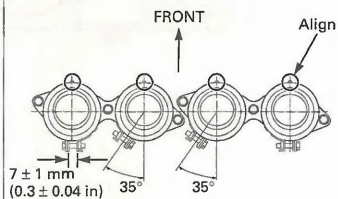

Correctly route the wires (page 1-20).

Connect the following:

- Primary injector 2P (Gray) connectors
- TP sensor 3P (Blue) connector
- IACV 4P (Black) connector

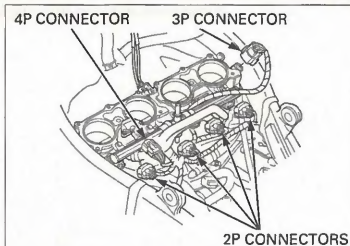


California type: Connect the vacuum hose to the 5-way joint securely.

Adjust the throttle grip freeplay (page 4-8).

Install the following:

- Air cleaner housing (page 6-54)
- Middle cowls (page 3-10)

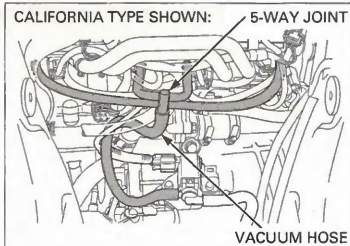


PRIMARY INJECTOR

INSPECTION

Lift and support the fuel tank (page 4-5).

Start the engine and let it idle.


Confirm the injector operating sounds with a sounding rod or stethoscope.

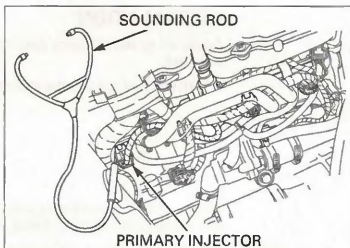

REMOVAL


Remove the throttle body (page 6-58).

Remove the bolts and fuel rail assembly.

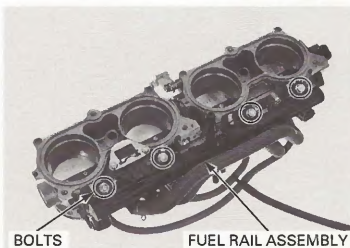


FUEL SYSTEM (PGM-FI)


Remove the injectors from the fuel rail.

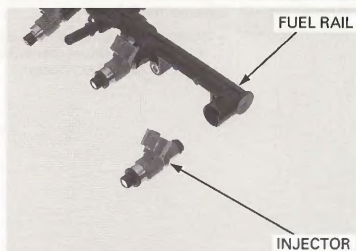

Remove the seal ring and O-ring.

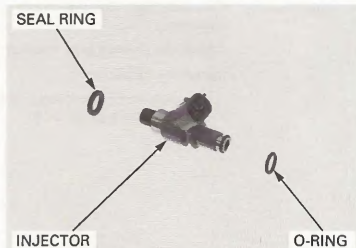


Remove the fuel rails and O-rings from the fuel rail joint.

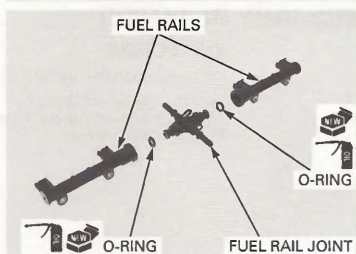

INSTALLATION

Apply oil to new O-rings and install them to the fuel rail joint.

Install the fuel rails to the fuel rail joint.

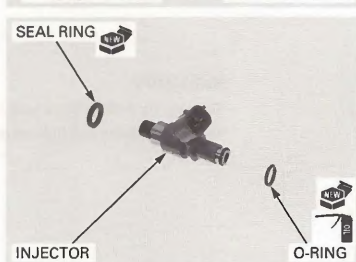


Apply oil to a new O-ring and install it to the injector, being careful not to damage the O-ring.


Install a new seal ring to the injector.

Replace the seal ring and O-ring with new ones as a set.

Install the injectors to the fuel rail, being careful not to damage the O-ring.

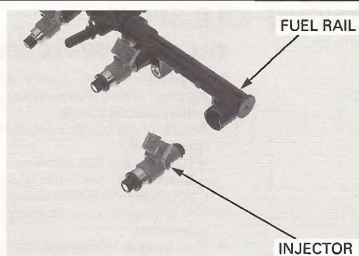


Install the fuel rail assembly onto the throttle body, being careful not to damage the seal rings.

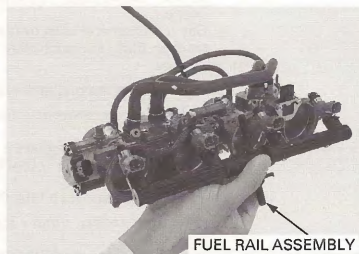

Tighten the fuel rail mounting bolts to the specified torque.

TORQUE: 5.1 N·m (0.5 kgf-m, 3.8 lbf-ft)

Install the throttle body (page 6-62).

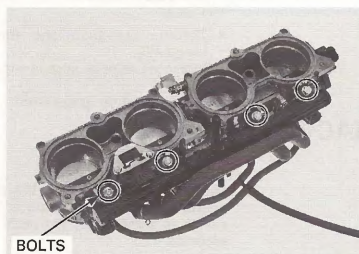

ENGINE IDLE SPEED**IDLE SPEED INSPECTION**

- Inspect the idle speed after all other engine maintenance items have been performed and are within specifications.
- Before checking the idle speed, inspect the following items.
 - No DTC and MIL blinking
 - Spark plug condition (page 4-10)
 - Air cleaner condition (page 4-9)
- The engine must be warm for accurate idle speed inspection.
- This system eliminates the need for manual idle speed adjustment compared to previous designs.
- Use a tachometer with graduations of 50 rpm or smaller that will accurately indicate a 50 rpm change.

Lift and support the fuel tank (page 4-5).

Start the engine and warm it up to coolant temperature 80°C (176°F).

Stop the engine and connect a tachometer according to the tachometer manufacturer's operating instructions.

Start the engine and let it idle. Check the idle speed.

ENGINE IDLE SPEED: 1,200 ± 100 rpm

If the idle speed is out of the specification, check the following:

- Throttle operation and throttle grip freeplay (page 4-8)
- Intake air leak or engine top-end problem (page 9-3)
- IACV operation (page 6-66)

IACV**INSPECTION**


The IACV is installed on the throttle body and is operated by the step motor. When the ignition switch is turned ON, the IACV operates for a few seconds.

Check the step motor operating (beep) sound with the ignition switch turned ON.

NOTE:

The IACV operation can be checked visually as follows:

- Remove the IACV (page 6-67). Connect the 4P (Black) connector to the IACV, then turn the ignition switch ON.

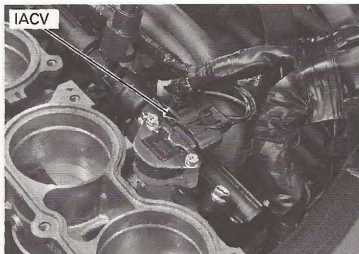


REMOVAL


- Always clean the throttle body before the IACV removal to prevent dirt and debris from entering the IACV passage.

Remove the air cleaner housing (page 6-52).


Disconnect the IACV 4P (Black) connector.

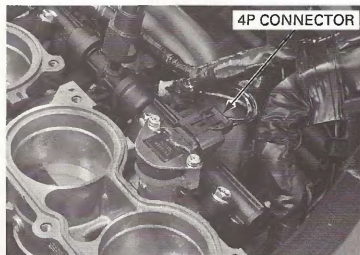


Remove the torx screws and setting plate.

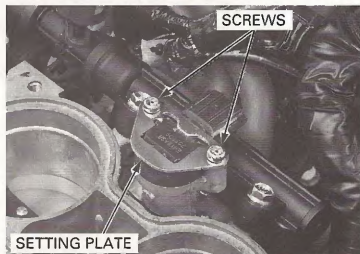

Remove the IACV motor.

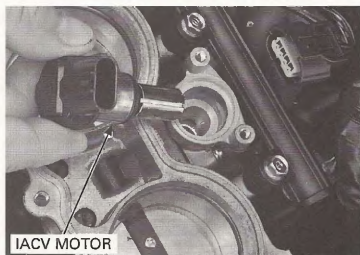
**INSTALLATION**

Turn the slide valve clockwise until lightly seated on IACV.

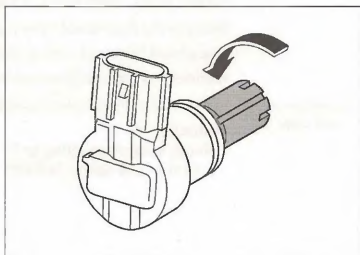

FUEL SYSTEM (PGM-FI)


Install the IACV motor, aligning slide valve groove with the pin.

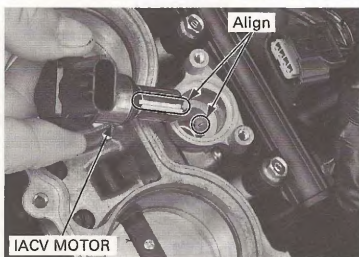

Install the setting plate while aligning the cut-out with the lug on the IACV motor.


Install the torx screws and tighten them to the specified torque.

TORQUE: 2.1 N·m (0.2 kgf·m, 1.5 lbf·ft)

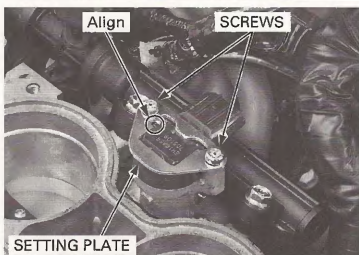

Connect the IACV 4P (Black) connector.

Install the air cleaner housing (page 6-54).

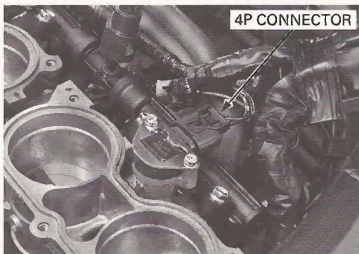

KNOCK SENSOR

REMOVAL/INSTALLATION

Remove the thermostat housing (page 7-8).

Disconnect the knock sensor 3P (Blue) connector.

Remove the bolt and knock sensor.


Installation is in the reverse order of removal.

TORQUE:

Knock sensor mounting bolt:

22 N·m (2.2 kgf·m, 16 lbf·ft)

Correctly route the wire (page 1-20).

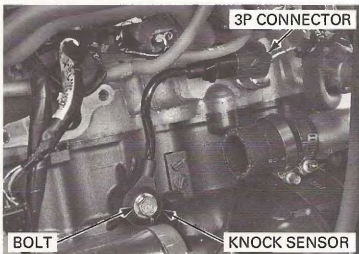

MAP SENSOR

OUTPUT VOLTAGE INSPECTION

Connect the HDS pocket tester (page 6-13).


View the voltage with HDS pocket tester.

Standard: 2.7 – 3.1 V

The MAP sensor output voltage (above) is measured under the standard atmosphere (1 atm = 1,013 hPa).

The MAP sensor output voltage is affected by the distance above sea level, because the output voltage is changed by atmospheric pressure.

Check the altitude and be sure that the measured voltage falls within the specified value.

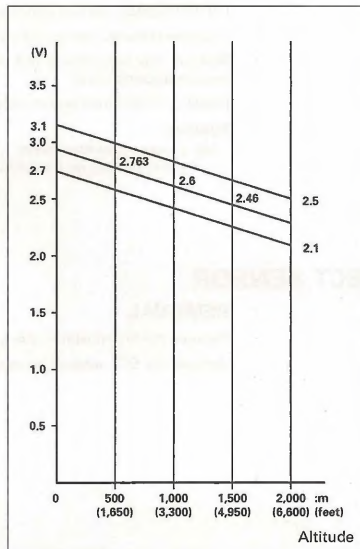

REMOVAL/INSTALLATION

Remove the air cleaner housing (page 6-52).


Remove the screw and MAP sensor from the air cleaner housing.

Install the removed parts in the reverse order of removal.

TORQUE:

MAP sensor mounting screw:

5.0 N·m (0.5 kgf·m, 3.7 lbf·ft)

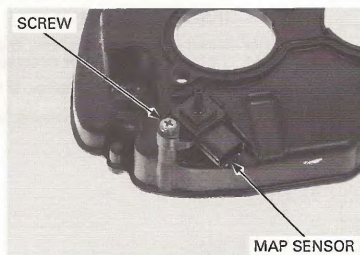

IAT SENSOR

REMOVAL/INSTALLATION

Lift and support the fuel tank (page 4-5).

Disconnect the IAT sensor 2P (Gray) connector.


Remove the screws and IAT sensor from the air cleaner housing cover.

Installation is in the reverse order of removal.

TORQUE:

IAT sensor mounting screw:

1.1 N·m (0.1 kgf-m, 0.8 lbf-ft)

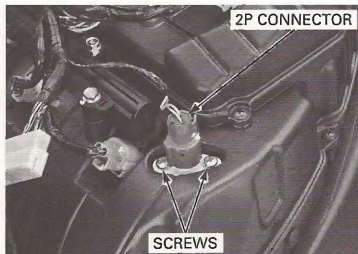


ECT SENSOR

REMOVAL

Remove the thermostat housing (page 7-8).

Remove the ECT sensor and sealing washer.

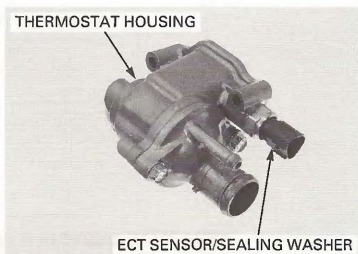


INSTALLATION

Always replace the sealing washer with a new one.

Install a new sealing washer and ECT sensor. Tighten the ECT sensor to the specified torque.

TORQUE: 23 N·m (2.3 kgf-m, 17 lbf-ft)

Install the thermostat housing (page 7-10).

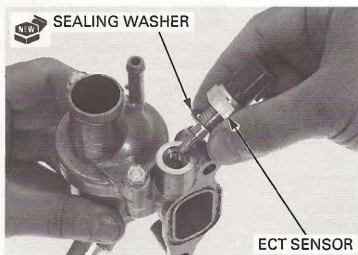

CMP SENSOR

REMOVAL/INSTALLATION

Remove the air cleaner housing (page 6-52).

Disconnect the CMP sensor 3P (Blue) connector.

Remove the bolt, CMP sensor and O-ring from the cylinder head cover.


Apply oil to a new O-ring and install it onto the CMP sensor.

Install the CMP sensor on to the cylinder head.

Tighten the bolt securely.

Connect the CMP sensor 3P (Blue) connector.

Install the air cleaner housing (page 6-54).

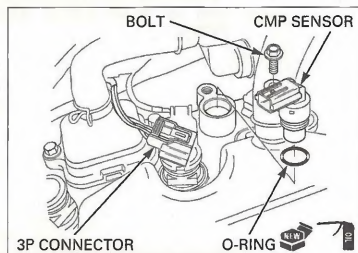

BANK ANGLE SENSOR

REMOVAL/INSTALLATION


Remove the upper cowl (page 3-13).

Remove the vacuum chamber.



Remove the screws and vacuum chamber stay.

Remove the bank angle sensor 3P (Black) connector from the stay.

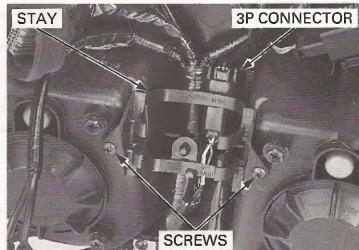

Disconnect the bank angle sensor 3P (Black) connector.

Remove the screws, washers and bank angle sensor from the front cowl.

Installation is in the reverse order of removal.

TORQUE:

Bank angle sensor mounting screw:

1.1 N·m (0.1 kgf·m, 0.8 lbf·ft)





INSPECTION

System inspection

Support the upper cowl securely.

Remove the upper cowl (page 3-13) with sub harness 20P (Black) and 8P (Black) connectors connected.

Remove the bank angle sensor (page 6-71) with a 3P (Black) connector connected.

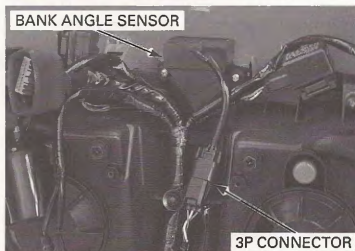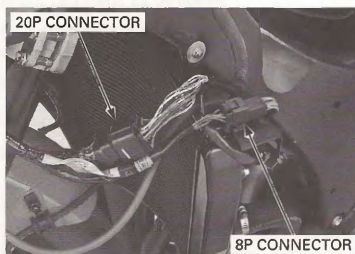


Place the bank angle sensor horizontal as shown, and turn the ignition switch ON.

The bank angle sensor is normal if the engine stop relay clicks and power supply is closed.

Incline the bank angle sensor approximately 60° to the left or right with the ignition switch ON. The bank angle sensor is normal if the engine stop relay clicks and power supply is open.

If you repeat this test, first turn the ignition switch OFF, then turn the ignition switch ON.

If the engine stop relay does not click, inspect the bank angle sensor line as follows:

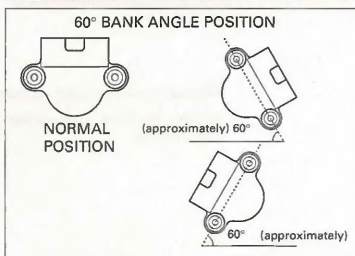

Input line inspection

Disconnect the bank angle sensor 3P (Black) connector (page 6-71).

Turn the ignition switch ON.


Measure the voltage between the bank angle sensor 3P (Black) connector at the wire side and ground.

Connection: White/yellow (+) – Ground (-)

There should be battery voltage.

If there is no battery voltage, inspect the following:

- Battery (page 17-6)
- Main fuse (30 A)
- Sub fuse (BANK ANGLE 10 A)
- Ignition switch (page 20-16)
- Wire harness open circuit

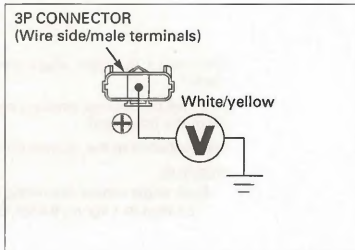

Ground line inspection

Turn the ignition switch OFF.


Check for continuity between the bank angle sensor 3P (Black) connector at the wire side and ground.

Connection: Green – Ground

There should be continuity.

If there is no continuity, inspect the Green wire open circuit.

3P CONNECTOR
(Wire side/male terminals)

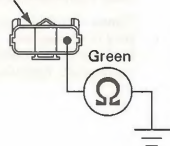**Engine stop relay coil line inspection**

Turn the ignition switch ON and engine stop switch "C".

Measure the voltage between the bank angle sensor 3P (Black) connector at the wire side and ground.

Connection: Red/blue (+) – Ground (-)


There should be battery voltage.

If there is no battery voltage, inspect the following:

- Red/blue wire open circuit
- Engine stop switch (page 20-17)
- Engine stop relay (page 6-73)

If all items are normal, replace the bank angle sensor with a known good one and recheck.

3P CONNECTOR
(Wire side/male terminals)

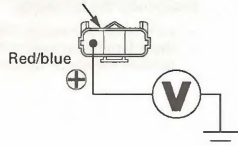**ENGINE STOP RELAY****INSPECTION**

Remove the seat (page 3-6).

Turn the ignition switch OFF.

Open the fuse/relay box and remove the engine stop relay.



FUEL SYSTEM (PGM-FI)


Connect an ohmmeter to the engine stop relay connector terminals.

Connect a 12 V battery to the following engine stop relay connector terminals.

There should be continuity only when the 12 V battery is connected.

If there is no continuity when the 12 V battery is connected, replace the engine stop relay.

ENGINE STOP RELAY

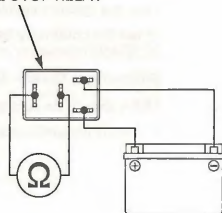


ECM

REMOVAL/INSTALLATION

Lift and support the fuel tank (page 4-5).

Disconnect the following:

- Left handlebar switch 10P (Blue) connector
- Right handlebar switch 8P (White) connector
- Ignition switch 2P (Brown) connector

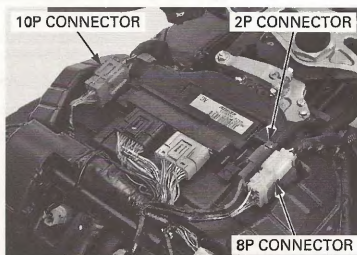

Remove the screws, setting plate and ECM.

Disconnect the ECM 33P (Black) and 33P (Gray) connectors.


Remove the ECM.

Installation is in the reverse order of removal.

TORQUE:

ECM setting plate screw:

0.8 N·m (0.08 kgf·m, 0.6 lbf·ft)

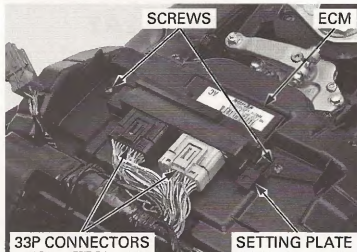

POWER/GROUND LINE INSPECTION**ENGINE DOES NOT START (MIL DOES NOT BLINK)****1. ECM Power Input Voltage Inspection**

Disconnect the ECM 33P connectors (page 6-74).

Turn the ignition switch ON and engine stop switch "O".

Measure the voltage at the ECM 33P (Black) connector terminals and ground.

Connection: A4 (+) - Ground (-)

A5 (+) - Ground (-)

TOOL:

Test probe

07ZAJ-RDJA110

Is there battery voltage?

YES - GO TO STEP 2.

NO - GO TO STEP 3.

2. ECM Ground Line Inspection

Turn the ignition switch OFF.
Check for continuity between the ECM 33P connector terminals and ground.

Connection: B4 - Ground

A23 - Ground

A24 - Ground

A25 - Ground

TOOL:

Test probe



07ZAJ-RDJA110

Is there continuity?

YES - Replace the ECM with a known good one, and recheck.

NO - Open circuit in Ground line

33P (BLACK) CONNECTOR
(Wire side/female terminals)

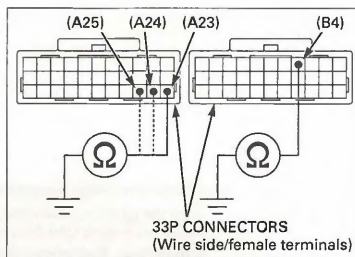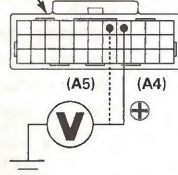

33P CONNECTORS
(Wire side/female terminals)

3. Engine Stop Relay Inspection 1

Turn the ignition switch OFF.

Open the fuse/relay box and remove the engine stop relay.

Turn the ignition switch ON and engine stop switch "O".



Measure the voltage at the engine stop relay terminals.

Connection: Black (+) – Red/blue (–)

Is there battery voltage?

YES – GO TO STEP 4.

- NO –
- Inspect the bank angle sensor (page 6-71).
 - Inspect the engine stop switch (page 20-17).
 - Blown fuse (BANK ANGLE 10 A)

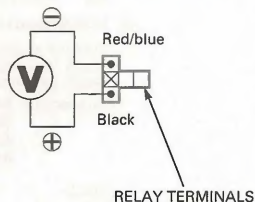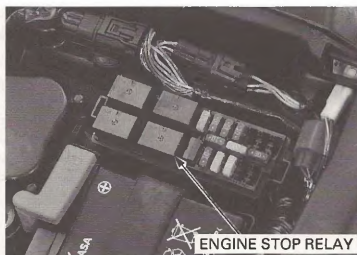

4. Engine Stop Relay Inspection 2

Turn the ignition switch OFF.

Jump the engine stop relay connector terminals.

Connection: Red/white – Black/white

Turn the ignition switch ON.

Measure the voltage at the ECM connector terminals and ground.

Connection: A4 (+) – Ground (–)
A5 (+) – Ground (–)

TOOL:


Test probe

07ZAJ-RDJA110


Is there battery voltage?

YES – Inspect the engine stop relay (page 6-73).

NO – Open circuit in power input line (Black/white or Red/white) between the battery and ECM

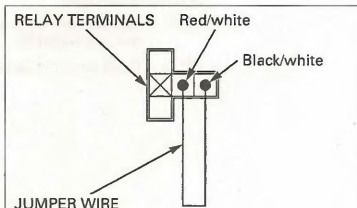

33P (BLACK) CONNECTOR
(Wire side/female terminals)

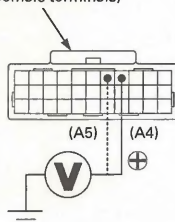

SECONDARY AIR SUPPLY SYSTEM

SYSTEM INSPECTION

Start the engine and warm it up to coolant temperature is 80°C (176°F).

Stop the engine.

Remove the air cleaner upper cover (page 4-9).


Check that the secondary air intake port is clean and free of carbon deposits.

Check the PAIR check valves if the port for carbon fouling (page 9-8).



Start the engine and open the throttle slightly to be certain that air is sucked in through the air intake port.

If the air is not drawn in, check the air suction hoses for clogs and PAIR control solenoid valve.

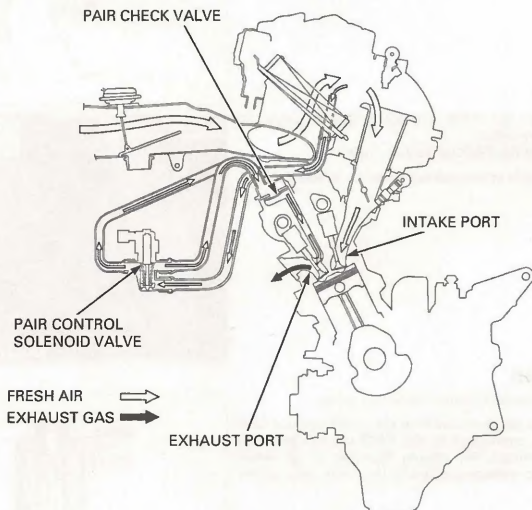


PAIR CONTROL SOLENOID VALVE


REMOVAL/INSTALLATION

Remove the air cleaner housing (page 6-52).

Pull up the front of the heat guard rubber.

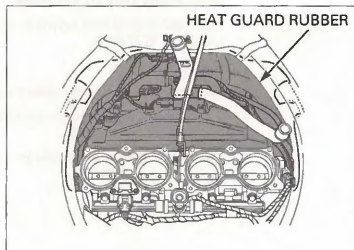


Remove the direct ignition coil wire harness clip from the PAIR control solenoid valve.

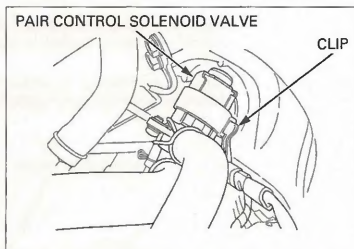

Disconnect the PAIR control solenoid valve 2P (Black) connector.

Disconnect the PAIR air suction hoses.


Installation is in the reverse order of removal.

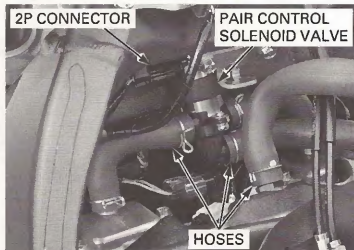

INSPECTION

Remove the PAIR control solenoid valve.

Check that air does not flow (A) to (B) when a 12 V battery is connected to the PAIR control solenoid valve terminals. Air should flow (A) to (B) when there is no voltage applied to the PAIR valve terminals.

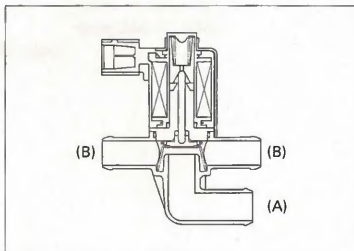


Check the resistance between the terminals of the PAIR control solenoid valve.

Standard: $23 - 27 \Omega$ ($20^{\circ}\text{C}/68^{\circ}\text{F}$)

If the resistance is out of specification, replace the PAIR control solenoid valve.

 
2P CONNECTOR
(Solenoid valve side/male terminals)




EGCA

REMOVAL/INSTALLATION

Remove the trim clips and EGCA cover.

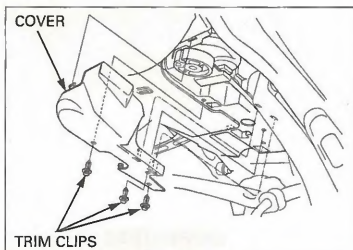


Turn the EGCA pulley clockwise and disconnect the EGCA cable from the EGCA pulley.

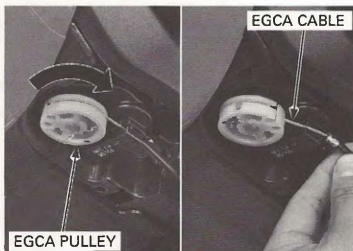

FUEL SYSTEM (PGM-FI)

Disconnect the EGCA 6P (Black) connector.
Remove the bolt, collar and EGCA.
Installation is in the reverse order of removal.

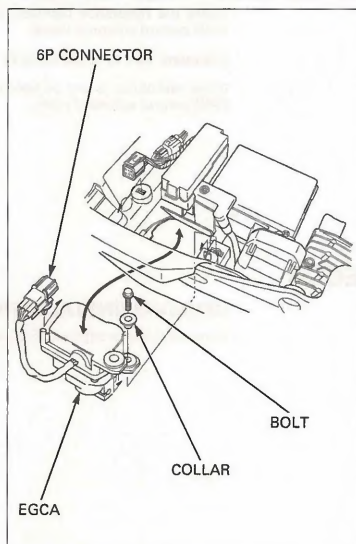


INSPECTION

Connect a 12 V battery to the EGCA 6P (Black) connector terminals and check that the EGCA operation.

Connection: Red (+) – Blue (-)
(EGCA side terminals)

If the EGCA does not turn, replace it with a new one.

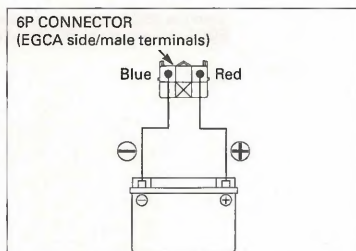

Measure the resistance between the EGCA 6P (Black) connector terminals.

Connection: Yellow/red – Green


Standard: 3.5 – 6.5 k Ω

Connection: Brown – Green


Standard: 0 – 5 k Ω

If the resistance is out of range, replace the EGCA.

6P CONNECTOR
(EGCA side/male terminals)

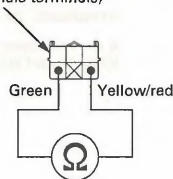

6P CONNECTOR
(EGCA side/male terminals)

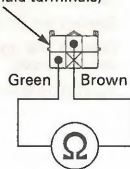

INTAKE AIR DUCT CONTROL

INTAKE AIR DUCT VALVE DIAPHRAGM

INSPECTION


Remove the intake air duct from the middle cowl (page 3-11).

Disconnect the vacuum hose from the diaphragm.

Connect a vacuum pump to the diaphragm and apply specified vacuum.

SPECIFIED VACUUM: 250 mm Hg (9.8 in Hg)

The vacuum should hold and the air duct valve should remain open.

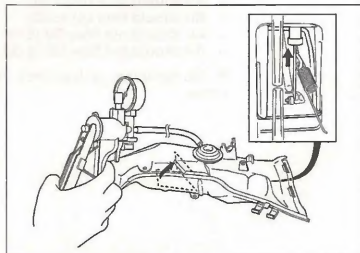


IDC SOLENOID VALVE

Check that the air should flow (A) to (B), only when the 12 V battery is connected to the IDC solenoid valve terminal.

Connection: White terminal (+) – Yellow terminal (–)

2P CONNECTOR
(IDC solenoid valve side/male terminals)

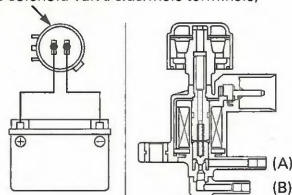


FUEL SYSTEM (PGM-FI)

Check the resistance between the terminals of the IDC solenoid valve.

STANDARD: 28 – 32 Ω (20°C/68°F)

If the resistance is out of specification, replace the IDC solenoid valve.

 2P CONNECTOR
(IDC solenoid valve side/male terminals)



ONE-WAY VALVE


REMOVAL/INSTALLATION

Remove the air intake cover (page 3-8).

Remove the one-way valve by disconnecting the vacuum hoses.

Installation is in the reverse order of removal.

Correctly route the vacuum hoses (page 1-20).

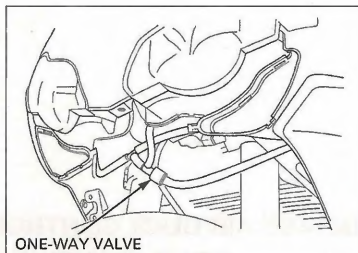


INSPECTION

Check the one-way valve operation as follows:

- Air should flow (A) to (B)
- Air should flow (A) to (C)
- Air should not flow (B) to (A)
- Air should not flow (B) to (C)

If the operation is incorrect, replace the one-way valve.

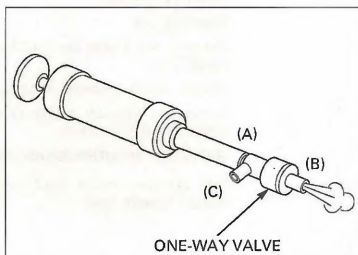

VACUUM CHAMBER**REMOVAL/INSTALLATION**

Remove the upper cowl (page 3-13).


Remove the vacuum chamber from the stay.

Disconnect the vacuum hose from the vacuum chamber.

Installation is in the reverse order of removal.


INSPECTION

Check the vacuum chamber for damage and scratches, replace if necessary.

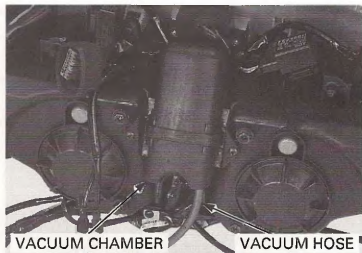**EVAP PURGE CONTROL SOLENOID VALVE/CANISTER (CALIFORNIA TYPE)****INSPECTION**

Remove the EVAP purge control solenoid valve (page 6-84).

Check that air should not flow (A) to (B), only when a 12 V battery is connected to the EVAP purge control solenoid valve terminals.

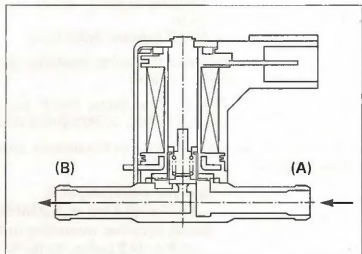


Check the resistance between the terminals of the EVAP purge control solenoid valve.

STANDARD: 30 – 34 Ω (20°C/68°F)

If the resistance is out of specification, replace the EVAP purge control solenoid valve.

 2P CONNECTOR
(Solenoid valve side/male terminals)



REMOVAL/INSTALLATION

Lift and support the fuel tank (page 4-5).


Support the motorcycle and raise the rear wheel off the ground.

Remove the muffler (page 3-24).

Remove the shock absorber lower mounting nut and bolt.

Move the shock absorber rearward.

Support the rear wheel securely.

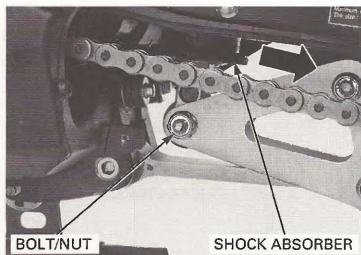

Disconnect the following:

- EVAP purge control solenoid valve-to-throttle body hose
- EVAP purge control solenoid valve 2P (Black) connector
- Fuel tank breather hose (to fuel tank)
- Canister-to-EVAP purge control solenoid valve hose
- EVAP canister drain hose

Remove the bolts, washers, grommets, collars and EVAP canister.

Remove the bolts, EVAP purge control solenoid valve, bracket, collars and grommets.

Correctly route the hoses (page 1-20).

Installation is in the reverse order of removal.


TORQUE:

Canister mounting bolt:

8.0 N-m (0.8 kgf-m, 5.9 lbf-ft)

Shock absorber mounting nut:



44 N-m (4.5 kgf-m, 32 lbf-ft)

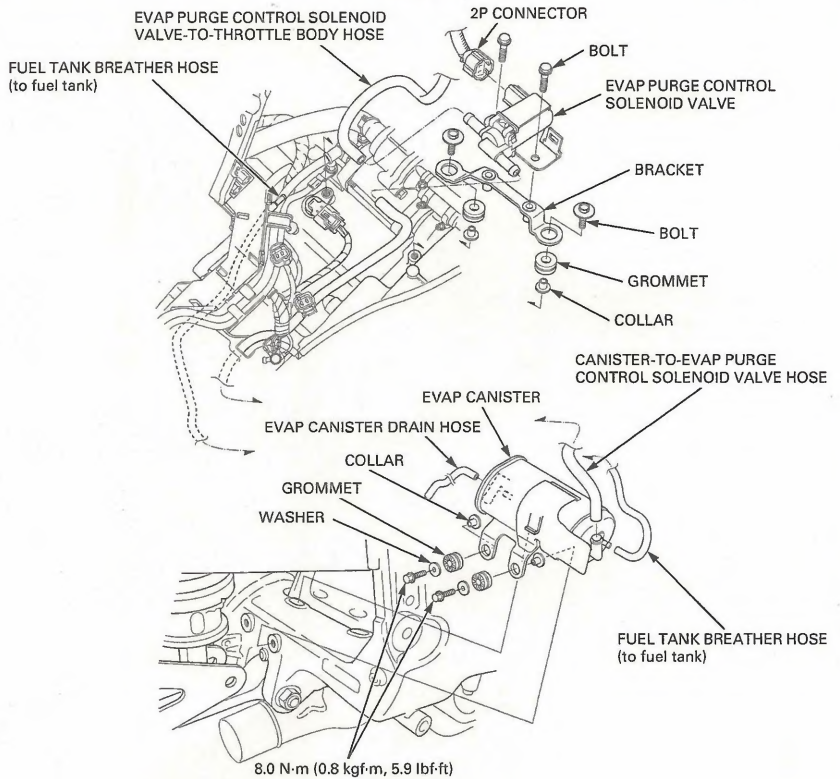

7. COOLING SYSTEM

SYSTEM FLOW PATTERN	7-2	THERMOSTAT	7-8
SERVICE INFORMATION	7-3	RADIATOR/COOLING FAN	7-11
TROUBLESHOOTING	7-4	WATER PUMP	7-21
SYSTEM TESTING	7-5	RADIATOR RESERVE TANK	7-24
COOLANT REPLACEMENT	7-6	FAN MOTOR RELAY	7-24

SYSTEM FLOW PATTERN

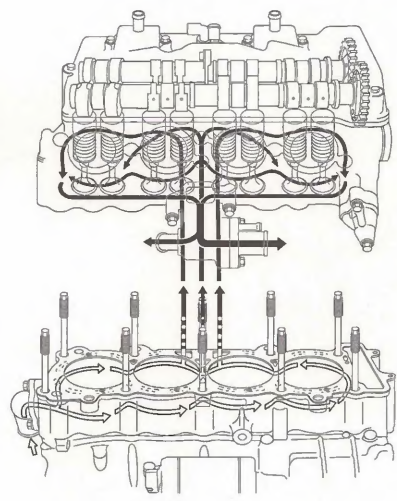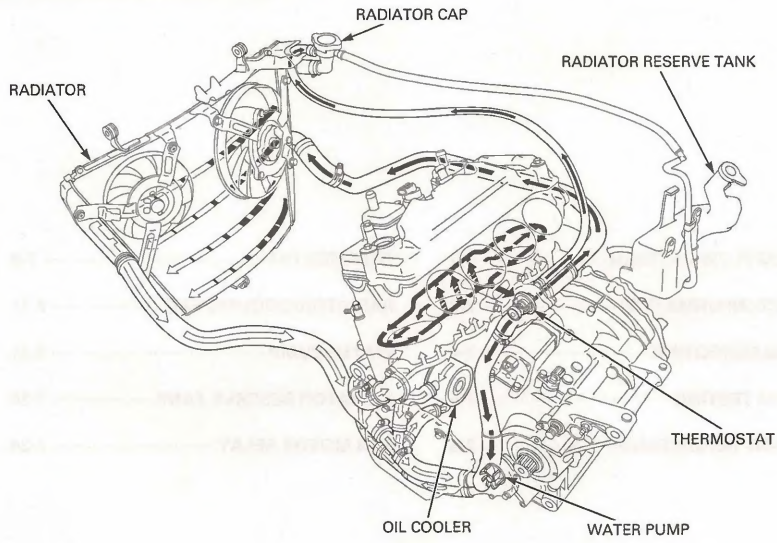

SERVICE INFORMATION

GENERAL

⚠ WARNING

Removing the radiator cap while the engine is hot can allow the coolant to spray out, seriously scalding you. Always let the engine and radiator cool down before removing the radiator cap.

NOTICE

Using coolant with silicate inhibitors may cause premature wear of water pump seals or blockage of radiator passages. Using tap water may cause engine damage.

- Add coolant at the reserve tank. Do not remove the radiator cap except to refill or drain the system.
- All cooling system services can be done with the engine installed in the frame.
- Avoid spilling coolant on painted surfaces.
- After servicing the system, check for leaks with a cooling system tester.
- For ECT sensor inspection (page 20-13).
- For ECT sensor remove/installation (page 6-70).

SPECIFICATIONS

ITEM		SPECIFICATIONS
Coolant capacity	Radiator and engine	3.0 liters (3.2 US qt, 2.6 Imp qt)
	Reserve tank	0.34 liter (0.36 US qt, 0.30 Imp qt)
Radiator cap relief pressure		108 – 137 kPa (1.1 – 1.4 kgf/cm ² , 16 – 20 psi)
Thermostat	Begin to open	80 – 84°C (176 – 183°F)
	Fully open	95°C (203°F)
	Valve lift	8 mm (0.3 in) minimum
Recommended antifreeze		Pro Honda HP Coolant or an equivalent high quality ethylene glycol antifreeze containing silicate free corrosion inhibitors
Standard coolant concentration		1:1 (mixture with distilled water)

TORQUE VALUES

Water pump assembly bolt	12 N·m (1.2 kgf·m, 9 lbf·ft)	CT bolt
Water pump drain bolt	12 N·m (1.2 kgf·m, 9 lbf·ft)	CT bolt
Thermostat housing cover bolt	12 N·m (1.2 kgf·m, 9 lbf·ft)	CT bolt
Fan motor shroud mounting bolt	8.4 N·m (0.9 kgf·m, 6.2 lbf·ft)	
Left fan motor mounting screw	2.7 N·m (0.3 kgf·m, 2.0 lbf·ft)	
Left cooling fan mounting nut	1.0 N·m (0.1 kgf·m, 0.7 lbf·ft)	
Right fan motor mounting nut	5.2 N·m (0.5 kgf·m, 3.8 lbf·ft)	Apply locking agent to the threads.
Right cooling fan mounting nut	2.7 N·m (0.3 kgf·m, 2.0 lbf·ft)	Apply locking agent to the threads.

TROUBLESHOOTING

Engine temperature too high

- Faulty engine coolant temperature meter or ECT sensor
- Thermostat stuck closed
- Faulty radiator cap
- Insufficient coolant
- Passage blocked in radiator, hoses or water jacket
- Air in system
- Faulty cooling fan motor
- Faulty fan motor relay
- Faulty water pump

Engine temperature too low

- Faulty temperature gauge or ECT sensor
- Thermostat stuck open
- Faulty fan motor relay

Coolant leak

- Faulty water pump mechanical seal
- Deteriorated O-rings
- Faulty radiator cap
- Damaged or deteriorated cylinder head gasket
- Loose hose connection or clamp
- Damaged or deteriorated hose

SYSTEM TESTING

COOLANT (HYDROMETER TEST)

Remove the right middle cowl (page 3-10).

Remove the radiator cap.

Always let the engine and radiator cool down before removing the radiator cap.



RADIATOR CAP

Test the coolant gravity using a hydrometer (see the Coolant Gravity Chart below).

For maximum corrosion protection, a 1:1 solution of ethylene glycol and distilled water is recommended (page 7-6).

Look for contamination and replace the coolant if necessary.



COOLANT GRAVITY CHART

		Coolant temperature °C (°F)											
		0 (32)	5 (41)	10 (50)	15 (59)	20 (68)	25 (77)	30 (86)	35 (95)	40 (104)	45 (113)	50 (122)	
Coolant ratio%	5	1.009	1.009	1.008	1.008	1.007	1.006	1.005	1.003	1.001	0.999	0.997	
	10	1.018	1.017	1.017	1.016	1.015	1.014	1.013	1.011	1.009	1.007	1.005	
	15	1.028	1.027	1.026	1.025	1.024	1.022	1.020	1.018	1.016	1.014	1.012	
	20	1.036	1.035	1.034	1.033	1.031	1.029	1.027	1.025	1.023	1.021	1.019	
	25	1.045	1.044	1.043	1.042	1.040	1.038	1.036	1.034	1.031	1.028	1.025	
	30	1.053	1.052	1.051	1.049	1.047	1.045	1.043	1.041	1.038	1.035	1.032	
	35	1.063	1.062	1.060	1.058	1.056	1.054	1.052	1.049	1.046	1.043	1.040	
	40	1.072	1.070	1.068	1.066	1.064	1.062	1.059	1.056	1.053	1.050	1.047	
	45	1.080	1.078	1.076	1.074	1.072	1.069	1.066	1.063	1.060	1.057	1.054	
	50	1.086	1.084	1.082	1.080	1.077	1.074	1.071	1.068	1.065	1.062	1.059	
	55	1.095	1.093	1.091	1.088	1.085	1.082	1.079	1.076	1.073	1.070	1.067	
	60	1.100	1.098	1.095	1.092	1.089	1.086	1.083	1.080	1.077	1.074	1.071	

RADIATOR CAP/SYSTEM PRESSURE INSPECTION

Remove the radiator cap (page 7-5).

Before installing the cap in the tester, wet the sealing surfaces.

Pressure test the radiator cap. Replace the radiator cap if it does not hold pressure, or if relief pressure is too high or too low. It must hold specified pressure for at least 6 seconds.

RADIATOR CAP RELIEF PRESSURE:



108 – 137 kPa (1.1 – 1.4 kgf/cm², 16 – 20 psi)

Pressure the radiator, engine and hoses, and check for leaks.

NOTICE

Excessive pressure can damage the cooling system components. Do not exceed 137 kPa (1.4 kgf/cm², 20 psi).

Repair or replace components if the system will not hold specified pressure for at least 6 seconds.

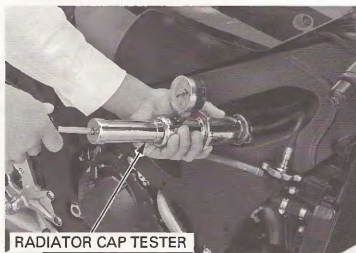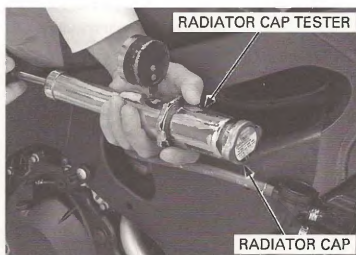

COOLANT REPLACEMENT

PREPARATION


- The effectiveness of coolant decreases with the accumulation of rust or if there is a change in the mixing proportion during usage. Therefore, for best performance change the coolant regularly as specified in the maintenance schedule.
- Mix only distilled, low mineral water with the antifreeze.

RECOMMENDED ANTIFREEZE:

Pro Honda HP Coolant or an equivalent high quality ethylene glycol antifreeze containing silicate free corrosion inhibitors

RECOMMENDED MIXTURE:

1:1 (mixture with distilled water)

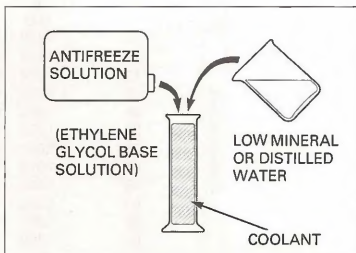

REPLACEMENT/AIR BLEEDING

- For radiator reserve tank removal/installation (page 7-24).

When filling the system or reserve tank with coolant or checking the coolant level, place the motorcycle in an upright position on a flat, level surface.

Remove the radiator cap (page 7-5).




Drain the coolant while the engine is cold.


Remove the water pump drain bolt, sealing washer and drain the coolant.

Reinstall the drain bolt with a new sealing washer. Tighten the water pump drain bolt to the specified torque.

TORQUE: 12 N-m (1.2 kgf-m, 9 lbf-ft)

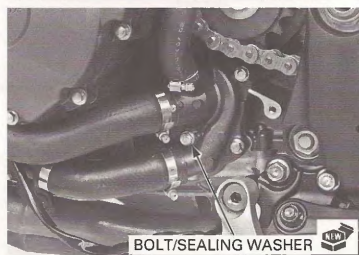

Fill the system with the recommended coolant through the filler opening up to filler neck.

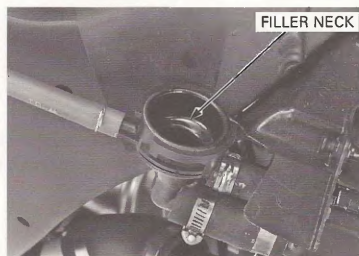

COOLING SYSTEM

Remove the radiator reserve tank cap and fill the reserve tank to the upper level line.


Bleed air from the system as follows:

1. Shift the transmission into neutral. Start the engine and let it idle for 2–3 minutes.
2. Snap the throttle three or four times to bleed air from the system.
3. Stop the engine and add coolant up to the filler neck if necessary. Install the radiator cap.
4. Check the level of coolant in the reserve tank and fill to the upper level if it is low.

Install the radiator reserve tank cap.

After installation, check that there are no coolant leaks.

Install the removed parts in the reverse order of removal.

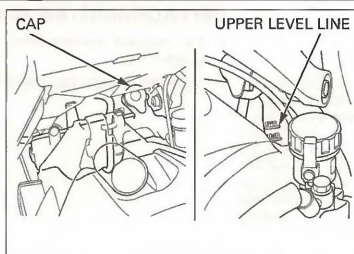

THERMOSTAT


- For ECT sensor removal/installation (page 6-70).

REMOVAL

Drain the coolant (page 7-7).


Lift and support the fuel tank (page 4-5).

Loosen the hose clamp screws and disconnect the water hoses from the thermostat housing.

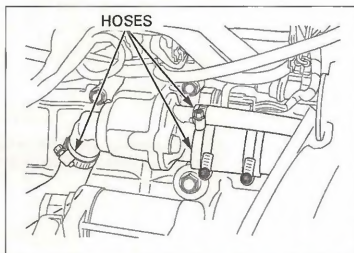


Disconnect the ECT sensor 3P (Gray) connector.


Remove the bolts and thermostat housing.

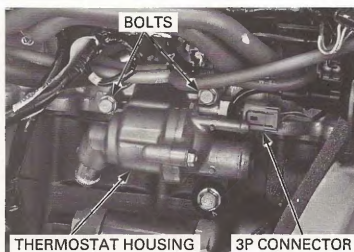

Remove the O-ring from the thermostat housing groove.

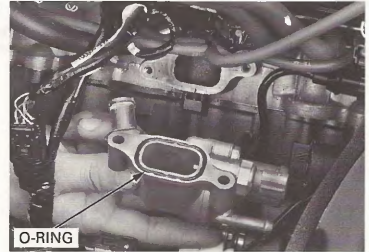


Remove the bolts and thermostat housing cover.
Remove the thermostat from the housing.

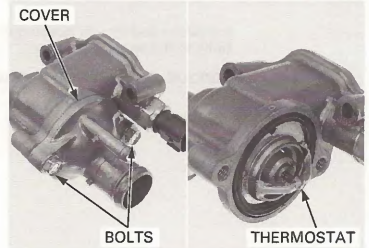

INSPECTION

Visually inspect the thermostat for damage.
Check for damage of the seal ring.

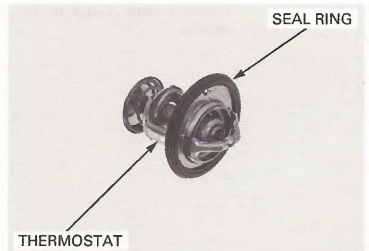

Wear insulated gloves and adequate eye protection.
Keep flammable materials away from the electric heating element.


Do not let the thermostat or thermometer touch the pan, or you will get false reading.

Heat the water with an electric heating element to operating temperature for 5 minutes.
Suspend the thermostat in heated water to check its operation.

Replace the thermostat if the valve stays open at room temperature, or if it responds at temperatures other than those specified.


THERMOSTAT BEGIN TO OPEN:
80 – 84°C (176 – 183°F)

VALVE LIFT:
8 mm (0.3 in) minimum at 95°C (203°F)

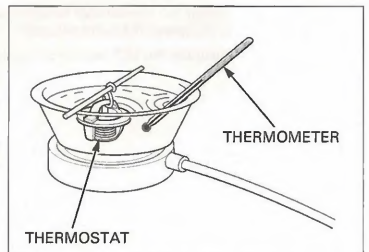


INSTALLATION

Install the thermostat into the housing by aligning the thermostat air bleed hole with the housing "O" mark.

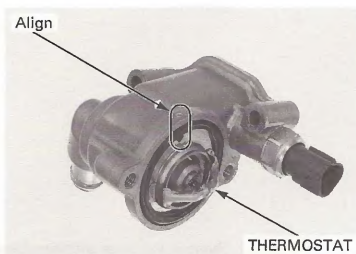


Install the thermostat housing cover and tighten the bolts to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

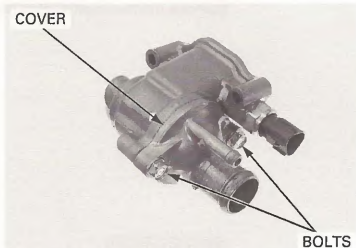


Install a new O-ring to the thermostat housing groove.

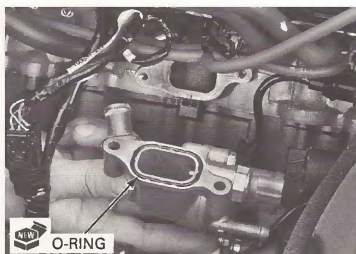

Install the thermostat housing to the cylinder head and tighten the bolts securely.


Connect the ECT sensor 3P (Gray) connector.

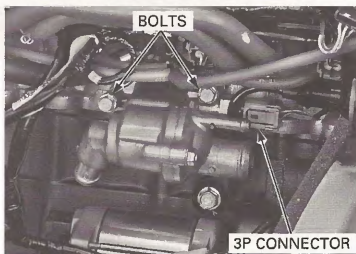

Connect the water hoses and tighten the hose clamp screws securely (page 7-23).

Fill the system with the recommended coolant and bleed any air (page 7-6).

Remove the support and close the fuel tank (page 4-7).

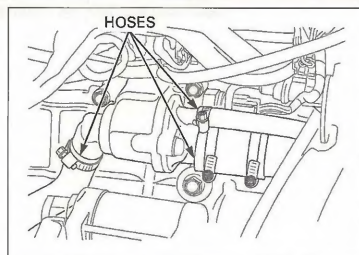

RADIATOR/COOLING FAN

REMOVAL


Remove the middle cowls (page 3-10).

Drain the coolant (page 7-7).


Disconnect the left fan motor 2P (Black) connector.



Remove the trim clip and left heat guard plate.

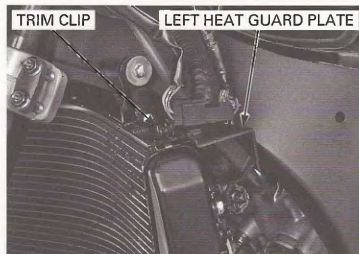

Loosen the hose clamp screw and disconnect the left radiator hose.

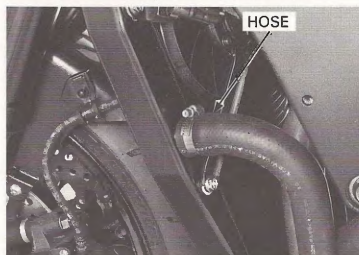


COOLING SYSTEM


Disconnect the right fan motor 2P (Black) connector.



Loosen the hose clamp screw and disconnect the water hose.

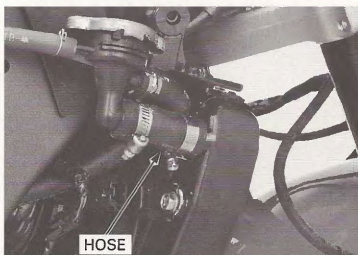

Loosen the hose clamp screw and disconnect the right radiator hose.

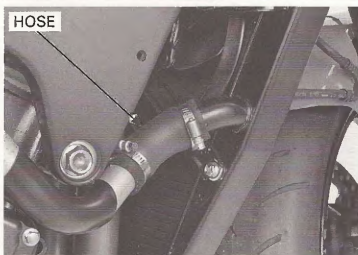

Remove the radiator lower mounting bolt and washer.




Remove the radiator upper mounting bolt and washer.

Be careful not to damage the radiator fins.


Release the radiator upper grommet from the frame boss to remove the radiator.

Release the clutch cable from the cable guide of the right heat guard plate.

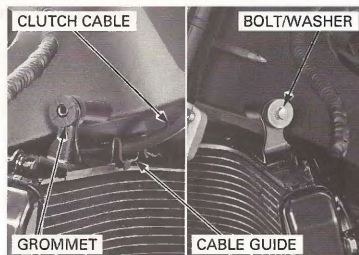


DISASSEMBLY

Remove the trim clip and right heat guard plate from the radiator.

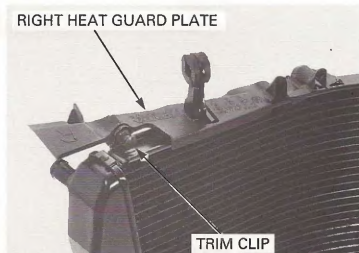


Right fan motor

Remove the bolts and right fan motor assembly from the radiator.

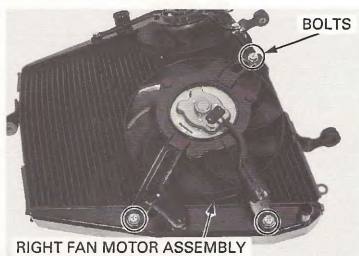

Release the right fan motor 2P (Black) connector from the shroud.

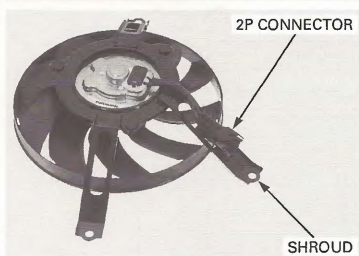


COOLING SYSTEM

Remove the nut and right cooling fan.




Remove the nuts and right fan motor from the shroud.

For fan motor relay information (page 7-24).

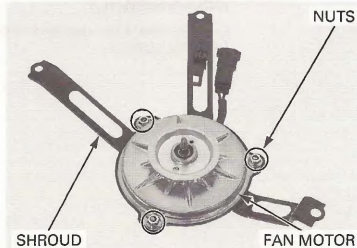


Left fan motor

Remove the bolts and left fan motor assembly from the radiator.

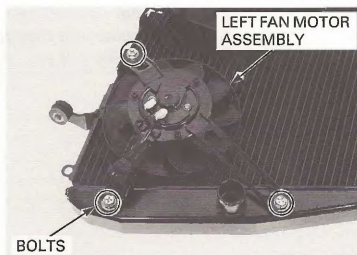


Release the left fan motor 2P (Black) connector from the shroud.

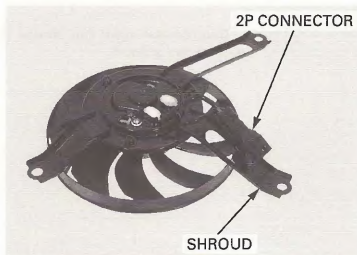

Remove the nut and left cooling fan.




Remove the screws and left fan motor from the shroud.

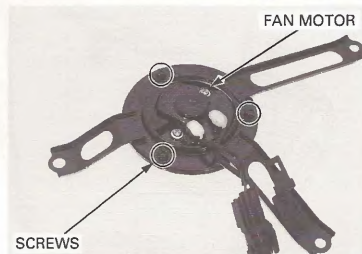

COOLING SYSTEM


ASSEMBLY

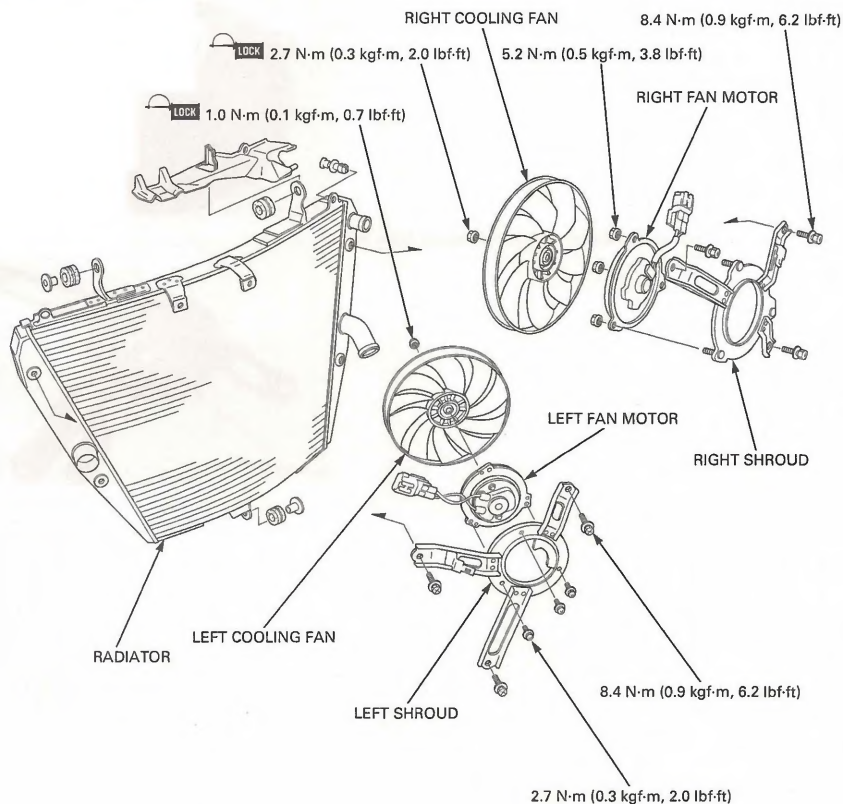

Left fan motor

Install the left fan motor onto the shroud and tighten the screws to the specified torque.

TORQUE: 2.7 N·m (0.3 kgf·m, 2.0 lbf·ft)

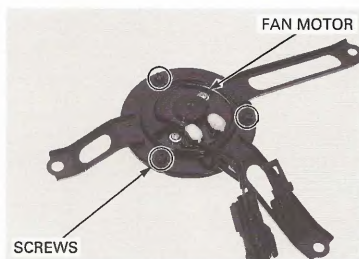


Install the left cooling fan to the fan motor shaft by aligning the flat surfaces.


Apply locking agent to the left cooling fan mounting nut threads.

Tighten the nut to the specified torque.

TORQUE: 1.0 N-m (0.1 kgf-m, 0.7 lbf-ft)

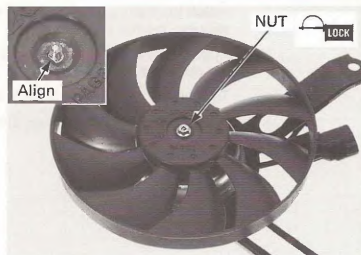


Install the left fan motor 2P (Black) connector onto the shroud.

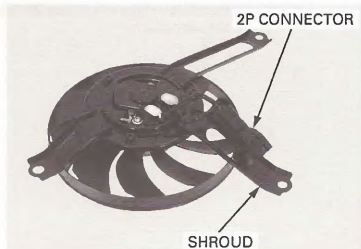

Install the left fan motor assembly onto the radiator. Tighten the bolts to the specified torque.


TORQUE: 8.4 N-m (0.9 kgf-m, 6.2 lbf-ft)

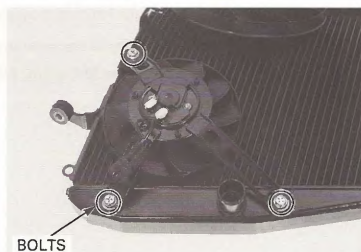

Right fan motor

Install the right fan motor onto the shroud and tighten the nuts to the specified torque.

TORQUE: 5.2 N-m (0.5 kgf-m, 3.8 lbf-ft)

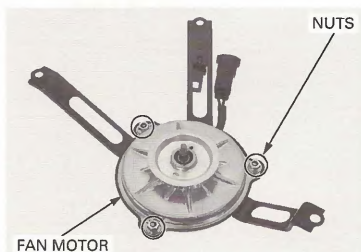


COOLING SYSTEM

Install the right cooling fan to the fan motor shaft by aligning the flat surfaces.


Apply locking agent to the right cooling fan mounting nut threads.

Tighten the nut to the specified torque.

TORQUE: 2.7 N·m (0.3 kgf·m, 2.0 lbf·ft)

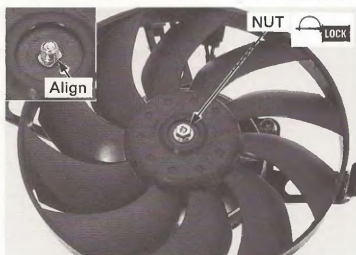


Install the right fan motor 2P (Black) connector onto the shroud.

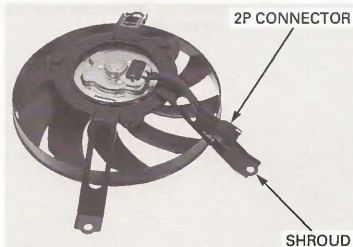

Install the right fan motor assembly onto the radiator.

Tighten the bolts to the specified torque.

TORQUE: 8.4 N·m (0.9 kgf·m, 6.2 lbf·ft)

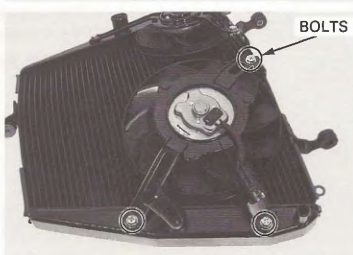

Install the right heat guard plate and trim clip onto the radiator right side.




INSTALLATION

Be careful not to damage the radiator fins.

Install the radiator assembly, aligning its upper grommet with the frame boss.

Route the clutch cable to the cable guide of the right heat guard plate.


Install the upper mounting bolt and washer, then tighten the bolt securely.

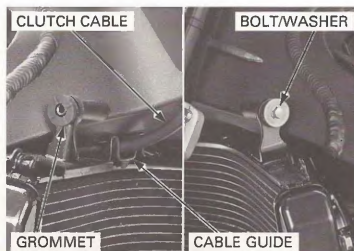


Connect the right radiator hose and tighten the hose clamp screw securely (page 7-23).



Connect the water hose and tighten the hose clamp screw securely (page 7-23).

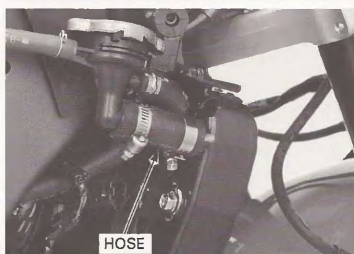

Connect the left radiator hose and tighten the hose clamp screw securely (page 7-23).

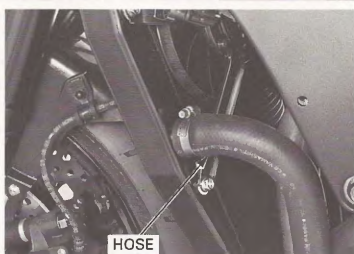

COOLING SYSTEM


Install the washer and radiator lower mounting bolt. Tighten the bolt securely.



Install the left heat guard plate and trim clip securely.



Connect the left fan motor 2P (Black) connector.

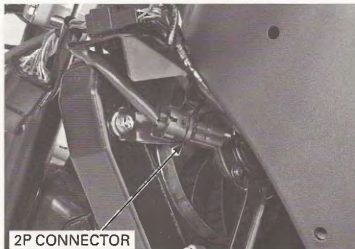

Connect the right fan motor 2P (Black) connector. Fill the system with the recommended coolant and bleed any air (page 7-6).

Install the middle cowls (page 3-10).

Start the engine and check for coolant leaks.




WATER PUMP

MECHANICAL SEAL INSPECTION

Remove the lower cowl (page 3-9).

Check for signs of seal leakage.

A small amount of "weeping" from the bleed hole is normal.

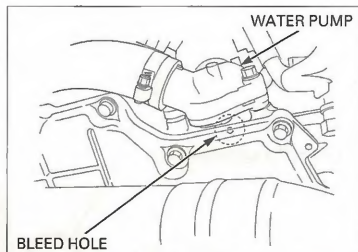


REMOVAL

Remove the following:

- Lower cowl (page 3-9)
- Gearshift arm (page 10-27)
- Drive sprocket cover (page 4-27)


Drain the coolant (page 7-7).

Loosen the hose clamp screws and disconnect the water hoses.

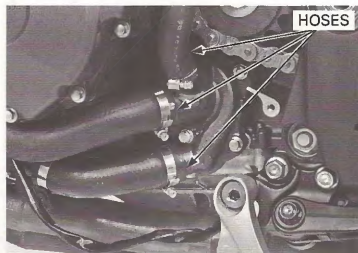

Remove the water pump drain bolt and sealing washer.


Remove the bolts and water pump cover.

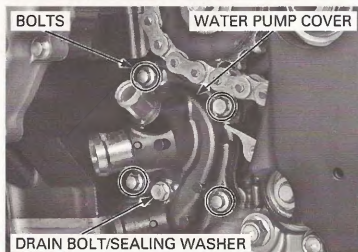


Remove the O-ring from the water pump body.

Remove the water pump body and O-ring from the crankcase.


*Do not disassemble
the water pump
body.*

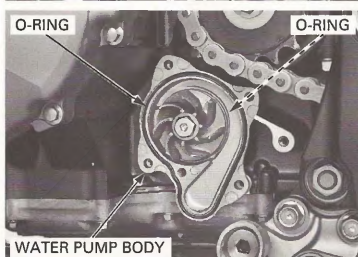

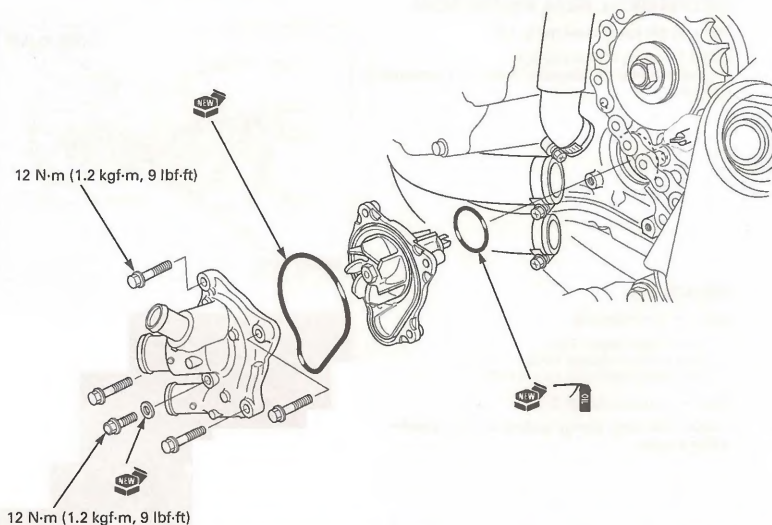


Apply oil to a new O-ring and install it onto the stepped portion of the water pump body.

Install the water pump body into the crankcase while aligning the water pump shaft groove with the oil pump shaft end by turning the water pump impeller.

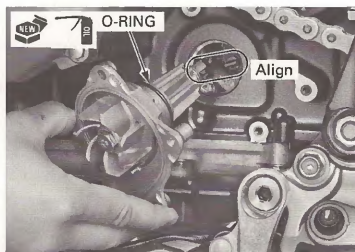


Install a new O-ring to the groove in the water pump body.

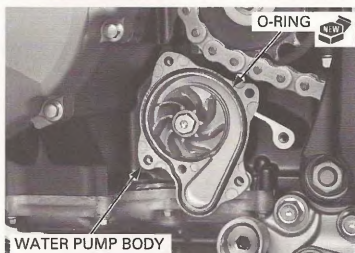

Install the water pump cover, bolts, new sealing washer and water pump drain bolt.

Tighten the bolts to the specified torque.

TORQUE: 12 N·m (1.2 kgf-m, 9 lbf-ft)

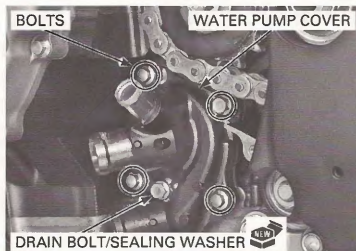



Connect the water hoses and tighten the hose clamp screws.

Install the following:

- Drive sprocket cover (page 4-28)
- Gearshift arm (page 10-30)
- Lower cowl (page 3-9)

Fill the system with the recommended coolant (page 7-6).

Start the engine and check for coolant and oil leaks.

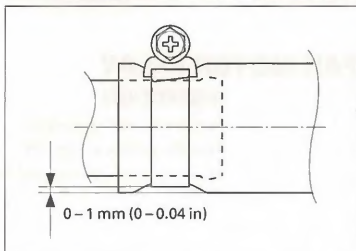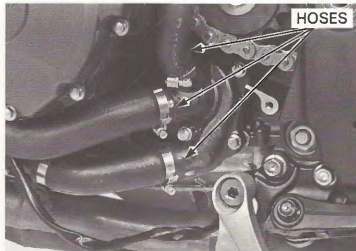

RADIATOR RESERVE TANK

REMOVAL/INSTALLATION


Remove the swingarm (page 15-18).

Remove the trim clips and radiator reserve tank.

Disconnect the siphon hose from the hose joint and drain the coolant from the reserve tank.

Disconnect the coolant overflow hose from the reserve tank.

Installation is in the reverse order of removal.

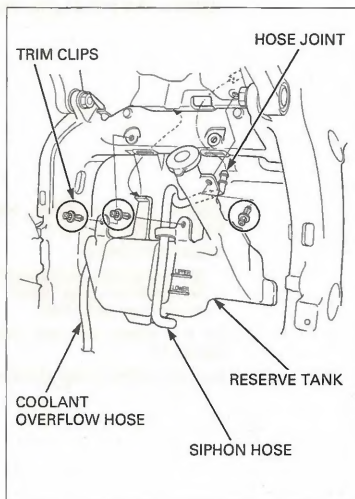


FAN MOTOR RELAY

INSPECTION

Remove the seat (page 3-6).

Turn the ignition switch OFF.

Open the fuse/relay box and remove the fan motor relay.

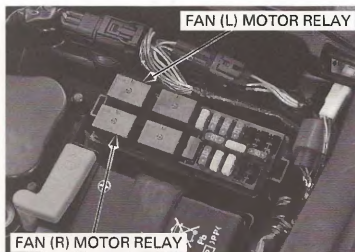


Connect an ohmmeter to the fan motor relay connector terminals.

Connect a 12 V battery to the following fan motor relay connector terminals as shown.

There should be continuity only when 12 V battery is connected.

If there is no continuity only when the 12 V battery is connected, replace the fan motor relay.

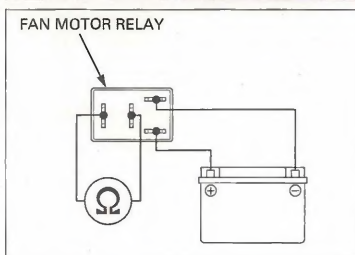

8. ENGINE REMOVAL/INSTALLATION

COMPONENT LOCATION 8-2

SERVICE INFORMATION 8-3


ENGINE REMOVAL 8-4

ENGINE INSTALLATION 8-8

8

ENGINE REMOVAL/INSTALLATION

COMPONENT LOCATION

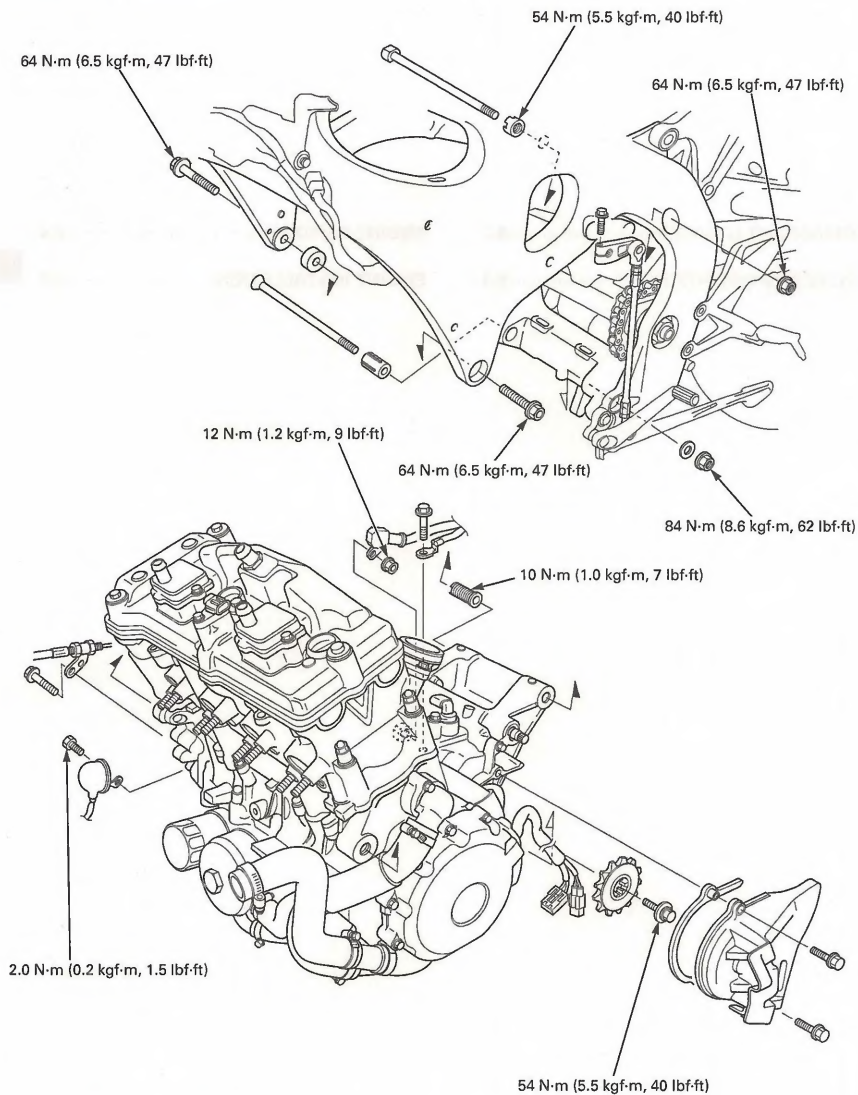

SERVICE INFORMATION

GENERAL

- A hoist or equivalent is required to support the motorcycle when removing and installing the engine.
- A floor jack or other adjustable support is required to support and maneuver the engine.
- Do not use the oil filter and oil cooler as a jacking point.
- When using the lock nut wrench for the engine hanger lock nut, use a deflecting beam type torque wrench 20 inches long. The lock nut wrench increases the torque wrench's leverage, so the torque wrench reading will be less than the torque actually applied to the lock nut. The specification given is the actual torque applied to the lock nut, not the reading on the torque wrench. Do not overtighten the lock nut. The specification later in the text gives both actual and indicated.
- The following components can be serviced with the engine installed in the frame.
 - Alternator (page 11-4)
 - Clutch (page 10-7)
 - Camshaft (page 9-9)
 - Gearshift linkage (page 10-27)
 - Oil cooler (page 5-13)
 - Oil pump (page 5-5)
 - Water pump (page 7-21)
- The following components require engine removal for service.
 - Cylinder head (page 9-14)
 - Crankshaft (page 13-5)
 - Piston/cylinder (page 13-14)
 - Shift fork/shift drum/transmission (page 12-6)
 - Balancer (page 12-16)
- When installing the engine, be sure to tighten the engine mounting fasteners to the specified torque in the specified sequence. If you make a mistake with the torque or sequence, loosen all mounting fasteners, then tighten them again to the specified torque in the correct sequence.

SERVICE DATA


ITEM	SPECIFICATIONS
Engine dry weight	62.5 kg (137.8 lbs)
Engine oil capacity (After disassembly)	3.7 liters (3.9 US qt, 3.3 Imp qt)
Coolant capacity (Radiator and engine)	3.0 liters (3.2 US qt, 2.6 Imp qt)

TORQUE VALUES

Front engine hanger bolt	64 N·m (6.5 kgf·m, 47 lbf·ft)
Upper engine hanger adjusting bolt	10 N·m (1.0 kgf·m, 7 lbf·ft)
Upper engine hanger lock nut	54 N·m (5.5 kgf·m, 40 lbf·ft)
Upper engine hanger nut	64 N·m (6.5 kgf·m, 47 lbf·ft)
Lower engine hanger nut	84 N·m (8.6 kgf·m, 62 lbf·ft)
Drive sprocket bolt	54 N·m (5.5 kgf·m, 40 lbf·ft)
Starter motor terminal nut	12 N·m (1.2 kgf·m, 9 lbf·ft)
EOP switch wire terminal bolt	2.0 N·m (0.2 kgf·m, 1.5 lbf·ft)

TOOL

Lock nut wrench
07VMA-MBB0100

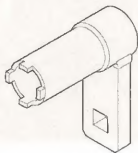

ENGINE REMOVAL

Remove the following:

- Lower cowl (page 3-9)
- Middle cowls (page 3-10)
- Exhaust pipe (page 3-31)
- Radiator (page 7-11)
- Fuel tank (page 6-51)
- Drive sprocket cover (page 4-27)
- Throttle body (page 6-58)
- PAIR control solenoid valve (page 6-78)
- Direct ignition coils (page 4-10)


Drain the engine oil (page 4-18)

Fully slacken the drive chain (page 4-26).


Remove the dust cover, bolt and disconnect the EOP switch wire.

Release the EOP switch wire from the wire guide.


Remove the EOP switch wire clamp.

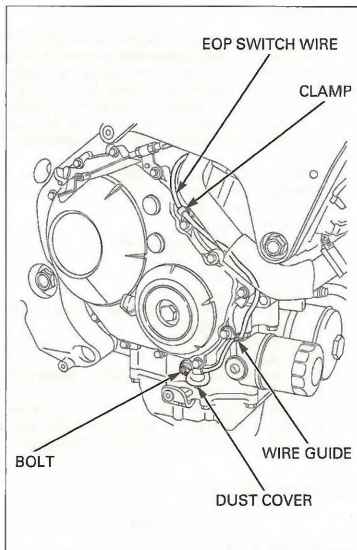


Remove the bolt and clutch cable guide plate, then disconnect the clutch cable end from the clutch lifter lever.

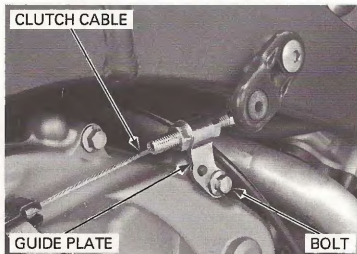


Disconnect the alternator 3P (Black) connector.

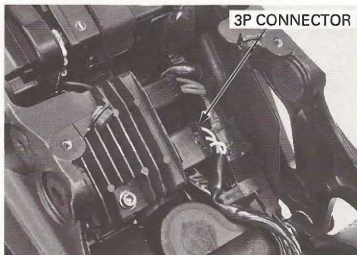


California type: Disconnect the EVAP purge control solenoid valve 2P (Black) connector and vacuum hoses.

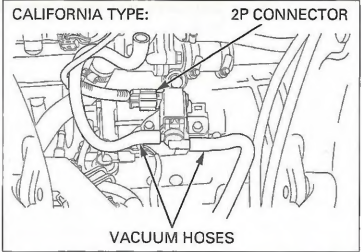


Disconnect the VS sensor 3P (Blue) and CKP sensor 2P (Red) connectors.

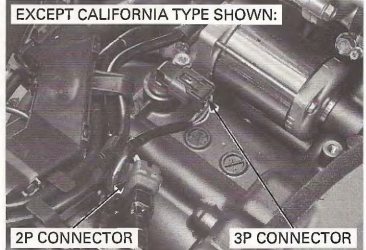

Disconnect the sidestand switch 2P (Black) connector.

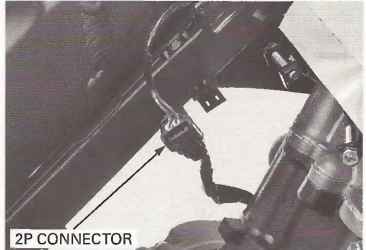


Disconnect the knock sensor 3P (Blue) and ECT sensor 3P (Gray) connectors.

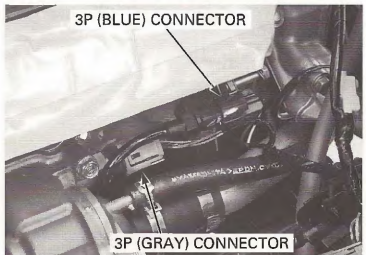

ENGINE REMOVAL/INSTALLATION

Disconnect the water hoses from the thermostat housing.

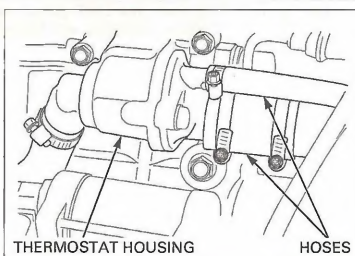


Remove the bolt, washer and drive sprocket.

Remove the bolt and disconnect the battery negative (-) cable.

Remove the nut and disconnect the starter motor cable.


Disconnect the neutral switch connector.

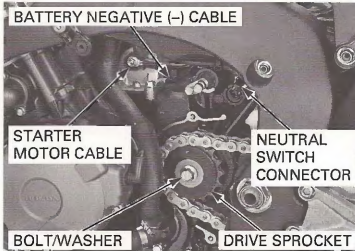

Disconnect the CMP sensor 3P (Blue) connector.




Remove the bolt and radiator bracket.

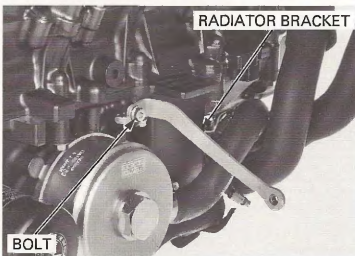


Support the engine using a jack or other adjustable support.

Remove the right front engine hanger bolt and collar.

Remove the left front engine hanger bolt.

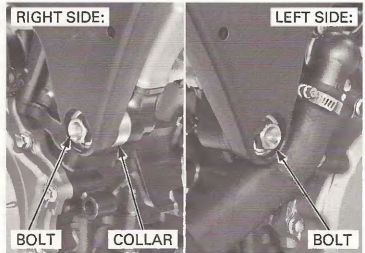

Remove the upper engine hanger nut while holding the engine hanger bolt.

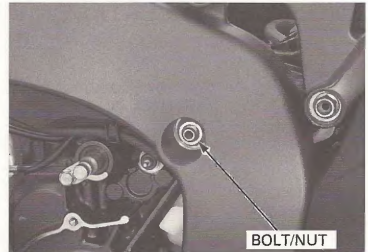


Do not remove the upper engine hanger lock nut yet.

Loosen the upper engine hanger lock nut using the special tool.


TOOL:

Lock nut wrench

07VMA-MBB0100

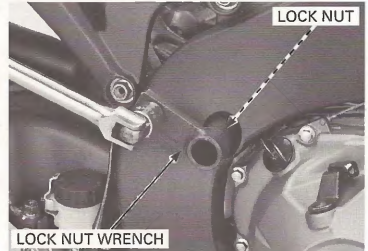

Turn the upper engine hanger adjusting bolt counterclockwise fully by turning the upper engine hanger bolt.

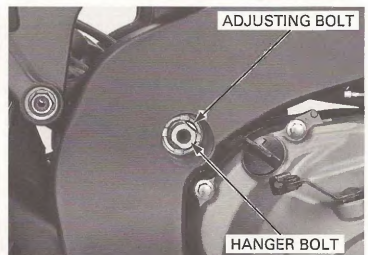

ENGINE REMOVAL/INSTALLATION

Remove the lower engine hanger nut and washer while holding the engine hanger bolt.


Support the engine using a jack or other adjustable support to ease removal of the engine hanger bolts.

Remove the following:


- Lower engine hanger bolt and collar
- Upper engine hanger bolt

Carefully lower the adjustable support, then remove the engine from the frame.

Remove the upper engine hanger lock nut and adjusting bolt.

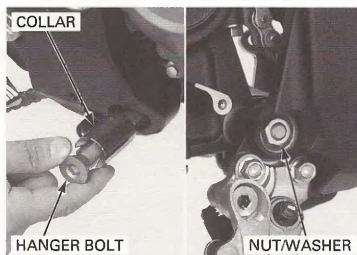


ENGINE INSTALLATION

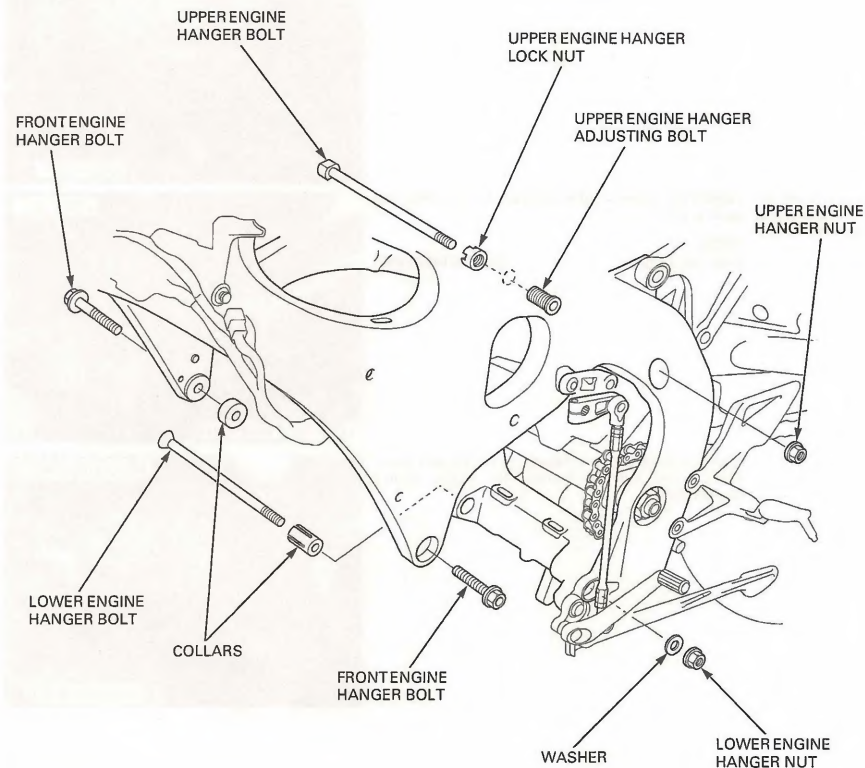

- Note the direction of the hanger bolts/collars.
- When tightening the lock nut with the lock nut wrench, refer to the torque wrench reading information in "SERVICE INFORMATION" (page 8-3).
- The jack height must be continually adjusted to relieve stress from the mounting fasteners.
- Correctly route the wires, hoses and cables (page 1-20).
- Be sure to tighten all engine mounting fasteners to the specified torque in the specified sequence described on the following pages. If you mistake the tightening torque or sequence, loosen all mounting fasteners, then tighten them again to the specified torque in the specified sequence.




Install the upper engine hanger adjusting bolt fully from the inside of the frame.

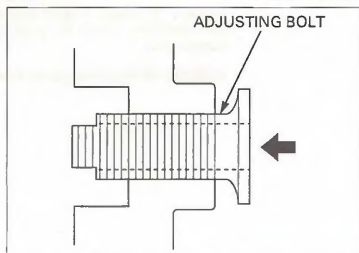

Carefully install the engine into the frame.


Install the collar and lower engine hanger bolt from the right side.

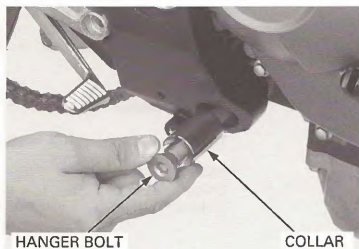

Install the upper engine hanger bolt from the right side.

Align the straight portions of the engine hanger bolt head with the adjusting bolt bosses.


Loosely install the upper engine hanger lock nut.

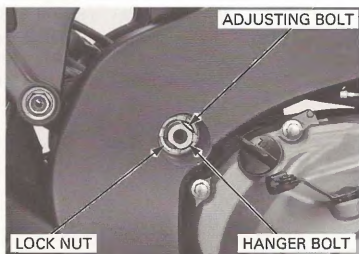

ENGINE REMOVAL/INSTALLATION


Loosely install the left front engine hanger bolt.

Loosely install the collar and right front engine hanger bolt.

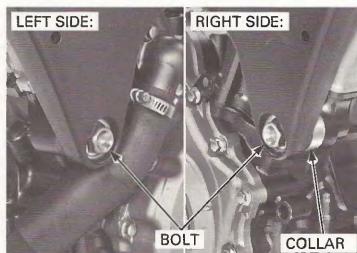

Tighten the upper engine hanger adjusting bolt to the specified torque by turning the upper engine hanger bolt.

TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)

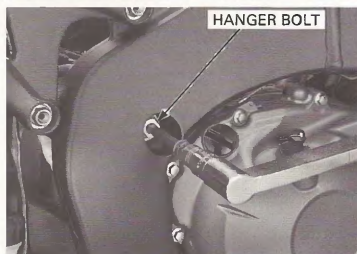

Install the upper engine hanger lock nut. Hold the adjusting bolt by holding the hanger bolt and tighten the lock nut to the indicated below torque.

TOOL:


Lock nut wrench

07VMA-MBB0100

TORQUE: 49 N·m (5.0 kgf·m, 36 lbf·ft)

NOTE:

Using the special tool, the torque setting above gives actual torque value (page 8-3).

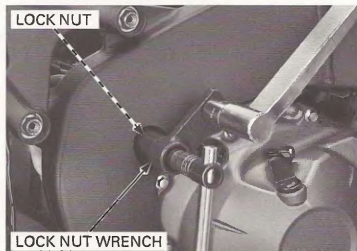

Install the washer and lower engine hanger nut.


Tighten the lower engine hanger nut to the specified torque while holding the hanger bolt.

TORQUE: 84 N·m (8.6 kgf·m, 62 lbf·ft)




Tighten the upper engine hanger nut to the specified torque while holding the hanger bolt.

TORQUE: 64 N·m (6.5 kgf-m, 47 lbf-ft)

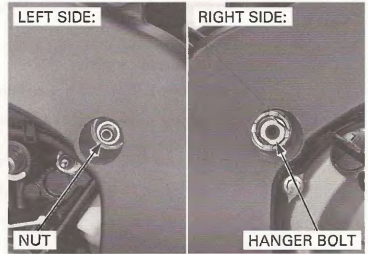


Tighten the front engine hanger bolt to the specified torque.


TORQUE: 64 N·m (6.5 kgf-m, 47 lbf-ft)

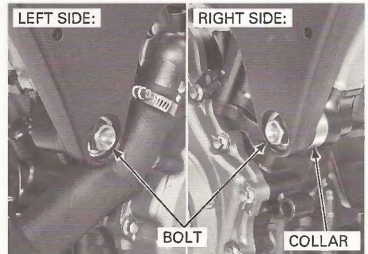

Install the radiator bracket as shown and tighten the bolt securely.

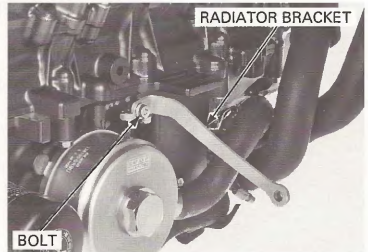

Connect the CMP sensor 3P (Blue) connector.

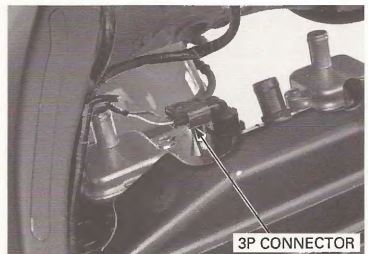

ENGINE REMOVAL/INSTALLATION

Correctly route the wires (page 1-20).

Install the battery negative (-) cable and tighten the bolt securely.


Connect the stator motor cable and tighten the nut to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)


Install the drive sprocket with its marks facing out.

Install the washer and drive sprocket bolt, then tighten the bolt to the specified torque.

TORQUE: 54 N·m (5.5 kgf·m, 40 lbf·ft)

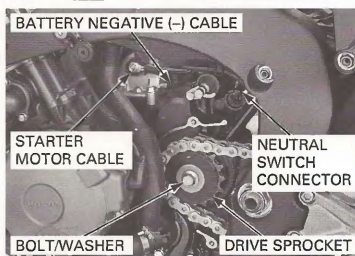

Connect the water hoses to the thermostat housing securely.

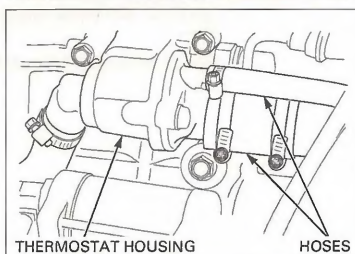

Connect the knock sensor 3P (Blue) and ECT sensor 3P (Gray) connectors.




Connect the sidestand switch 2P (Black) connector.




Connect the VS sensor 3P (Blue) and CKP sensor 2P (Red) connectors.


EXCEPT CALIFORNIA TYPE SHOWN:

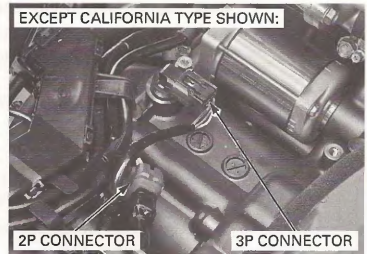

California type: Connect the EVAP purge control solenoid valve 2P (Black) connector and vacuum hoses.

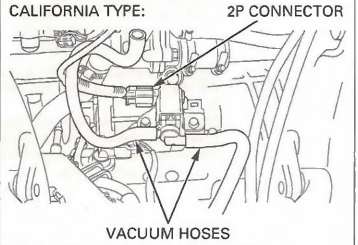


Connect the alternator 3P (Black) connector.

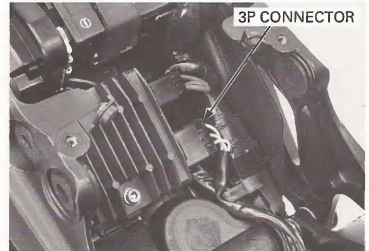

Connect the clutch cable to the clutch lifter lever.

Install the clutch cable guide plate by aligning its hole with the right crankcase cover boss and tighten the bolt securely.

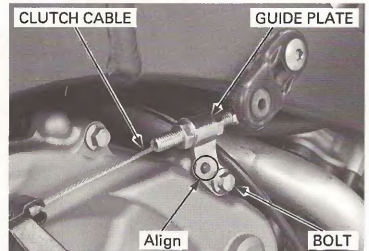

ENGINE REMOVAL/INSTALLATION

Install the EOP switch wire clamp.

Route the EOP switch wire to the wire guide.

Connect the EOP switch wire terminal and tighten the bolt to the specified torque.

TORQUE: 2.0 N-m (0.2 kgf-m, 1.5 lbf-ft)

Install the dust cover.

Install the following:

- Direct ignition coils (page 4-10)
- PAIR control solenoid valve (page 6-78)
- Throttle body (page 6-62)
- Drive sprocket cover (page 4-28)
- Fuel tank (page 6-51)
- Radiator (page 7-19)
- Exhaust pipe (page 3-32)
- Middle cowls (page 3-10)
- Lower cowl (page 3-9)

Adjust the drive chain slack (page 4-26).


Fill the crankcase with the recommended oil (page 4-17).

Fill the cooling system and bleed any air (page 7-7).

Check the clutch lever freeplay (page 4-34).

Check the exhaust system for leaks.


Check for coolant leaks.

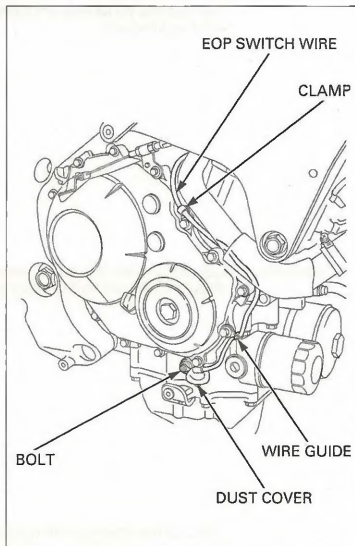

9. CYLINDER HEAD/VALVES

COMPONENT LOCATION	9-2	CYLINDER HEAD INSPECTION	9-17
SERVICE INFORMATION	9-3	VALVE GUIDE REPLACEMENT	9-20
TROUBLESHOOTING	9-6	VALVE SEAT INSPECTION/ REFACING	9-21
CYLINDER COMPRESSION TEST	9-7	CYLINDER HEAD ASSEMBLY	9-24
CYLINDER HEAD COVER REMOVAL	9-7	CYLINDER HEAD INSTALLATION	9-26
CYLINDER HEAD COVER DISASSEMBLY	9-8	CAMSHAFT INSTALLATION	9-30
CAMSHAFT REMOVAL	9-9	CYLINDER HEAD COVER ASSEMBLY	9-34
CYLINDER HEAD REMOVAL	9-14	CYLINDER HEAD COVER INSTALLATION	9-35
CYLINDER HEAD DISASSEMBLY	9-15	CAM CHAIN TENSIONER LIFTER	9-37

COMPONENT LOCATION

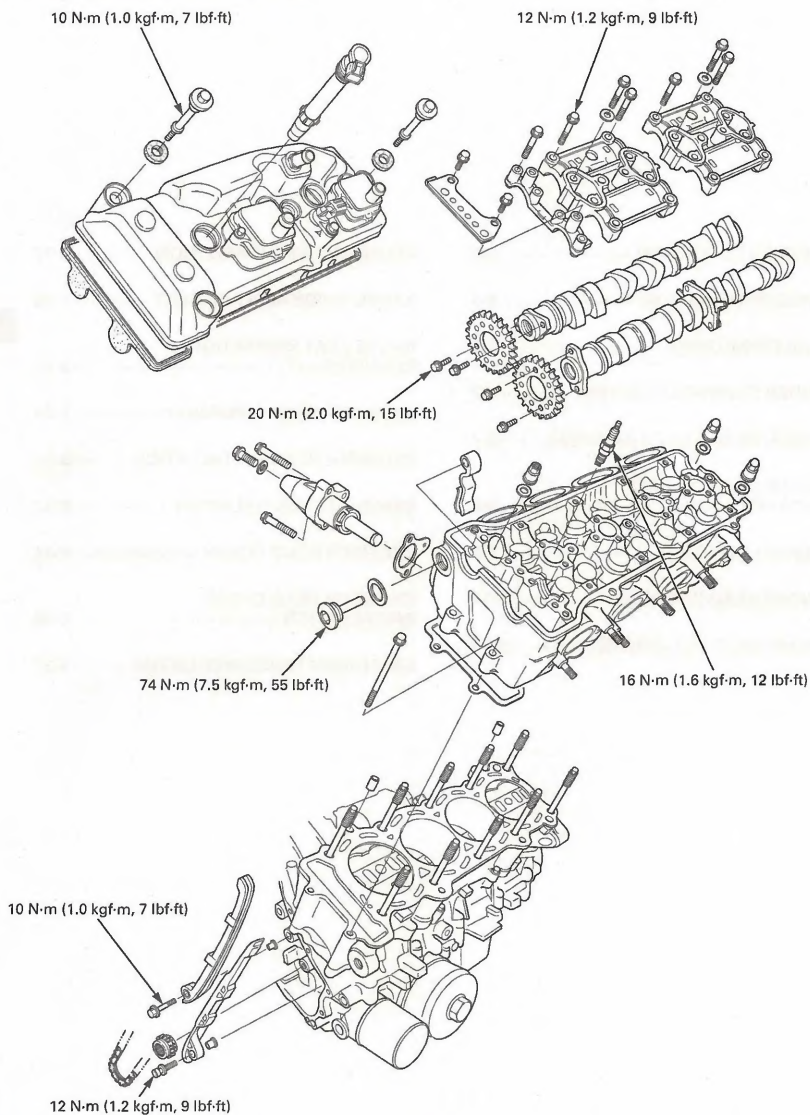

SERVICE INFORMATION

GENERAL

- This section covers service of the cylinder head, valves and camshaft.
- The camshaft services can be done with the engine installed in the frame. The cylinder head service requires engine removal.
- When disassembling, mark and store the disassembled parts to ensure that they are reinstalled in their original locations.
- Clean all disassembled parts with cleaning solvent and dry them by blowing them off with compressed air before inspection.
- Camshaft lubricating oil is fed through oil passages in the cylinder head. Clean the oil passages before assembling cylinder head.
- Be careful not to damage the mating surfaces when removing the cylinder head cover and cylinder head.
- For CMP sensor removal/installation (page 6-71).

SPECIFICATIONS

Unit: mm (in)

ITEM			STANDARD	SERVICE LIMIT
Cylinder compression			1,196 kPa (12.2 kgf/cm ² , 174 psi) at 210 rpm	—
Valve clearance	IN	IN	0.16 ± 0.03 (0.006 ± 0.001)	—
		EX	0.30 ± 0.03 (0.012 ± 0.001)	—
Camshaft	Cam lobe height	IN	37.34 – 37.58 (1.470 – 1.480)	37.32 (1.469)
		EX	36.58 – 36.82 (1.440 – 1.450)	36.56 (1.439)
	Runout		—	0.05 (0.002)
	Oil clearance		0.020 – 0.062 (0.0008 – 0.0024)	0.10 (0.004)
Valve lifter	Valve lifter O.D.	IN/EX	25.978 – 25.993 (1.0228 – 1.0233)	25.97 (1.022)
	Valve lifter bore I.D.	IN/EX	26.010 – 26.026 (1.0240 – 1.0246)	26.04 (1.025)
Valve, valve guide	Valve stem O.D.	IN	4.475 – 4.490 (0.1762 – 0.1768)	4.465 (0.1758)
		EX	3.965 – 3.980 (0.1561 – 0.1567)	3.955 (0.1557)
	Valve guide I.D.	IN	4.500 – 4.512 (0.1772 – 0.1776)	4.54 (0.179)
		EX	4.000 – 4.012 (0.1575 – 0.1580)	4.04 (0.159)
	Stem-to-guide clearance	IN	0.010 – 0.037 (0.0004 – 0.0015)	0.075 (0.0030)
		EX	0.020 – 0.047 (0.0008 – 0.0019)	0.085 (0.0033)
	Valve guide projection above cylinder head	IN	15.1 – 15.4 (0.59 – 0.61)	—
		EX	15.7 – 16.0 (0.62 – 0.63)	—
Valve spring free length	IN	IN/EX	0.90 – 1.10 (0.035 – 0.043)	1.5 (0.06)
		Inner	35.25 (1.388)	34.5 (1.36)
	EX	Outer	38.93 (1.533)	38.2 (1.50)
Cylinder head warpage			—	0.10 (0.004)

TORQUE VALUES

Cylinder head nut	—
Camshaft holder bolt	12 N·m (1.2 kgf·m, 9 lbf·ft)
Cylinder head cover bolt	10 N·m (1.0 kgf·m, 7 lbf·ft)
PAIR check valve cover bolt	12 N·m (1.2 kgf·m, 9 lbf·ft)
Cam sprocket bolt	20 N·m (2.0 kgf·m, 15 lbf·ft)
CMP sensor rotor bolt	12 N·m (1.2 kgf·m, 9 lbf·ft)
Cam chain tensioner B pivot bolt	10 N·m (1.0 kgf·m, 7 lbf·ft)
Cam chain tensioner A pivot bolt	74 N·m (7.5 kgf·m, 55 lbf·ft)
Cam chain guide A bolt	12 N·m (1.2 kgf·m, 9 lbf·ft)
Spark plug	16 N·m (1.6 kgf·m, 12 lbf·ft)
Insulator mounting bolt	12 N·m (1.2 kgf·m, 9 lbf·ft)
Breather plate mounting bolt	12 N·m (1.2 kgf·m, 9 lbf·ft)
Cylinder stud bolt	20 N·m (2.0 kgf·m, 15 lbf·ft)

See page 9-29

Apply oil to the threads and seating surface.

Apply locking agent to the threads.

Apply locking agent to the threads.

Apply locking agent to the threads.







Apply locking agent to the threads.





Apply locking agent to the threads.

Apply locking agent to the threads.

CYLINDER HEAD/VALVES

TOOLS

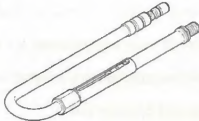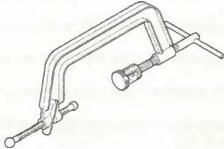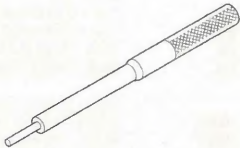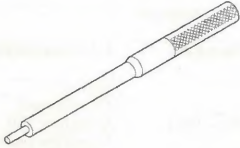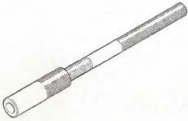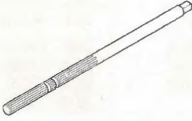Compression gauge attachment 07RMJ-MY50100  or equivalent commercially available	Valve spring compressor 07757-0010000 	Valve spring compressor attachment 07959-KM30101 
Tappet hole protector 07HMG-MR70002  See page 9-16 on how to make tool	Valve guide driver (IN) 07HMD-ML00101 	Valve guide driver (EX) 07JMD-KY20100 
Valve guide driver 07743-0020000  (Not available in U.S.A.)	Valve guide reamer, 4.508 mm (IN) 07HMH-ML00101  or 07HMH-ML0010B (U.S.A. only)	Valve guide reamer, 4.008 mm (EX) 07MMH-MV90100  or 07MMH-MV9010A (U.S.A. only)
Valve seat cutter, 33 mm (45° IN) 07780-0010800  or equivalent commercially available	Valve seat cutter, 24.5 mm (45° EX) 07780-0010100  or equivalent commercially available	Flat cutter, 33 mm (32° IN) 07780-0012900  or equivalent commercially available

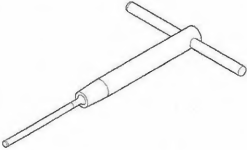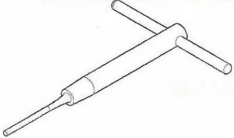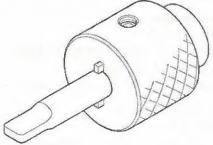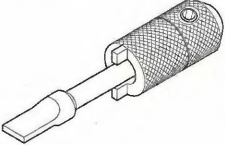Flat cutter, 25 mm (32° EX) 07780-0012000  or equivalent commercially available	Interior cutter, 34 mm (60° IN) 07780-0014700  or equivalent commercially available	Interior cutter, 26 mm (60° EX) 07780-0014500  or equivalent commercially available
Cutter holder, 4,5 mm (IN) 07781-0010600  or equivalent commercially available	Cutter holder, 4,0 mm (EX) 07781-0010500  or equivalent commercially available	Tensioner stopper 070MG-0010100 
Tensioner stopper 07AMG-MFJA100 (U.S.A. only) 		

TROUBLESHOOTING

- Engine top-end problems usually affect engine performance. These problems can be diagnosed by a compression test or by tracing engine noises to the top-end with a sounding rod stethoscope.
- If the performance is poor at low speeds, check for white smoke in the crankcase breather hose. If the hose is smoky, check for a seized piston ring (page 13-16).

Compression too low, hard starting or poor performance at low speed

- Valves:
 - Incorrect valve clearance adjustment
 - Burned or bent valve
 - Incorrect valve timing
 - Broken valve spring
 - Uneven valve seating
- Cylinder head:
 - Leaking or damaged cylinder head gasket
 - Warped or cracked cylinder head
 - Loose spark plug
- Worn cylinder, piston or piston rings (page 13-16)

Compression too high, overheating or knocking

- Excessive carbon build-up on piston crown or on combustion chamber

Excessive smoke

- Cylinder head:
 - Worn valve stem or valve guide
 - Damaged stem seal
- Worn cylinder, piston or piston rings (page 13-16)

Excessive noise

- Cylinder head:
 - Incorrect valve clearance adjustment
 - Sticking valve or broken valve spring
 - Damaged or worn camshaft
 - Loose or worn cam chain
 - Worn or damaged cam chain
 - Worn or damaged cam chain tensioner
 - Worn cam sprocket teeth
- Worn cylinder, piston or piston rings (page 13-16)


Rough idle

- Low cylinder compression

CYLINDER COMPRESSION TEST

Warm the engine to normal operating temperature. Stop the engine and remove the all direct ignition coil/spark plug caps and spark plugs (page 4-10).

Connect the ignition switch 2P (Brown) and right handlebar switch 8P (White) connectors.

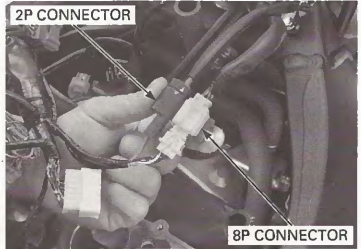

Install a compression gauge into the spark plug hole.

TOOL:

Compression gauge attachment

07RMJ-MY50100 or equivalent commercially available

Open the throttle all the way and crank the engine with the starter motor until the gauge reading stops rising.

The maximum reading is usually reached within 4 – 7 seconds.

Standard:


1,196 kPa (12.2 kgf/cm², 174 psi) at 210 rpm

Low compression can be caused by:

- Blown cylinder head gasket
- Improper valve clearance adjustment
- Valve leakage
- Worn piston ring or cylinder

High compression can be caused by:

- Carbon deposits in combustion chamber or on piston head

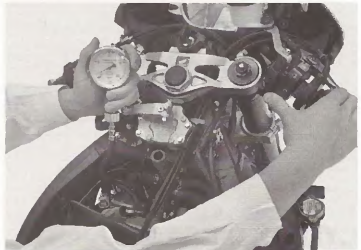


CYLINDER HEAD COVER REMOVAL

- For CMP sensor removal/installation (page 6-71).

Remove the following:

- Radiator (page 7-11)
- Air cleaner housing (page 6-52)
- PAIR control solenoid valve (page 6-78)
- Direct ignition coils (page 4-10)


Disconnect the CMP sensor 3P (Blue) connector.

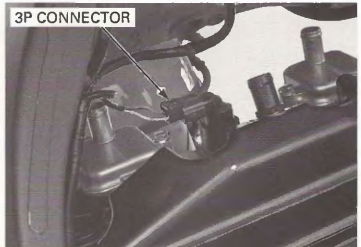

CYLINDER HEAD/VALVES

Remove the cylinder head cover bolts and washers.

BOLTS/WASHERS

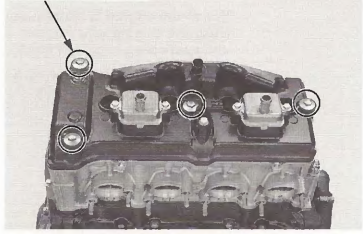

Remove the cylinder head cover from the cylinder head.




CYLINDER HEAD COVER DISASSEMBLY

Remove the cylinder head cover packing.


Remove the bolts and breather plate.

BOLTS

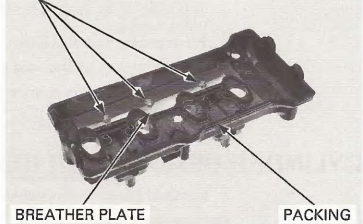

Remove the bolts and PAIR check valve cover.


COVER

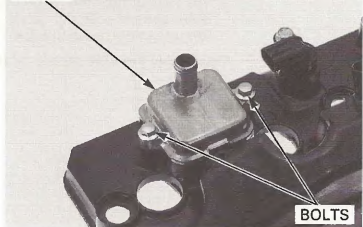

Remove the PAIR check valves from the cylinder head cover.


Check the PAIR check valve for wear or damage, replace if necessary.

PAIR CHECK VALVES

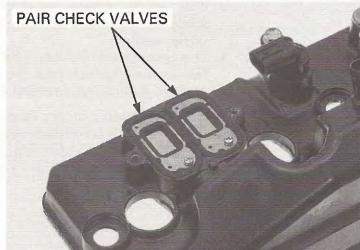

Remove the baffle plates from the cylinder head cover.

BAFFLE PLATES

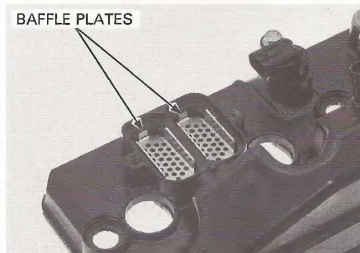


CAMSHAFT REMOVAL

Remove the cylinder head cover (page 9-7).


Remove the timing hole cap and O-ring.

TIMING HOLE CAP/O-RING

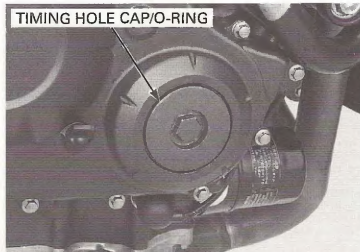

Turn the crankshaft clockwise and align the "T" mark with the index mark on the right crankcase cover.

INDEX MARK


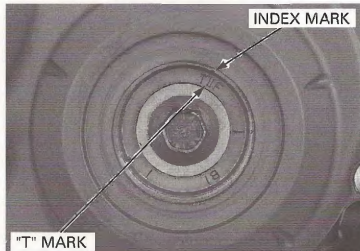


"T" MARK

CYLINDER HEAD/VALVES

- The inside punch mark of the intake cam sprocket must be flush with the cylinder head upper surface.
- The cam sprocket outside timing marks ("IN" and "EX") must be flush with the cylinder head upper surface and facing outward as shown.

If the timing marks on the cam sprockets are facing inward, turn the crankshaft clockwise one full turn (360°) and realign the timing marks with the cylinder head surface so they are facing outward.

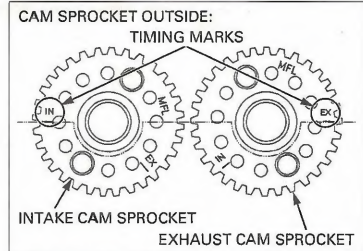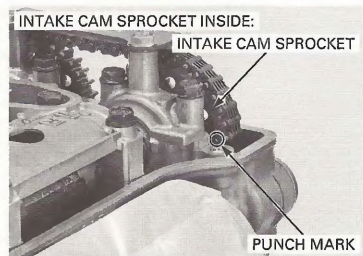


Remove the cam chain tensioner lifter bolt and sealing washer.



Turn the tensioner lifter shaft fully in (clockwise) and secure it using the tensioner stopper to prevent damaging the cam chain.

TOOL:
Tensioner stopper

070MG-0010100 or
07AMG-MFJA100
(U.S.A. only)

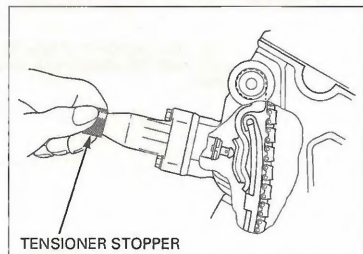

Remove the cam sprocket bolts from the intake and exhaust camshafts.



Turn the crankshaft clockwise one full turn (360°), remove the other cam sprocket bolts from the camshafts.

NOTE:


Be careful not to drop the cam sprocket bolts and cam sprocket into the crankcase.

Remove the bolts and cam chain guide B.

Remove the cam sprockets from the camshafts.

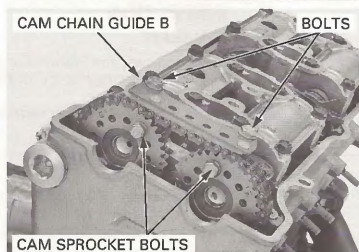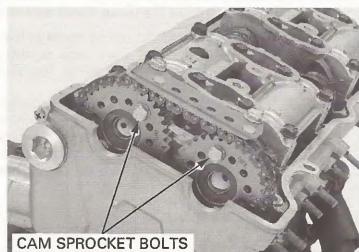

If you plan to replace the camshaft and/or CMP sensor rotor, loosen the CMP sensor rotor bolts.

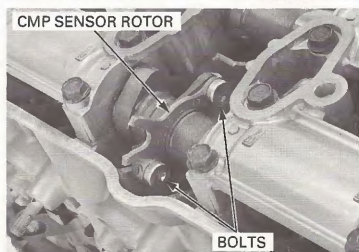


Suspend the cam chain with a piece of wire to prevent the chain from falling into the crankcase.

Loosen and remove the camshaft holder bolts/washers, then remove the camshaft holders and camshafts.

NOTE:

From outside to inside, loosen the bolts in a criss-cross pattern in several steps or the camshaft holder might break.


Do not forcibly remove the dowel pins from the camshaft holders.

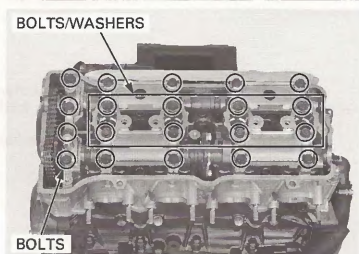

CYLINDER HEAD/VALVES

Remove the valve lifters and shims.

- Be careful not to damage the valve lifter bore.
- The shim may stick to the inside of the valve lifter. Do not allow the shims to fall into the crankcase.
- Mark all valve lifters and shims to ensure correct reassembly in their original locations.
- The valve lifter can be easily removed with a valve lapping tool or magnet.
- The shims can be easily removed with a tweezers or magnet.

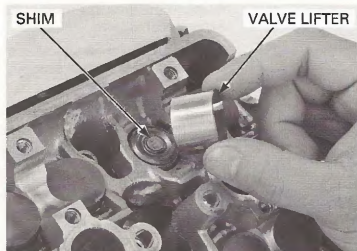

INSPECTION


CAMSHAFT

Check the cam and journal surfaces of the camshaft for scoring, scratches or evidence of insufficient lubrication.

Check the oil holes in the camshaft for clogging.

Support both sides of the camshaft (at journals) with V-blocks and check the camshaft runout with a dial gauge.

SERVICE LIMIT: 0.05 mm (0.002 in)

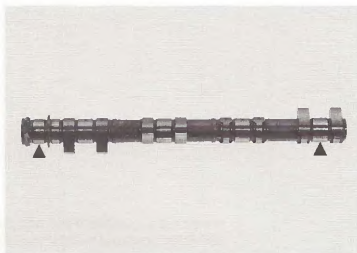


Using a micrometer, measure each cam lobe height.

SERVICE LIMITS:

IN: 37.32 mm (1.469 in)


EX: 36.56 mm (1.439 in)

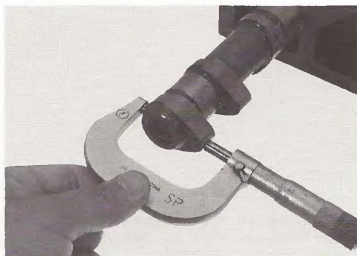

CAMSHAFT HOLDERS


Inspect the bearing surface of each camshaft holder for scoring, scratches, or evidence of insufficient lubrication.

Inspect the oil orifices of the holders for clogging.

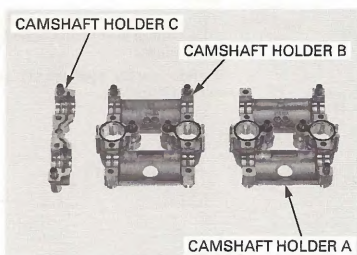


CAM CHAIN GUIDE B

Inspect the cam chain slipper surface of the cam chain guide B for wear or damage.

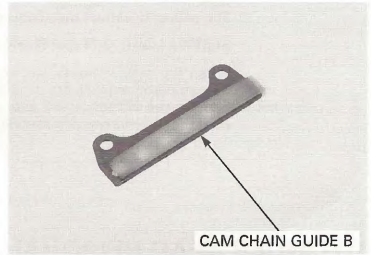**CAMSHAFT OIL CLEARANCE**

Do not rotate the camshaft when using plastigauge.

Wipe any oil from the journals of the camshaft, cylinder head and camshaft holders. Lay a strip of plastigauge lengthwise on top of each camshaft journal.

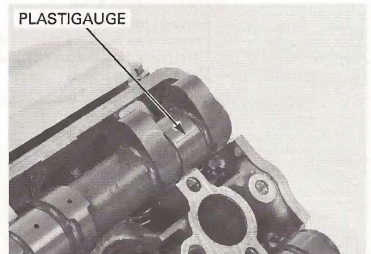

Be sure the dowel pins in the camshaft holder align the holes in the cylinder head.

Install each camshaft holder to the correct locations with the identification marks.

- No mark: right camshaft holder
- "R" mark: center camshaft holder
- "L" mark: left camshaft holder

Apply oil to the threads and seating surfaces of the camshaft holder bolts.

Install the holder bolts with the eight sealing washers.

Finger tighten the bolts.



Gradually tighten the camshaft holder bolts until the camshaft holders lightly contact the cylinder head surface.

NOTICE

Failure to tighten the camshaft holder in a criss-cross pattern might cause a camshaft holder to break.

Tighten all camshaft holder bolts in the numerical order cast on the camshaft holders.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

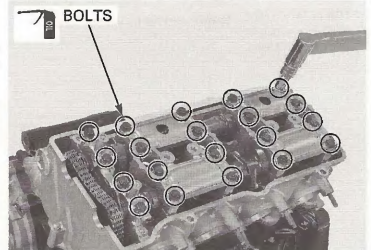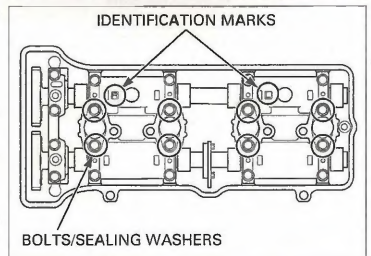

CYLINDER HEAD/VALVES


Remove the camshaft holders and measure the width of each plastigauge.

The widest thickness determines the oil clearance.

SERVICE LIMIT: 0.10 mm (0.004 in)

When the service limits are exceeded, replace the camshaft and recheck the oil clearance.

Replace the cylinder head and camshaft holders as a set if the clearance still exceeds the service limit.

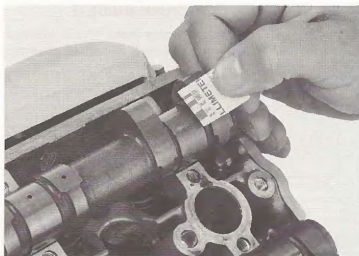


CYLINDER HEAD REMOVAL


Remove the following:

- Engine (page 8-4)
- Thermostat housing (page 7-8)
- Cam chain tensioner lifter (page 9-37)
- Camshaft (page 9-9)

Remove the bolt and knock sensor connector stay.

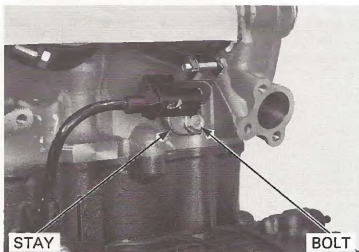


Remove the bolts.

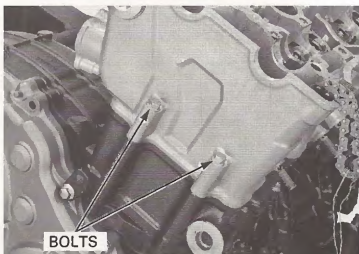


Loosen the nuts in a crisscross pattern in two or three steps.

Remove the cylinder head nuts and washers.

Remove the cylinder head.

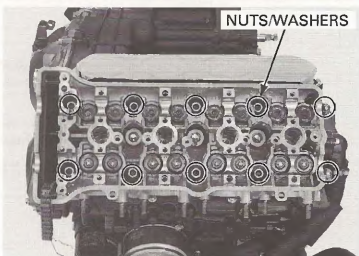


Remove the gasket and dowel pins.

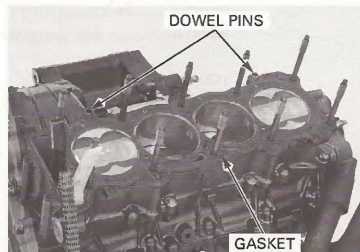

Remove the following:

- Right crankcase cover (page 10-5)
- Starter clutch (page 10-23)


Remove the bolt, cam chain tensioner A and collar. Remove the bolt, washer and cam chain guide A. Remove the cam chain and timing sprocket from the crankshaft.

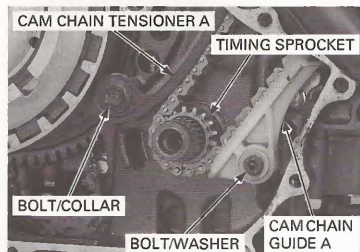


CYLINDER HEAD DISASSEMBLY

Remove the cylinder head (page 9-14).

Remove the bolts, insulators and O-rings.

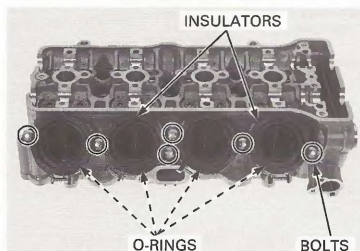

Remove the bolt, sealing washer and cam chain tensioner B from the cylinder head.

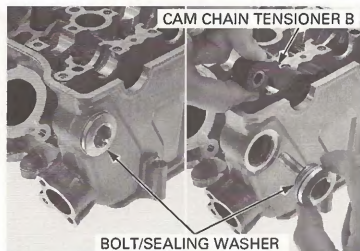

CYLINDER HEAD/VALVES


Remove the spark plugs from the cylinder head.

Install the tappet hole protector into the valve lifter bore.

TOOL:


Tappet hole protector

07HMG-MR70002

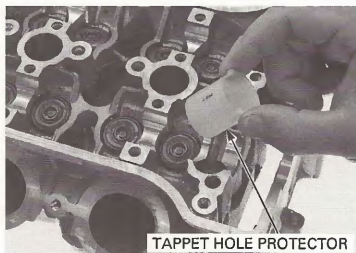

TAPPET HOLE PROTECTOR

An equivalent tool can easily be made from a plastic 35 mm film container as shown.

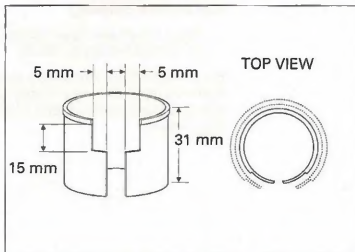

To prevent loss of tension, do not compress the valve springs more than necessary to remove the cotters.

Remove the valve spring cotters using the special tools as shown.


TOOLS:

Valve spring compressor

07757-0010000

Valve spring compressor attachment


07959-KM30101

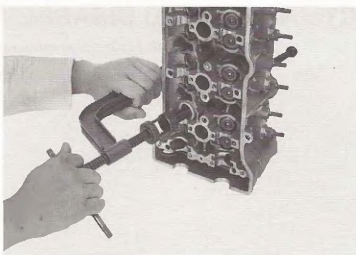

Mark all parts during disassembly so they can be placed back in their original locations.

Remove the following:

- Spring retainer
- Inner/outer valve springs (IN)
- Valve spring (EX)
- Valve
- Stem seal
- Valve spring seat

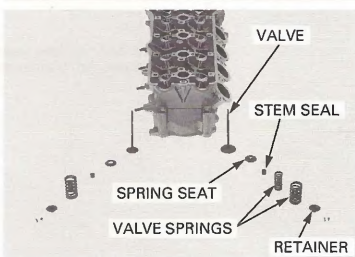


CYLINDER HEAD INSPECTION

CYLINDER HEAD


Avoid damaging the gasket surface.

Remove carbon deposits from the combustion chambers. Check the spark plug hole and valve areas for cracks.

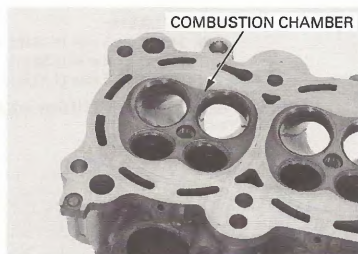

Check the cylinder head for warpage with a straight edge and feeler gauge.

SERVICE LIMIT: 0.10 mm (0.004 in)

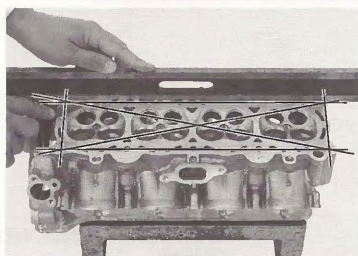


VALVE LIFTER BORE

Inspect each valve lifter bore for scratches or abnormal wear.

Measure each valve lifter bore I.D.

SERVICE LIMITS:

IN/EX: 26.04 mm (1.025 in)

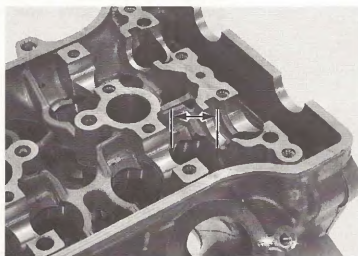

VALVE LIFTER

Inspect each valve lifter for scratches or abnormal wear.

Measure the each valve lifter O.D.

SERVICE LIMITS:

IN/EX: 25.97 mm (1.022 in)



VALVE SPRING

Measure the free length of the inner and outer valve springs.

SERVICE LIMITS:

 
IN: Inner: 34.5 mm (1.36 in)

Outer: 38.2 mm (1.50 in)

EX: 38.9 mm (1.53 in)

Replace the springs if they are shorter than the service limits.

IN:




EX:



CAM CHAIN TENSIONER/CAM CHAIN GUIDE

Inspect the cam chain tensioner A and cam chain guide A for excessive wear or damage, replace them if necessary.


CAM CHAIN TENSIONER A

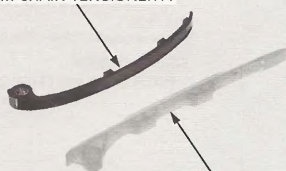

CAM CHAIN GUIDE A

Inspect the cam chain tensioner B for excessive wear or damage, replace it if necessary.

CAM CHAIN TENSIONER B

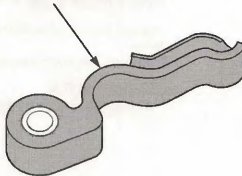

VALVE/VALVE GUIDE


Check that the valve moves smoothly in the guide. Inspect each valve for bending, burning or abnormal stem wear.

Measure and record each valve stem O.D.

SERVICE LIMITS:

IN: 4.465 mm (0.1758 in)

EX: 3.955 mm (0.1557 in)

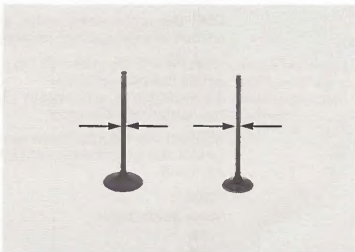

Ream the guides to remove any carbon deposits before checking clearances.

Insert the reamer from the combustion chamber side of the cylinder head and always rotate the reamer clockwise.

TOOLS:

Valve guide reamer

IN (4.508 mm):

07HMH-ML00101

EX (4.008 mm):

07MMH-MV90100

U.S.A. TOOLS:


Valve guide reamer

IN (4.5 mm):

07HMH-ML0010B

EX (4.0 mm):

07MMH-MV9010A

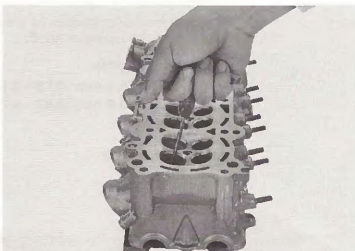

Measure and record each valve guide I.D.

SERVICE LIMITS:

IN: 4.54 mm (0.179 in)


EX: 4.04 mm (0.159 in)

Subtract each valve stem O.D. from the corresponding guide I.D. to obtain the stem-to-guide clearance.

SERVICE LIMITS:

IN: 0.075 mm (0.0030 in)

EX: 0.085 mm (0.0033 in)

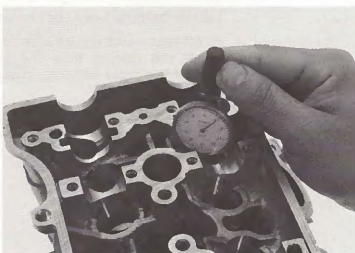

Reface the valve seats whenever the valve guides are replaced (page 9-22).

If the stem-to-guide clearance is out of standard, determine if a new guide with standard dimensions would bring the clearance within tolerance. If so, replace any guides as necessary and ream to fit.

If the stem-to-guide clearance exceeds the service limit with the new guides, replace the valves and guides.

VALVE GUIDE REPLACEMENT

Do not use a torch to heat the cylinder head; it may cause warping.

Chill the replacement valve guides in the freezer section of a refrigerator for about an hour.

Heat the cylinder head to 100 – 150°C (212 – 302°F) with a hot plate or oven.

To avoid burns, wear heavy gloves when handling the heated cylinder head.

Support the cylinder head and drive out the valve guides from combustion chamber side of the cylinder head.

TOOLS:

Valve guide driver

IN: 07HMD-ML00101
EX: 07JMD-KY20100

Drive in the valve guides to the specified depth from the top of the cylinder head.

SPECIFIED DEPTH:

IN: 15.1 – 15.4 mm (0.59 – 0.61 in)
EX: 15.7 – 16.0 mm (0.62 – 0.63 in)

TOOL:

Valve guide driver

07743-0020000
(Not available in U.S.A.)

NOTE:

U.S.A. only use the existing valve guide driver and install the guide to the specified height.

Let the cylinder head cool to room temperature.

Ream new valve guides after installation.

Insert the reamer from the combustion chamber side of the head and also always rotate the reamer clockwise.

TOOLS:

Valve guide reamer

IN (4.508 mm): 07HMH-ML00101
EX (4.008 mm): 07MMH-MV90100




U.S.A. TOOLS:

Valve guide reamer

IN (4.5 mm): 07HMH-ML0010B
EX (4.0 mm): 07MMH-MV9010A


Clean the cylinder head thoroughly to remove any metal particles.

Reface the valve seat (page 9-22).

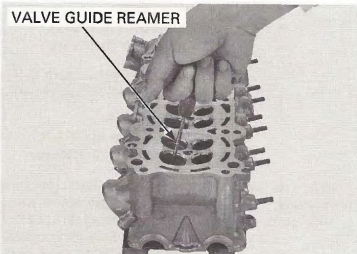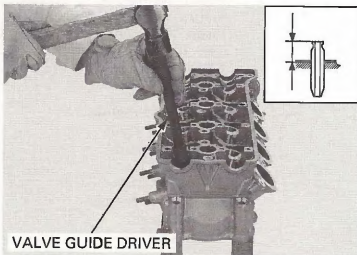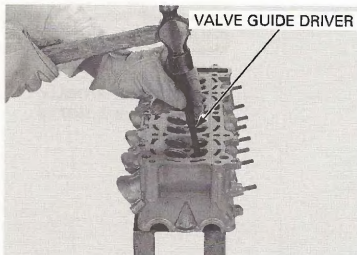

VALVE SEAT INSPECTION/REFACING

Clean the intake and exhaust valves thoroughly to remove carbon deposits.
Apply a light coating of Prussian Blue to the valve seats.
Tap the valves and seats using a rubber hose or other hand-lapping tool.

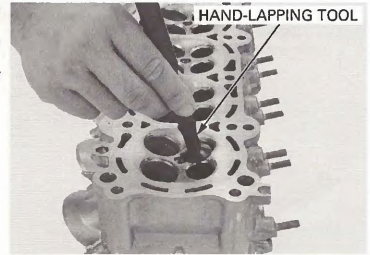

Remove the valve and inspect the valve seat face. The valve seat contact should be within the specified width and even all around the circumference.

Standard:

IN/EX: 0.90 – 1.10 mm (0.035 – 0.043 in)


SERVICE LIMIT:

IN/EX: 1.5 mm (0.06 in)

NOTE:


- When the service limits are exceed, replace the intake valve and recheck the valve seat width.

If the seat width is not within specification, reface the valve seat (page 9-22).

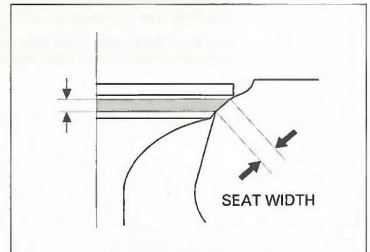


Inspect the valve seat face for:

- Uneven seat width:
 - Replace the valve and reface the valve seat.
- Damaged face:
 - Replace the valve and reface the valve seat.

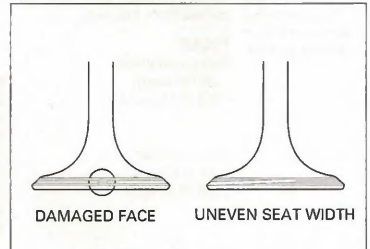

The valves cannot be ground. If a valve face is burned or badly worn or if it contacts the seat unevenly, replace the valve.

- Contact area (too high or too low)
 - Reface the valve seat.

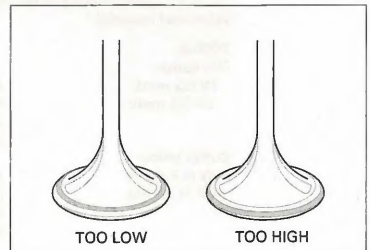


CYLINDER HEAD/VALVES

VALVE SEAT REFACING


Follow the refacing manufacturer's operating instructions.

Valve seat cutters/grinders or equivalent valve seat refacing equipment are recommended to correct worn valve seats.

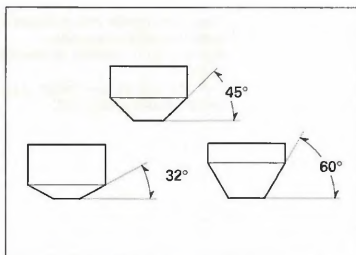

If the contact area is too high on the valve, the seat must be lowered using a 32° flat cutter.

If the contact area is too low on the valve, the seat must be raised using a 60° interior cutter.

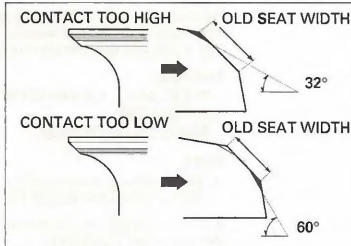

Reface the seat with a 45° cutter whenever a valve guide is replaced.

Use a 45° cutter to remove any roughness or irregularities from the seat.

TOOLS:

Valve seat cutter

IN (33 mm):

EX (24.5 mm):

07780-0010800

07780-0010100

or equivalent commercially available

Cutter holder


IN (4.5 mm):

EX (4.0 mm):

07781-0010600

07781-0010500

or equivalent commercially available

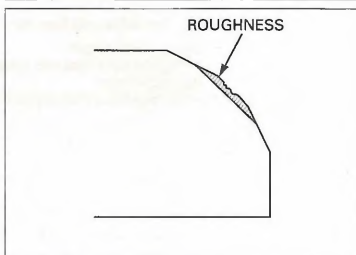

Use a 32° cutter to remove the top 1/4 of the existing valve seat material.

TOOLS:

Flat cutter

IN (33 mm):

EX (25 mm):

07780-0012900

07780-0012000

or equivalent commercially available

Cutter holder


IN (4.5 mm):

EX (4.0 mm):

07781-0010600

07781-0010500

or equivalent commercially available

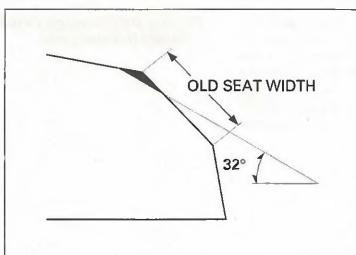

Use a 60° cutter to remove the bottom 1/4 of the old seat.

TOOLS:

Interior cutter

IN (34 mm):

EX (26 mm):

07780-0014700

07780-0014500

or equivalent commercially available

Cutter holder


IN (4.5 mm):

EX (4.0 mm):

07781-0010600

07781-0010500


or equivalent commercially available

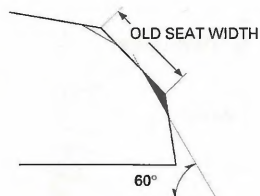

Using a 45° seat cutter, cut the seat to the proper width.

Make sure that all pitting and irregularities are removed.

Refinish if necessary.

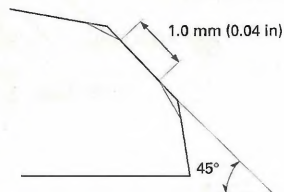

INTAKE SIDE:

After refacing, wash the cylinder head and valves.

NOTICE

- Do not lap the intake valves. They are titanium and have a thin oxide coating. Lapping will damage this coating.
- Replace the intake valve with new ones.


EXHAUST SIDE:

After cutting the exhaust seat, apply lapping compound to the exhaust valve face, and lap the exhaust valve using light pressure.


After lapping, wash all residual compound off the cylinder head and valve.

NOTICE

- Excessive lapping pressure may deform or damage the seat.
- Change the angle of lapping tool frequently to prevent uneven seat wear.
- Do not allow any lapping compound to enter the guides.

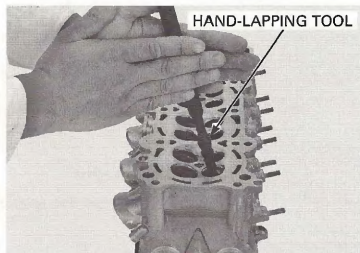

CYLINDER HEAD ASSEMBLY

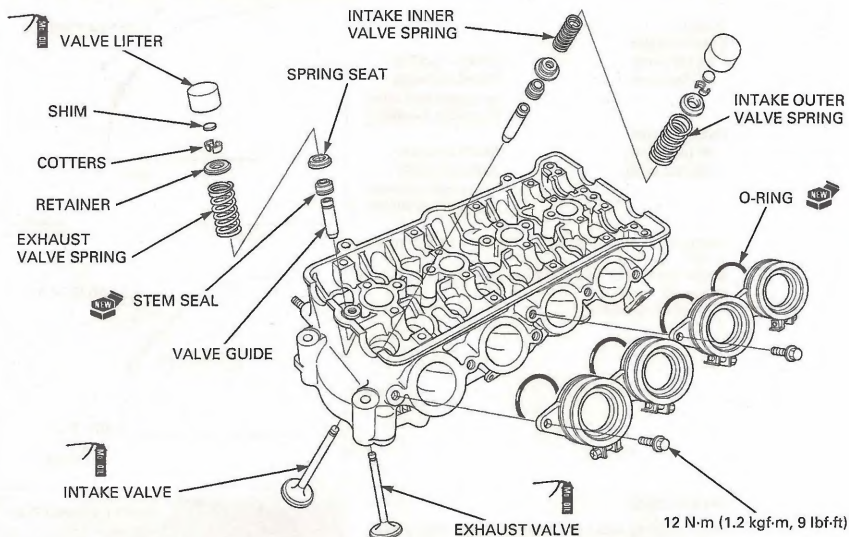

Blow through all oil passages in the cylinder head with compressed air.


Install the tappet hole protector into the valve lifter bore.

TOOL:

Tappet hole protector

07HMG-MR70002


Make your own tool, See page 9-16.

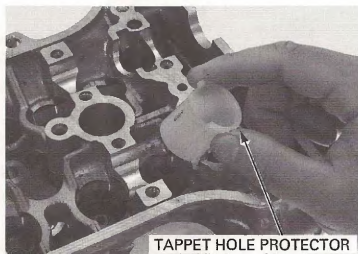

Install the valve spring seats.
Install new stem seals.

Lubricate the valve stems with molybdenum oil solution.


Insert the valve into the valve guide while turning it slowly to avoid damage to the stem seal.

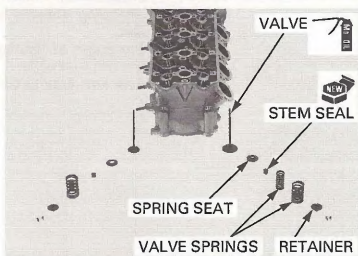


Install the valve springs with the tightly wound coils facing the combustion chamber.

- The valve springs have paint marks
 - IN (inner): Pink
 - IN (outer): Gray
 - EX: Yellow

Install the valve spring retainer.

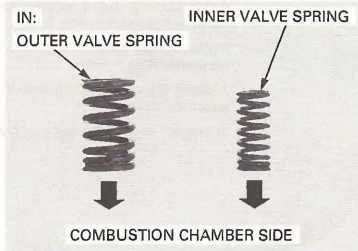

EX:

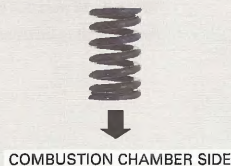

Grease the cotters to ease installation.


Install the valve cotters using the special tool as shown.

NOTE:

To prevent loss of tension, do not compress the valve spring more than necessary.


TOOLS:

Valve spring compressor	07757-0010000
Valve spring compressor attachment	07959-KM30101

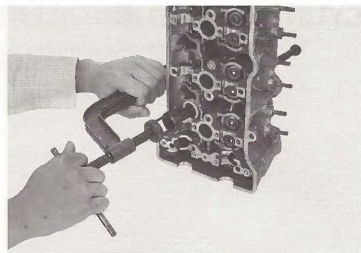

Support the cylinder head above the work bench surface to prevent possible valve damage.

Tap the valve stems gently with plastic hammer and shaft as shown to seat the cotters firmly.

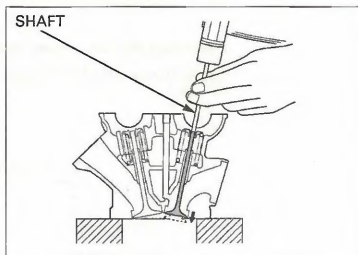


CYLINDER HEAD/VALVES

Apply locking agent to the cam chain tensioner B pivot bolt threads (page 1-18).

Install a new sealing washer, bolt and cam chain tensioner B as shown.

Tighten the cam chain tensioner B pivot bolt to the specified torque.

TORQUE: 74 N·m (7.5 kgf·m, 55 lbf·ft)

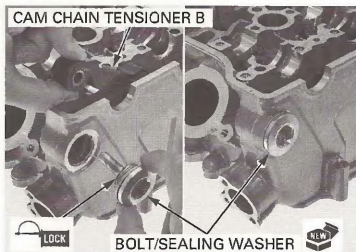


Install new O-rings to the insulator grooves.

Install the insulators to the cylinder head and tighten the bolts to the specified torque.


TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

For spark plug installation (page 4-12).

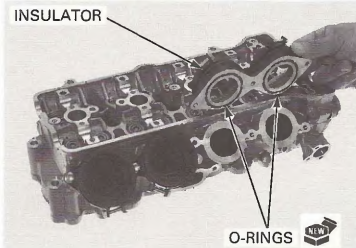


CYLINDER HEAD INSTALLATION

Install the timing sprocket by aligning the wide teeth between the crankshaft and sprocket.

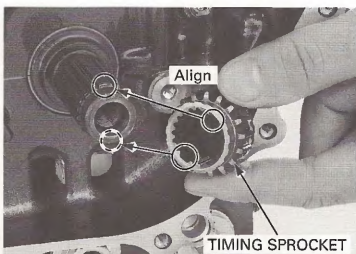


Install the collar to the cam chain guide A.

Apply locking agent to the cam chain guide A bolt threads.

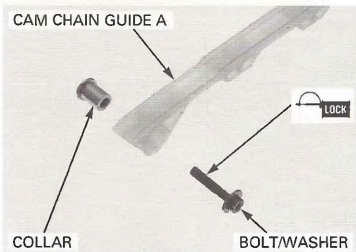

Install the collar to the cam chain tensioner A.

Apply locking agent to the cam chain tensioner A pivot bolt threads (page 1-18).

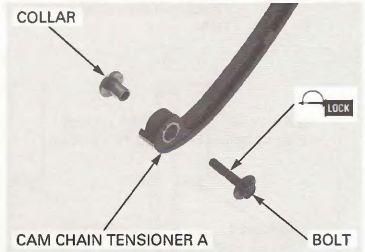

Install the cam chain.

Install the cam chain guide A and tighten the bolt to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)



Install the cam chain tensioner A and tighten the bolt to the specified torque.

TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)

Install the following:



- Starter clutch (page 10-26)
- Right crankcase cover (page 10-30)

Install the dowel pins and a new cylinder head gasket as shown.

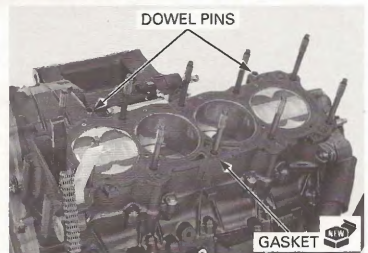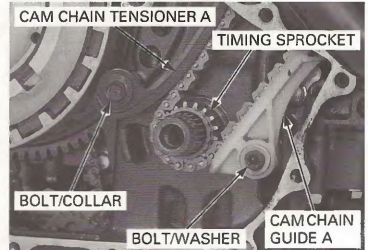


CYLINDER HEAD/VALVES

Check that the cylinder stud bolt height from the bolt head to cylinder gasket surface is within specification.

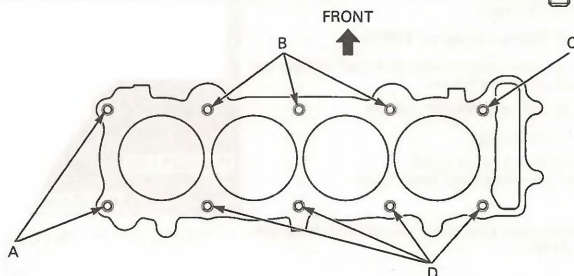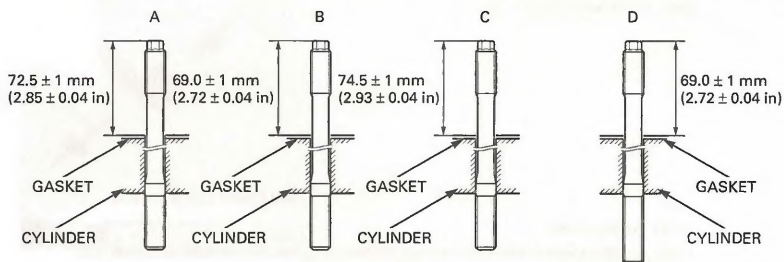

Install the cylinder head onto the cylinder block while aligning the cam chain tensioner A and B as shown.

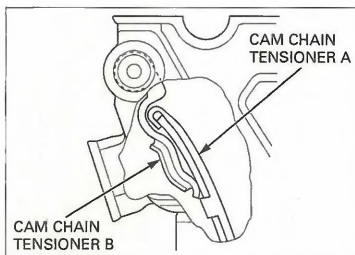

Apply oil to the stud bolt threads.

Apply oil to the washers and install them.

Apply oil to the cylinder head nut threads and seating surface and install them.

Tighten the cylinder head nuts as follows:


1. Tighten the cylinder head nuts to the specified torque in the specified sequence as shown.

TORQUE: 25 N·m (2.5 kgf-m, 18 lbf-ft)


2. Further tighten the cylinder head nuts to the specified torque in the specified sequence as shown.

Further tighten the cylinder head nuts 135° .

TORQUE: 25 N·m (2.5 kgf-m, 18 lbf-ft) + 135°

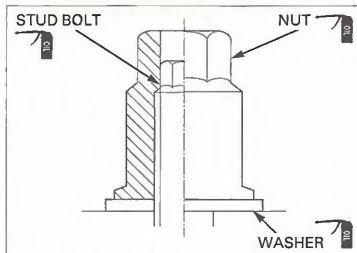


TIGHTENING SEQUENCE:

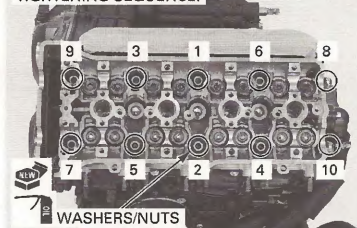

3. Loosen the cylinder head nuts in a crisscross pattern in two or three steps and remove them.

4. Tighten the stud bolts to the specified torque.

TORQUE: 20 N·m (2.0 kgf-m, 15 lbf-ft)

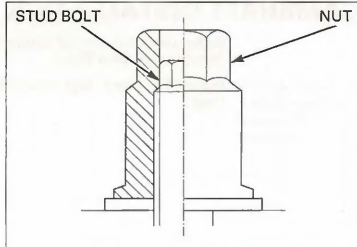

5. Tighten the cylinder head nuts to the specified torque in the specified sequence as shown.


TORQUE: 25 N·m (2.5 kgf-m, 18 lbf-ft)

6. Further tighten the cylinder head nuts to the specified torque in the specified sequence as shown.

Further tighten the cylinder head nuts 135° .


TORQUE: 25 N·m (2.5 kgf-m, 18 lbf-ft) + 135°

TIGHTENING SEQUENCE:

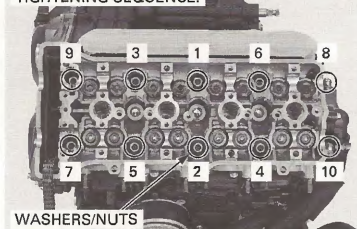

CYLINDER HEAD/VALVES


Tighten the bolts securely.

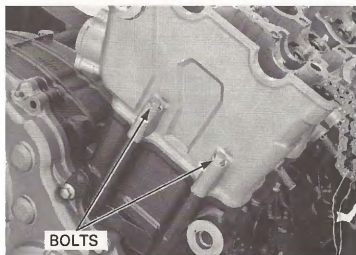

Install the knock sensor connector stay and tighten the bolt securely.

Install the following:

- Camshaft (page 9-30)
- Cam chain tensioner lifter (page 9-37)
- Thermostat housing (page 7-10)

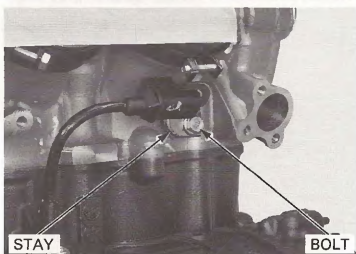


CAMSHAFT INSTALLATION

Apply molybdenum oil solution to the sliding surface of each valve lifter.


Install the shims and valve lifters in their original locations.

Install the shims and valve lifters to the cylinder head.

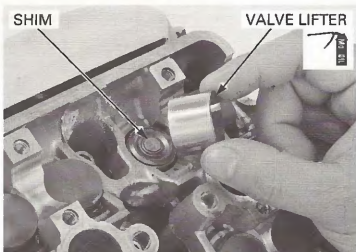

Each camshaft has an identification mark.

- "IN": Intake camshaft
- "EX": Exhaust camshaft

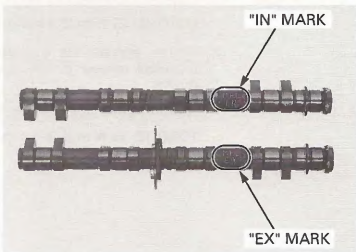


Exhaust camshaft only:


Apply locking agent to the CMP sensor rotor bolt threads.

Install the CMP sensor rotor with the "LEFT SIDE" mark facing left side as shown.


Install the CMP sensor rotor and bolts.

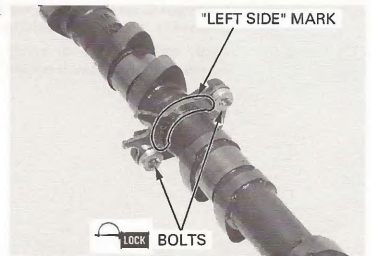

Turn the crankshaft clockwise and align the "T" mark with the index mark on the right crankcase cover.

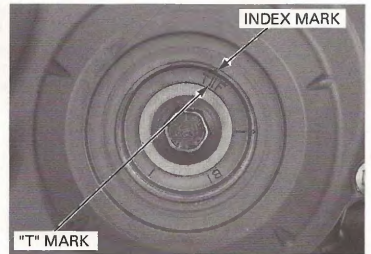


Apply molybdenum oil solution to the camshaft journal of the cylinder head.

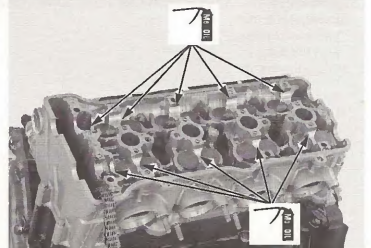

Install the intake and exhaust camshafts. Each camshaft has an identification mark.


- "IN": Intake camshaft
- "EX": Exhaust camshaft

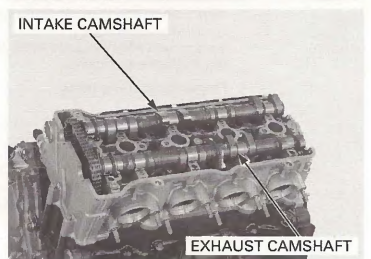

CYLINDER HEAD/VALVES


Coat new O-rings with oil and install them into the grooves in the camshaft holders.

Apply molybdenum oil solution to the camshaft journals of the camshaft holders.

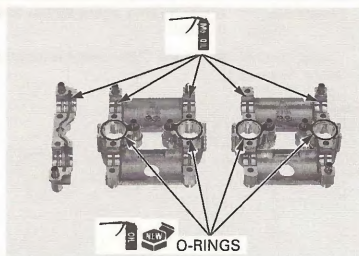


Note the correct locations with the identification marks as shown.

- No mark: right camshaft holder
- "R" mark: center camshaft holder
- "L" mark: left camshaft holder

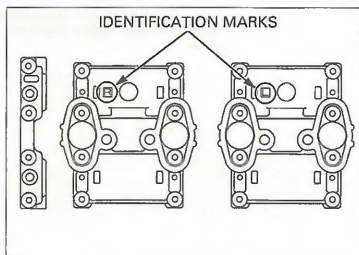

Be sure to align the dowel pins in the camshaft holder with the holes in the cylinder head.


Install each camshaft holder onto the camshafts.

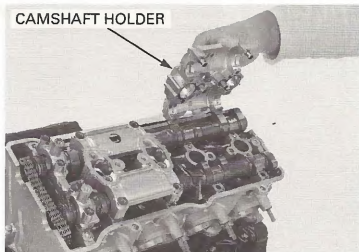

Apply oil to the threads and seating surfaces of the camshaft holder bolts.

Install the twenty holder bolts with new eight sealing washers as shown.

Finger tighten the bolts.

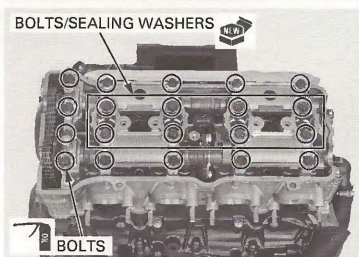

Gradually tighten the camshaft holder bolts until the camshaft holders lightly contact the cylinder head surface.

NOTICE

Failure to tighten the camshaft holder in a criss-cross pattern might cause a camshaft holder to break.


Tighten all camshaft holder bolts in the numerical order cast on the camshaft holders.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)


Install the cam sprockets to the camshaft.

- The inside punch mark of the intake cam sprocket must be flush with the cylinder head upper surface.
- The cam sprocket outside timing marks ("IN" and "EX") must be flush with the cylinder head upper surface and facing outward as shown.


BOLTS/WASHERS

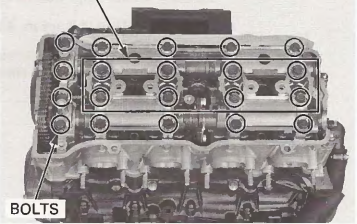

INTAKE CAM SPROCKET

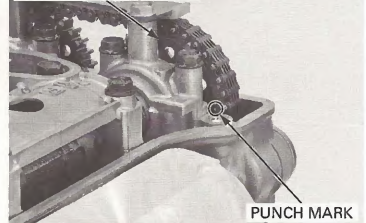

CAM SPROCKET OUTSIDE:
TIMING MARKS

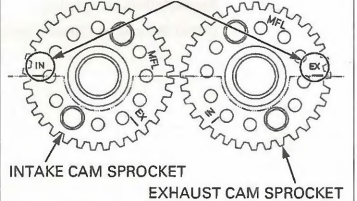

Apply locking agent to the cam sprocket bolt threads.


Tighten the cam sprocket bolts to the specified torque.

TORQUE: 20 N·m (2.0 kgf·m, 15 lbf·ft)

Turn the crankshaft clockwise one full turn (360°) and tighten the other cam sprocket bolts.

Install the cam chain guide B, and tighten the bolts.

CAM CHAIN GUIDE B

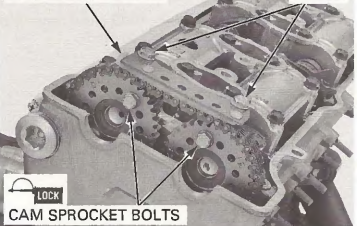


CYLINDER HEAD/VALVES


In case the CMP sensor rotor was removed, tighten the CMP sensor rotor bolt to the specified torque.

TORQUE: 12 N·m (1.2 kgf-m, 9 lbf-ft)

Turn the crankshaft clockwise one full turn (360°) and tighten the other CMP sensor rotor bolt.

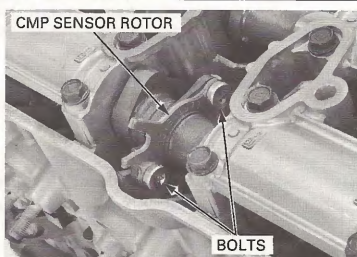

Remove the tensioner stopper from the cam chain tensioner lifter.

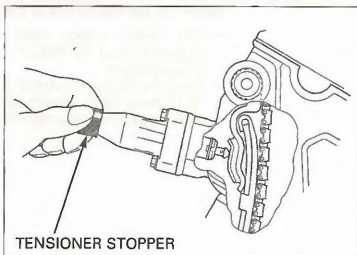

Install a new sealing washer and tighten the bolt securely.


Recheck the valve timing.

Install the cylinder head cover (page 9-35).




CYLINDER HEAD COVER ASSEMBLY

Install the PAIR check valve baffle plates into the cylinder head cover.

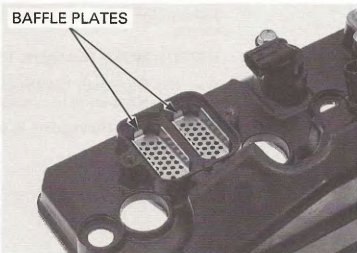

Install the PAIR check valves into the cylinder head cover.

PAIR CHECK VALVES

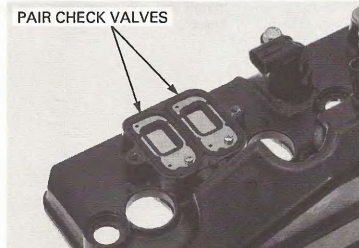


Apply locking agent to the PAIR check valve cover bolt threads.

Install the PAIR check valve cover and tighten the bolts to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

COVER

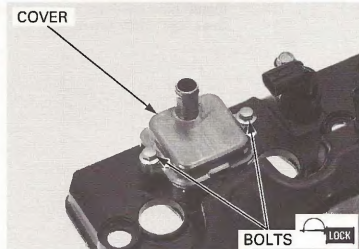

BOLTS



CYLINDER HEAD COVER INSTALLATION


Apply locking agent to the breather plate mounting bolt threads.

Install the breather plate and tighten the bolts to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

Install a new cylinder head packing into the groove of the cylinder head cover.


BOLTS

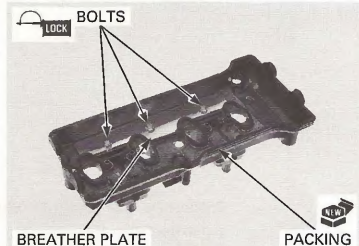

BREATHER PLATE

PACKING

Apply sealant to the cylinder head semi-circular cut-outs as shown.

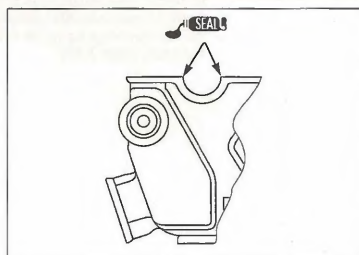


CYLINDER HEAD/VALVES

Install the cylinder head cover onto the cylinder head.




Install new washers to the cylinder head cover with their "UP" mark facing up.

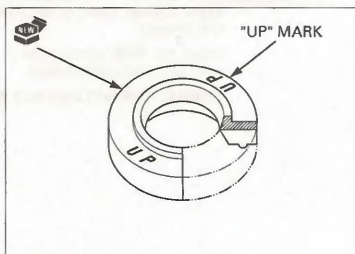

Install and tighten the cylinder head cover bolts to the specified torque.


TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)

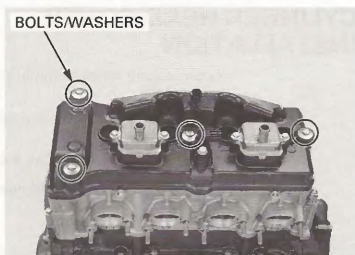

Connect the CMP sensor 3P (Blue) connector.

Install the following:

- Direct ignition coils (page 4-12)
- PAIR control solenoid valve (page 6-78)
- Air cleaner housing (page 6-54)
- Radiator (page 7-19)

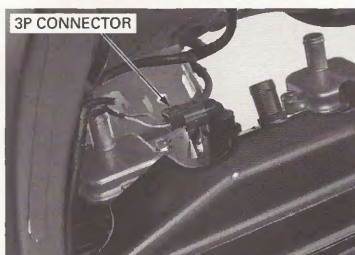

CAM CHAIN TENSIONER LIFTER

REMOVAL

Lift and support the fuel tank (page 4-5).

Remove the cam chain tensioner bolt and sealing washer.




BOLT/SEALING WASHER

Turn the tensioner shaft fully in (clockwise) and secure it using the tensioner stopper to prevent damaging the cam chain.

TOOL:


Tensioner stopper

070MG-0010100 or
07AMG-MFA100
(U.S.A. only)

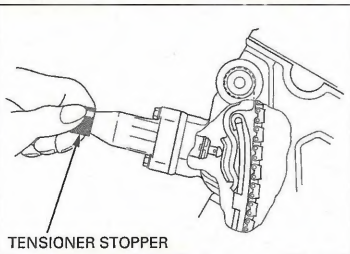

TENSIONER STOPPER

Remove the bolts, cam chain tensioner lifter and gasket.

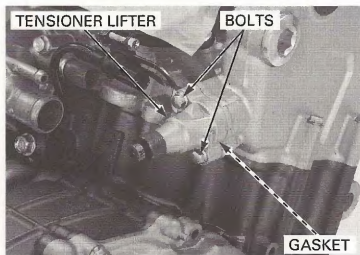

TENSIONER LIFTER

BOLTS


GASKET

INSTALLATION

*Note the installation
direction of the
gasket.*

Install a new gasket onto the cam chain tensioner lifter.

Install the cam chain tensioner lifter into the cylinder head.

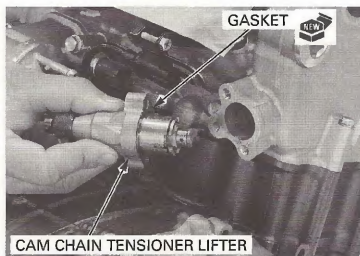

GASKET

CAM CHAIN TENSIONER LIFTER


CYLINDER HEAD/VALVES

Install and tighten the bolts securely.

Remove the tensioner stopper.

Install a new sealing washer and tighten the sealing bolt securely.


Remove the support and close the fuel tank (page 4-7).

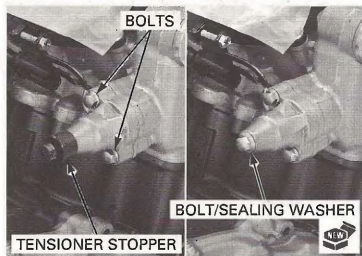

10. CLUTCH/STARTER CLUTCH/GEARSHIFT LINKAGE

COMPONENT LOCATION	10-2	CLUTCH	10-7
SERVICE INFORMATION	10-3	STARTER CLUTCH	10-23
TROUBLESHOOTING	10-4	GEARSHIFT LINKAGE	10-27
RIGHT CRANKCASE COVER REMOVAL	10-5	RIGHT CRANKCASE COVER INSTALLATION	10-30

COMPONENT LOCATION

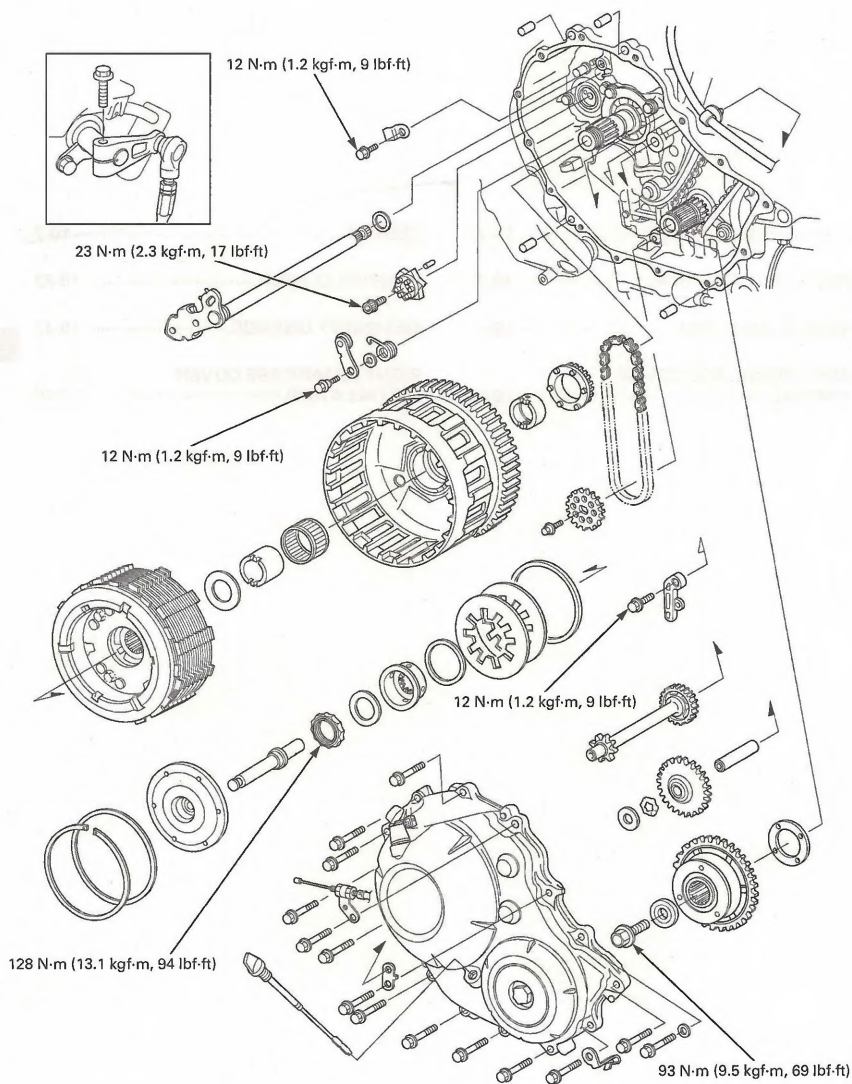

SERVICE INFORMATION

GENERAL

- This section covers service of the clutch, starter clutch and gearshift linkage. All service can be done with the engine installed in the frame.
- Engine oil viscosity and level have an effect on clutch disengagement. When the clutch does not disengage or the motorcycle creeps with clutch disengaged, inspect the engine oil level before servicing the clutch system.
- The primary drive gear and clutch outer guide inserts are select fit and identified by codes. Select replacement bearings from the code tables (page 10-16).



SPECIFICATIONS

ITEM				STANDARD	Unit: mm (in)
					SERVICE LIMIT
Clutch lever freeplay				10 – 20 (3/8 – 13/16)	–
Clutch	Spring free height			5.70 (0.224)	4.7 (0.19)
	Disc thickness	Disc A		3.72 – 3.88 (0.146 – 0.153)	3.6 (0.14)
		Disc B		3.22 – 3.38 (0.127 – 0.133)	3.1 (0.12)
		Disc C		3.22 – 3.38 (0.127 – 0.133)	3.1 (0.12)
	Plate warpage			–	0.30 (0.012)
Clutch outer guide A (Without ID mark)	I.D.		27.993 – 28.003 (1.1021 – 1.1025)	28.012 (1.1028)	
	O.D.		35.004 – 35.012 (1.3781 – 1.3784)	34.994 (1.3777)	
Clutch outer guide B (With ID mark)	I.D.		27.993 – 28.003 (1.1021 – 1.1025)	28.012 (1.1028)	
	O.D.		34.996 – 35.004 (1.3778 – 1.3781)	34.986 (1.3774)	
Primary driven gear I.D.	White		41.008 – 41.016 (1.6145 – 1.6148)	41.026 (1.6152)	
	Black		41.000 – 41.008 (1.6142 – 1.6145)	41.018 (1.6149)	
Oil pump drive sprocket guide	I.D.		28.000 – 28.021 (1.1024 – 1.1032)	28.030 (1.1035)	
	O.D.		34.975 – 34.991 (1.3770 – 1.3776)	34.965 (1.3766)	
Oil pump drive sprocket I.D.			35.025 – 35.145 (1.3789 – 1.3837)	35.155 (1.3841)	
Mainshaft O.D. at clutch outer guide			27.980 – 27.990 (1.1016 – 1.1020)	27.96 (1.101)	
Mainshaft O.D. at oil pump drive sprocket guide			27.980 – 27.990 (1.1016 – 1.1020)	27.96 (1.101)	
Starter driven gear boss O.D.			45.657 – 45.673 (1.7975 – 1.7981)	45.642 (1.7969)	

TORQUE VALUES

Clutch center lock nut	128 N·m (13.1 kgf·m, 94 lbf·ft)	Apply oil to the threads and seating surface. Stake
Oil pump drive chain guide mounting bolt	12 N·m (1.2 kgf·m, 9 lbf·ft)	Apply locking agent to the threads.
Shift drum center bolt	23 N·m (2.3 kgf·m, 17 lbf·ft)	ALOC bolt; replace with a new one.
Shift drum stopper arm pivot bolt	12 N·m (1.2 kgf·m, 9 lbf·ft)	Apply locking agent to the threads.
Starter clutch mounting bolt	93 N·m (9.5 kgf·m, 69 lbf·ft)	Apply oil to the threads and seating surface.
Gearshift spindle setting plate bolt	12 N·m (1.2 kgf·m, 9 lbf·ft)	Apply locking agent to the threads.
Timing hole cap	18 N·m (1.8 kgf·m, 13 lbf·ft)	Apply grease to the threads.

 TOOLS

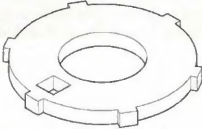Flywheel holder 07725-0040001  or equivalent commercially available in U.S.A.	Clutch holder 070MB-MFL0100  or 070MB-MFLA100 (U.S.A. only)
---	--

TROUBLESHOOTING

Clutch lever is too hard to pull in

- Damaged clutch lifter mechanism
- Faulty clutch lifter bearing
- Clutch lifter piece installed improperly

Clutch slips when accelerating

- Worn clutch disc
- Weak clutch springs
- Engine oil mixed with molybdenum or graphite additive

Clutch will not disengage or motorcycle creeps with clutch disengaged

- Clutch plate warped
- Loose clutch center lock nut
- Oil level too high
- Improper oil viscosity
- Damaged clutch lifter mechanism
- Clutch lifter piece installed improperly

Hard to shift

- Improper clutch operation
- Improper oil viscosity
- Bent shift fork
- Bent shift fork shaft (page 12-8)
- Bent fork claw (page 12-8)
- Damaged gearshift cam
- Loose stopper plate bolt
- Damaged stopper plate and pin
- Damaged gearshift spindle

Transmission jumps out of gear

- Worn shift drum stopper arm
- Weak or broken shift drum stopper arm return spring
- Loose stopper plate bolt
- Bent shift fork shaft
- Damaged gearshift cam
- Damaged or bent shift forks (page 12-8)
- Worn gear engagement dogs or slots (page 12-9)

Gearshift pedal will not return

- Weak or broken gearshift spindle return spring
- Bent gearshift spindle

Engine does not turn


- Faulty starter clutch
- Damaged reduction gear/shaft
- Damaged idle gear/shaft

RIGHT CRANKCASE COVER REMOVAL

Remove the following:


- Right middle cowl (page 3-10)
- Oil level dipstick (page 4-17)

Remove the bolt and clutch cable guide plate, then disconnect the clutch cable end from the clutch lifter lever.

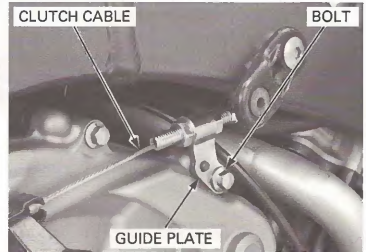


Loosen the right crankcase cover bolts crisscross pattern in two or three steps.

Remove the bolts, sealing washer, stay and wire guide.

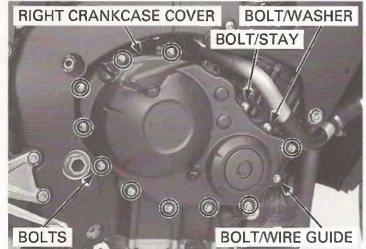


Be careful not to drop the clutch lifter lever return spring into the oil pan when removing the right crankcase cover.

Remove the right crankcase cover while turning the clutch lifter lever counterclockwise to disengage the lifter lever spindle from the lifter piece.

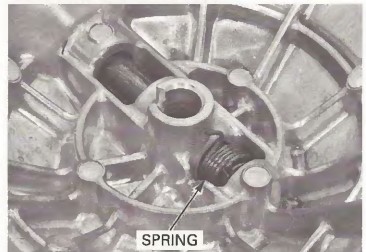

Be careful not to drop the thrust/wave washers into the oil pan.

Remove the thrust washer and wave washer from the starter idle gear shaft.

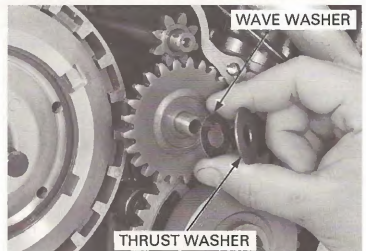


CLUTCH/STARTER CLUTCH/GEARSHIFT LINKAGE

Remove the four dowel pins.

Clean off any sealant from the right crankcase cover mating surfaces.

NOTE:


Do not turn the crankshaft counterclockwise after removing the right crankcase cover to prevent the starter reduction gear from being damaged.

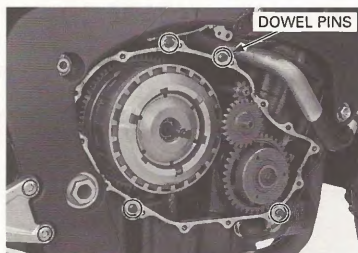


CLUTCH LIFTER LEVER

Remove the clutch lifter lever and return spring from the right crankcase cover.

Check the lifter lever spindle for wear or damage.
Check the return spring for fatigue or damage.

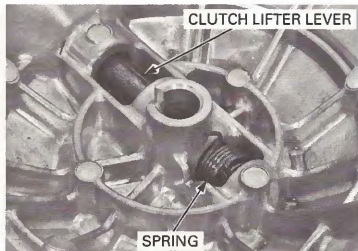


Check the oil seal and needle bearings for wear or damage.

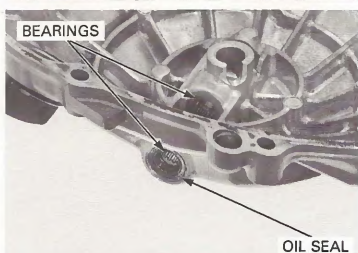

Install the clutch lifter lever and return spring to the right crankcase cover as shown.

- Align the return spring end with the clutch lifter lever groove.
- Align the return spring hook with the right crankcase cover groove.

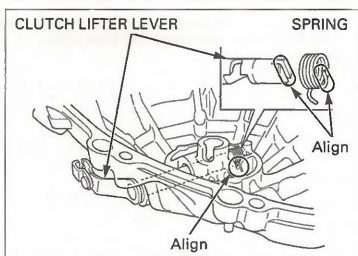

CLUTCH

REMOVAL


Remove the right middle cowl (page 3-10).

Remove the timing hole cap.




To ease removal of the clutch outer, turn the crankshaft clockwise and align the "T" mark with the index mark on the right crankcase cover.


Remove the right crankcase cover (page 10-5).

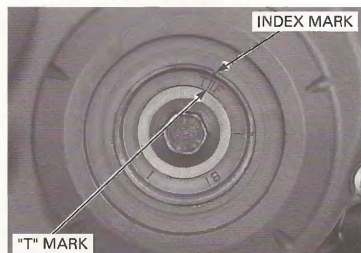

Remove the starter idle gear and shaft.

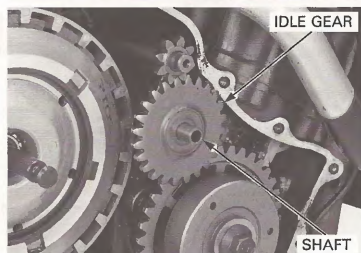


Remove the snap ring and stopper ring.

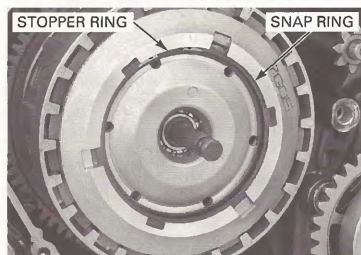


CLUTCH/STARTER CLUTCH/GEARSHIFT LINKAGE

Remove the clutch lifter piece and lifter plate.

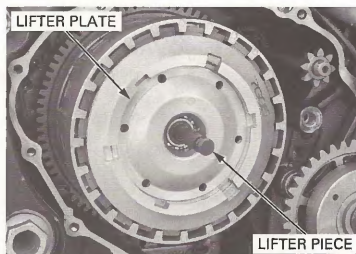

Be careful not to damage the mainshaft threads.

Unstake the clutch center lock nut.

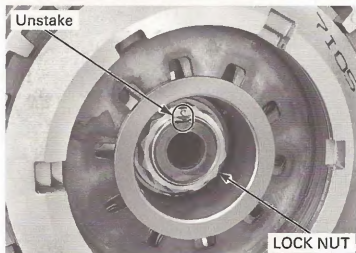


Hold the pressure plate with the special tool.
Remove the clutch center lock nut and washer.

TOOL:


Clutch holder

070MB-MFL0100 or
070MB-MFLA100
(U.S.A. only)

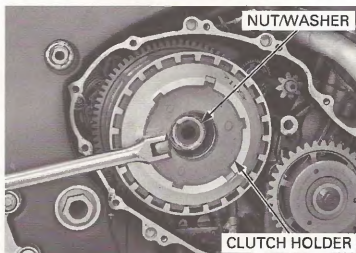


Discard the lock nut.

Remove the clutch spring holder, spring seat and two clutch springs.

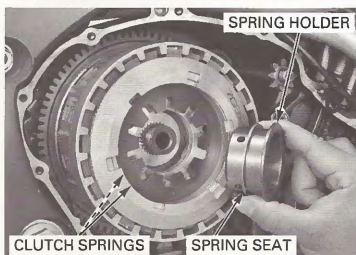


Remove the spring seat.

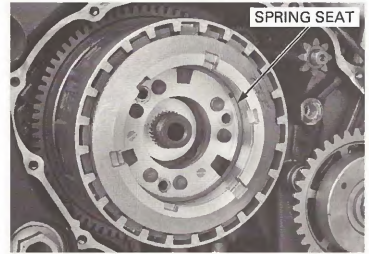


Remove the following:

- Pressure plate
- Spring seat
- Judder spring
- Clutch disc A
- Clutch plate A
- Seven clutch discs B
- Seven clutch plates B
- Clutch disc C
- Clutch center

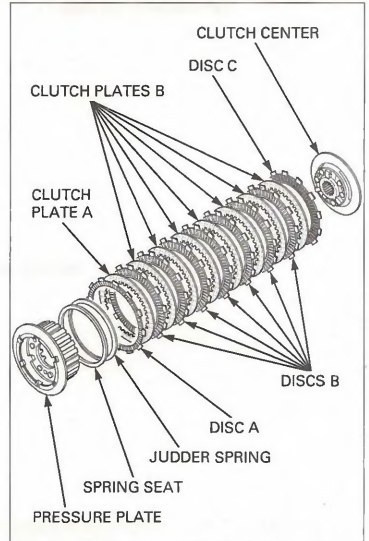


Remove the thrust washer.

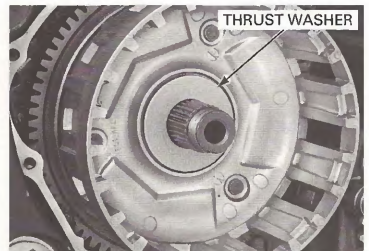


CLUTCH/STARTER CLUTCH/GEARSHIFT LINKAGE


Remove the clutch outer guide and needle bearing.

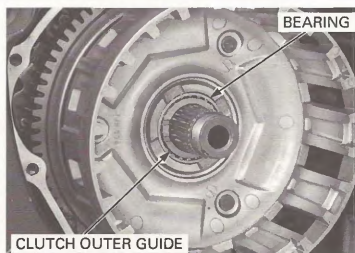

Remove the clutch outer.

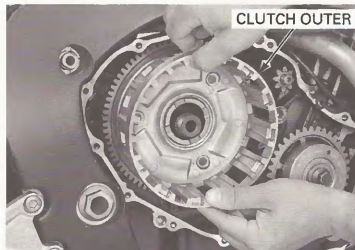


Remove the starter reduction gear from the crankcase.

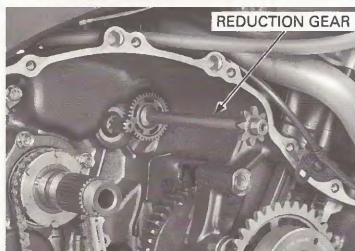


Be careful not to drop the parts into the oil pan.


Remove the bolt and oil pump drive chain guide.

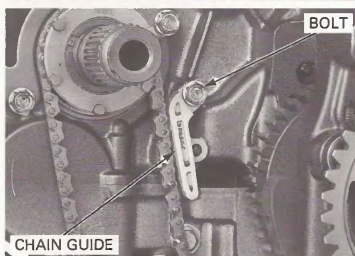

Remove the oil pump drive sprocket guide.

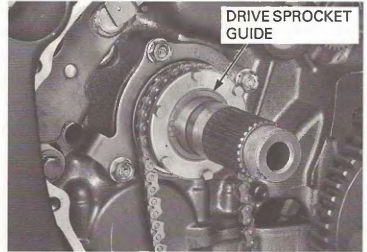

Remove the oil pump drive sprocket and chain.

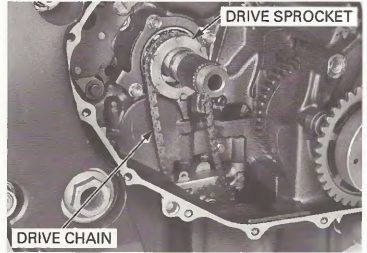

INSPECTION


Clutch lifter bearing

Turn the inner race of the lifter bearing with your finger.

The bearing should turn smoothly and quietly.

Also check that the outer race of the bearing fits tightly in the clutch lifter plate.

Replace the bearing if the inner race does not turn smoothly, quietly, or if the outer race fits loosely in the pressure plate.

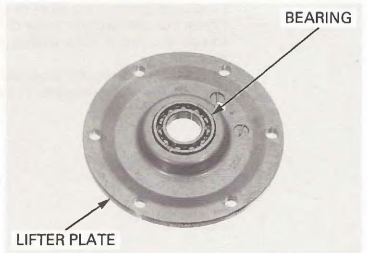

CLUTCH/STARTER CLUTCH/GEARSHIFT LINKAGE


Replace the clutch springs as a set.

Clutch spring

Check the clutch spring distortion.
Measure the height of the clutch spring.


SERVICE LIMIT: 4.7 mm (0.19 in)

CLUTCH SPRING

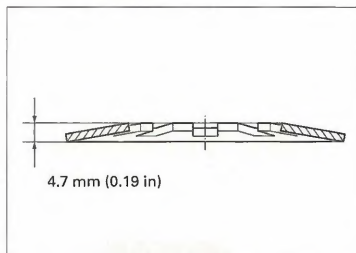


Pressure plate

Check the grooves for wear or damage.
Check the cam area for wear or damage.
Check the clutch disc sliding surface for wear or damage.
Check the six rivets for loosening.
Replace the pressure plate if necessary.

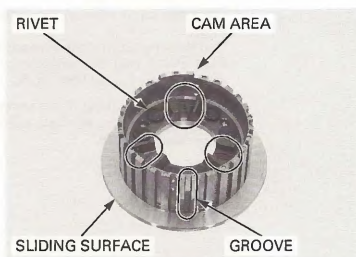

Clutch center

Check the cam area for wear or damage.
Check the clutch disc sliding surface for wear or damage.
Check the six rivets for loosening.
Replace the clutch center if necessary.

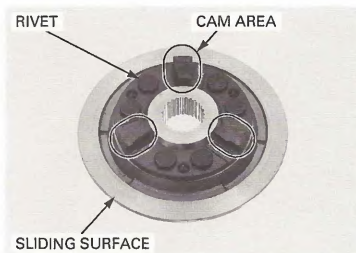

Clutch lifter piece

Check the clutch lifter piece for wear or damage.

**Clutch disc**

Replace the clutch discs and plates as a set.

Replace the clutch discs if they show signs of scoring or discoloration.


Measure the disc thickness of each disc.

SERVICE LIMITS:

Disc A: 3.6 mm (0.14 in)

Disc B: 3.1 mm (0.12 in)

Disc C: 3.1 mm (0.12 in)

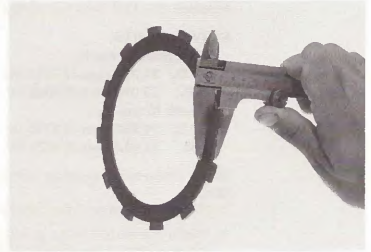
**Clutch plate**

Replace the clutch discs and plates as a set.

Check the plates for discoloration.


Check the plate warpage on a surface plate using a feeler gauge.

SERVICE LIMIT: 0.30 mm (0.012 in)

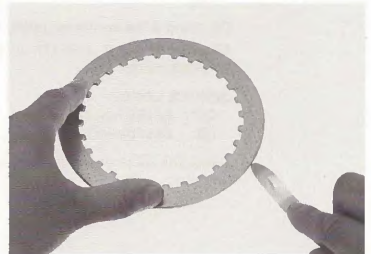**Judder spring/spring seat**

Check the judder spring and spring seat for deformation, warpage or damage; replace them if necessary.

- A damaged or warped spring seat will cause the judder spring to be pressed unevenly.
- A damaged judder spring causes weak contact between the discs and plates or uneven disc/plate contact.

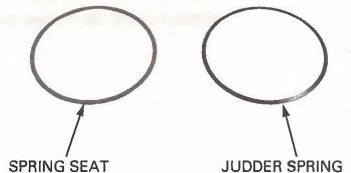

CLUTCH/STARTER CLUTCH/GEARSHIFT LINKAGE

Clutch outer/primary driven gear

Check the slots of the clutch outer for damage or wear caused by the clutch discs.

Check the primary driven gear for abnormal wear or damage.

Measure the I.D. of the primary driven gear.

SERVICE LIMITS:

White: 41.026 mm (1.6152 in)

Black: 41.018 mm (1.6149 in)

Replace the clutch outer assembly if necessary.

- When the clutch outer assembly is replaced, be sure to select the needle bearing according to the selective fit table (page 10-16).

Clutch outer guide/needle bearing

Measure the O.D. and I.D. of the clutch outer guide.

SERVICE LIMITS:

A (without ID mark):

O.D.: 34.994 mm (1.3777 in)

I.D.: 28.012 mm (1.1028 in)

B (with ID mark):

O.D.: 34.986 mm (1.3774 in)

I.D.: 28.012 mm (1.1028 in)

Check the needle bearing turns smoothly and quietly.

Replace the bearing if necessary.

- When the clutch outer guide and/or needle bearing is replaced, be sure to select the needle bearing according to the selective fit table (page 10-16).

Oil pump drive sprocket/guide

Measure the O.D. and I.D. of the oil pump drive sprocket guide.

SERVICE LIMITS:

O.D.: 34.965 mm (1.3766 in)





I.D.: 28.030 mm (1.1035 in)

Check the oil pump drive sprocket tabs for wear or damage.

Check the oil pump drive sprocket for abnormal wear or damage.

Measure the I.D. of the oil pump drive sprocket.


SERVICE LIMIT: 35.155 mm (1.3841 in)

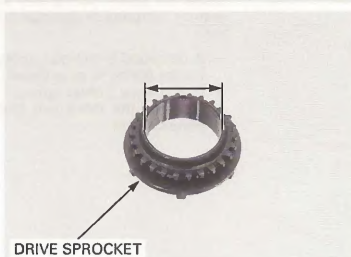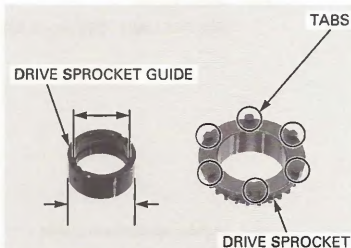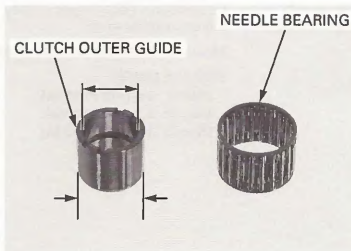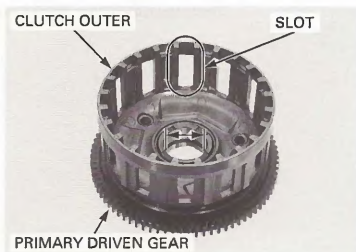

Oil pump drive chain guide


Check the oil pump drive chain guide for wear or damage.

Replace them if necessary.

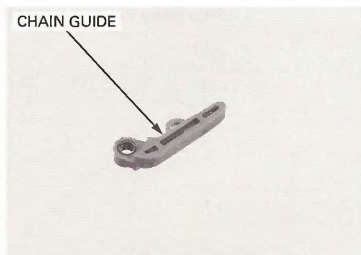
CHAIN GUIDE**Mainshaft**

Measure the mainshaft O.D. at clutch outer guide and oil pump drive sprocket guide sliding surfaces.


SERVICE LIMIT: 27.96 mm (1.101 in)

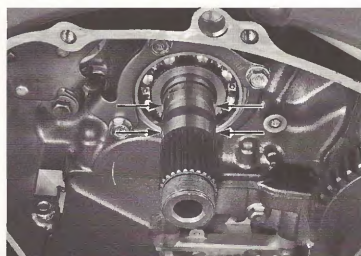**Starter reduction gear**

Check the starter reduction gear for wear or damage and replace it if necessary.

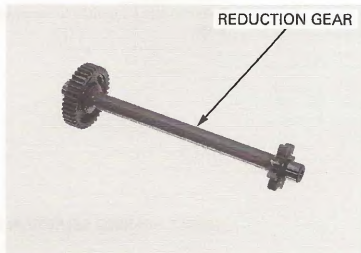REDUCTION GEAR**Starter idle gear/idle gear shaft**


Check the starter idle gear and shaft for wear or damage, replace them if necessary.

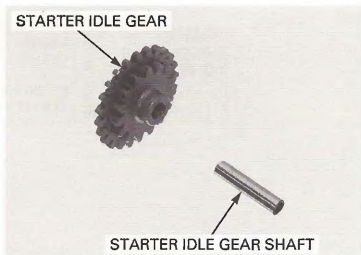STARTER IDLE GEAR


CLUTCH/STARTER CLUTCH/GEARSHIFT LINKAGE

NEEDLE BEARING SELECTION

The primary driven gear has I.D. code paint.

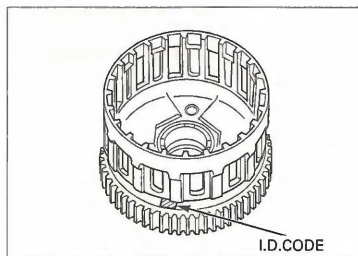

The clutch outer guide has O.D. code mark as shown.

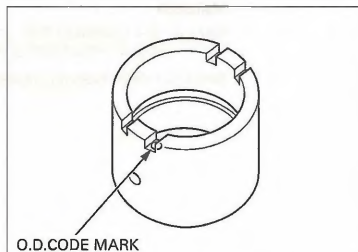


Cross-reference the primary driven gear and clutch outer guide codes to determine the replacement needle bearing.
Refer to the selection table below for bearing selection.




NEEDLE BEARING SELECTION TABLE:

			CLUTCH OUTER GUIDE O.D. CODE MARK	
			GUIDE A (Without O.D. code)	GUIDE B (With O.D. code)
			35.004 – 35.012 mm (1.3781 – 1.3784 in)	34.996 – 35.004 mm (1.3778 – 1.3781 in)
PRIMARY DRIVEN GEAR I.D. CODE PAINT	White	41.008 – 41.016 mm (1.6145 – 1.6148 in)	NEEDLE BEARING B	NEEDLE BEARING A
	Black	41.000 – 41.008 mm (1.6142 – 1.6145 in)	NEEDLE BEARING C	NEEDLE BEARING B

INSTALLATION

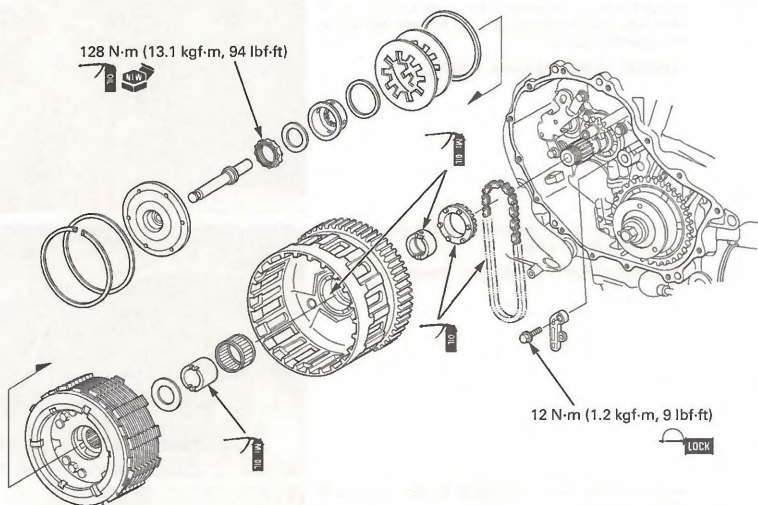


Install the oil pump drive sprocket and drive chain.

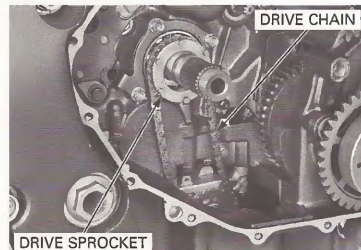

Apply molybdenum oil solution to the oil pump drive sprocket guide sliding surface and install it to the mainshaft.

Apply oil to the oil pump drive sprocket teeth and drive chain.

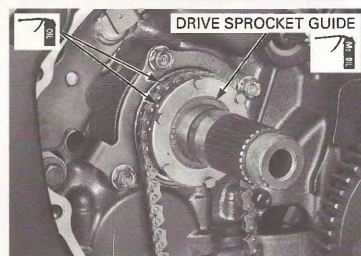


CLUTCH/STARTER CLUTCH/GEARSHIFT LINKAGE

Be careful not to drop the parts into the oil pan.

Apply locking agent to the oil pump drive chain guide mounting bolt threads (page 1-18).


Install the oil pump drive chain guide by aligning its hole with the crankcase tab and tighten the bolt to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

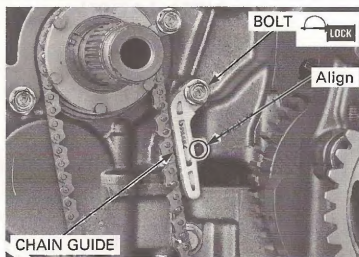

Apply molybdenum oil solution to the starter reduction gear sliding surface.


Install the starter reduction gear into the crankcase.

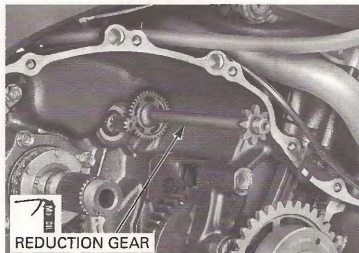

Apply molybdenum oil solution to the clutch outer sliding surface.

Make sure the starter reduction gear is installed into the crankcase before installing the clutch outer.


Install the clutch outer by aligning the tabs of the oil pump drive sprocket with the holes of the clutch outer.

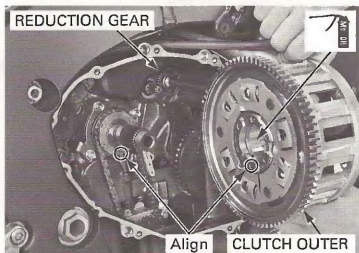


Apply molybdenum oil solution to the clutch outer guide sliding surface.

Install the clutch outer guide with its grooves facing out.

Install the clutch outer guide and needle bearing onto the mainshaft.

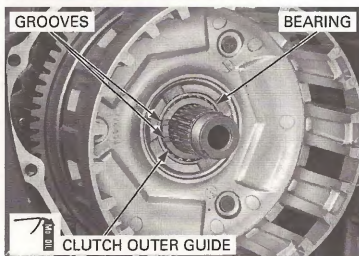

Install the thrust washer.

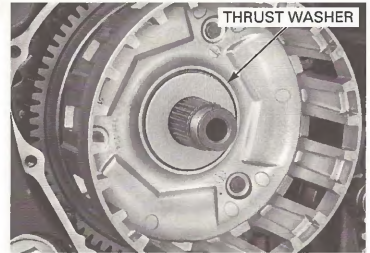

Coat the clutch discs and plates with clean engine oil.


Install the spring seat, judder spring, clutch disc A (larger I.D. disc), clutch plate A, seven clutch discs B, seven clutch plates B and clutch disc onto the pressure plate as shown.

IDENTIFICATION OF CLUTCH DISC:


- Clutch disc A: Black paint (larger I.D. disc)
- Clutch disc B: Blue paint
- Clutch disc C: Green paint

IDENTIFICATION OF CLUTCH PLATE:

- Clutch plate A: Gray (judder spring side)
- Clutch plate B: Silver (other clutch plate)

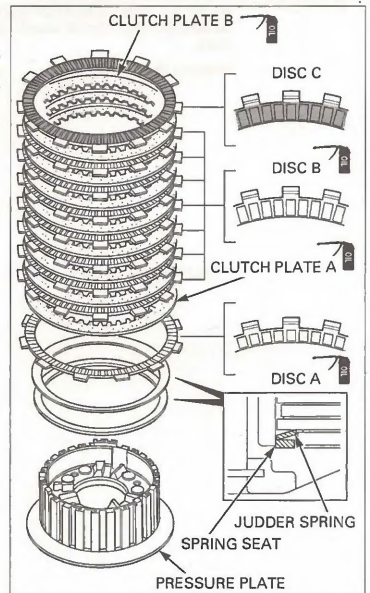


Install the clutch center by aligning each cam areas as shown.

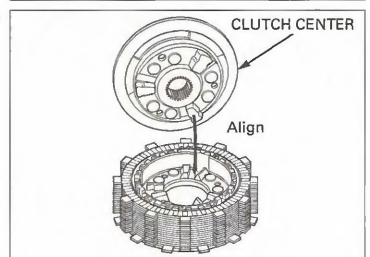


CLUTCH/STARTER CLUTCH/GEARSHIFT LINKAGE

Loosely install the setting bolts (M6 x 35) as shown.

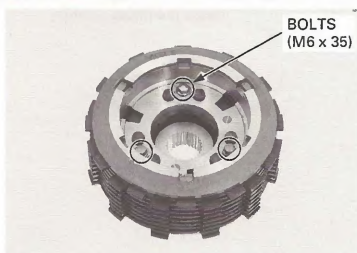


Install the clutch disc assembly by aligning its tabs of outside clutch disc A into the clutch outer shallow slots.



Remove the setting bolts.

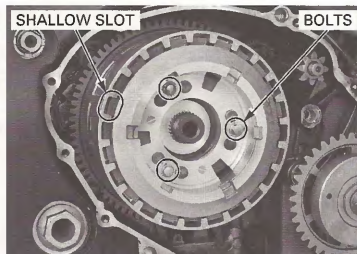

Install the spring seat.

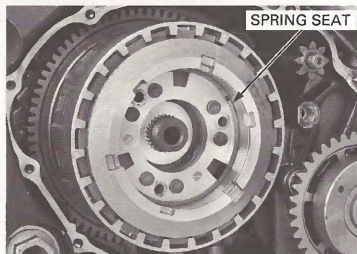

Install the two clutch springs, spring seat and spring holder.

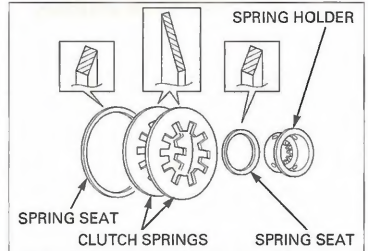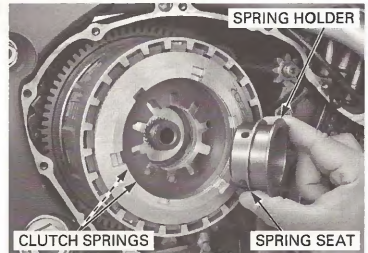

Apply oil to a new clutch center lock nut threads and seating surface then install it to the mainshaft.


Hold the pressure plate with the special tool and tighten the lock nut to the specified torque.

TOOL:

Clutch holder


070MB-MFL0100 or
070MB-MFLA100
(U.S.A. only)

TORQUE: 128 N·m (13.1 kgf·m, 94 lbf·ft)

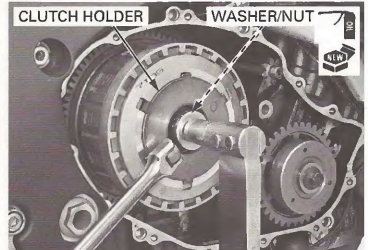

Be careful not to damage the mainshaft threads.


Stake the lock nut into the mainshaft groove with a punch.

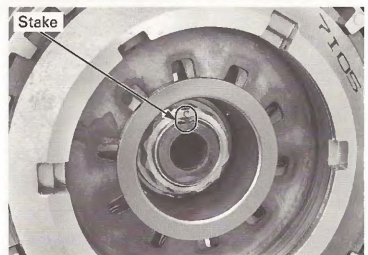


CLUTCH/STARTER CLUTCH/GEARSHIFT LINKAGE

Install the lifter bearing into the lifter plate.

Install the clutch lifter piece into the lifter bearing.

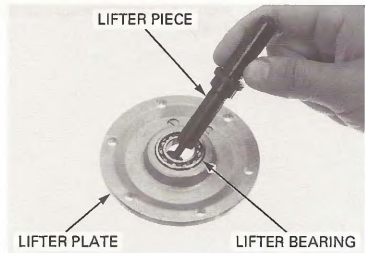


Install the lifter plate/piece.

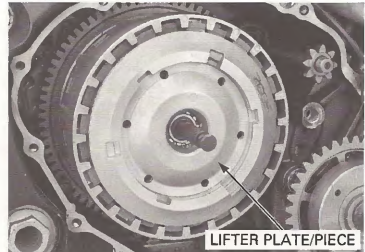

After installing the snap ring, always rotate it in its groove to be sure it is fully seated.


Install the stopper ring and snap ring securely.

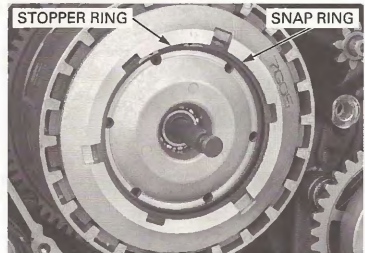

Apply molybdenum oil solution to the starter idle gear shaft sliding surface.

Install the starter idle gear and shaft.

Install the right crankcase cover (page 10-30).

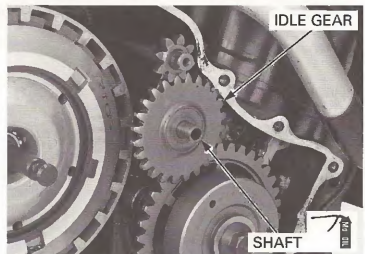


Apply oil to a new O-ring and install it to the timing hole cap.

Apply grease to the timing hole cap threads.

Tighten the timing hole cap to the specified torque.

TORQUE: 18 N·m (1.8 kgf·m, 13 lbf·ft)

Install the right middle cowl (page 3-10).

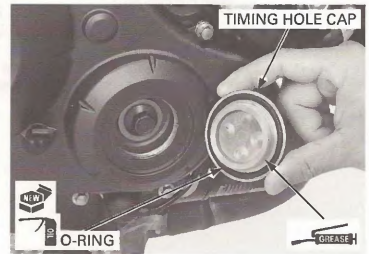

STARTER CLUTCH

REMOVAL

Remove the right crankcase cover (page 10-5).


Hold the starter clutch outer with the special tool.

TOOL:


Flywheel holder

07725-0040001 or
equivalent commercially
available in
U.S.A.


Remove the starter clutch mounting bolt, washer and flywheel holder.

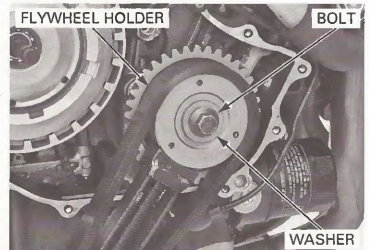

Remove the starter clutch assembly.

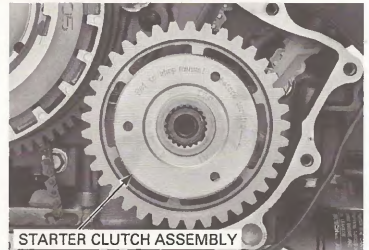

Remove the thrust washer.

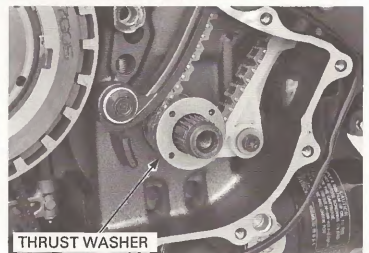


CLUTCH/STARTER CLUTCH/GEARSHIFT LINKAGE

INSPECTION

Check the operation of the one-way clutch by turning the driven gear.


You should be able to turn the driven gear clockwise smoothly, but the gear should not turn counterclockwise.

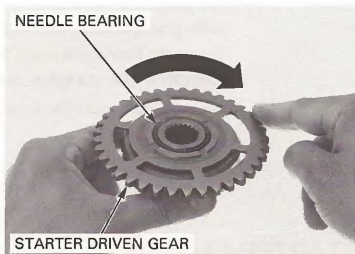


DISASSEMBLY

Remove the starter driven gear by turning it clockwise.


Remove the needle bearing.

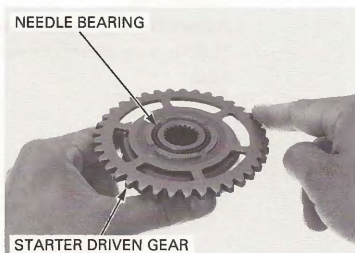

Remove the snap ring and one-way clutch.

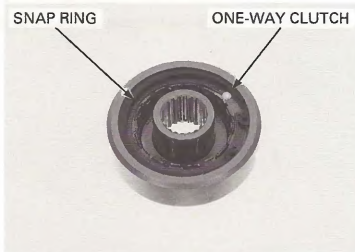

Check the starter clutch outer inner surface and one-way clutch for abnormal wear or damage and replace them if necessary.

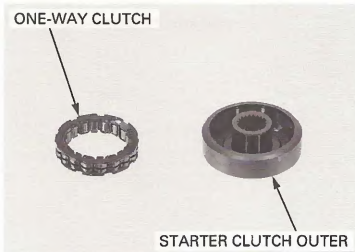

Check the needle bearing for abnormal wear or damage.
Replace it if necessary.




NEEDLE BEARING


Check the starter driven gear for abnormal wear or damage.

Measure the starter driven gear boss O.D.

SERVICE LIMIT: 45.642 mm (1.7969 in)

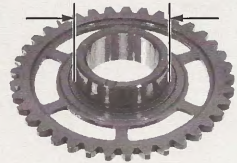


ASSEMBLY

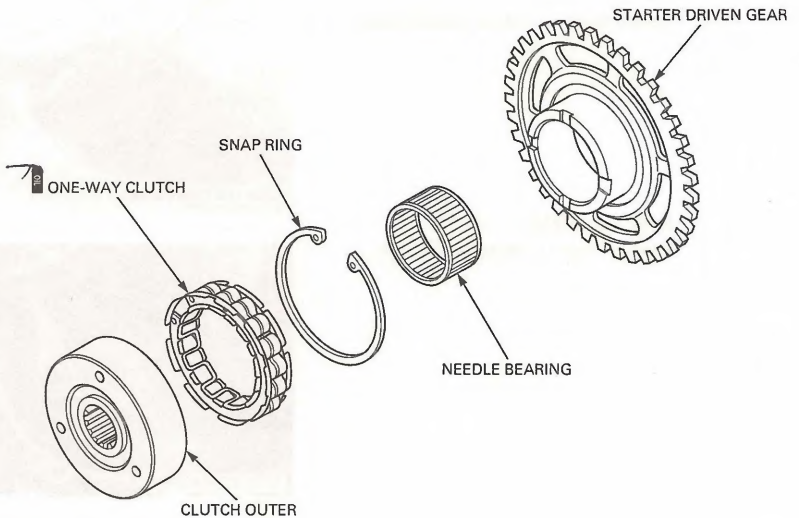


CLUTCH/STARTER CLUTCH/GEARSHIFT LINKAGE

Apply oil to the one-way clutch sliding surface.
Install the one-way clutch into the starter clutch outer with its paint mark facing out.

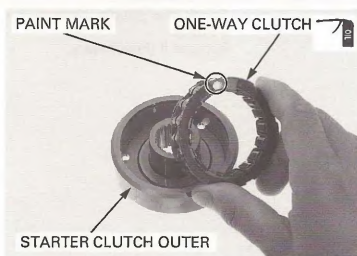


After installing the snap ring, always rotate it in its groove to be sure it is fully seated.

Install the snap ring into the starter clutch outer groove securely.

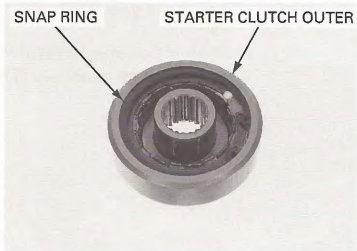


Install the starter driven gear and needle bearing into the starter clutch outer while turning the starter driven gear clockwise.

Recheck the one-way clutch operation (page 10-24).

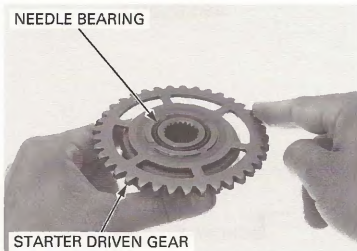


INSTALLATION

Install the thrust washer to the crankshaft.

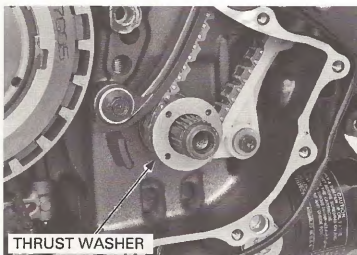

Install the starter clutch assembly to the crankshaft while aligning the wide teeth of the crankshaft with the starter clutch assembly.

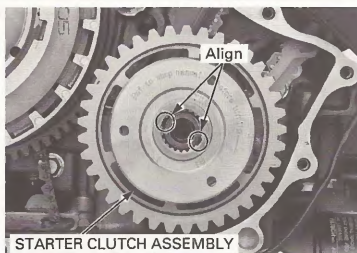

Apply oil to the starter clutch mounting bolt threads and seating surface.

Install the washer and starter clutch mounting bolt.

Hold the starter clutch outer with the special tool.


TOOL:

Flywheel holder

07725-0040001 or equivalent commercially available in U.S.A.

Tighten the starter clutch mounting bolt to the specified torque.

TORQUE: 93 N·m (9.5 kgf-m, 69 lbf-ft)

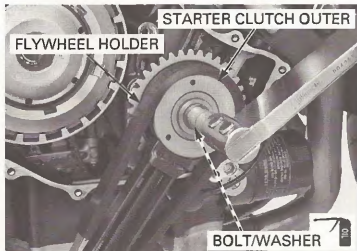


GEARSHIFT LINKAGE

REMOVAL


Remove the following:

- Right crankcase cover (page 10-5)
- Clutch (page 10-7)

Remove the bolt and disconnect the gearshift arm from the gearshift spindle.

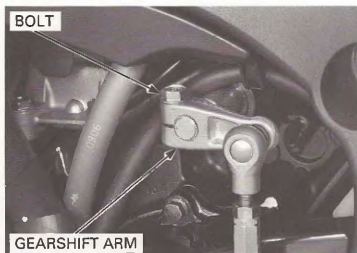

Remove the bolt and setting plate.

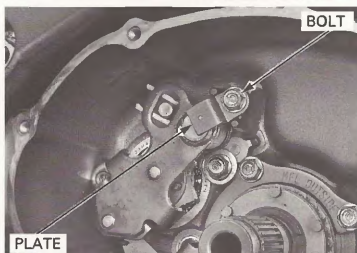

CLUTCH/STARTER CLUTCH/GEARSHIFT LINKAGE




Pull the gearshift spindle and thrust washer out of the crankcase.

Be careful not to drop parts into the oil pan.

Remove the following:

- Stopper arm pivot bolt
- Stopper arm
- Washer
- Return spring
- Shift drum center bolt
- Gearshift cam
- Dowel pin


Remove the bolt, setting plate and oil seal.

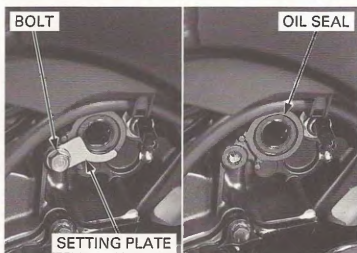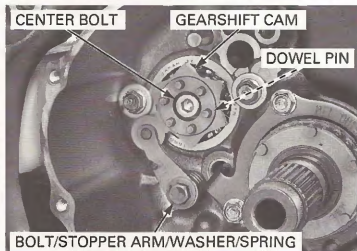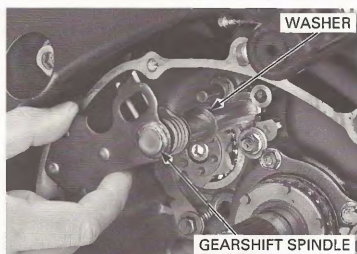

INSPECTION

Check the gearshift spindle for wear, damage or bending.


Check the return spring for fatigue or damage.

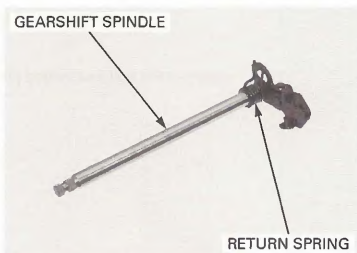

INSTALLATION

Apply grease to a new oil seal lips, then install it into the crankcase securely.

Install the setting plate and tighten the bolt securely.

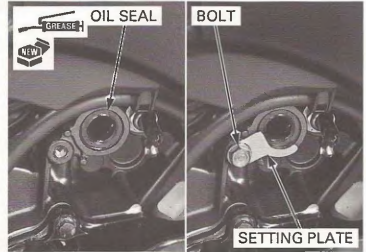


Apply locking agent to the shift drum stopper arm pivot bolt threads (page 1-18).

Install the following:

- Return spring
- Washer
- Stopper arm
- Stopper arm pivot bolt

Tighten the stopper arm pivot bolt to the specified torque.


TORQUE: 12 N·m (1.2 kgf-m, 9 lbf-ft)

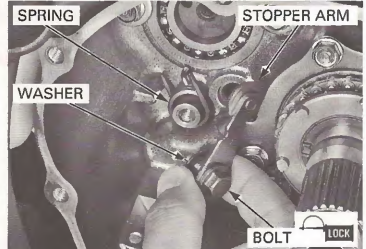

Install the dowel pin onto the shift drum.


Align the dowel pin on the shift drum with the wide groove on the gearshift cam.

Install the gearshift cam while holding the stopper arm using a screwdriver as shown.

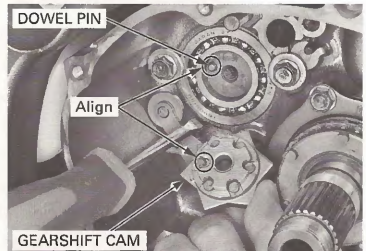


Tighten a new shift drum center bolt to the specified torque.

TORQUE: 23 N·m (2.3 kgf-m, 17 lbf-ft)

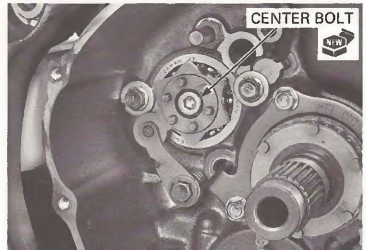


CLUTCH/STARTER CLUTCH/GEARSHIFT LINKAGE

Install the thrust washer and gearshift spindle into the crankcase while aligning the spring ends with the stopper pin.

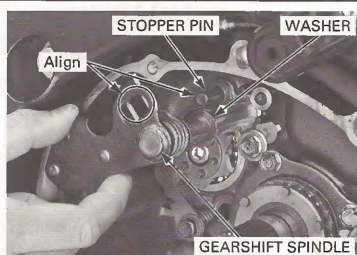

Apply locking agent to the setting plate bolt threads (page 1-18).
Install the setting plate and tighten the bolt to the specified torque.


TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

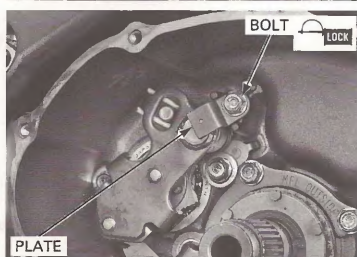

Install the gearshift arm to the gearshift spindle, aligning the arm slit with the punch mark on the gearshift spindle.
Install and tighten the pinch bolt.


Install the following:

- Clutch (page 10-17)
- Right crankcase cover (page 10-30)

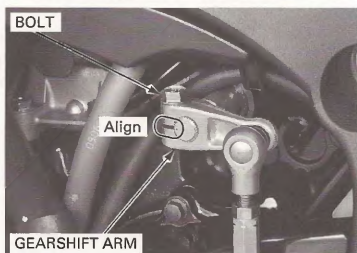


RIGHT CRANKCASE COVER INSTALLATION

Install the four dowel pins.

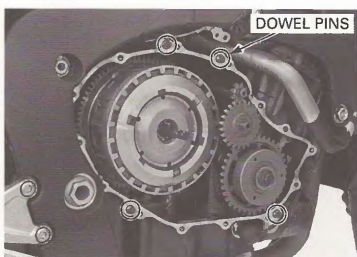

Install the wave washer and thrust washer onto the starter idle gear.

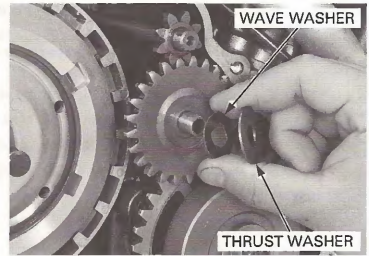


Apply sealant (TB 1207B or equivalent) to the mating surface of the right crankcase cover as shown.

COVER SIDE:



CRANKCASE SIDE:

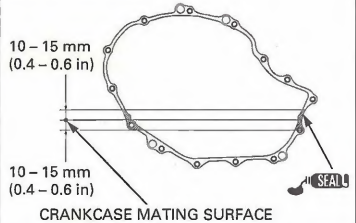


Be careful not to drop the clutch lifter lever return spring into the oil pan.

Correctly route the EOP switch wire (page 1-20).

Install the right crankcase cover while turning the lifter lever clockwise to engage the lifter lever spindle groove with the lifter piece flange.

Install the stay, wire guide, new sealing washer and right crankcase cover bolts.

Tighten the right crankcase cover bolts crisscross pattern in two or three steps.

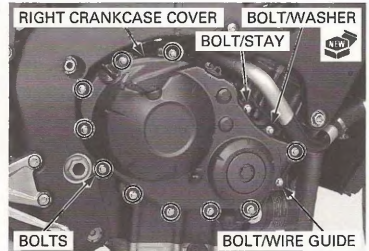

CLUTCH/STARTER CLUTCH/GEARSHIFT LINKAGE

Connect the clutch cable to the clutch lifter lever.


Install the clutch cable guide plate by aligning its hole with the right crankcase cover boss and tighten the bolt securely.

Install the oil level dipstick (page 4-17).

Check that there are no oil leaks.


Install the right middle cowl (page 3-10).

Adjust the clutch lever freeplay (page 4-34).

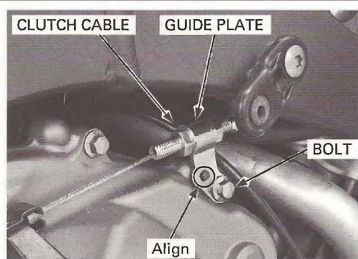

COMPONENT LOCATION	11-2	STATOR	11-5
SERVICE INFORMATION	11-3	FLYWHEEL	11-6
ALTERNATOR COVER REMOVAL	11-4	ALTERNATOR COVER INSTALLATION	11-7

COMPONENT LOCATION

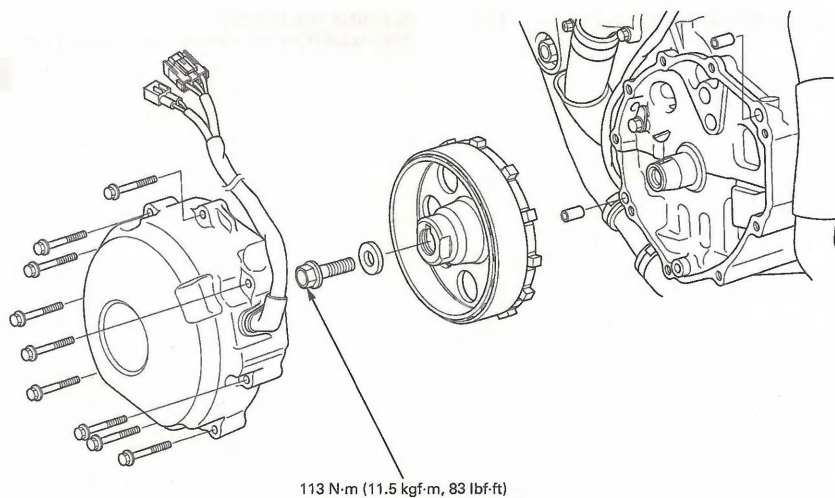

SERVICE INFORMATION

GENERAL

- This section covers service of the stator and flywheel. All service can be done with the engine installed in the frame.
- For stator inspection (page 17-8).

TORQUE VALUES

Stator mounting bolt

12 N·m (1.2 kgf·m, 9 lbf·ft)


Flywheel bolt

113 N·m (11.5 kgf·m, 83 lbf·ft)

Apply oil to the threads and seating surface.


TOOLS

Flywheel holder
07725-0040001

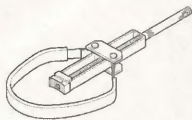

or equivalent commercially available in U.S.A.

Outside screw puller
07933-4250000

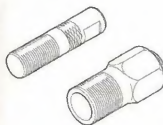


ALTERNATOR

ALTERNATOR COVER REMOVAL


Remove the following:

- Fuel tank (page 6-51)
- Left middle cowl (page 3-10)
- Drive sprocket cover (page 4-27)

Disconnect the alternator 3P (Black) connector.

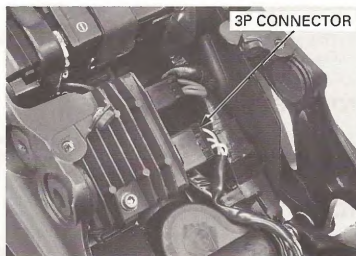

Disconnect the CKP sensor 2P (Red) connector.

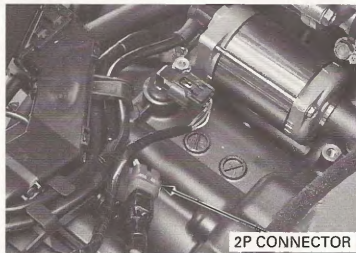


The alternator cover (stator) is magnetically attracted to the flywheel, be careful during removal.

Set an oil pan under the engine as oil will run out when the alternator cover is removed.


After installation, add the recommended oil to the specified level.

Remove the bolts and alternator cover.

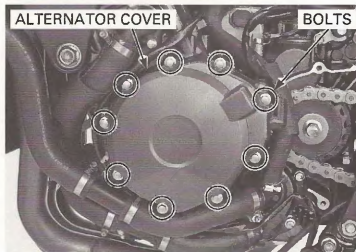

Remove the dowel pins.

Clean off any sealant from the alternator cover mating surfaces.

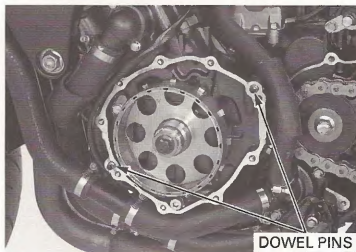


STATOR


REMOVAL

Remove the grommet, bolts, wire clamp and CKP sensor.

Remove the bolts and stator.

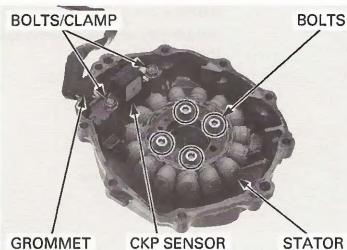

INSTALLATION

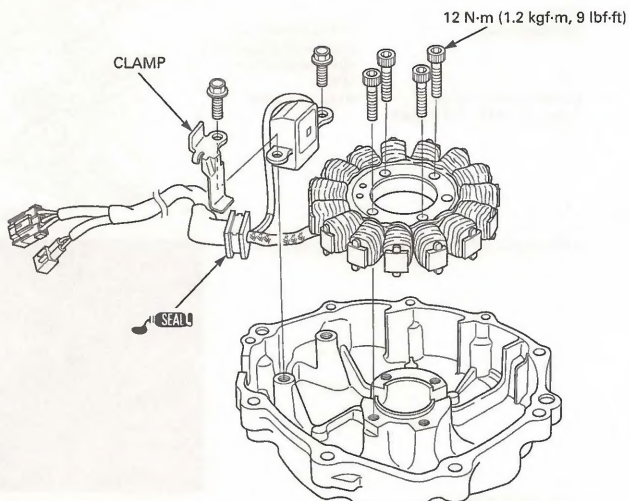


Install the stator to the alternator cover.

Tighten the bolts to the specified torque.

TORQUE: 12 N-m (1.2 kgf-m, 9 lbf-ft)

Install the CKP sensor, wire clamp and tighten the bolts securely.

Apply sealant to the wire grommet, then install it into the alternator cover groove securely.

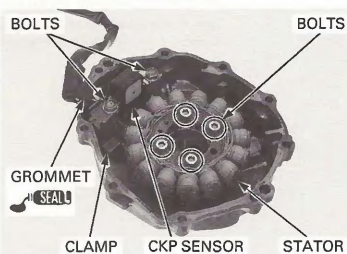

ALTERNATOR FLYWHEEL

REMOVAL

Remove the alternator cover (page 11-4).

Hold the flywheel using the special tool and remove the flywheel bolt.

TOOL:

Flywheel holder

07725-0040001 or
equivalent commercially
available in
U.S.A.

Remove the washer.

Remove the flywheel using the special tool.

TOOLS:




Flywheel holder

07725-0040001 or
equivalent commercially
available in
U.S.A.

Outside screw puller
(Use only M18 x 1.5 puller)

07933-4250000


Remove the woodruff key from the crankshaft.

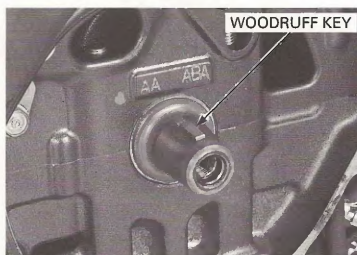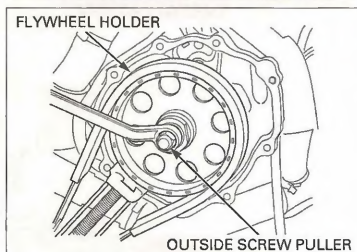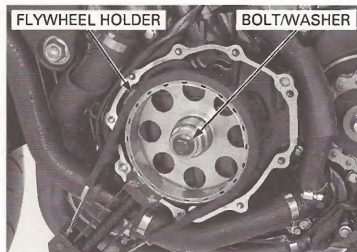

INSTALLATION

Clean any oil from the tapered area of the crankshaft and flywheel thoroughly.

Install the flywheel to the crankshaft by aligning the flywheel groove with the woodruff key.

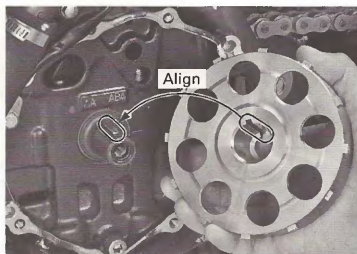

Apply oil to the flywheel bolt threads and seating surface.

Install the washer and flywheel bolt.

Hold the flywheel using the special tool and tighten the bolt to the specified torque.


TOOL:

Flywheel holder

07725-0040001 or equivalent commercially available in U.S.A.


TORQUE: 113 N·m (11.5 kgf·m, 83 lbf·ft)

Install the alternator cover (page 11-7).

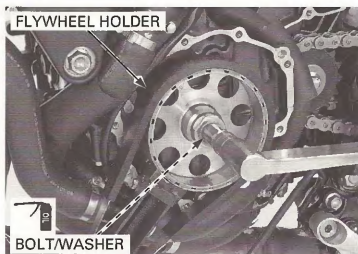


ALTERNATOR COVER INSTALLATION

Install the dowel pins.

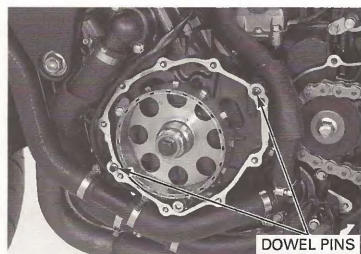


Apply sealant (TB 1207B or equivalent) to the mating surface of the alternator cover.

COVER SIDE:

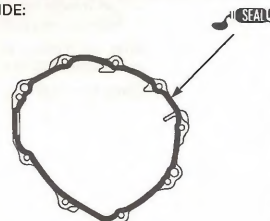

CRANKCASE SIDE:

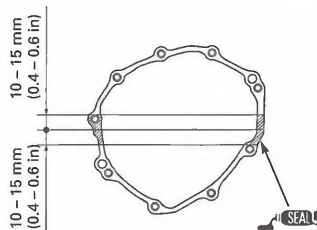


ALTERNATOR


The alternator cover (stator) is magnetically attracted to the flywheel, be careful during installation.

Install the alternator cover and bolts.

Tighten the bolts in a crisscross pattern in two or three steps securely.

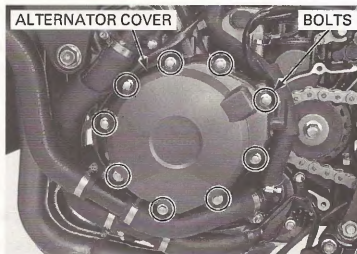

Connect the CKP sensor 2P (Red) connector.

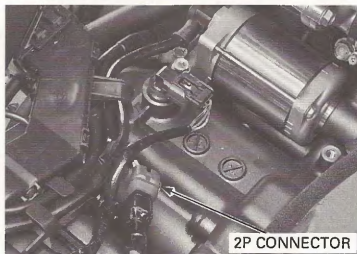


Connect the alternator 3P (Black) connector.

Install the following:

- Drive sprocket cover (page 4-28)
- Left middle cowl (page 3-10)
- Fuel tank (page 6-51)

After installation, add the recommended engine oil to the specified level.

Check the engine oil level (page 4-17).

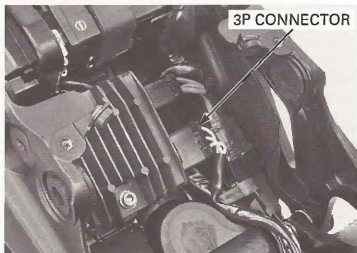

12. CRANKCASE/TRANSMISSION/BALANCER

COMPONENT LOCATION	12-2	SHIFT FORK/SHIFT DRUM/ TRANSMISSION	12-6
SERVICE INFORMATION	12-3	BALANCER	12-16
TROUBLESHOOTING	12-4	CRANKCASE ASSEMBLY	12-22
CRANKCASE SEPARATION	12-5		

COMPONENT LOCATION


MAIN JOURNAL BOLT:

20 N·m (2.0 kgf·m, 15 lbf·ft) + 150°

8 mm BOLT: 24 N·m (2.4 kgf·m, 18 lbf·ft)

10 mm BOLT: 39 N·m (4.0 kgf·m, 29 lbf·ft)

7 mm BOLT: 18 N·m (1.8 kgf·m, 13 lbf·ft)

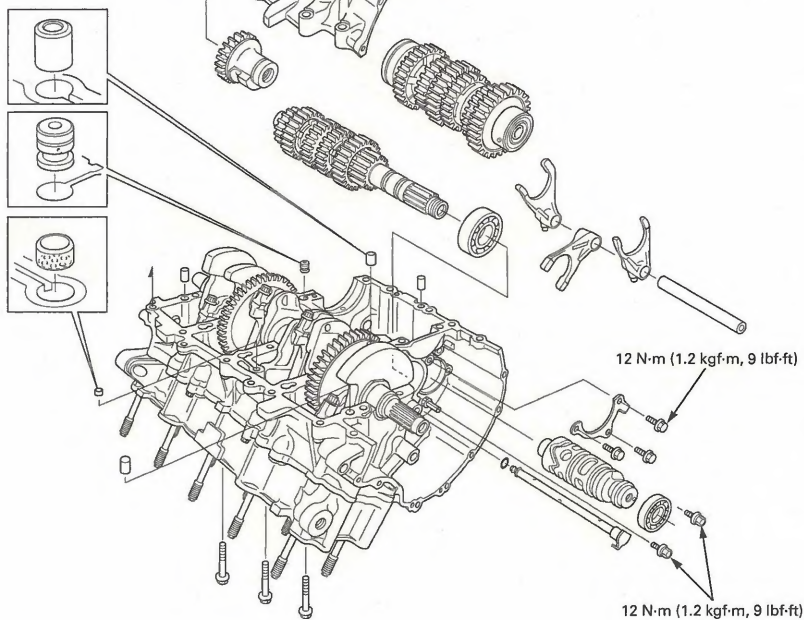

SERVICE INFORMATION

GENERAL

- The crankcase must be separated to service the following:
 - Transmission
 - Crankshaft (page 13-5)
 - Piston (page 13-14)
 - Balancer (page 12-16)
 - Cylinder (page 13-14)
- The following components must be removed before separating the crankcase:
 - Engine (page 8-4)
 - Clutch (page 10-7)/gearshift linkage (page 10-27)
 - Starter clutch (page 10-23)
 - Flywheel (page 11-6)
 - Cylinder head (page 9-14)
 - Oil pump (page 5-5)/oil filter (page 4-18)/oil cooler (page 5-13)
 - Starter motor (page 19-6)
 - Water pump (page 7-21)
 - EOP switch (page 20-14)
 - EVAP purge control solenoid valve (California type only page 6-83)
 - VS sensor (page 20-11)
 - Neutral switch (page 20-20)
- Be careful not to damage the crankcase mating surfaces when servicing.
- Prior to assembling the crankcase halves, apply sealant to their mating surfaces. Wipe off excess sealant thoroughly.
- The crankpin and main journal bearing inserts are select fit and are identified by color codes. Select replacement bearings from the code tables. After selecting new bearings, recheck the oil clearance with a plastigauge. Incorrect oil clearance can cause major engine damage.

SPECIFICATIONS

Unit: mm (in)

ITEM			STANDARD	SERVICE LIMIT
Shift fork	I.D.		14.000 – 14.018 (0.5512 – 0.5519)	14.03 (0.552)
	Claw thickness		5.93 – 6.00 (0.233 – 0.236)	5.9 (0.23)
Shift fork shaft O.D.			13.957 – 13.975 (0.5495 – 0.5502)	13.95 (0.549)
Transmission	Gear I.D.	M5, M6	31.000 – 31.025 (1.2205 – 1.2215)	31.04 (1.222)
		C1	28.000 – 28.021 (1.1024 – 1.1032)	28.04 (1.104)
		C2, C3, C4	33.000 – 33.025 (1.2992 – 1.3002)	33.04 (1.301)
	Gear busing O.D.	M5	30.955 – 30.980 (1.2187 – 1.2197)	30.935 (1.2179)
		M6	30.950 – 30.975 (1.2185 – 1.2195)	30.930 (1.2177)
		C2	32.955 – 32.980 (1.2974 – 1.2984)	32.935 (1.2967)
		C3, C4	32.950 – 32.975 (1.2972 – 1.2982)	32.930 (1.2965)
	Gear-to-bushing clearance	M5, C2	0.020 – 0.070 (0.0008 – 0.0028)	0.10 (0.004)
		M6, C3, C4	0.025 – 0.075 (0.0010 – 0.0030)	0.11 (0.004)
	Gear bushing I.D.	M5	27.985 – 28.006 (1.1018 – 1.1026)	28.016 (1.1030)
		C2	29.985 – 30.006 (1.1530 – 1.1813)	30.021 (1.1819)
	Mainshaft O.D.	at M5	27.967 – 27.980 (1.1011 – 1.1016)	27.957 (1.1007)
	Countershaft O.D.	at C2	29.967 – 29.980 (1.1798 – 1.1803)	29.960 (1.1795)
	Bushing to shaft clearance	M5, C2	0.005 – 0.039 (0.0002 – 0.0015)	0.06 (0.002)

TORQUE VALUES

Mainshaft bearing set plate bolt

12 N·m (1.2 kgf-m, 9 lbf-ft)

Apply locking agent to the threads.

Shift drum bearing set bolt

12 N·m (1.2 kgf-m, 9 lbf-ft)

Apply locking agent to the threads.

Crankcase (7 mm bolt)

18 N·m (1.8 kgf-m, 13 lbf-ft)

(8 mm bolt)

24 N·m (2.4 kgf-m, 18 lbf-ft)

(10 mm bolt)

39 N·m (4.0 kgf-m, 29 lbf-ft)

Main journal bolt





 
20 N·m (2.0 kgf-m, 15 lbf-ft) + 150°

See page 12-23

Replace with a new one.

CRANKCASE/TRANSMISSION/BALANCER

TOOLS

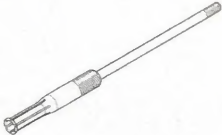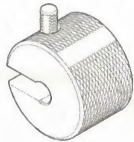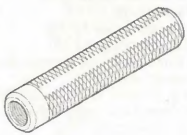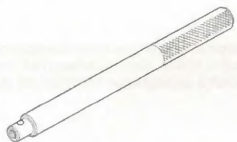Bearing remover set, 20 mm 07936-3710600 	Remover weight 07741-0010201  or 07936-371020A (U.S.A. only)	Remover handle 07936-3710100 
Driver 07949-3710001 	Attachment, 42 x 47 mm 07746-0010300 	Pilot, 20 mm 07746-0040500 

TROUBLESHOOTING

Hard to shift

- Improper clutch operation
- Incorrect engine oil weight
- Bent shift fork
- Bent shift fork shaft
- Bent shift fork claw
- Damaged shift drum groove
- Bent gearshift spindle (page 10-28)

Transmission jumps out of gear

- Worn gear dogs
- Worn gear shifter groove
- Bent shift fork shaft
- Broken shift drum stopper arm
- Broken shift drum stopper arm spring
- Worn or bent shift forks
- Broken gearshift spindle return spring (page 10-28)

Excessive engine noise

- Worn or damaged transmission gear
- Worn or damaged transmission bearings
- Worn or damaged main journal bearings
- Worn or damaged crankpin bearings
- Worn or damaged connecting rod small end
- Worn or damaged balancer shaft bearings
- Improper balancer installation

Engine vibration


- Excessive crankshaft runout
- Improper balancer timing

CRANKCASE SEPARATION


For Service Information for removal of necessary parts before separating the crankcase (page 12-3).

Loosen the hose clamp screw and disconnect the water hose.

Remove the bolts, water hose joint and O-ring.

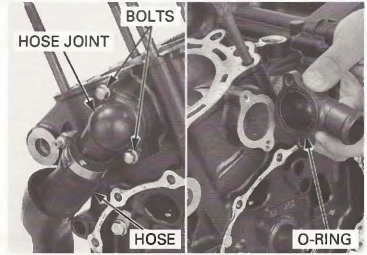

Remove the 7 mm bolts.

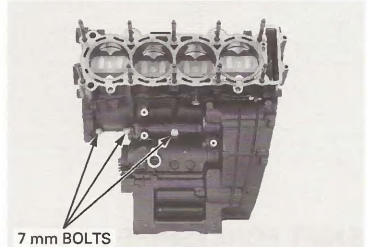


Be careful not to bend the stud bolts.

Place the engine upside down.


Loosen the bolts in a crisscross pattern in two or three steps.

Remove the 7 mm bolts, sealing washer, 8 mm bolts and 10 mm bolt.

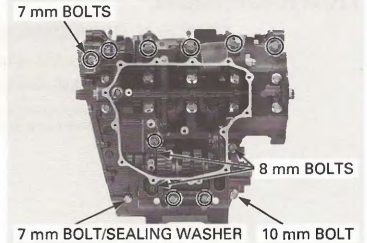

Loosen the main journal bolts in a crisscross pattern in two or three steps.
Remove the bolts.

Separate the lower crankcase from the upper crankcase.

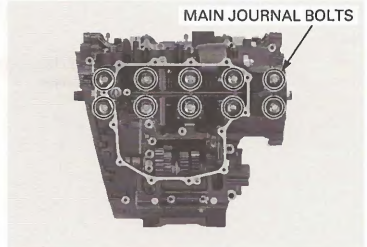


CRANKCASE/TRANSMISSION/BALANCER


Remove the dowel pins and oil orifices.

Clean any sealant off from the crankcase mating surface.

Clean the oil orifices in solvent thoroughly.

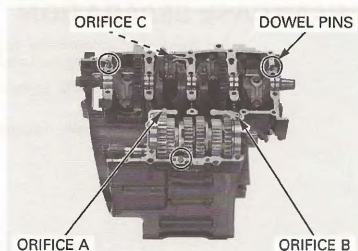

Check the oil orifices for clogs, and replace them if necessary.

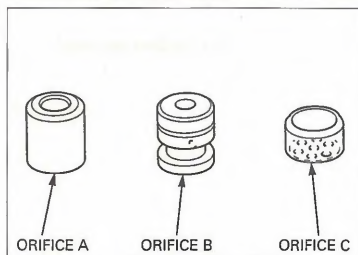

SHIFT FORK/SHIFT DRUM/ TRANSMISSION


REMOVAL/DISASSEMBLY

Separate the crankcase halves (page 12-5).


Remove the countershaft assembly.

Disassemble the countershaft assembly.

Clean all disassembled parts in solvent thoroughly.

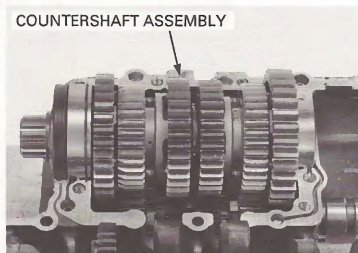


Remove the mainshaft bearing set plate bolts and mainshaft bearing set plate.

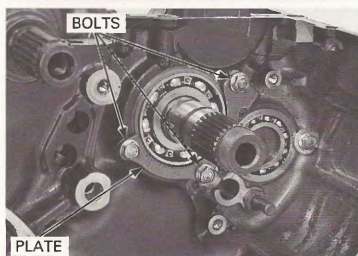


Remove the fork shaft and shift forks.

- Mark all shift forks direction to ensure correct reassembly in their original locations.

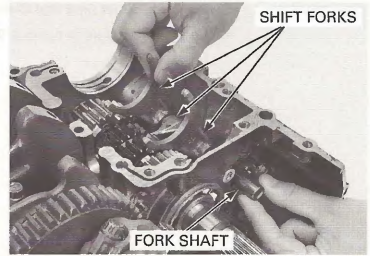

Remove the mainshaft bearing from the crankcase.

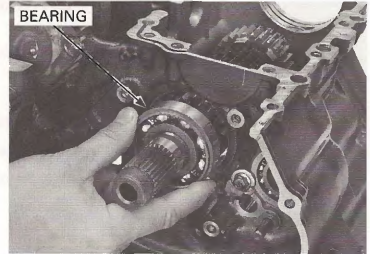


Remove the mainshaft assembly.

Disassemble the mainshaft assembly.

The washer on the end of the mainshaft has a flat inside edge that fits inside the groove in the mainshaft.


The washer must be pried off, however, care must be taken not to bend or damage the washer.

Clean all disassembled parts in solvent thoroughly.

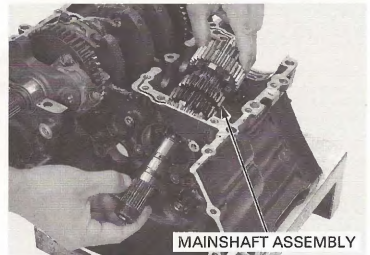


Remove the bolts and washers.

Remove the bearing and shift drum.

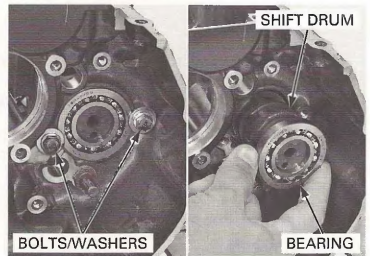

CRANKCASE/TRANSMISSION/BALANCER

Remove the oil jet pipe and O-ring.
Clean the oil jet pipe in solvent thoroughly.

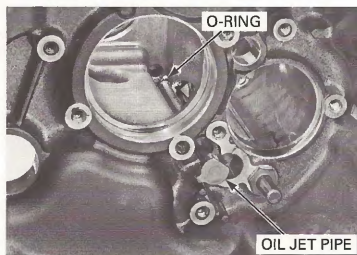

SHIFT DRUM/SHIFT FORK INSPECTION


Check the shift fork guide pin for abnormal wear or damage.

Measure the shift fork I.D.

SERVICE LIMIT: 14.03 mm (0.552 in)


Measure the shift fork claw thickness.

SERVICE LIMIT: 5.9 mm (0.23 in)

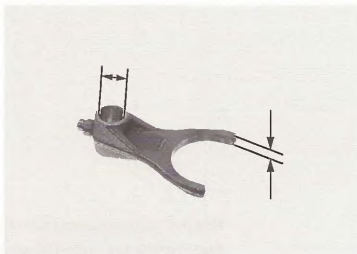

Measure the shift fork shaft O.D.

SERVICE LIMIT: 13.95 mm (0.549 in)

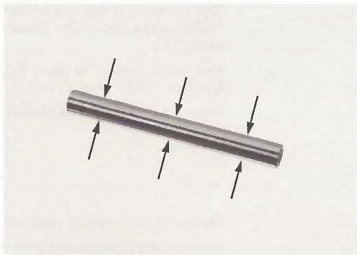

Inspect the shift drum guide grooves for abnormal wear or damage.

Turn the outer race of the shift drum bearing with your finger.

The bearing should turn smoothly and quietly.

Also check that the inner race of the bearing fits tightly on the shift drum.

Replace the bearing if the inner race does not turn smoothly, quietly, or if the inner race fits loosely on the shift drum.




OIL JET PIPE INSPECTION

Check the oil jet pipe for clogs, bending or damage.
Replace it if necessary.



TRANSMISSION INSPECTION

Check the shifter groove and gear dogs of each gear for abnormal wear or damage.

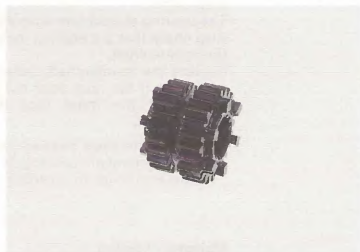

Check the dog holes and teeth for abnormal wear or damage.

Measure the I.D. of each gear.

SERVICE LIMITS:

M5, M6:	31.04 mm (1.222 in)
C1:	28.04 mm (1.104 in)
C2, C3, C4:	33.04 mm (1.301 in)

Measure the O.D. of each gear bushing.

SERVICE LIMITS:

M5:	30.935 mm (1.2179 in)
M6:	30.930 mm (1.2177 in)
C2:	32.935 mm (1.2967 in)
C3, C4:	32.930 mm (1.2965 in)

Measure the I.D. of each gear bushing.



SERVICE LIMITS:

M5:	28.016 mm (1.1030 in)
C2:	30.021 mm (1.1819 in)

Calculate the gear-to-bushing clearance.

SERVICE LIMITS:

M5, C2:	0.10 mm (0.004 in)
M6, C3, C4:	0.11 mm (0.004 in)

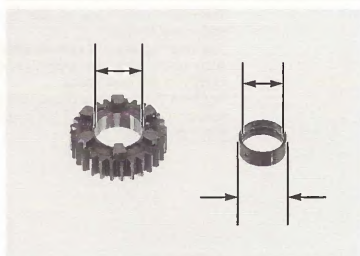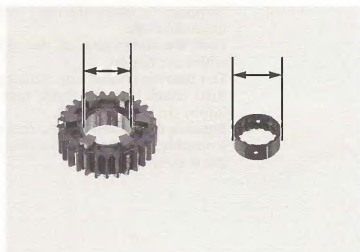

CRANKCASE/TRANSMISSION/BALANCER

Check the mainshaft and countershaft for abnormal wear or damage.

Measure the mainshaft O.D. at the M5 gear.

SERVICE LIMIT: 27.957 mm (1.1007 in)

Measure the countershaft O.D. at the C2 gear.


SERVICE LIMIT: 29.960 mm (1.1795 in)

Calculate the gear bushing-to-shaft clearance.

SERVICE LIMITS:

M5: 0.06 mm (0.002 in)

C2: 0.06 mm (0.002 in)

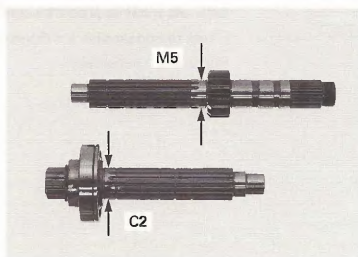


Countershaft bearing

Turn the outer race of countershaft bearing with your finger.

The bearing should turn smoothly and quietly. Also check that the bearing inner race fits tightly on the countershaft.

Replace the countershaft, collar, and bearing as an assembly, if the race does not turn smoothly, quietly, or if the inner race fits loosely on the countershaft.

- The countershaft bearing cannot be replaced. If the countershaft bearing is faulty, replace the countershaft as an assembly.

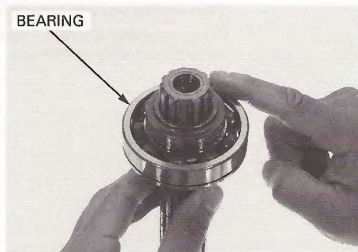


Mainshaft bearing

Temporarily install the right mainshaft bearing onto the mainshaft.

Turn the outer race of the left mainshaft bearing with your finger.

The bearing should turn smoothly and quietly. Also check that the inner race of the bearing fits tightly on the mainshaft.


Replace the bearing if the inner race does not turn smoothly, quietly, or if the inner race fits loosely on the mainshaft.

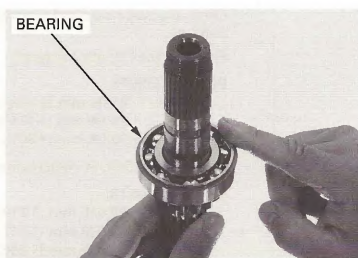

Turn the inner race of the left mainshaft bearing with your finger.

The bearing should turn smoothly and quietly. Also check that the outer race of the bearing fits tightly in the crankcase.

Replace the bearing if the inner race does not turn smoothly, quietly, or if the outer race fits loosely in the crankcase.

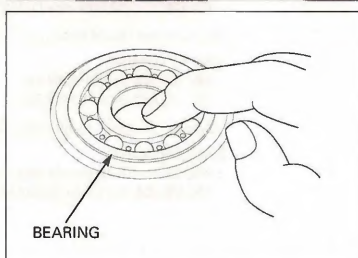

MAINSHAFT BEARING REPLACEMENT

Remove the following:

- Crankshaft (page 13-5)
- Countershaft (page 12-6)
- Mainshaft (page 12-6)

Remove the mainshaft bearing using the special tools as shown.

TOOLS:



Bearing remover set, 20 mm	07936-3710600
Remover weight	07741-0010201 or 07936-371020A (U.S.A. only)
Remover handle	07936-3710100

Drive in a new bearing squarely with the marks facing toward the inside of the crankcase.

Drive a new bearing into the left crankcase using the special tools.

TOOLS:

Driver	07949-3710001
Attachment, 42 x 47 mm	07746-0010300
Pilot, 20 mm	07746-0040500

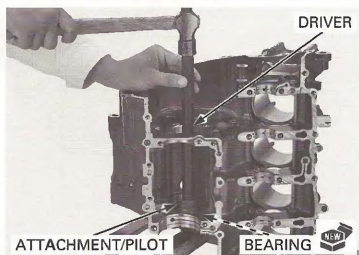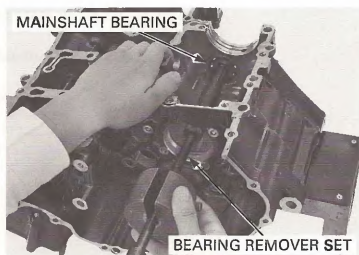


TRANSMISSION ASSEMBLY

Apply engine oil to the gear teeth, sliding surface and bushings.


Apply molybdenum oil solution to the shift fork grooves.


Assemble the mainshaft and countershaft.

MAINSHAFT:

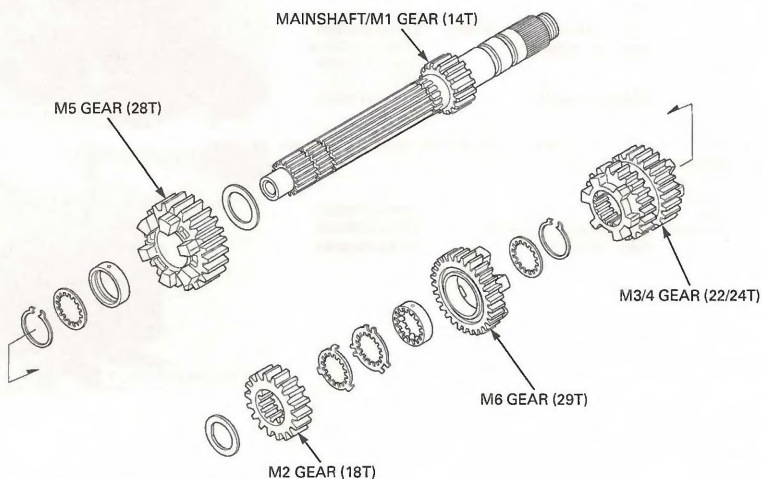


COUNTERSHAFT:

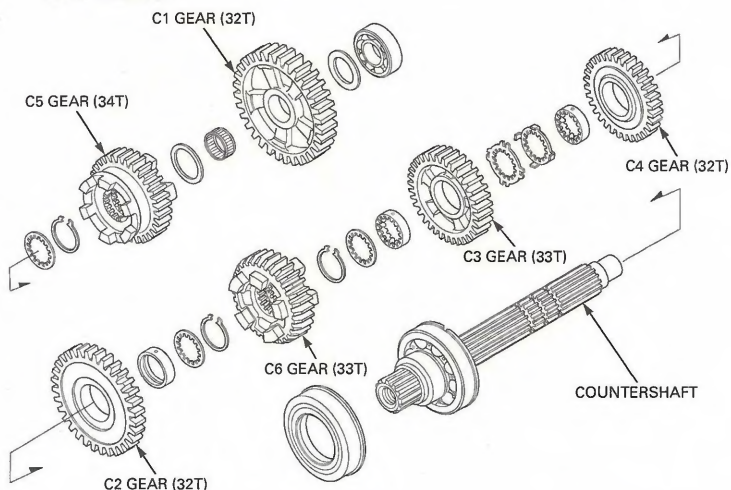

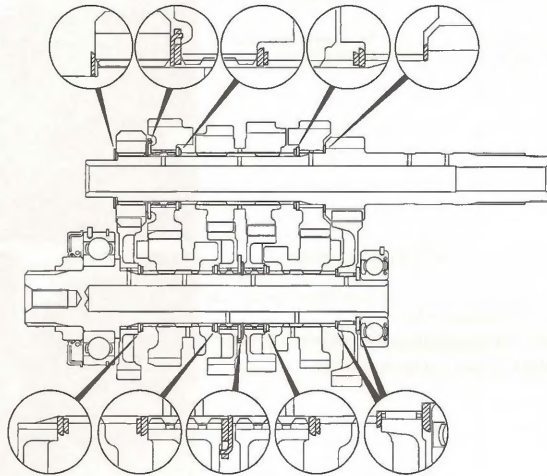


Assemble the transmission gear and shafts.

- Coat each gear with clean engine oil and check for smooth movement.
- Align the lock washer tabs with the spline washer grooves.

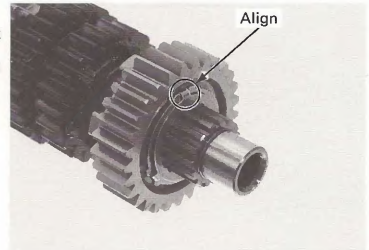

- Always install the thrust washers and snap rings with the chamfered (rolled) edge facing away from the thrust load.
- Install the snap rings so that their end gap aligns with the groove of the splines.
- Make sure that the snap rings are fully seated in the shaft groove after installing them.

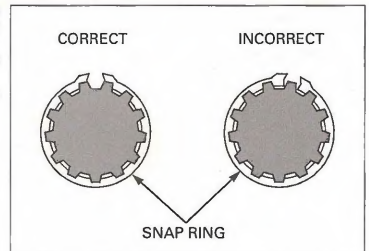


CRANKCASE/TRANSMISSION/BALANCER

INSTALLATION

*Be careful not to
damage a new
O-ring.*

Apply grease to a new O-ring and install it to the oil jet pipe.

Install the oil jet pipe into the upper crankcase by aligning its tab with the crankcase groove.

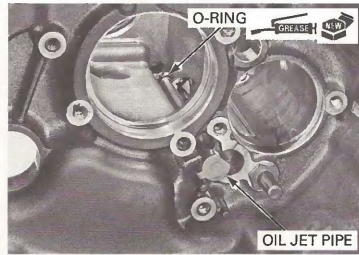


Install the shift drum and bearing into the crankcase.


Apply locking agent to the shift drum bearing set bolt threads (page 1-18).

Tighten the bolts/washers to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

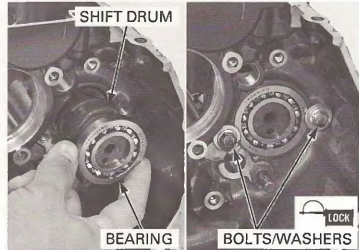


Install the mainshaft assembly into the crankcase.

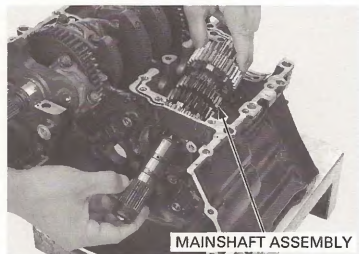


*Install the bearing
into the crankcase
with the marked
side facing out.*

Install the mainshaft bearing into the crankcase.

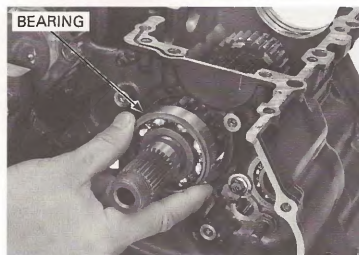



The shift forks have the following identification marks:

- "RL" for right/left
- "C" for center

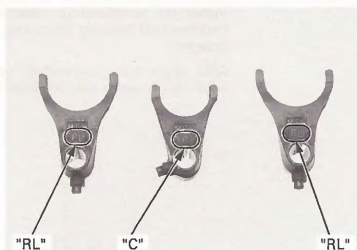

Install the shift forks into the shift drum guide grooves and insert the fork shaft.

- Face the shift fork marks as follows:
 - "RL" marks to the outside
 - "C" mark to the right side (clutch side)
- The "C" shift fork claw aligns the gear shifter groove.

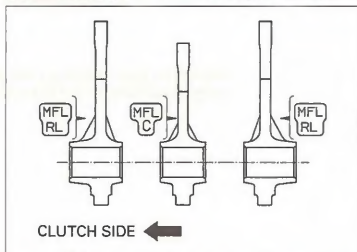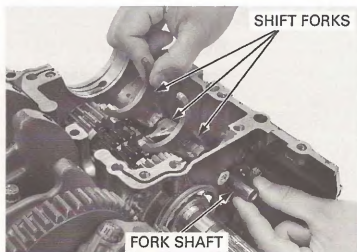


Apply locking agent to the mainshaft bearing set plate bolt threads (page 1-18).

Install the mainshaft bearing set plate with its OUTSIDE mark facing out.

Tighten the bolts to the specified torque.


TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

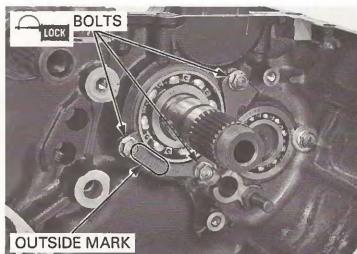

CRANKCASE/TRANSMISSION/BALANCER

Install the countershaft assembly by aligning the countershaft bearing snap ring with the crankcase groove.

Also align the countershaft bearing stopper pins with the groove in the crankcase.

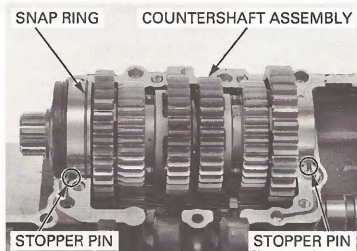


BALANCER

REMOVAL


Separate the crankcase halves (page 12-5).

Loosen the balancer shaft pinch bolt.
Remove the bolt and balancer shaft holder.

Remove the sealing bolt and washer.

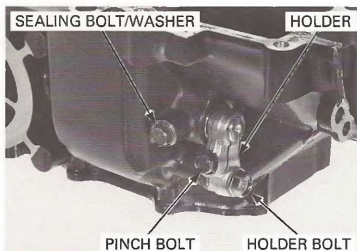

Pull the balancer shaft out and remove the balancer weight assembly from the lower crankcase.

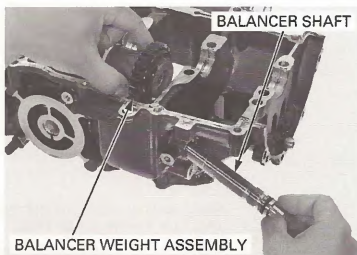


DISASSEMBLY


Remove the O-ring from the balancer shaft.




Remove the washers and needle bearings from the balancer weight assembly.

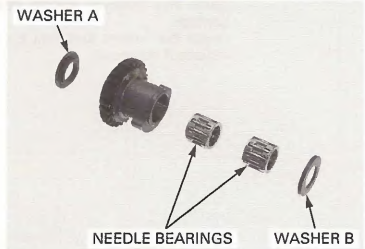

Remove the balancer gear assembly from the balancer weight.

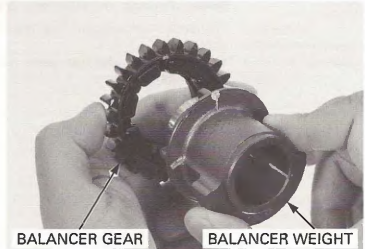


Remove the rubber dampers from the balancer gear.

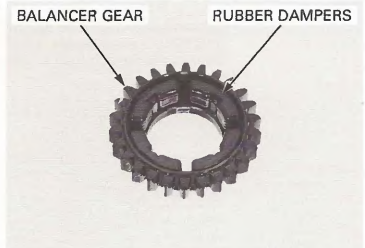

INSPECTION


Replace the balancer weight, balancer shaft, needle bearing as a set.

Check each needle bearing for wear or damage, replace if necessary.

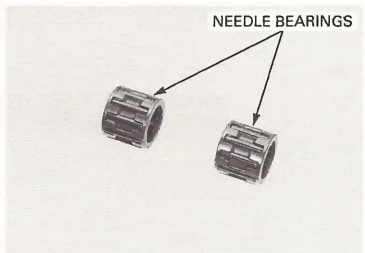

CRANKCASE/TRANSMISSION/BALANCER

Check the balancer weight and gear for wear or damage.
Check the rubber dampers for fatigue or damage, replace if necessary.

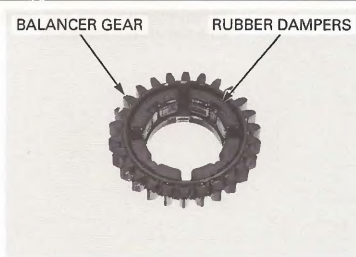


BALANCER BEARING SELECTION

The balancer weight and needle bearings are select fitted.


The balancer weight has two I.D. code letters as shown.

The marking identify each I.D. of the balancer weight as shown.

I.D.CODE LETTERS:

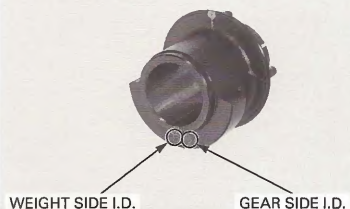


Reference the balancer weight I.D. code letters to determine the replacement bearing color. Refer to the selection table below for bearing selection.

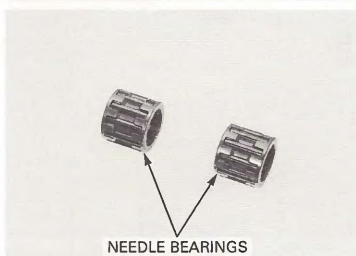


BALANCER BEARING SELECTION TABLE:

		BALANCER WEIGHT I.D. CODE		
		A	B	C
		26.996 – 27.000 mm (1.0628 – 1.0630 in)	26.991 – 26.996 mm (1.0626 – 1.0628 in)	26.987 – 26.991 mm (1.0625 – 1.0626 in)
BALANCER SHAFT	17.990 – 17.996 mm (0.7083 – 0.7085 in)	Blue	White	Green


DISASSEMBLY

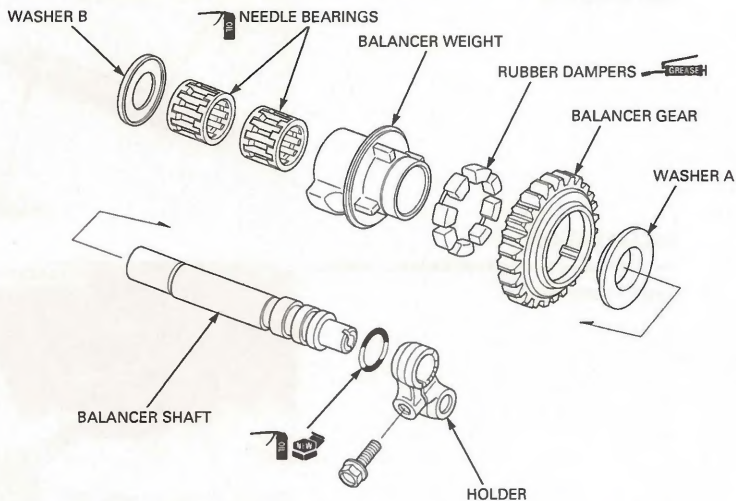

Apply grease to the damper rubber fitting area.
Install the damper rubbers into the balancer gear.
Assemble the balancer gear and weight while aligning the marks.

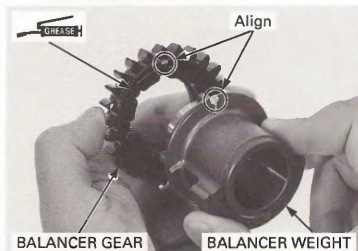


Apply oil to the needle bearing and install them into the balancer weight.
Install the washer A and B as shown.

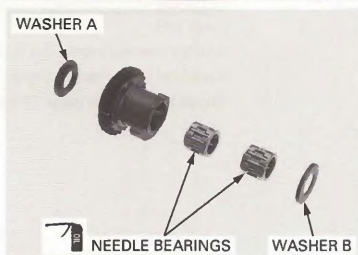

CRANKCASE/TRANSMISSION/BALANCER


Apply oil to a new O-ring and install it to the balancer shaft groove.

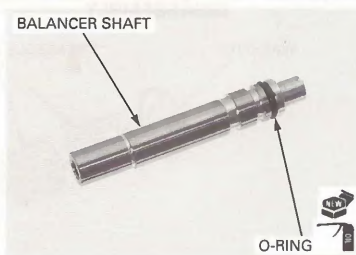


INSTALLATION

Install the balancer weight into the lower crankcase.

Install the balancer shaft.

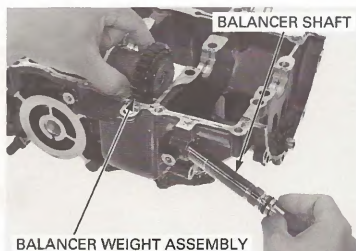

Turn the balancer shaft and position the punch mark on the shaft facing down.

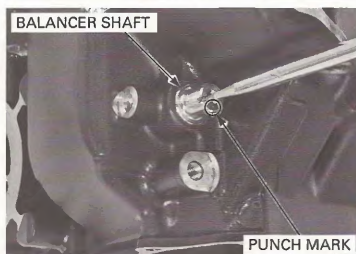


Install the balancer shaft holder.

Install the balancer holder bolt and balancer holder pinch bolt.

Install a new sealing washer and sealing bolt.

Assemble the crankcase halves (page 12-22).

Adjust the backlash (page 12-21).

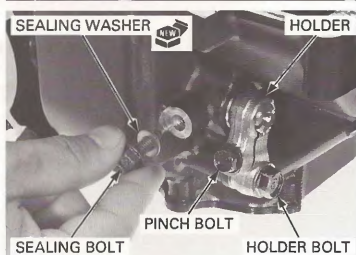

BALANCER GEAR BACKLASH ADJUSTMENT

INITIAL BACKLASH ADJUSTMENT



Install the engine into the frame (page 8-8).

Adjust the backlash while the engine is cold (below 35°C/95°F) and while it is not running.

Loosen the balancer shaft holder pinch bolt.

Excessive force can cause balancer gear, bearing and shaft damage. Do not turn the shaft more than necessary.

Turn the balancer shaft clockwise until resistance is felt, then back it off one graduation using the slot as a measure.

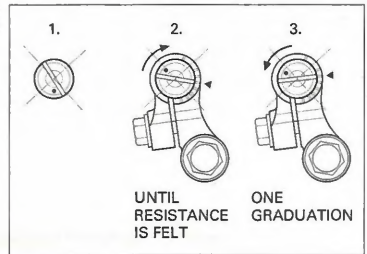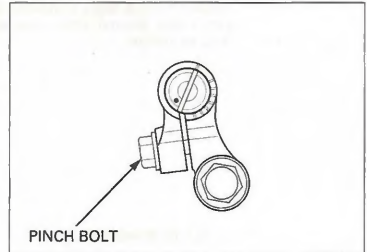

FINAL BACKLASH ADJUSTMENT

Warm up the engine and let it idle.

If the balancer gear noises are excessive, adjust the balancer backlash as follows:


Turn the balancer gear shaft counterclockwise until the gears begin to make a "whining" noise. Then turn the gear shaft clockwise until the gear "whining" noise disappears.

Tighten the balancer shaft pinch bolt.

After all gear backlash adjustments are done, snap the throttle and make sure the gear noises are not excessive.


If the gear "whine" noise is excessive, the backlash is too small.

If the gear "rattling" noise is excessive, the backlash is excessive.

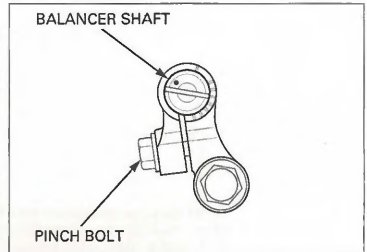


CRANKCASE ASSEMBLY


Apply a light, but thorough, coating of liquid sealant (TB 12078 or equivalent) to the crankcase mating surface. Do not apply sealant to the crankcase 8 mm bolt (main journal bolt) area and the oil passage area as shown.

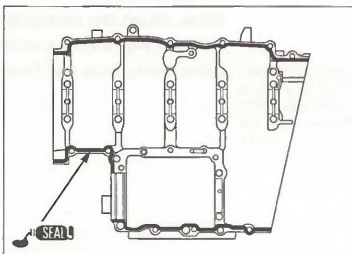


Install the dowel pins.

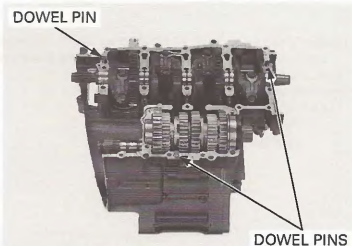

Install the oil orifices in the upper crankcase.

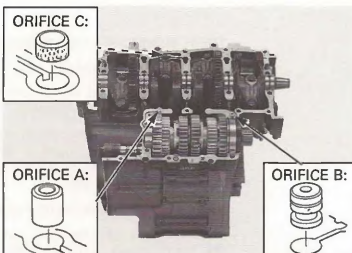

Install the lower crankcase onto the upper crankcase while aligning the crankshaft balancer drive gear white paint mark with between the balancer gear index lines as shown.

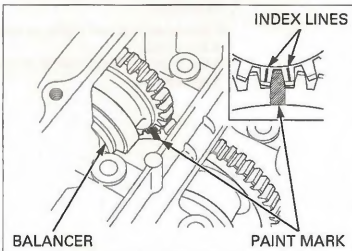

- Tighten the crankcase main journal bolts using the tightening method described below.
- Do not reuse the crankcase main journal bolts, because the correct axial tension will not be obtained.
- The crankcase main journal bolts are pre-coated with an oil additive for axial tension stability. Do not remove the oil additive from the new main journal bolts surface.

Install new crankcase main journal bolts.
Loosely install all the crankcase bolts/sealing washer.

TIGHTENING METHOD:

Make sure the upper and lower crankcase are seated securely.

Tighten the crankcase main journal bolts in numerical order as shown in the illustration in two or three steps to the specified torque.

Further tighten the crankcase main journal bolts 150°.

TORQUE: 20 N-m (2.0 kgf-m, 15 lbf-ft) + 150°

Tighten the 10 mm bolt to the specified torque.

TORQUE: 39 N-m (4.0 kgf-m, 29 lbf-ft)

Tighten the 8 mm bolt to the specified torque.

TORQUE: 24 N-m (2.4 kgf-m, 18 lbf-ft)

The sealing washer locations are indicated on the upper crankcase with a "△" mark.





From the inside to outside, tighten the 7 mm bolts/new sealing washer to the specified torque.

TORQUE: 18 N-m (1.8 kgf-m, 13 lbf-ft)

Place the engine with the lower side facing down.

Install the 7 mm bolts and tighten to the specified torque.

TORQUE: 18 N-m (1.8 kgf-m, 13 lbf-ft)

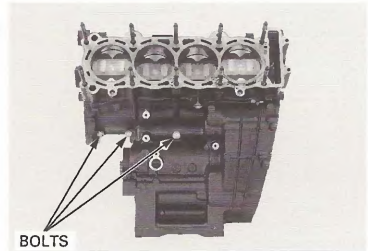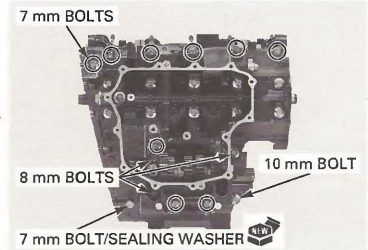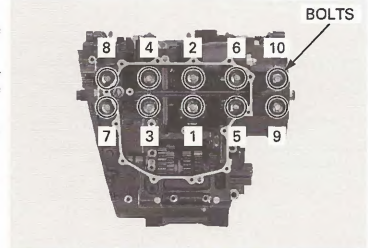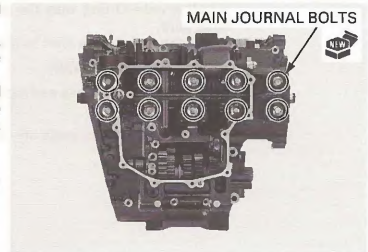

CRANKCASE/TRANSMISSION/BALANCER


Install a new O-ring into the groove of the water hose joint.

Install the water hose joint to the cylinder block.

Tighten the bolts securely.

Connect the water hose and tighten the hose clamp screw (page 7-23).

Install the removed parts in the reverse order of removal.

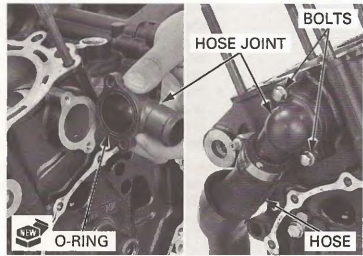


13. CRANKSHAFT/PISTON/CYLINDER

COMPONENT LOCATION	13-2	MAIN JOURNAL BEARING	13-9
SERVICE INFORMATION	13-3	CRANKPIN BEARING	13-12
TROUBLESHOOTING	13-4	PISTON/CYLINDER	13-14
CRANKSHAFT	13-5		

CRANKSHAFT/PISTON/CYLINDER

COMPONENT LOCATION

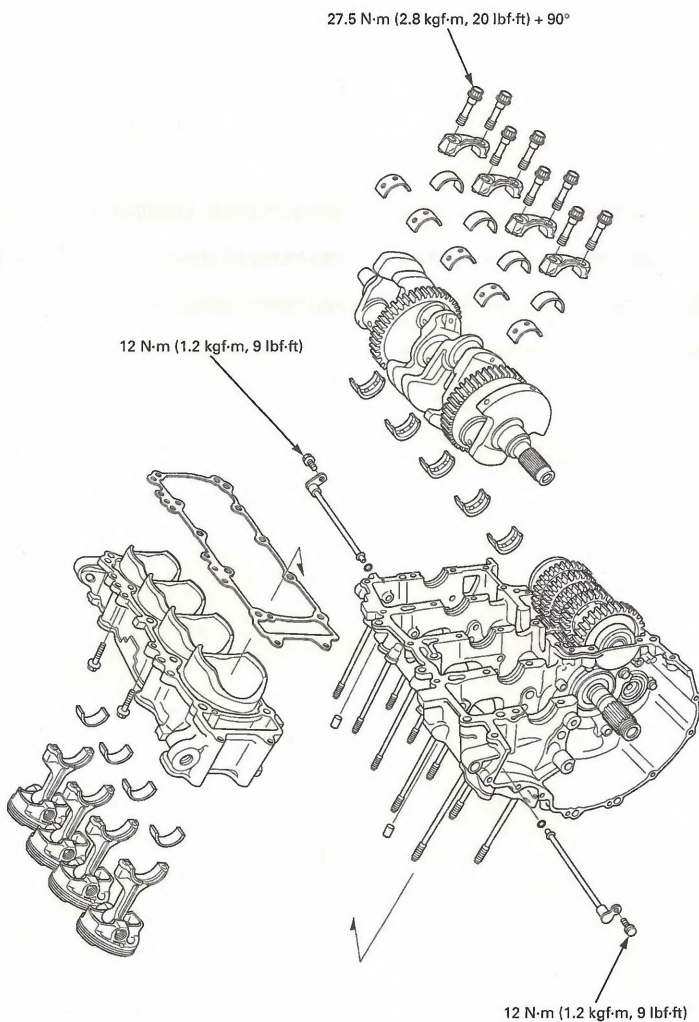

SERVICE INFORMATION

GENERAL

- The crankcase must be separated to service the following:
 - Crankshaft (page 13-5)
 - Piston (page 13-14)
 - Cylinder (page 13-14)
- Mark and store the connecting rods, bearing caps and bearing inserts to be sure of their correct locations for reassembly.
- The crankpin and main journal bearing inserts are select fit and are identified by color codes. Select replacement bearings from the code tables. After selecting new bearings, recheck the oil clearance with a plastigauge. Incorrect oil clearance can cause major engine damage.
- Clean the oil passages in the upper crankcase with compressed air before installing the pistons.
- Separate the crankcase halves (page 12-5) when removing the piston.
- For knock sensor removal/installation (page 6-68).

SPECIFICATIONS

ITEM		STANDARD	SERVICE LIMIT
Crankshaft			Unit: mm (in)
Crankshaft	Connecting rod side clearance	0.15 – 0.30 (0.006 – 0.012)	0.35 (0.014)
	Crankpin bearing oil clearance	0.030 – 0.052 (0.0012 – 0.0020)	0.06 (0.002)
	Main journal bearing oil clearance	0.019 – 0.037 (0.0007 – 0.0015)	0.05 (0.002)
	Runout	–	0.05 (0.002)
Piston, piston rings	Piston O.D. at 5 mm (0.2 in) from bottom	75.965 – 75.985 (2.9907 – 2.9915)	75.895 (2.9880)
	Piston pin bore I.D.	17.002 – 17.008 (0.6694 – 0.6696)	17.030 (0.6705)
	Piston pin O.D.	16.994 – 17.000 (0.6691 – 0.6693)	16.980 (0.6685)
	Piston-to-piston pin clearance	0.002 – 0.014 (0.0001 – 0.0006)	0.04 (0.002)
	Piston ring end gap	Top	0.22 – 0.32 (0.009 – 0.126)
		Second	0.40 – 0.55 (0.016 – 0.022)
		Oil (side rail)	0.20 – 0.70 (0.008 – 0.028)
	Piston ring-to-ring groove clearance	Top	0.040 – 0.080 (0.0016 – 0.0032)
		Second	0.015 – 0.050 (0.0006 – 0.0020)
Cylinder	I.D.	76.000 – 76.015 (2.9921 – 2.9927)	76.025 (2.9931)
	Out-of-round	–	0.10 (0.004)
	Taper	–	0.10 (0.004)
	Warpage	–	0.10 (0.004)
	Cylinder-to-piston clearance	0.015 – 0.050 (0.0006 – 0.0020)	0.10 (0.004)
Connecting rod small end I.D.		17.030 – 17.042 (0.6705 – 0.6709)	17.048 (0.6712)
Connecting rod-to-piston pin clearance		0.030 – 0.048 (0.0012 – 0.0019)	0.07 (0.003)

TORQUE VALUES

Crankpin bearing cap bolt (new)	27.5 N·m (2.8 kgf·m, 20 lbf·ft) + 90°	Apply oil to the threads and seating surface.
(retightening)	21.6 N·m (2.2 kgf·m, 16 lbf·ft) + 90°	Apply oil to the threads and seating surface.
Main journal bolt	20 N·m (2.0 kgf·m, 15 lbf·ft) + 150°	See page 13-10
		Replace with a new one.
Oil jet pipe mounting bolt	12 N·m (1.2 kgf·m, 9 lbf·ft)	Apply locking agent to the threads.

TROUBLESHOOTING

Cylinder compression is too low, hard to starting or poor performance at low speed

- Leaking cylinder head gasket
- Worn, stuck or broken piston ring
- Worn or damaged cylinder and piston

Cylinder compression too high, overheating or knocking

- Excessive carbon built-up on piston head or combustion chamber

Excessive smoke

- Worn cylinder, piston or piston ring
- Improper installation of piston rings
- Scored or scratched piston or cylinder wall

Abnormal noise

- Worn piston pin or piston pin hole
- Worn connecting rod small end
- Worn cylinder, piston or piston rings
- Worn main journal bearings
- Worn crankpin bearings

Engine vibration

- Excessive crankshaft runout
- Improper balancer timing

CRANKSHAFT

Separate the crankcase halves (page 12-5).


SIDE CLEARANCE INSPECTION

Measure the connecting rod side clearance.

SERVICE LIMIT: 0.35 mm (0.014 in)

If the clearance exceeds the service limit, replace the connecting rod.

Recheck and if still out of limit, replace the crankshaft.

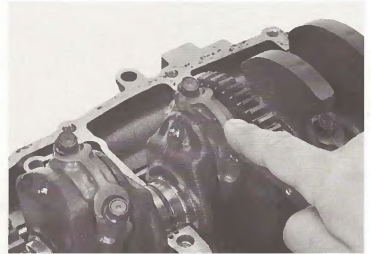

REMOVAL

NOTICE

- Before removal, position all the pistons at TDC (Top Dead Center) to prevent damaging the crankpin with the connecting rod.
- Do not interchange the bearing inserts. They must be installed in their original locations or the correct bearing oil clearance may not be obtained, resulting in engine damage.

Mark the bearing caps and bearings as you remove them to indicate the correct cylinder for reassembly.



Remove the crankpin bearing cap bolts and bearing caps.

Remove the crankshaft.

Remove the main journal bearings from both crankcase halves.

NOTICE


Do not interchange the bearing inserts. They must be installed in their original locations or the correct bearing oil clearance may not be obtained, resulting in engine damage.

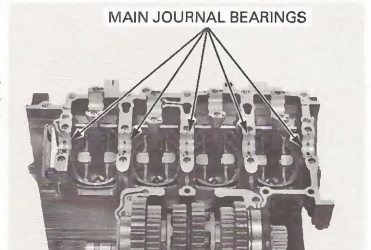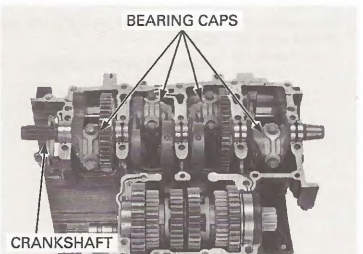

CRANKSHAFT/PISTON/CYLINDER

Remove the bolts, oil jet pipes and O-rings from the upper crankcase.

Clean the oil jet pipes in solvent thoroughly.

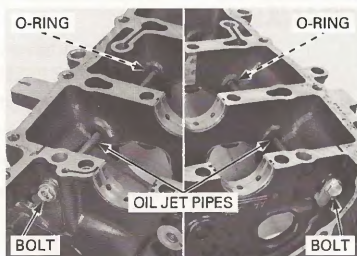


INSPECTION

Support the crankshaft at both end journals.
Set a dial gauge on the center main journal of the crankshaft.
Rotate the crankshaft two revolutions and read the runout.

SERVICE LIMIT: 0.05 mm (0.002 in)


Check the primary drive gear and balancer drive gear teeth for abnormal wear or damage.

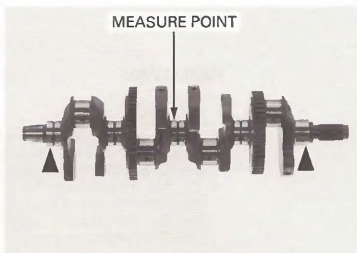

Always replace the O-rings when the oil jet pipes are removed.

Inspect the oil jet pipes for clogs, bending or damage.

Replace them if necessary.

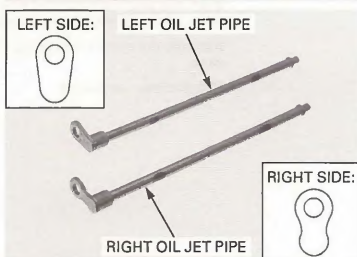


INSTALLATION

Apply grease to new O-rings and install them to the oil jet pipes.


Be careful not to damage the O-rings.

Install the oil jet pipes into the upper crankcase as shown.

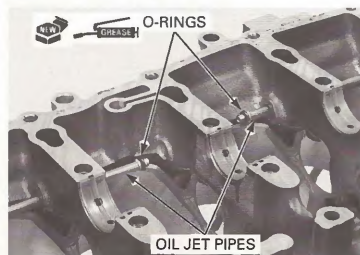


LEFT SIDE:

RIGHT SIDE:

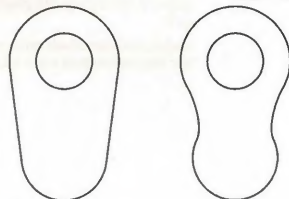

Apply locking agent to the oil jet pipe mounting bolt threads (page 1-18) and tighten them to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

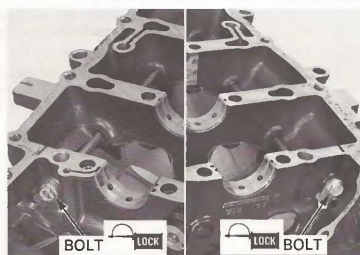


Apply molybdenum oil solution to the main journal bearing sliding surfaces on the upper crankcase and crankpin bearing sliding surfaces on the connecting rods.

The bearing tabs should be aligned with the grooves in the crankcase and the crankpin.

Install the main journal bearings into their original locations.


NOTICE

Do not interchange the bearing inserts. They must be installed in their original locations or the correct bearing oil clearance may not be obtained, resulting in engine damage.

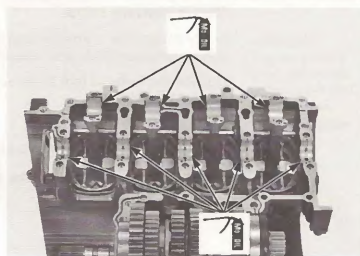

CRANKSHAFT/PISTON/CYLINDER


Apply molybdenum oil solution to the main journal thrust surfaces of the crankshaft as shown.

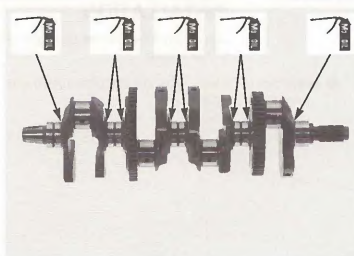

NOTICE


Position all the pistons at TDC (Top Dead Center) to prevent damaging the crankpin with the connecting rod.

Install the crankshaft onto the upper crankcase. Set the connecting rods onto the crankpins.

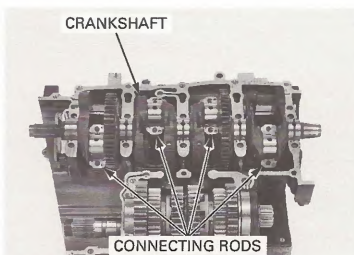

Apply molybdenum oil solution to the crankpin bearing sliding surfaces on the crankpin bearing caps.

Install the crankpin bearing caps, aligning the dowel pins with the holes in the connecting rods. Be sure each part is installed in its original position, as noted during removal.

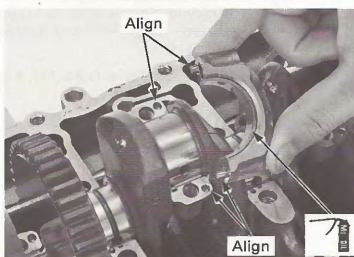

TIGHTENING METHOD:

The crankpin bearing cap bolts cannot be reused. Once the bolts have been loosened replace them with new ones.

Apply oil to new crankpin bearing cap bolt threads and seating surfaces, and install them.

Tighten the bolts in two or three steps alternately to the specified torque.

Further tighten the bolts 90°.

TORQUE: 27.5 N·m (2.8 kgf·m, 20 lbf·ft) + 90°

Assemble the crankcase halves (page 12-22).



MAIN JOURNAL BEARING

NOTICE

Do not interchange the bearing inserts. They must be installed in their original locations or the correct bearing oil clearance may not be obtained, resulting in engine damage.

Remove the crankshaft (page 13-5).

BEARING INSPECTION

Inspect the main journal bearing inserts on the upper and lower crankcase halves for unusual wear or peeling.

Check the bearing tabs for damage.




OIL CLEARANCE INSPECTION

Clean off any oil from the bearing inserts and main journals.

Install the crankshaft onto the upper crankcase.


Put a strip of plastigauge lengthwise on each main journal, avoiding the oil hole.

- Do not rotate the crankshaft during inspection.

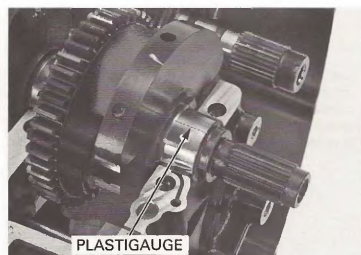

Install the dowel pins and oil orifices onto the upper crankcase.

Install the lower crankcase onto the upper crankcase.

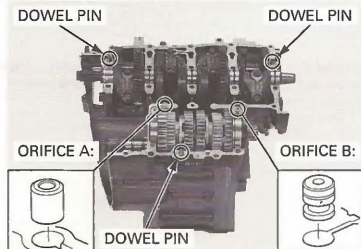

CRANKSHAFT/PISTON/CYLINDER

TIGHTENING METHOD:

Install the crankcase main journal bolts.
Make sure the upper and lower crankcase are seated securely.

Tighten the crankcase main journal bolts as follows:

Tighten the crankcase main journal bolts in numerical order in the illustration in two or three steps to the specified torque.



Further tighten the crankcase main journal bolts 150°.

TORQUE: 20 N·m (2.0 kgf-m, 15 lbf-ft) + 150°

Remove the crankcase main journal bolts and lower crankcase, measure the compressed plastigauge at its widest point on each main journal to determine the oil clearance.

SERVICE LIMIT: 0.05 mm (0.002 in)


If the oil clearance exceeds the service limit, select a replacement bearing.

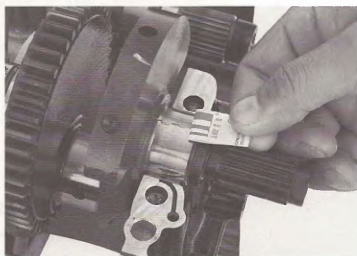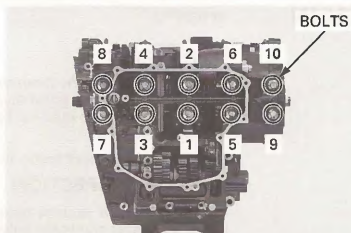

BEARING SELECTION

Letters (A, B or C)
on the left side of
upper crankcase
are bearing support
I.D. codes, from left
to right.

Record the crankcase bearing support I.D. codes on the left side of the upper crankcase, as shown.

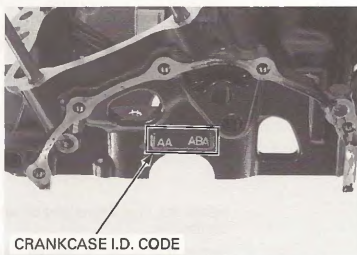

Numbers (1, 2 or 3)
on the crank weight
are the main journal
O.D. codes from
left to right.

Record the corresponding main journal O.D. code numbers from the crank weight.



Cross reference the main journal and bearing support codes to determine the replacement bearing color code.

MAIN JOURNAL BEARING SELECTION TABLE:

		BEARING SUPPORT I.D. CODE		
		A	B	C
		37.000 – 37.006 mm (1.4567 – 1.4569 in)	37.006 – 37.012 mm (1.4569 – 1.4572 in)	37.012 – 37.018 mm (1.4572 – 1.4574 in)
MAIN JOURNAL O.D. CODE	1	34.000 – 34.006 mm (1.3386 – 1.3388 in)	Red	Yellow
	2	33.994 – 34.000 mm (1.3383 – 1.3386 in)	Pink	Green
	3	33.988 – 33.994 mm (1.3381 – 1.3383 in)	Yellow	Brown


BEARING THICKNESS:

Brown: Thickest
Green:
Yellow: †
Pink:
Red: Thinnest

NOTICE

After selecting new bearings, recheck the clearance with plastigauge. Incorrect clearance can cause severe engine damage.


IDENTIFICATION COLOR

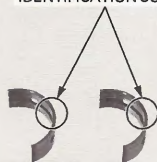

BEARING INSTALLATION

Clean the bearing outer surfaces and crankcase bearing supports.
 Apply molybdenum oil solution to the main journal bearing sliding surfaces on the upper crankcase.
 Install the main journal bearing inserts onto the crankcase bearing supports, aligning each tab with each groove.

MAIN JOURNAL BEARINGS

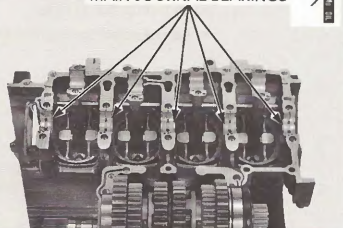

CRANKPIN BEARING

NOTICE


Do not interchange the bearing inserts. They must be installed in their original locations or the correct bearing oil clearance may not be obtained, resulting in engine damage.

Remove the crankshaft (page 13-5).

BEARING INSPECTION

Check the bearing inserts for unusual wear or peeling.

Check the bearing tabs for damage.

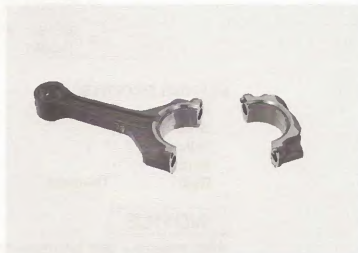

OIL CLEARANCE INSPECTION


Clean off any oil from the bearing inserts and crankpins.

Carefully install the crankshaft onto the upper crankcase.

Set the connecting rods onto the crankpins.

Put a strip of plastigauge lengthwise on each crankpin avoiding the oil hole.

- Do not rotate the crankshaft during inspection.

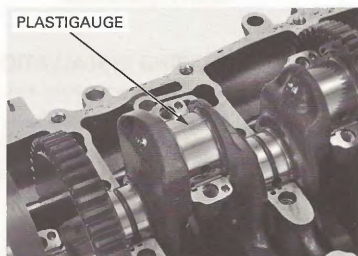

Carefully install the crankpin bearing caps, aligning the dowel pins with the holes in the connecting rods.


Use the removed crankpin bearing cap bolts when checking the oil clearance.

Apply oil to the crankpin bearing cap bolt threads and seating surfaces and install the bolts.

Tighten the bolts in two or three steps alternately to the specified torque.

Further tighten the bolts 90°.


TORQUE: 21.6 N·m (2.2 kgf·m, 16 lbf·m) + 90°

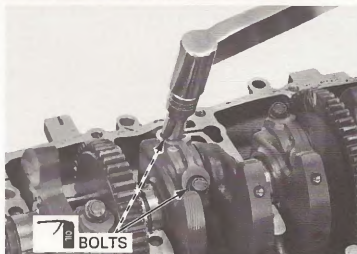

Remove the bearing caps and measure the compressed plastigauge at its widest point on the crankpin to determine the oil clearance.

SERVICE LIMIT: 0.06 mm (0.002 in)

If the oil clearance exceeds the service limit, select the correct replacement bearings.

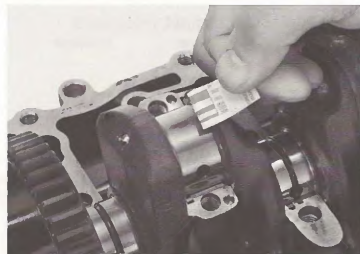

BEARING SELECTION


Numbers (1, 2 or 3) on the connecting rods are the connecting rod I.D. codes.

Record the connecting rod I.D. code number (1, 2 or 3) or measure the I.D. with the crankpin bearing cap installed without bearing inserts.

Letters (A, B or C) on the crank weight are the crankpin O.D. codes from left to right.

If you are replacing the crankshaft, record the corresponding crankpin O.D. code letter (A, B or C).

If you are reusing the crankshaft, measure the crankpin O.D. with a micrometer.

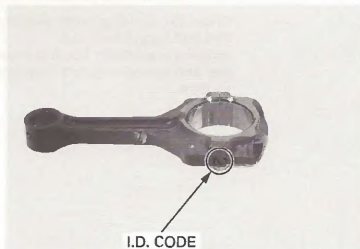

Cross-reference the connecting rod and crankpin codes to determine the replacement bearing color code.

CRANKPIN BEARING SELECTION TABLE:

		CONNECTING ROD I.D.CODE			
		1	2	3	
		39.500 – 39.506 mm (1.5551 – 1.5554 in)	39.506 – 39.512 mm (1.5554 – 1.5556 in)	39.512 – 39.518 mm (1.5556 – 1.5558 in)	
CRANKPIN O.D.CODE	A	36.497 – 36.503 mm (1.4369 – 1.4371 in)	Yellow	Green	Brown
	B	36.491 – 36.497 mm (1.4367 – 1.4369 in)	Green	Brown	Black
	C	36.485 – 36.491 mm (1.4364 – 1.4367 in)	Brown	Black	Blue

BEARING THICKNESS:

Blue:	Thickest
Black:	
Brown:	↓
Green:	
Yellow:	Thinnest



NOTICE

After selecting new bearings, recheck the clearance with plastigauge. Incorrect clearance can cause severe engine damage.

BEARING INSTALLATION

Clean the bearing outer surfaces, crankpin bearing cap and connecting rod.

Install the crankpin bearing inserts onto the bearing cap and connecting rod, aligning each tab with each groove.

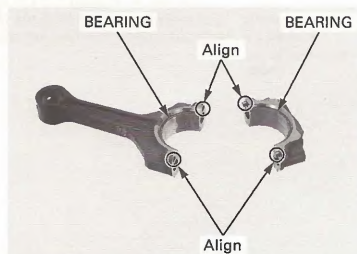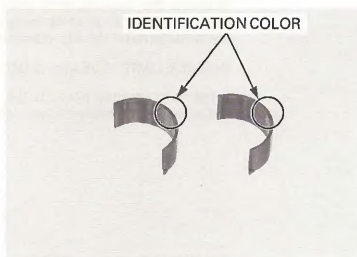

PISTON/CYLINDER

PISTON/CONNECTING ROD/ CYLINDER REMOVAL

NOTICE

- Before piston removal, place a clean shop towel around the connecting rod to prevent damaging the cylinder.
- Do not try to remove the piston/connecting rod assembly from bottom of the cylinder; the assembly will get stuck in the gap between the cylinder liner and the upper crankcase.
- Do not interchange the bearing inserts. They must be installed in their original locations or the correct bearing oil clearance may not be obtained, resulting in engine damage.


Separate the crankcase halves (page 12-5).

Remove the bolts and crankpin bearing caps.

Remove the following:

- Crankshaft (page 13-5)
- Countershaft (page 12-6)

Mark all parts as you remove them to indicate the correct cylinder for reassembly.

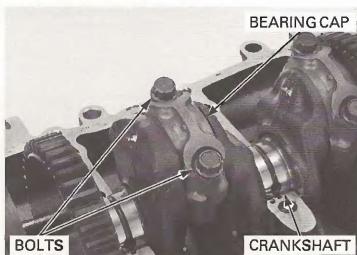

Do not try to remove the connecting rod/piston assembly from the bottom of the cylinder; the assembly will get stuck when the oil ring expands in the gap between the cylinder liner and the upper crankcase.

Remove the piston/connecting rod assembly from the top of the cylinder.


Remove the bolts and cylinder.

Remove the gasket and dowel pins.


PISTON REMOVAL

Remove the piston pin clip with pliers. Push the piston pin out of the piston and connecting rod, and remove the piston.


PISTON/CONNECTING ROD ASSEMBLY

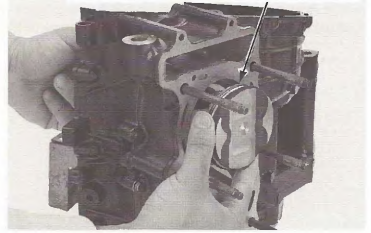

CYLINDER

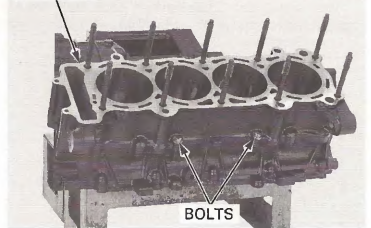


BOLTS

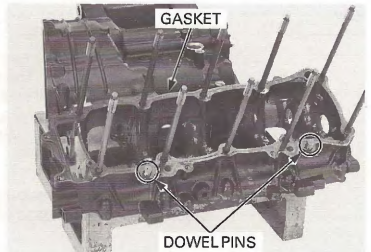

GASKET

DOWEL PINS

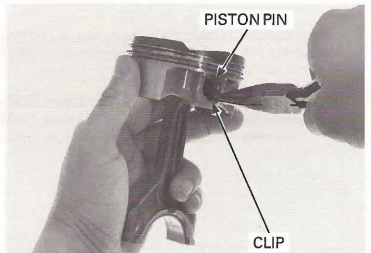

PISTON PIN


CLIP

CRANKSHAFT/PISTON/CYLINDER

PISTON DISASSEMBLY


Be careful not to damage the piston ring by spreading the ends too far.

Spread each piston ring ends and remove them by lifting up at a point opposite the gap.

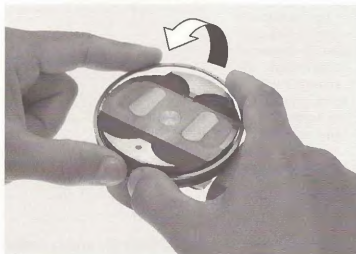

Never use a wire brush; it will scratch the groove.

Clean carbon deposits from the piston ring grooves with a ring that will be discarded.

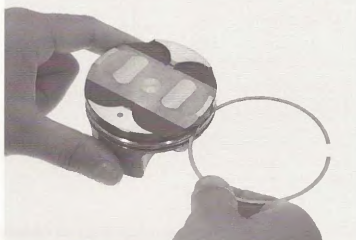

PISTON INSPECTION

Inspect the piston rings for free movement by rotating them in their grooves. The rings should be able to move freely without catching.

Push the ring until the outer surface of the piston ring is nearly flush with the piston and measure the ring-to-ring groove clearance.

SERVICE LIMITS:

Top: 0.120 mm (0.0050 in)

Second: 0.075 mm (0.0030 in)



Push the rings into the cylinder with the top of the piston to be sure they are squarely positioned in the cylinder.


Insert the piston ring squarely into the top of the cylinder and measure the ring end gap.

SERVICE LIMITS:

Top: 0.52 mm (0.020 in)

Second: 0.74 mm (0.029 in)

Oil (side rail): 1.00 mm (0.040 in)

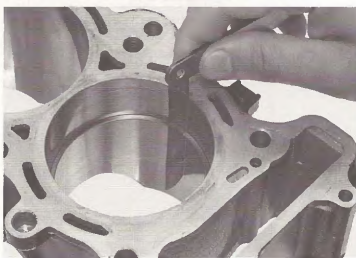

Measure the piston pin bore I.D.

SERVICE LIMIT: 17.030 mm (0.6705 in)




Measure the O.D. of the piston pin.

SERVICE LIMIT: 16.980 mm (0.6685 in)


Calculate the piston-to-piston pin clearance.

SERVICE LIMIT: 0.04 mm (0.002 in)

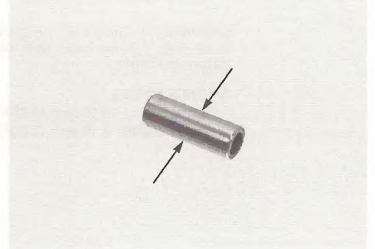

Measure the diameter of the piston at 5 mm (0.2 in) from the bottom and 90° to the piston pin hole.

SERVICE LIMIT: 75.895 mm (2.9880 in)

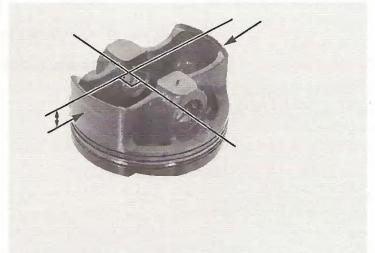


CONNECTING ROD INSPECTION

Measure the connecting rod small end I.D.

SERVICE LIMIT: 17.048 mm (0.6712 in)

Calculate the connecting rod-to-piston pin clearance.

SERVICE LIMIT: 0.07 mm (0.003 in)

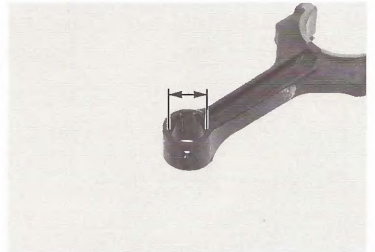

CYLINDER INSPECTION

Inspect the cylinder bore for wear or damage.
Measure the cylinder I.D. in X and Y axis at three levels.
Take the maximum reading to determine the cylinder wear.

SERVICE LIMIT: 76.025 mm (2.9931 in)

Calculate the cylinder to piston clearance.
Take a maximum reading to determine the clearance.

For piston O.D. measurement (page 13-17).



SERVICE LIMIT: 0.10 mm (0.004 in)

Calculate the taper and out-of-round at three levels in X and Y axis. Take the maximum reading to determine them.

SERVICE LIMITS:


Taper: 0.10 mm (0.004 in)

Out-of-round: 0.10 mm (0.004 in)

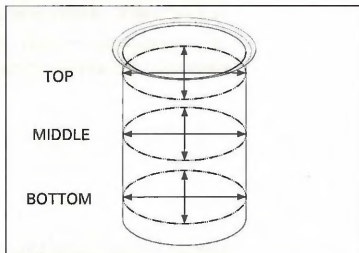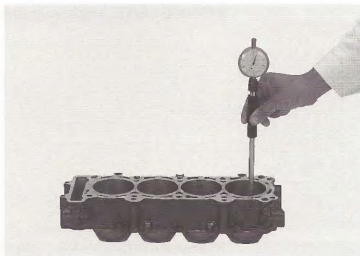

Inspect the top of the cylinder for warpage.

SERVICE LIMIT: 0.10 mm (0.004 in)

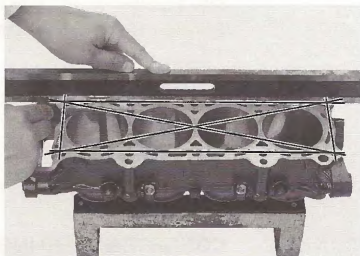

PISTON ASSEMBLY


Clean the piston ring grooves thoroughly and install the piston rings.

- Apply oil to the piston rings.
- Do not damage the piston and piston rings during installation.
- Install the piston rings with the markings (R: top ring, RNE: second ring) facing up.
- To install the oil ring, install the spacer first, then install the side rails.

Stagger the piston ring end gaps 120° apart from each other.

Stagger the side rail end gaps as shown.


After installation, the rings should rotate freely in the ring grooves.

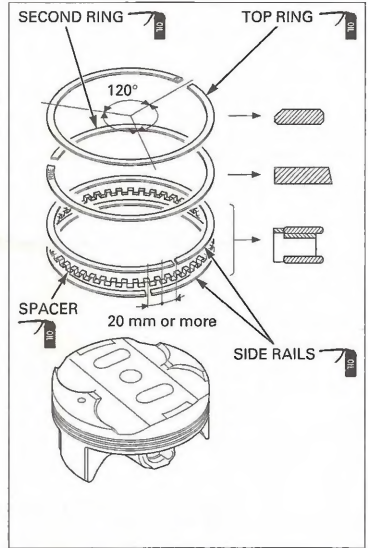

PISTON INSTALLATION

Apply molybdenum oil solution to the connecting rod small end inner surfaces and piston pin sliding surfaces.


Assemble the piston and connecting rod with the journal bearing tab facing to the piston "IN" mark.

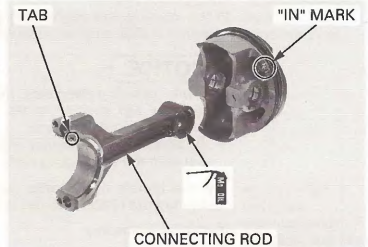

Apply molybdenum oil solution to the piston pin sliding surface.


Install the piston pin and secure it using new piston pin clips.

- Make sure that the piston pin clips are seated securely.
- Do not align the piston pin clip end gap with the piston cut-out.

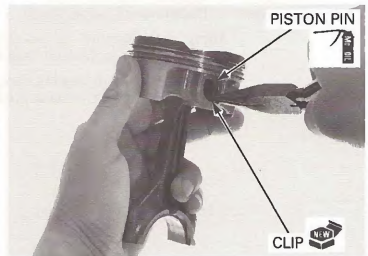


CRANKSHAFT/PISTON/CYLINDER

Install the dowel pins and new gasket.

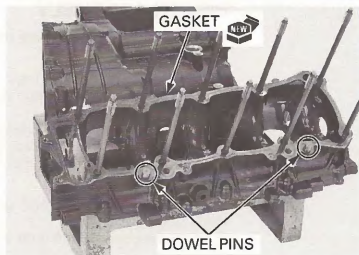

Install the cylinder and tighten the bolt securely.

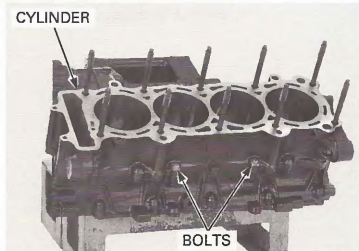

Coat the cylinder walls, pistons and piston rings with engine oil.

Install the piston/ connecting rod assembly with the piston "IN" mark facing the intake side.

Install the piston/connecting rod assemblies into the cylinders using a commercially available piston ring compressor tool.

When reusing the connecting rods, they must be installed in their original locations.

NOTICE

- While installing the piston, be careful not to damage the top surface of the cylinder, especially around the cylinder bore.
- Be careful not to damage the cylinder and crankpin with the connecting rod.

Make sure the piston ring compressor tool sits flush on the top surface of the cylinder.



Use the handle of a plastic hammer or equivalent tool to tap the piston into the cylinder.

Install the following:

- Crankshaft (page 13-7)
- Countershaft (page 12-16)

Apply molybdenum oil solution to the crankpin bearing sliding surface on the bearing caps.


Install the crankpin bearing caps, aligning the dowel pins with the holes in the connecting rods.

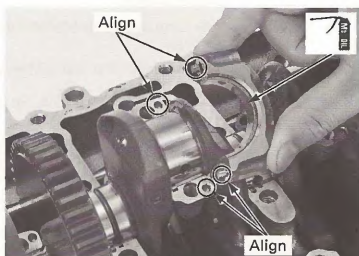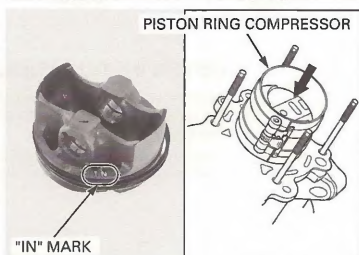

TIGHTENING METHOD:

The crankpin bearing cap bolts cannot be reused. Once the bolts have been loosened replace them with new ones.

Apply oil to new crankpin bearing cap bolt threads and seating surfaces, and install the bolts.

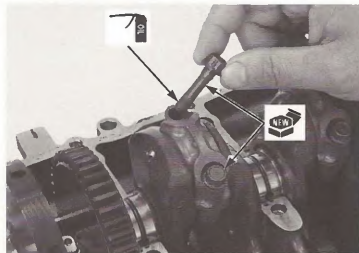


Tighten the bolts in two or three steps alternately to the specified torque.

Further tighten the bolts 90°.

TORQUE: 27.5 N·m (2.8 kgf·m, 20 lbf·ft) + 90°

Assemble the crankcase halves (page 12-22).

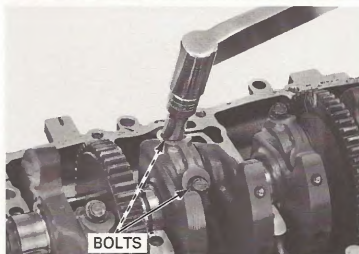


14. FRONT WHEEL/SUSPENSION/STEERING

COMPONENT LOCATION	14-2	FRONT WHEEL	14-16
SERVICE INFORMATION	14-3	FORK	14-22
TROUBLESHOOTING	14-6	HESD	14-33
HESD TROUBLESHOOTING	14-7	STEERING STEM.....	14-34
HANDLEBARS.....	14-9		

FRONT WHEEL/SUSPENSION/STEERING

COMPONENT LOCATION

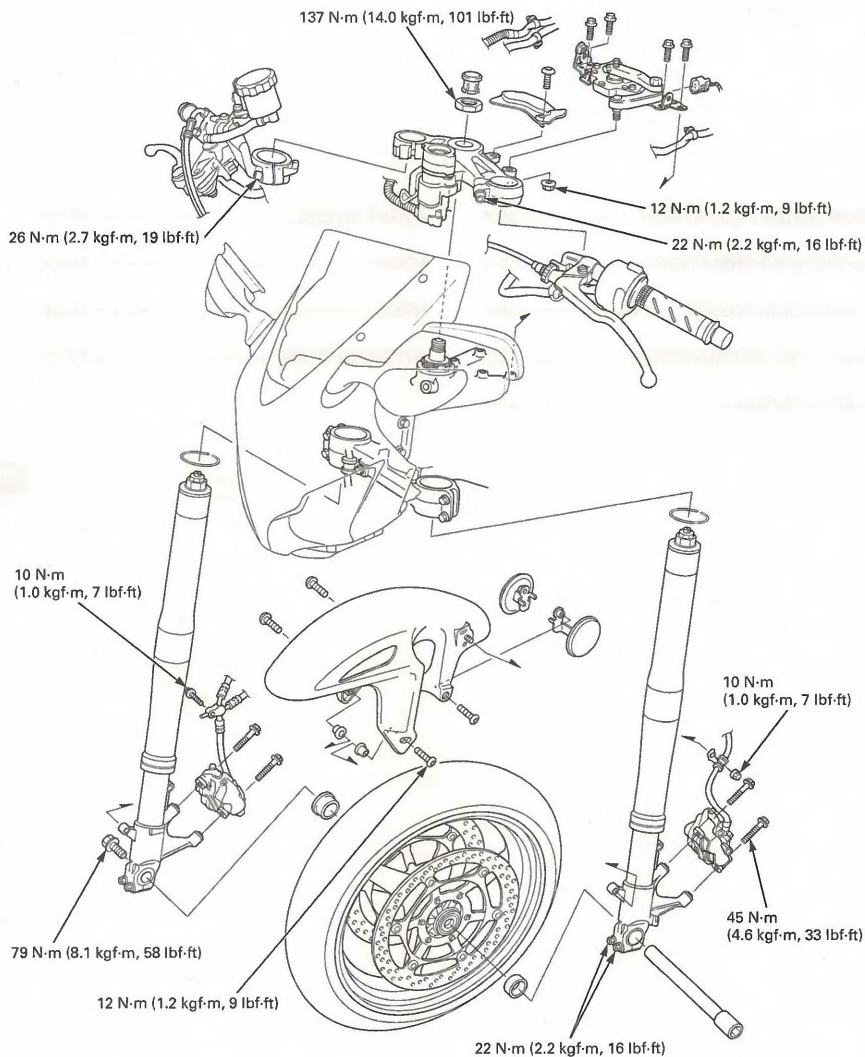

SERVICE INFORMATION

GENERAL

- When servicing the front wheel, fork or steering stem, support the motorcycle using a safety stand or hoist.
- A contaminated brake disc or pad reduces stopping power. Discard contaminated pads and clean a contaminated disc with a high quality brake degreasing agent.
- After the front wheel installation, check the brake operation by applying the brake lever.
- For brake service information (page 16-4).
- Use only tires marked "TUBELESS" and tubeless valves on rim marked "TUBELESS TIRE APPLICABLE".

SPECIFICATIONS

ITEM		STANDARD	SERVICE LIMIT
HESD linear solenoid resistance (at 20°C/68°F)		10 – 15 Ω	—
Minimum tire tread depth		—	1.5 (0.06)
Cold tire pressure	Driver only	250 kPa (2.50 kgf/cm ² , 36 psi)	—
	Driver and passenger	250 kPa (2.50 kgf/cm ² , 36 psi)	—
Axle runout		—	0.2 (0.01)
Wheel rim runout	Radial	—	2.0 (0.08)
	Axial	—	2.0 (0.08)
Wheel balance weight		—	60 g (2.1 oz) max.
Fork	Spring free length	234.0 (9.21)	229.3 (9.03)
	Tube runout	—	0.20 (0.008)
	Recommended fork fluid	Pro Honda Suspension Fluid SS-47 (10 W)	—
	Fluid level	93 (3.7)	—
	Fluid capacity	517 ± 2.5 cm ³ (17.5 ± 0.08 US oz, 18.2 ± 0.09 Imp oz)	—
	Pre-load adjuster initial setting	6 turns from minimum	—
	Rebound damping adjuster initial setting	2-1/4 turns out from full hard	—
	Compression damping adjuster initial setting	2 turns out from full hard	—
Steering head bearing pre-load		12 – 17 N (1.2 – 1.7 kgf)	—







Unit: mm (in)






TORQUE VALUES

Handlebar weight mounting screw	10 N·m (1.0 kgf-m, 7 lbf-ft)	ALOC screw; replace with a new one.
Front brake disc bolt	20 N·m (2.0 kgf-m, 15 lbf-ft)	ALOC bolt; replace with a new one.
Front axle bolt	79 N·m (8.1 kgf-m, 58 lbf-ft)	
Front axle holder bolt	22 N·m (2.2 kgf-m, 16 lbf-ft)	
Fork socket bolt	34 N·m (3.5 kgf-m, 25 lbf-ft)	Apply locking agent to the threads.
Fork bolt	34 N·m (3.5 kgf-m, 25 lbf-ft)	
Handlebar pinch bolt	26 N·m (2.7 kgf-m, 19 lbf-ft)	
Top bridge pinch bolt	22 N·m (2.2 kgf-m, 16 lbf-ft)	
Bottom bridge pinch bolt	27 N·m (2.8 kgf-m, 20 lbf-ft)	
Steering stem adjusting nut	—	See page 14-40
Steering stem adjusting lock nut	—	See page 14-40
Steering stem nut	137 N·m (14.0 kgf-m, 101 lbf-ft)	
Front brake hose clamp bolt	9.0 N·m (0.9 kgf-m, 6.6 lbf-ft)	
Front brake hose clamp nut	10 N·m (1.0 kgf-m, 7 lbf-ft)	
Front brake hose 3-way joint bolt	10 N·m (1.0 kgf-m, 7 lbf-ft)	
Front master cylinder holder bolt	12 N·m (1.2 kgf-m, 9 lbf-ft)	
Front brake caliper mounting bolt	45 N·m (4.6 kgf-m, 33 lbf-ft)	ALOC bolt; replace with a new one.
Second arm nut	12 N·m (1.2 kgf-m, 9 lbf-ft)	U-nut
HESD mounting bolt	10 N·m (1.0 kgf-m, 7 lbf-ft)	ALOC bolt; replace with a new one.
Right handlebar switch housing screw	0.9 N·m (0.09 kgf-m, 0.7 lbf-ft)	
Fork damper rod lock nut	20 N·m (2.0 kgf-m, 15 lbf-ft)	
Front fender mounting screw	12 N·m (1.2 kgf-m, 9 lbf-ft)	
Torque arm nut	12.5 N·m (1.3 kgf-m, 9.2 lbf-ft)	

FRONT WHEEL/SUSPENSION/STEERING

    TOOLS

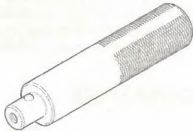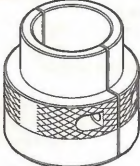Bearing remover shaft 07GGD-0010100 	Bearing remover head, 25 mm 07746-0050800 	Driver 07749-0010000 
Attachment, 42 x 47 mm 07746-0010300 	Pilot, 25 mm 07746-0040600 	Fork seal driver 07YMD-MCF0100  or 07NMD-KZ3010A (U.S.A. only)
Steering stem socket 07HMA-MR70100 	Driver attachment (2 required) 07NMF-MT70120  (Not available in U.S.A.)	Driver shaft assembly 07946-KM90301  (Not available in U.S.A.)
Bearing remover 07NMF-MT70110  (Not available in U.S.A.)	Assembly base 07946-KM90600  (Not available in U.S.A.)	Attachment, 35.2 mm I.D. 07947-KA20200  (Not available in U.S.A.)

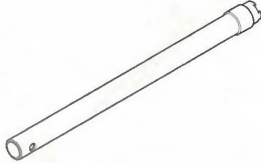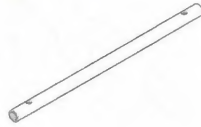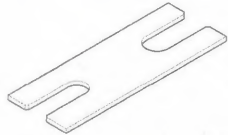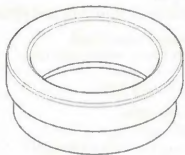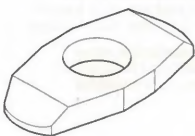Fork damper holder 07YMB-MCF0101  or 07YMB-MCFA100 (U.S.A. only)	Spring collar holder 070MF-MBZC110  NOTE: This tool is a part of fork damper install set (P/N 070MF-MBZC100) (Not available in U.S.A.)	Damper rod holder 070MF-MBZC120  NOTE: This tool is a part of fork damper install set (P/N 070MF-MBZC100) (Not available in U.S.A.) or 070MF-MBZA120
Stopper plate 070MF-MBZC130  NOTE: This tool is a part of fork damper install set (P/N 070MF-MBZC100) (Not available in U.S.A.)	Test probe 07ZAJ-RDJA110 	HDS pocket tester TDS3557-0112-01 (U.S.A. only) 
Main bearing driver attachment 07946-ME90200 	Fork seal driver weight 07947-KA50100 	Oil seal driver 07965-MA60000 
Installer shaft 07VMF-KZ30200 	Installer attachment (2 required) 07VMF-MAT0200 	Remover attachment 07AMF-MELA200 (U.S.A. only) 

FRONT WHEEL/SUSPENSION/STEERING

Fork rod stopper
07AMB-KZ3A100 (U.S.A. only)



Attachment, 35 mm I.D.
07746-0030400



Fork spring compressor
07AMC-MFJA100 (U.S.A. only)



TROUBLESHOOTING

NOTE:

If there is any problem with steering, remove the HESD (page 14-33) and inspect the condition of the steering parts. Check the HESD by using the Function Test (page 14-7) if no faulty steering parts are found.

Hard steering

- Faulty HESD
- Steering stem adjusting nut too tight
- Worn or damaged steering head bearings
- Bent steering stem
- Insufficient tire pressure

Steers to one side or does not track straight

- Faulty HESD
- Damaged or loose steering head bearings
- Bent forks
- Bent axle
- Bent frame
- Worn or damaged wheel bearings
- Worn or damaged swingarm pivot bearings

Front wheel wobbling

- Bent rim
- Worn or damaged front wheel bearings
- Faulty tire
- Unbalanced front tire and wheel

Front wheel turns hard

- Faulty front wheel bearings
- Bent front axle
- Front brake drag

Soft suspension

- Insufficient fluid in fork
- Incorrect fork fluid weight
- Weak fork springs
- Insufficient tire pressure

Hard suspension

- Bent fork tubes
- Too much fluid in fork
- Incorrect fork fluid weight
- Clogged fork fluid passage

Front suspension noise

- Insufficient fluid in fork
- Loose fork fasteners

HESD TROUBLESHOOTING

- The HESD system is equipped with a Self-Diagnostic System that is linked to the PGM-FI system (page 6-12). If the MIL blinks, follow the Self-Diagnostic Procedures to remedy the problem (Refer to DTC troubleshooting: page 6-17). The HESD system is also equipped with a Function Test Mode to check the HESD under maximum damping characteristics. If there is any abnormal condition in the HESD system without MIL blinking, follow the HESD function test and check the HESD function.
- The HESD system includes a fail-safe function to allow a minimum running capability even when there is problems with the system. When any abnormality is detected by the self-diagnosis function, the ECM stops the HESD system control by shutting off the current supply to the linear solenoid, the HESD will operate under minimum damping characteristics accordingly.
- For PGM-FI system diagram (page 6-9).
- For HDS pocket tester information (page 6-13).
- For DTC readout (page 6-13).
- For DTC index (page 6-15).
- A faulty HESD system is often related to poorly connected or corroded connectors. Check those connections before proceeding.

HESD FUNCTION TEST

NOTE:

- The HESD system is also equipped with a Function Test Mode so that a technician can compare the minimum with maximum damping characteristics without riding. The HESD system is set to minimum damping at no vehicle speed under normal conditions. By using the Function Test Mode, the ECM operates the linear solenoid with maximum current so the HESD system is temporarily set to maximum damping.
- It is not possible to use the HESD Function Test Mode when any problem exists.
- Before performing the HESD function test, remove the HESD (page 14-33) and check the following.
 - Steering head bearing pre-load (page 14-42)
 - Wear or damage of steering head bearing (page 4-40)
 - HESD-to-steering linkage

HESD FUNCTION TEST PROCEDURE

- Support the motorcycle using a hoist or equivalent and raise the front wheel off the ground.
- Before function test, check the steering feel for minimum damping characteristics by moving the handlebars right and left quickly several times. When conducting the test, move the handlebar in the same way.

Perform the HESD function test as follows:

1. Lower the sidestand (sidestand switch OFF).
2. Shift the transmission into any gear other than neutral.
3. Open the throttle grip fully.
4. Turn the ignition switch ON while keeping the state of 1 – 3.

The HESD indicator starts blinking and the HESD system enters the Function Test Mode for 10 seconds.

Make sure that the damping characteristics (force) changes, by means of comparing the minimum damping characteristics before Function Test with the maximum damping characteristics under the Function Test.

If the HESD damping characteristics (force) in Function Test Mode does not change at all, replace the HESD with a new one (page 14-33).

DTC TROUBLESHOOTING

DTC	Causes	Symptoms	Refer to
11-1	- Loose or poor contact on VS sensor connector - VS sensor or its circuit malfunction	- Engine operates normally - HESD does not function - ECM does not control the linear solenoid - Minimum damping characteristics	6-26
51-1	- Loose or poor contact of the HESD solenoid connector - HESD solenoid or its circuit malfunction	- Engine operates normally - HESD does not function - ECM does not control the linear solenoid - Minimum damping characteristics	14-8

DTC 51-1 (LINEAR SOLENOID)

Before starting the inspection, check for loose or poor contact on the linear solenoid connector and recheck the DTC.

1. Linear Solenoid Circuit Inspection

Turn the ignition switch OFF.
Disconnect the ECM 33P (Gray) connector.
Measure the resistance at the ECM 33P (Gray) connector terminals at the wire side.

Connection: B8 – B10

TOOL:


Test probe 07ZAJ-RDJA110

Is the resistance within $10 - 15 \Omega$ ($20^{\circ}\text{C}/68^{\circ}\text{F}$)?

YES – GO TO STEP 3.

NO – GO TO STEP 2.

33P (GRAY) CONNECTOR
(Wire side/female terminals)

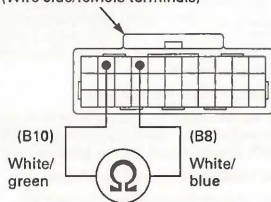

2. Linear Solenoid Resistance Inspection


Remove the HESD (page 14-33).
Measure the resistance at the linear solenoid terminals.

Is the resistance within $10 - 15 \Omega$ ($20^{\circ}\text{C}/68^{\circ}\text{F}$)?

YES – Open circuit in White/green or White/blue wire

NO – Faulty linear solenoid

2P CONNECTOR
(Linear solenoid side/male terminals)

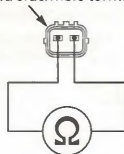

3. Linear Solenoid Short Circuit Inspection

Check for continuity between the ECM 33P (Gray) connector terminals at the wire side and ground.

Connection: B8 – Ground
B10 – Ground


TOOL:

Test probe

07ZAJ-RDJA110

Is there continuity?


- YES – Short circuit in White/green or White/blue wire
- NO – Replace the ECM with a known good one, and recheck.

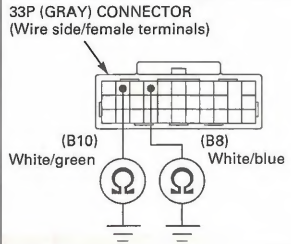

HANDLEBARS

REMOVAL


Remove the screw and right handlebar weight.

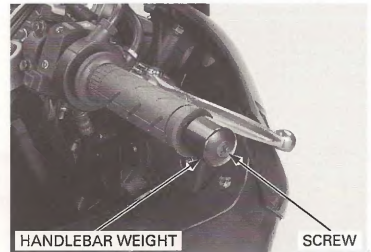


Disconnect the front brake light switch wire connectors from the switch.

Keep the brake master cylinder reserve tank upright to prevent air from entering the hydraulic system.

Remove the bolts, holder and master cylinder assembly.

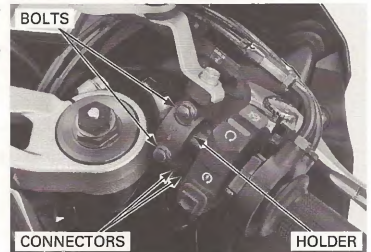


Remove the screws and right handlebar switch.

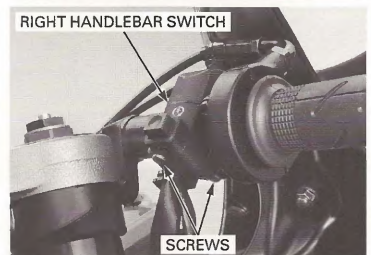


FRONT WHEEL/SUSPENSION/STEERING

Remove the screws and separate the throttle housing.

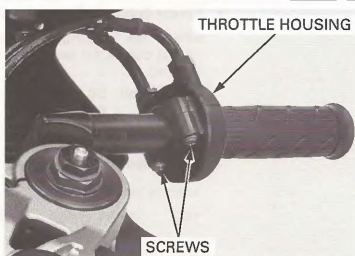

Remove the screw, left handlebar weight and grip from the handlebar.

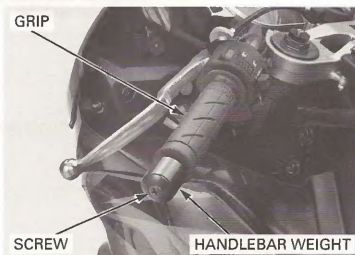

Disconnect the clutch switch connectors from the clutch switch.

Remove the screws and left handlebar switch housing.




Loosen the clutch lever bracket pinch bolt.




Be careful not to damage the tab.


Remove the screw and steering damper cover.

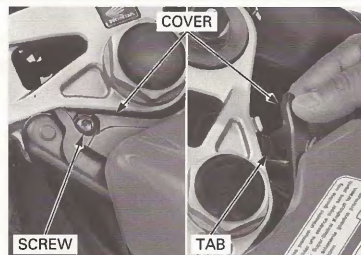

Remove the nut and disconnect the second arm from the top bridge.
Remove the washer from the second arm.

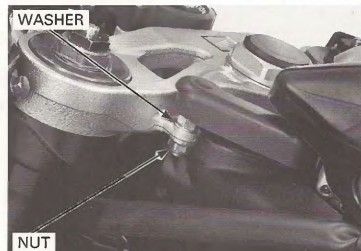


Loosen the top bridge and handlebar pinch bolts.

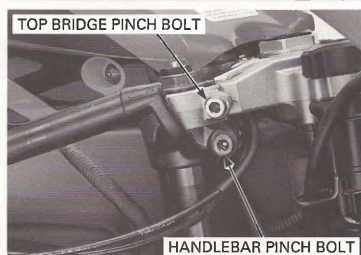

Remove the cap, steering stem nut and top bridge with the ignition switch wire connector connected.


Remove the handlebars from the fork sliders.
Remove the clutch lever bracket and throttle pipe from the handlebars.

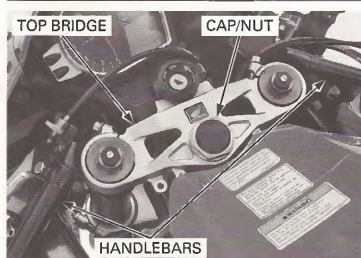

FRONT WHEEL/SUSPENSION/STEERING

INSTALLATION


Install the clutch lever bracket to the left handlebar.
Install the left handlebar onto the left fork slider.

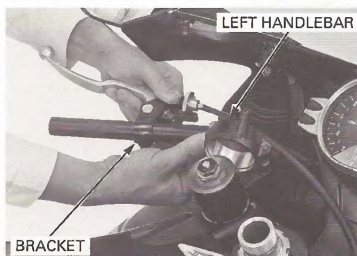


Apply grease to the throttle cable groove of the throttle pipe.

Install the throttle pipe to the right handlebar.

Install the right handlebar onto the right fork slider.

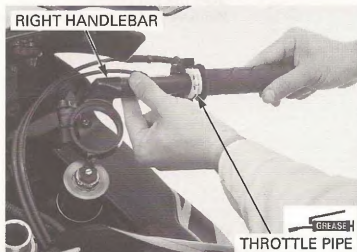


Install the top bridge while aligning its holes with the handlebar stopper pins.

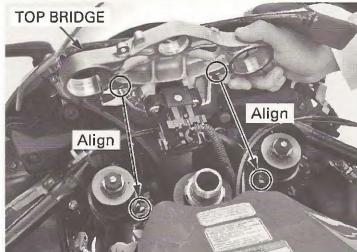

Tighten the steering stem nut to the specified torque.

TORQUE: 137 N·m (14.0 kgf·m, 101 lbf·ft)

Install the steering stem cap.

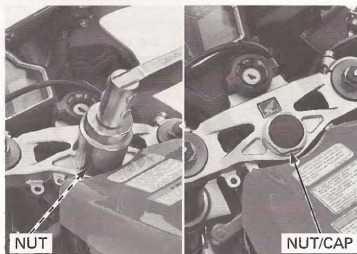


Tighten the top bridge pinch bolts to the specified torque.

TORQUE: 22 N-m (2.2 kgf-m, 16 lbf-ft)

Tighten the handlebar pinch bolts to the specified torque.


TORQUE: 26 N-m (2.7 kgf-m, 19 lbf-ft)

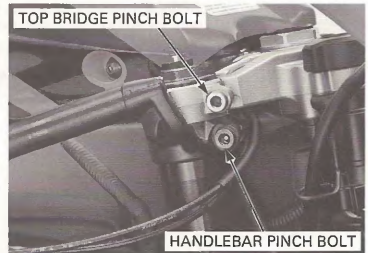


Install the washer to the second arm joint and connect the second arm to the top bridge.

Tighten the nut to the specified torque.

TORQUE: 12 N-m (1.2 kgf-m, 9 lbf-ft)

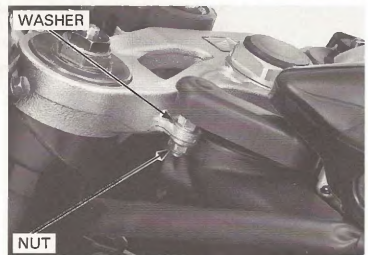


Be careful not to damage the tab. Install the steering damper cover to the top bridge and tighten the screw securely.

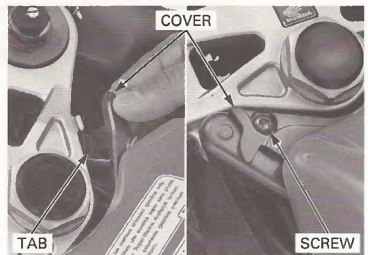

Align the punch marks on the left handlebar and clutch lever bracket.

Tighten the clutch lever bracket pinch bolt securely.

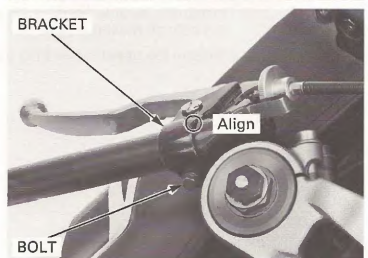


FRONT WHEEL/SUSPENSION/STEERING

Install the left handlebar switch housing aligning its pin with the hole in the handlebar.

Tighten the forward screw first, then the rear screw.

Connect the clutch switch connectors securely.

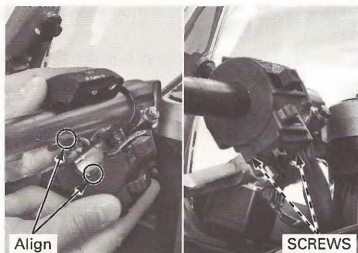


Apply Honda Bond A or equivalent adhesive to the inner surface of the grip and to the clean surfaces of the left handlebar and throttle grip.

Wait 3 – 5 minutes and install the grip.


Rotate the grip for even application of the adhesive.

Allow the adhesive to dry for an hour before using.

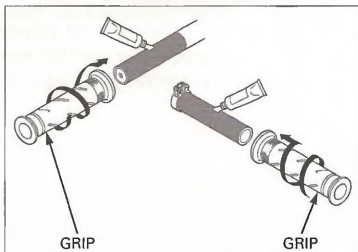


Install the left handlebar weight and tighten a new screw to the specified torque.

TORQUE: 10 N-m (1.0 kgf-m, 7 lbf-ft)

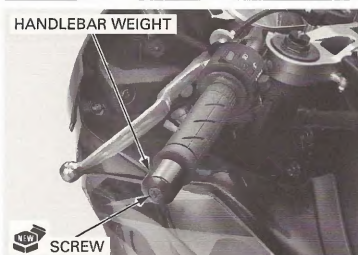

Install the throttle housing by aligning its pin with the hole on the handlebar.


Tighten the upper screw first, then the lower screw.

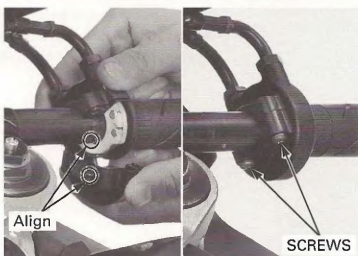

Install the right handlebar switch housing by aligning its locating pin with the hole in the handlebar.

Tighten the forward screw first, then the rear screw to the specified torque.

TORQUE: 0.9 N-m (0.09 kgf-m, 0.7 lbf-ft)

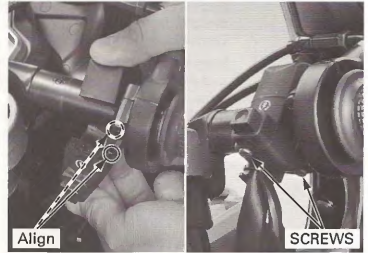


Install the master cylinder by aligning the end of the master cylinder with the punch mark on the handlebar.

Install the master cylinder holder with its "UP" mark facing up.

Tighten the upper bolt first, then the lower bolt.


TORQUE: 12 N-m (1.2 kgf-m, 9 lbf-ft)

Connect the front brake switch wire connectors.

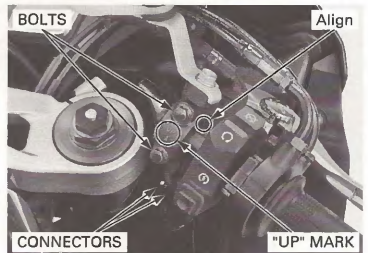

Install the right handlebar weight and tighten a new screw to the specified torque.

TORQUE: 10 N-m (1.0 kgf-m, 7 lbf-ft)

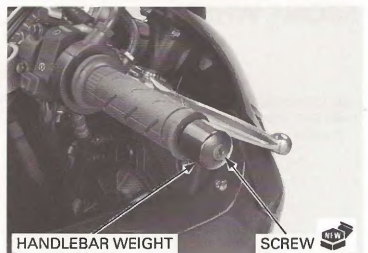


HANDLEBAR WEIGHT REPLACEMENT

Remove the left grip and throttle pipe from the handlebar.

Straighten the weight retainer tab by the screwdriver or punch.

Temporarily install the handlebar weight and screw, then remove the inner weight by turning the handlebar weight.

Apply lubricant spray through the tab locking hole to the rubber for easy removal.

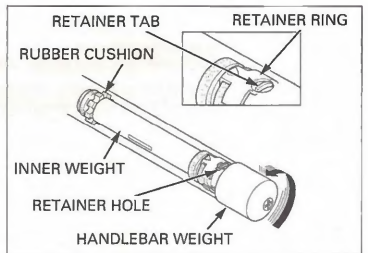


FRONT WHEEL/SUSPENSION/STEERING

Remove the handlebar weight from the inner weight.
Discard the retainer ring.


Install a new retainer ring onto the inner weight.
Install the left grip and throttle pipe onto the handlebars.

Install the handlebar weight onto the inner weight while aligning the bosses and grooves each other.
Install a new mounting screw.

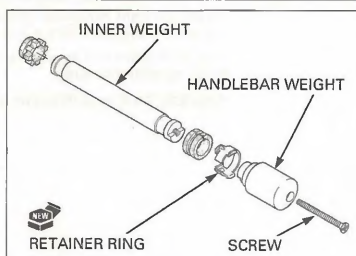

Insert the handlebar weight assembly into the handlebar.

Turn the handlebar weight and hook the retainer ring tab with the hole in the handlebar.

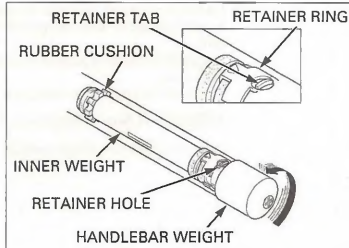


FRONT WHEEL

REMOVAL


Remove the bolts and brake calipers.

Do not operate the brake lever after the brake caliper is removed.
Support the brake caliper with a piece of wire so that it does not hang from the brake hose. Do not twist the brake hose.

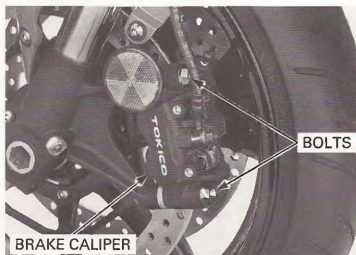


Remove the axle bolt.
Loosen the right axle holder bolts.


Support the motorcycle securely and raise the front wheel off the ground using a safety stand or a hoist.

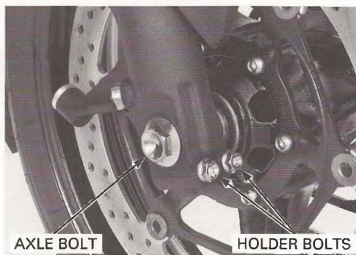

Loosen the left axle holder bolts.
Remove the axle and front wheel.

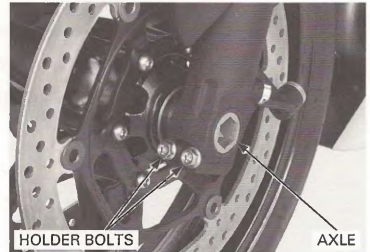

Remove the right and left side collars.

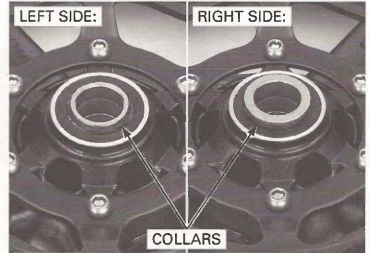


INSPECTION

Axle

Set the axle on V-blocks and measure the runout. Actual runout is 1/2 the total indicator reading.

SERVICE LIMIT: 0.2 mm (0.01 in)

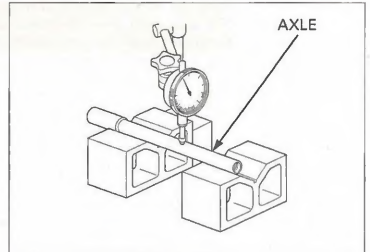


Wheel bearing

Turn the inner race of each bearing with your finger. The bearings should turn smoothly and quietly. Also check that the outer race of the bearing fits tightly in the hub.

Replace the bearings in pairs.

Replace the bearings if the inner race does not turn smoothly, quietly, or if the outer race fit loosely in the hub.

Replace the wheel bearings, if necessary (page 14-19).

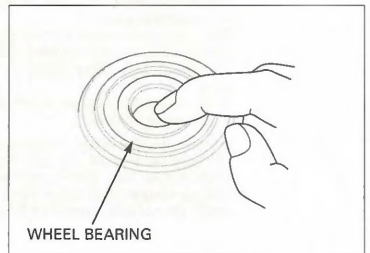

Wheel rim runout

Check the rim runout by placing the wheel in a truing stand.


Spin the wheel by hand, and read the runout using a dial indicator.

Actual runout is 1/2 the total indicator reading.

SERVICE LIMITS:


Radial: 2.0 mm (0.08 in)

Axial: 2.0 mm (0.08 in)

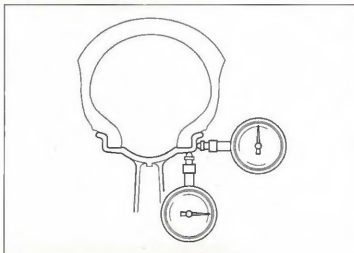


Wheel balance

- Wheel balance directly affects the stability, handling and overall safety of the motorcycle. Always check balance whenever the tire has been removed from the rim.
- For optimum balance, the tire balance mark (a point dot on the side wall) must be located next to the valve stem. Remount the tire if necessary.

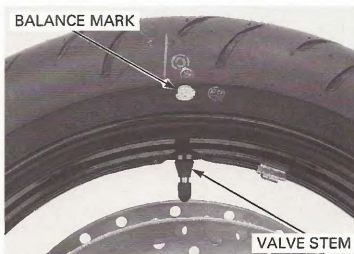

Note the rotating direction marks on the wheel and tire, and upon tire installation, always fit the tire so the marks face the same direction.

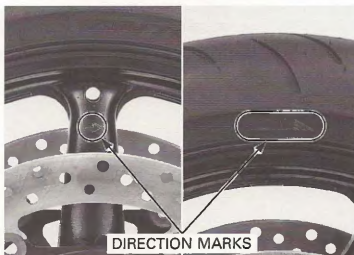

Remove the dust seals from the wheel.


Mount the wheel, tire and brake discs assembly in an inspection stand.

Spin the wheel, allow it to stop, and mark the lowest (heaviest) point of the wheel with a chalk.

Do this two or three times to verify the heaviest area.


If the wheel is balanced, it will not stop consistently in the same position.

To balance the wheel, install the wheel weights on the highest side of the rim, the side opposite the chalk marks. Add just enough weight so the wheel will no longer stop in the same position when it is spun. Do not add more than 60 grams to the wheel.

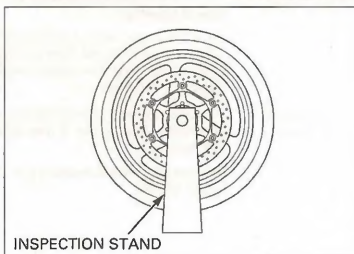

DISASSEMBLY


Remove the bolts and brake discs.
Remove the dust seals.

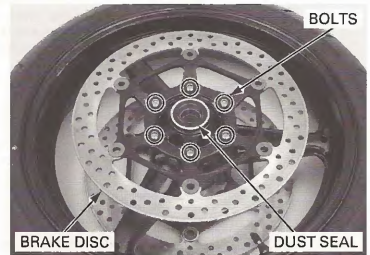


Install the bearing remover head into the bearing.
From the opposite side, install the bearing remover shaft and drive the bearing out of the wheel hub.
Remove the distance collar and drive out the other bearing.

TOOLS:

Bearing remover head, 25 mm 07746-0050800
Bearing remover shaft 07GGD-0010100

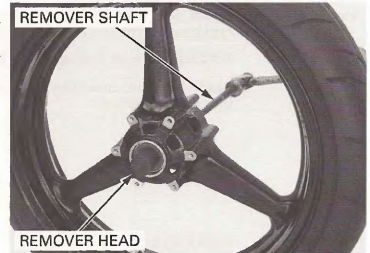

ASSEMBLY

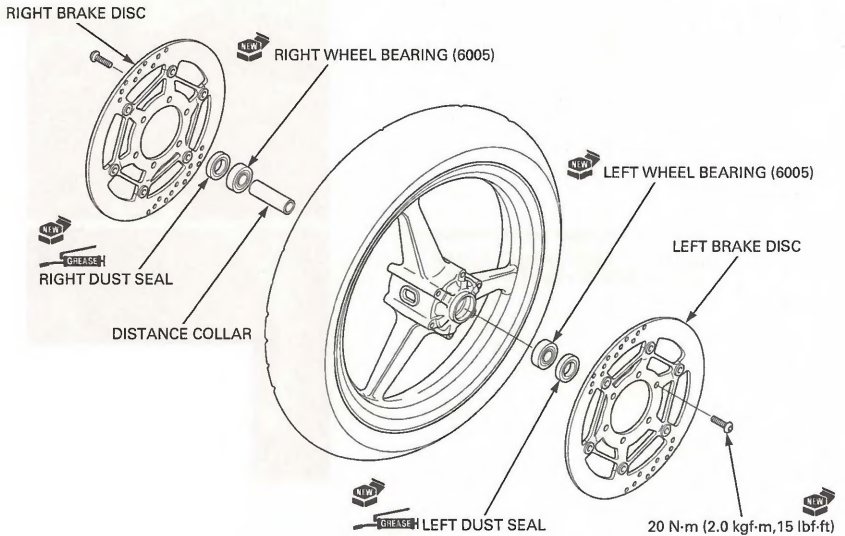

FRONT WHEEL/SUSPENSION/STEERING

Never install the old bearings. Once the bearings have been removed, the bearings must be replaced with new ones.

Drive in a new right bearing squarely with its marked side facing up until it is fully seated. Install the distance collar, then drive in a new left bearing squarely with its marked side facing up until it is seated to the distance collar using the special tools.

TOOLS:

Driver	07749-0010000
Attachment, 42 x 47 mm	07746-0010300
Pilot, 25 mm	07746-0040600



Check the spokes on the wheel for the direction mark.

Install the brake discs with the arrow mark facing in the direction of rotation.

Install new disc bolts and tighten them in a criss-cross pattern in two or three steps.


TORQUE: 20 N·m (2.0 kgf·m, 15 lbf·ft)

Apply grease to new dust seal lips, then install them into the wheel hub.

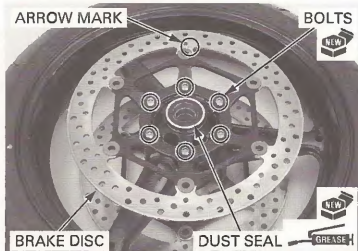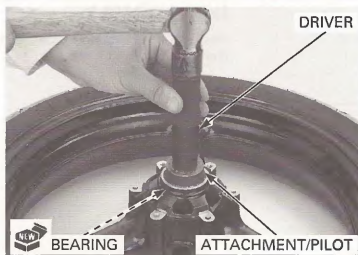

INSTALLATION

Install the right and left side collars.

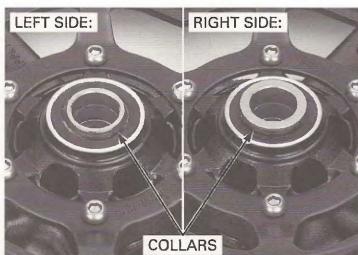

Install the front wheel between the fork legs.

Apply a thin layer of grease to the front axle surface. Install the front axle from the left side.




Hold the axle and tighten the axle bolt to the specified torque.

TORQUE: 79 N·m (8.1 kgf-m, 58 lbf-ft)


Tighten the right axle holder bolts to the specified torque.

TORQUE: 22 N·m (2.2 kgf-m, 16 lbf-ft)

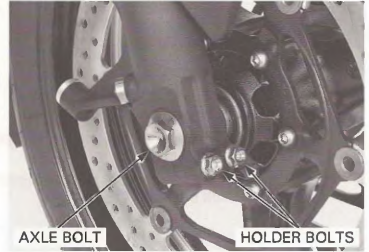

Install both brake calipers and tighten new mounting bolts to the specified torque.

TORQUE: 45 N·m (4.6 kgf-m, 33 lbf-ft)

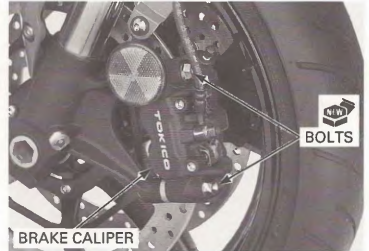


Check the brake operation by applying the brake lever.

With the front brake applied, pump the fork up and down several times to seat the axle.



Tighten the left axle holder bolts to the specified torque.

TORQUE: 22 N·m (2.2 kgf-m, 16 lbf-ft)

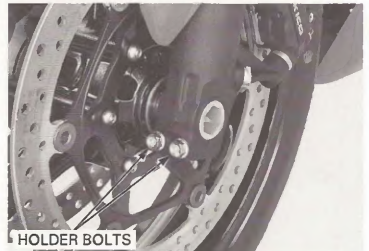

FORK



REMOVAL

Remove the following:

- Front wheel (page 14-16)
- Front fender (page 3-18)

Loosen the handlebar pinch bolt and top bridge pinch bolt.


If the fork leg will be disassembled, loosen the fork bolt but do not remove yet.

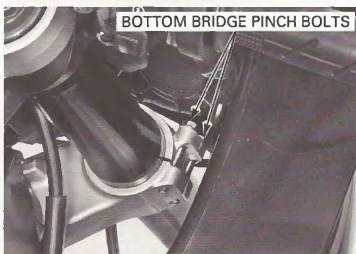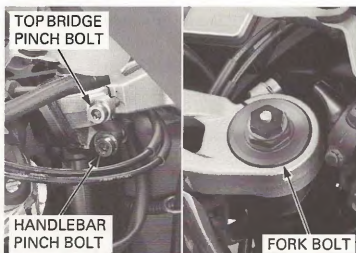

Keep the front brake master cylinder reserve tank upright.


While holding the fork leg, loosen the fork bottom bridge pinch bolts and remove the fork slider from the handlebar and fork bridges.

When disassembling the fork leg, turn the pre-load, rebound and compression damping adjusters counterclockwise to the softest position (be sure to record the number of turns from the starting position).

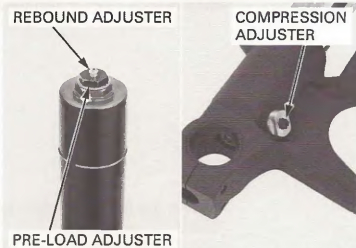

DISASSEMBLY

Remove the collars.

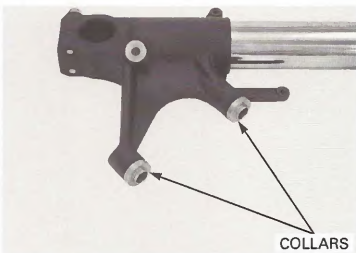

Be careful not to scratch the fork slider.

Remove the handlebar stopper ring.
Unscrew the fork bolt from the fork slider.

FORK BOLT

STOPPER RING

Push the fork slider slowly down, and gently seat the dust seal onto the axle holder.

*Except U.S.A. tool:
Be careful not to damage the spring collar holes.*

Attach the spring collar holder to the spring collar holes.

TOOL:
Spring collar holder

070MF-MBZC110
(Not available in U.S.A.)

Compress the spring collar with the spring collar holder.

SPRING COLLAR HOLDER

SPRING COLLAR

U.S.A. tool:

Attach the fork leg to the fork spring compressor post as shown.

TOOL:
Fork spring compressor

07AMC-MRJA100
(U.S.A. only)

Align the spring collar holes with the pins.
To hold the spring collar, tighten the thumb screw securely.
Tighten the nut and compress the fork.

FORK SPRING COMPRESSOR

NUT

THUMB SCREW

POST

PINS

FRONT WHEEL/SUSPENSION/STEERING

Insert the stopper plate between the lock nut and spring seat stopper.


TOOL:

Stopper plate

070MF-MBZC130
(Not available in
U.S.A.) or
07AMB-KZ3A100
(U.S.A. only)


Fork rod stopper

Loosen the lock nut while holding the fork bolt.

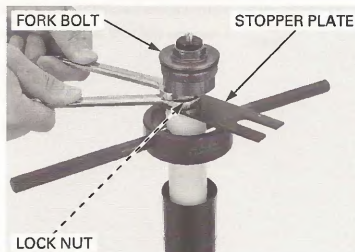


Remove the fork bolt.

Remove the stopper plate and spring collar holder.

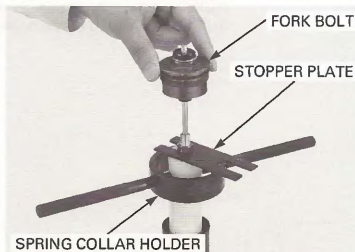

Remove the following:

- Spring seat stopper
- Spring collar
- Fork spring

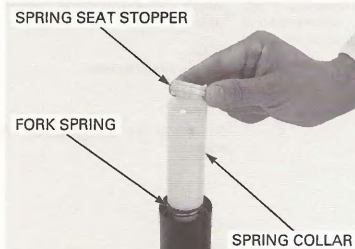

Pour out the fork fluid by pumping the fork tube several times.

Pour out the fork fluid from the fork damper by pumping the damper rod several times.




Hold the axle holder in a vise with soft jaws or a shop towel.
Hold the fork damper with the special tool, then remove the fork socket bolt and sealing washer.

TOOL:


Fork damper holder

07YMB-MCF0101 or
07YMB-MCFA100
(U.S.A. only)

SOCKET BOLT/SEALING WASHER

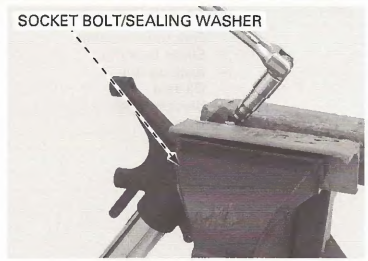


Remove the fork damper assembly from the fork slider.

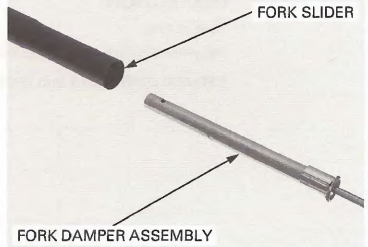


Remove the dust seal.

*Do not scratch the
fork tube sliding
surface.*

Remove the oil seal stopper ring.

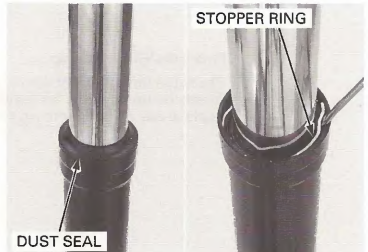


Pull the fork tube out until you feel resistance from the slider bushing. Then move it in and out, tapping the bushing lightly until the fork tube separates from the fork slider.
The slider bushing will be forced out by the fork tube bushing.

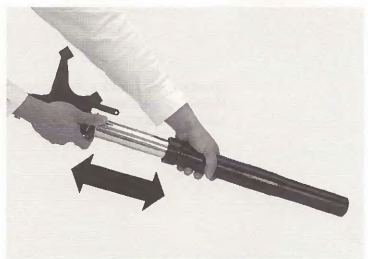

FRONT WHEEL/SUSPENSION/STEERING

Remove the following:

- Fork tube bushing
- Slider bushing
- Back up ring
- Oil seal
- Stopper ring
- Dust seal

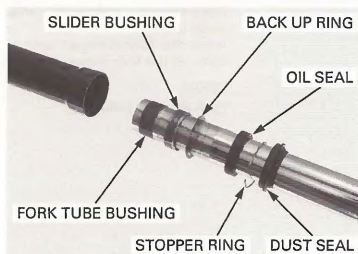


INSPECTION

Fork spring

Measure the fork spring free length.

SERVICE LIMIT: 229.3 mm (9.03 in)

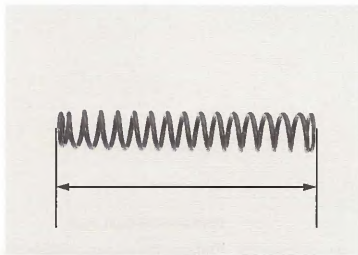


Fork tube/slider/damper

Check the fork slider for damage or deformation.


Check the fork damper for bend or damage.

Replace any components which are damaged.

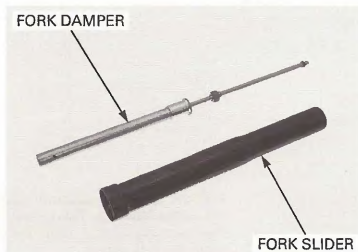


Check the oil lock valve for wear or damage.

Replace the fork damper assembly, if any components are damaged.

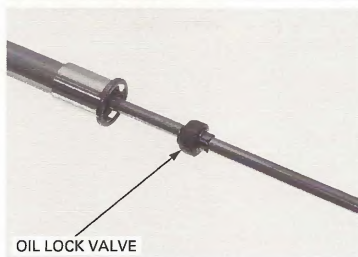

Check the fork tube for score marks, scratches, or excessive or abnormal wear.
Place the fork tube on V-blocks and measure the runout.
Actual runout is 1/2 the total indicator reading.


SERVICE LIMIT: 0.20 mm (0.008 in)

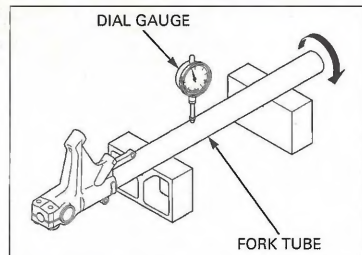


Fork tube bushing/back up ring

Visually inspect the slider and fork tube bushings. Replace the bushings if there is excessive scoring or scratching, or if the teflon is worn so that the copper surface appears on more than 3/4 of the entire surface.

Check the back-up ring; replace it if there is any distortion at the points shown.

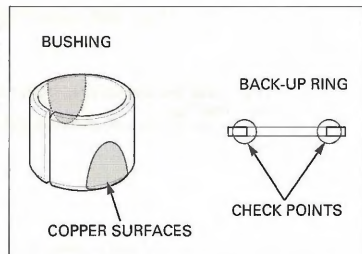


ASSEMBLY

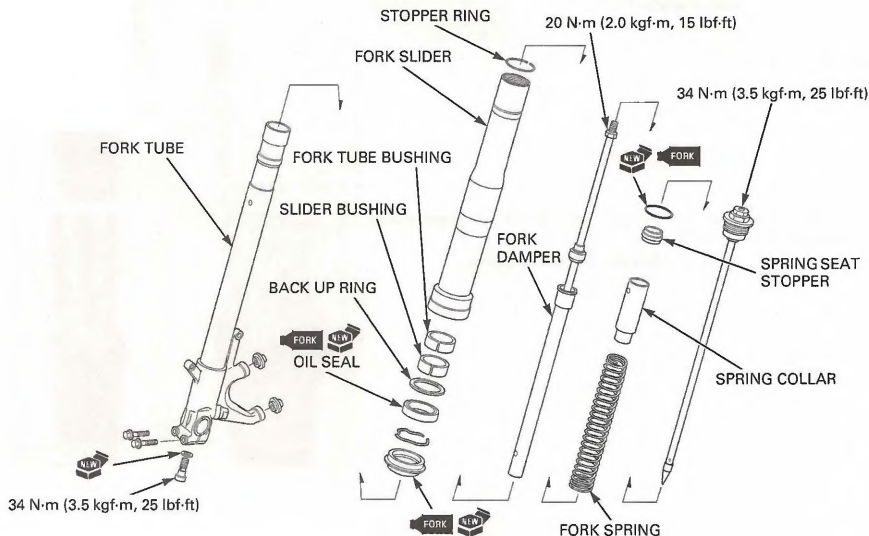

FRONT WHEEL/SUSPENSION/STEERING

- Before assembly, wash all parts with a high flash or non-flammable solvent and blow them dry.
- When installing the fork dust seal and oil seal, wrap the edge and groove of the fork tube with tape.

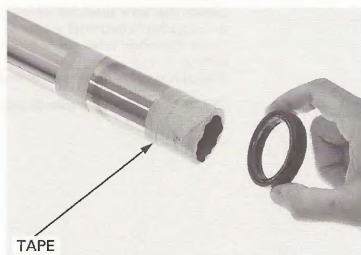

TAPE

Apply fork fluid to new dust seal and oil seal lips.


Install the dust seal, stopper ring and oil seal.

Install the oil seal with its marked side facing toward the axle holder.

Remove any burrs from the slider bushing mating surface, being careful not to peel off the coating.

Install the back up ring, slider bushing and fork tube bushing.

Install the fork tube into the fork slider.

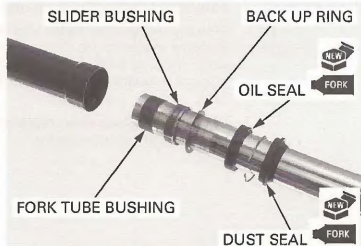


See illustration for correct seating.

Drive the oil seal in using the special tool.

TOOLS:
Fork seal driver


07YMD-MCF0100 or
07NMD-KZ3010A
(U.S.A. only)

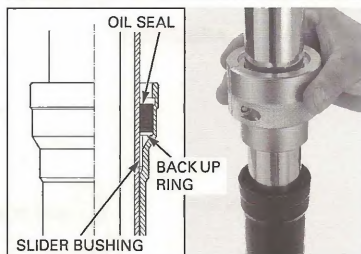


Do not scratch the fork tube sliding surface.

Install the stopper ring into the fork slider groove securely.

Install the dust seal into the fork slider.

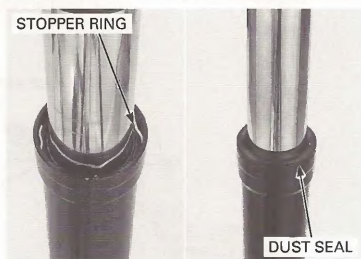

Install the fork damper assembly into the fork slider.

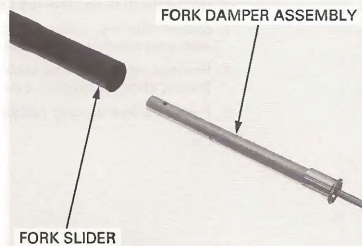

Install the socket bolt with a new sealing washer.




Hold the axle holder in a vise with soft jaws or a shop towel.
Hold the fork damper with the special tool, then tighten the fork socket bolt to the specified torque.

TOOL:

Fork damper holder

07YMB-MCF0101 or
07YMB-MCFA100
(U.S.A. only)

TORQUE: 34 N·m (3.5 kgf·m, 25 lbf·ft)

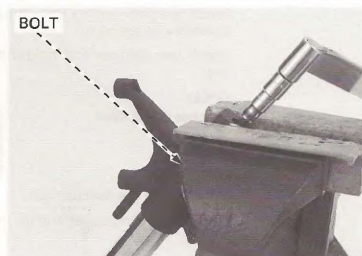


Pour the specified amount of recommended fork fluid into the fork tube.

RECOMMENDED FORK FLUID:

Pro Honda Suspension Fluid SS-47 (10W)

FORK FLUID CAPACITY:


517 ± 2.5 cm³ (17.5 ± 0.08 US oz, 18.2 ± 0.09 Imp oz)

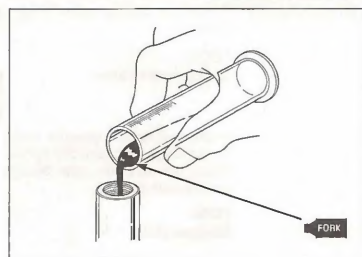

FRONT WHEEL/SUSPENSION/STEERING

Bleed the air from the fork leg as follows:

1. Extend the fork, cover the top of the fork slider with your hand and compress the fork leg slowly.
2. Remove your hand and extend the fork slowly. Repeat above procedure 2 or 3 times.
3. Pump the fork damper rod slowly 8 – 10 times.

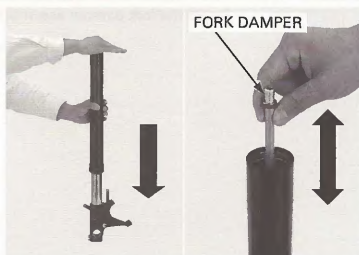


Slowly push the fork slider, and gently seat the dust seal onto the axle holder and leave it for 5 minutes.

Be sure the oil level is the same in the both forks.

After the oil level stabilizes, measure the oil level from the top of the fork slider.

FORK FLUID LEVEL: 93 mm (3.7 in)

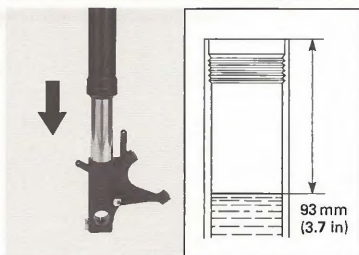

Install the fork spring into the fork slider with the tapered end facing up.

Install the damper rod holder to the fork damper rod.


TOOL:

Damper rod holder

070MF-MBZC120
(Not available in U.S.A.) or
070MF-MBZA120

Fully extend the damper rod.

Install the spring collar and spring seat stopper.

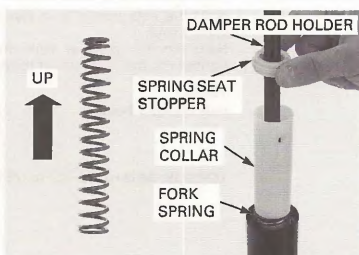

Except U.S.A. tool:

Attach the spring collar holder to the spring collar holes.

TOOL:

Spring collar holder


070MF-MBZC110
(Not available in U.S.A.)

While pulling the damper rod holder up, compress the spring collar with the spring collar holder. Insert the stopper plate between the lock nut and spring seat stopper.

TOOL:

Stopper plate

070MF-MBZC130
(Not available in U.S.A.)

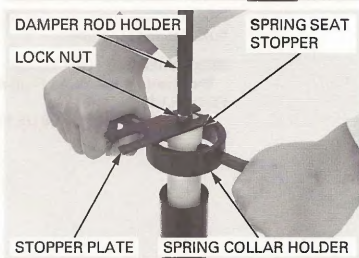

Remove the damper rod holder.

U.S.A. tool: Attach the fork leg to the fork spring compressor post as shown.

TOOL:

Fork spring compressor

07AMC-MFJA100
(U.S.A. only)

Align the spring collar holes with the pins.
To hold the spring collar, tighten the thumb screw securely.

While pulling the damper rod holder up, tighten the nut to compress the fork spring.

Insert the fork rod stopper between the lock nut and spring seat stopper, then remove the damper rod holder.



TOOL:

Fork rod stopper

07AMB-KZ3A100
(U.S.A. only)

Check the length between the lock nut end and damper rod end.

STANDARD: 10.9 mm (0.43 in)

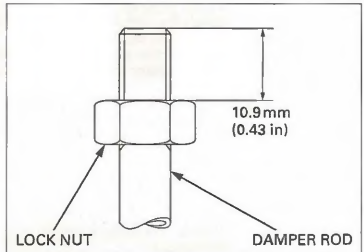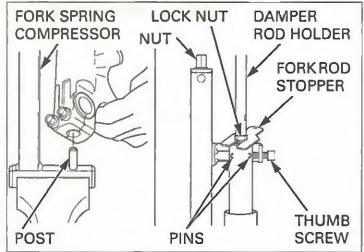

NOTE:

When installing the fork bolt, turn the rebound adjuster counterclockwise to the softest position.

Apply fork fluid to a new O-ring and install it to the fork bolt.


Tighten the fork bolt after installing the fork slider into the fork bridges.

Install the fork bolt to the fork damper.

Tighten the lock nut to the specified torque with holding the fork bolt.

TORQUE: 20 N·m (2.0 kgf·m, 15 lbf·ft)


Remove the stopper plate and spring collar holder.

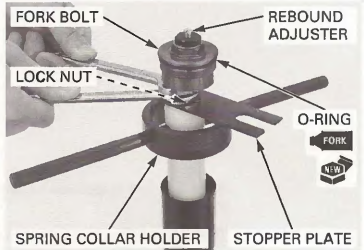

Tighten the fork bolt after installing the fork.


Install the fork bolt to the fork slider.

Install the handlebar stopper ring.

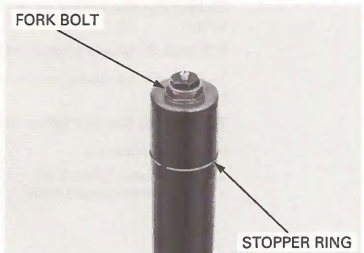

FRONT WHEEL/SUSPENSION/STEERING

Install the collars securely.

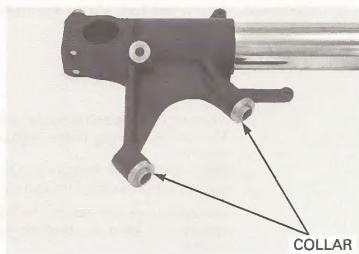


INSTALLATION

Return the pre-load, rebound and compression damping adjusters to the original positions as noted during disassembly.


Install the fork leg through the bottom bridge, handlebar and top bridge.

Position the top of the fork slider flush with the upper surface of the top bridge as shown.

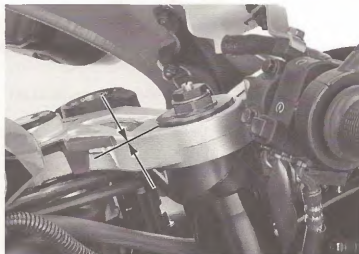

Tighten the bottom bridge pinch bolts to the specified torque.

TORQUE: 27 N·m (2.8 kgf-m, 20 lbf-ft)

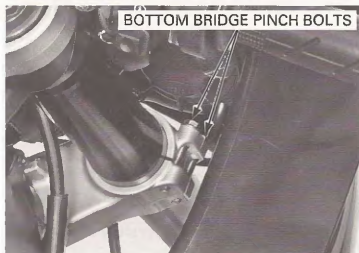

If the fork bolt is loosened, tighten it to the specified torque.

TORQUE: 34 N·m (3.5 kgf-m, 25 lbf-ft)

Tighten the top bridge pinch bolt to the specified torque.


TORQUE: 22 N·m (2.2 kgf-m, 16 lbf-ft)

Tighten the handlebar pinch bolt to the specified torque.

TORQUE: 26 N·m (2.7 kgf-m, 19 lbf-ft)

Install the following:


- Front fender (page 3-18)
- Front wheel (page 14-20)

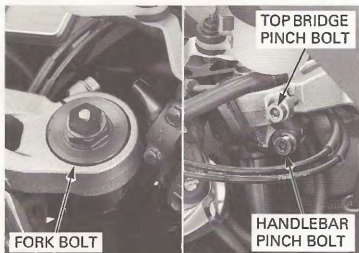


HESD

REMOVAL


Remove the air cleaner housing (page 6-52).
Turn the ignition switch OFF.
Disconnect the HESD 2P (Brown) connector.

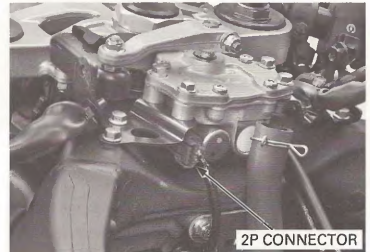

Remove the nut and disconnect the second arm from the top bridge.
Remove the washer from the second arm joint.

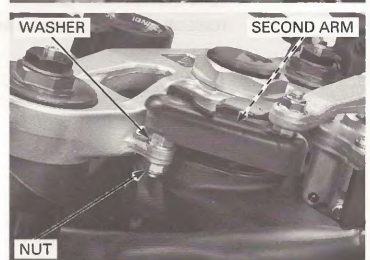

Remove the bolts and HESD from the frame.

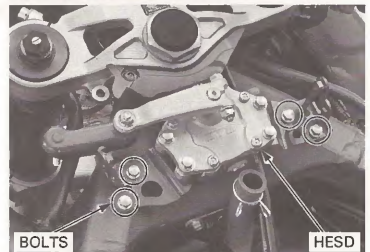


INSTALLATION

If the torque arm is removed, install it to the specified height as shown.

STANDARD: 1.3 mm (0.05 in)

Install the torque arm bolt and tighten the nut to the specified torque.


TORQUE: 12.5 N·m (1.3 kgf·m, 9.2 lbf·ft)

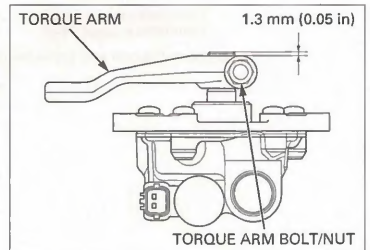

FRONT WHEEL/SUSPENSION/STEERING

Install the HESD onto the frame and tighten new bolts to the specified torque.


TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)

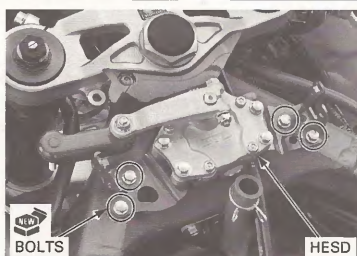

Install the washer to the second arm joint.


Connect the second arm to the top bridge and tighten the nut to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

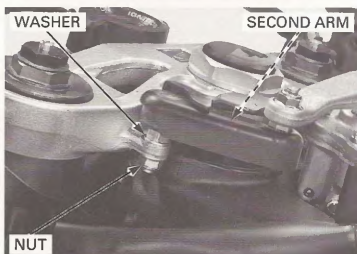

Connect the HESD 2P (Brown) connector to the steering damper securely.

Install the air cleaner housing (page 6-54).

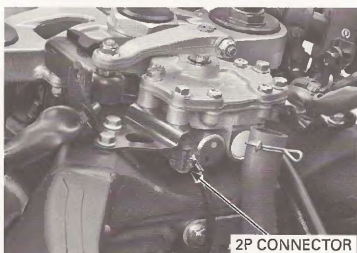


STEERING STEM

REMOVAL


Remove the following:

- Front forks (page 14-22)
- Handlebars (page 14-9)

Remove the bolt and brake hose clamp.

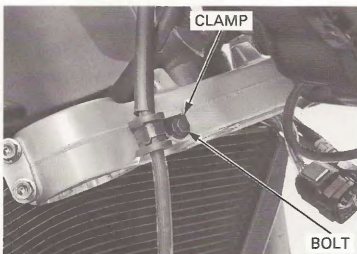


Straighten the lock washer tabs.
Remove the lock nut and lock washer.

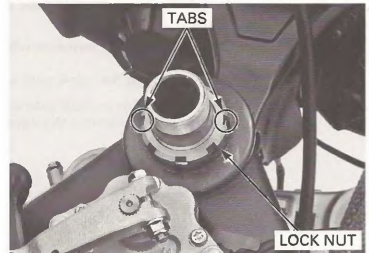


Remove the steering stem adjusting nut using the special tool.

TOOL:
Steering stem socket 07HMA-MR70100

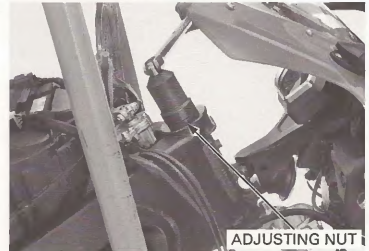

Remove the following:

- Dust seal
- Upper bearing inner race
- Upper bearing
- Steering stem
- Lower bearing

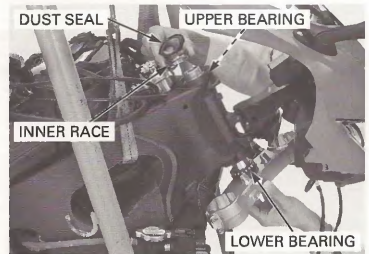

BEARING REPLACEMENT


Always replace the bearings and races as a set.

Replace the races using the special tools as described in the following procedure.

Except U.S.A.:

TOOLS: (Not available in U.S.A.)

- | | |
|------------------------------------|---------------|
| (1) Driver attachment (2 required) | 07NMF-MT70120 |
| (2) Driver shaft assembly | 07946-KM90301 |
| (3) Bearing remover | 07NMF-MT70110 |
| (4) Assembly base | 07946-KM90600 |

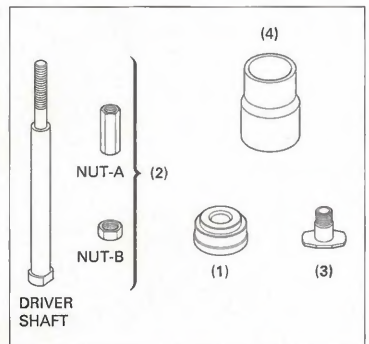

FRONT WHEEL/SUSPENSION/STEERING


Note the installation direction of the assembly base; the large I.D. side facing the upper attachment.

Install the special tools into the steering head as shown.

Align the bearing remover with the grooves in the steering head.


Lightly tighten the nut-B with a wrench.

Holding the driver shaft with a wrench, turn the nut-A gradually to remove the upper outer race.

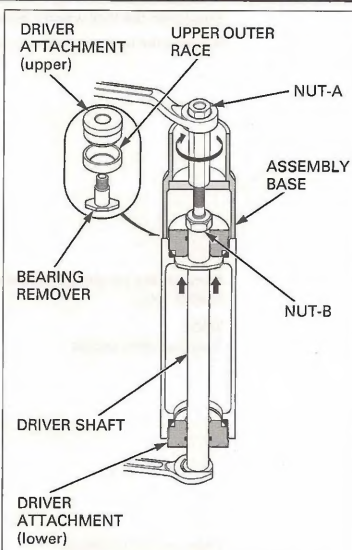

Note the installation direction of the assembly base; the large I.D. side facing the lower attachment.

Install the special tools into the steering head as shown and remove the lower outer race using the same procedure as for the upper outer race.

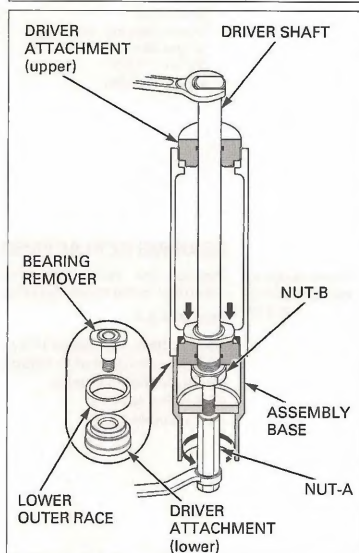


Note the installation direction of the assembly base; the large I.D. side facing the lower attachment.

Remove any burrs from the outer race installation surface of the steering head.

Install a new upper outer race with the special tools as shown.

Hold the driver shaft with a wrench and turn the nut-A gradually until upper outer race is fully seated.

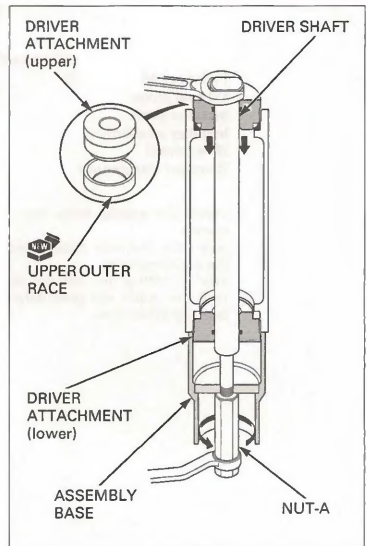


Note the installation direction of the assembly base; the large I.D. side facing the upper attachment.

Remove any burrs from the outer race installation surface of the steering head.

Install a new lower outer race with the special tools as shown.

Hold the driver shaft with a wrench and turn the nut-A gradually until lower outer race is fully seated.

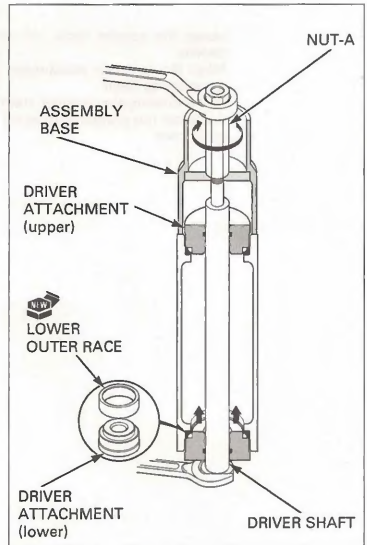

FRONT WHEEL/SUSPENSION/STEERING

U.S.A. only:


TOOLS:

Main bearing driver attachment	07946-ME90200
Fork seal driver weight	07947-KA50100
Oil seal driver	07965-MA60000
Installer shaft	07VMF-KZ30200
Installer attachment	07VMF-MAT0200
(2 required)	
Remover attachment	07AMF-MELA200
	(U.S.A. only)

Install the special tools into the steering head as shown.

Align the remover attachment with the grooves in the steering head.


While holding the installer shaft with the wrench, turn the upper nut gradually to remove the upper bearing outer race.

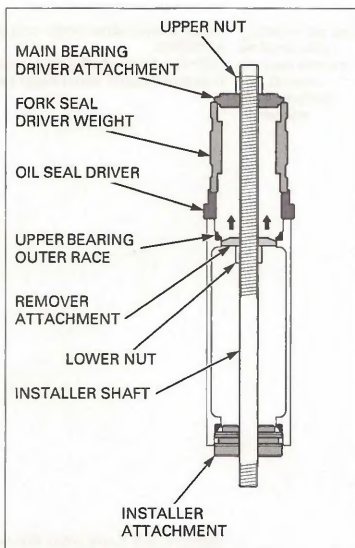


Install the special tools into the steering head as shown.

Align the remover attachment with the grooves in the steering head.


While holding the installer shaft with a wrench, turn the lower nut gradually to remove the lower bearing outer race.

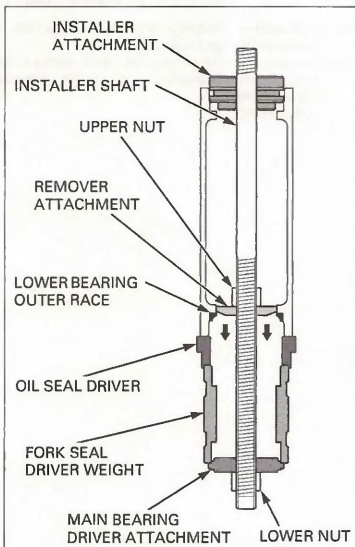

Install a new upper bearing outer race with the special tools as shown.
While holding the installer shaft with a wrench, turn the lower nut gradually until the race is fully seated.

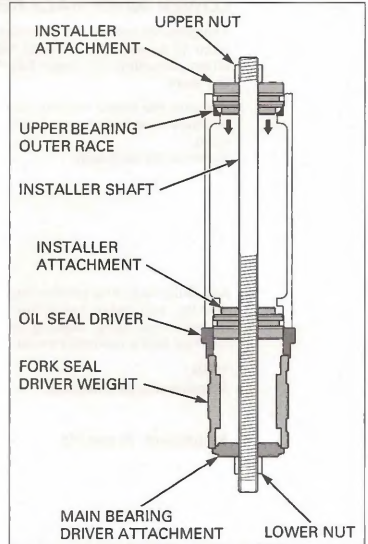

Install a new lower bearing outer race with the special tools as shown.
While holding the installer shaft with the wrench, turn the upper nut gradually until the race is fully seated.

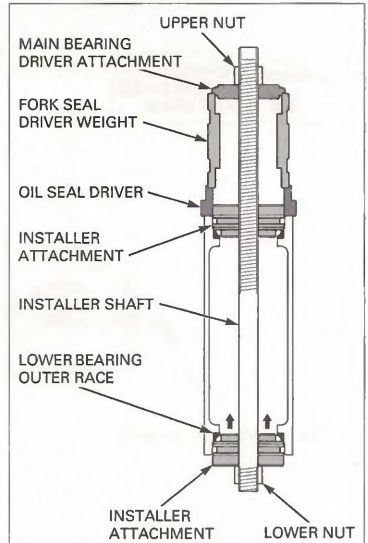

LOWER INNER RACE REPLACEMENT

Temporarily install the steering stem nut onto the stem to prevent the threads from being damaged when removing the lower bearing inner race from the stem.

Remove the lower bearing inner race with a chisel or equivalent tool, being careful not to damage the stem.

Remove the dust seal.

Apply the specified grease (page 1-18) to a new dust seal lips and install it over the steering stem. Install a new lower bearing inner race using a special tool and a hydraulic press.


TOOL:

Attachment, 35.2 mm I.D.

07947-KA20200
(Not available in
U.S.A.) or

Attachment, 35 mm I.D.


07746-0030400

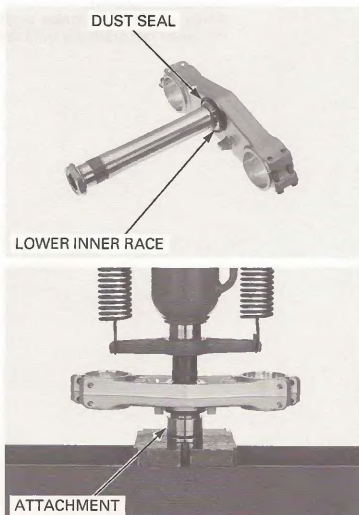

INSTALLATION




9.0 N·m (0.9 kgf·m, 6.6 lbf·ft)

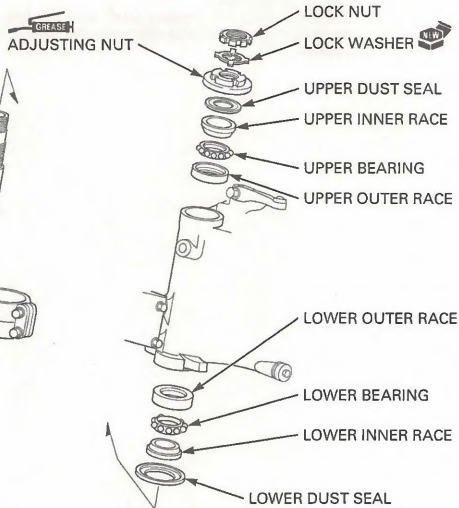

Apply the specified grease (page 1-18) to the upper and lower bearings and bearing races.

Install the lower bearing onto the steering stem.

Install the upper bearing, inner race and dust seal.

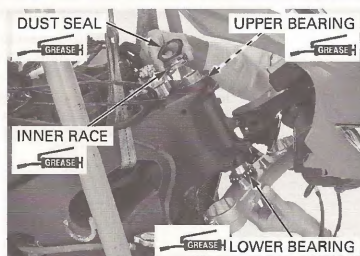


Apply the specified grease to the steering stem adjusting nut threads (page 1-18).

Tighten the steering stem adjusting nut to the initial torque.


TOOL:

Steering stem socket 07HMA-MR70100

TORQUE: 37 N·m (3.8 kgf·m, 27 lbf·ft)

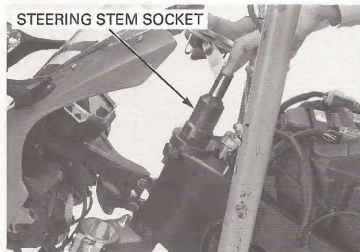


Move the steering stem right and left, lock-to-lock, five times to seat the bearings.

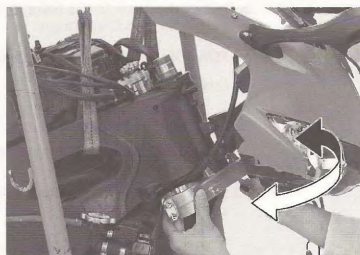

Retighten the steering stem adjusting nut to the specified torque.

TORQUE: 37 N·m (3.8 kgf·m, 27 lbf·ft)

Recheck that the steering stem moves smoothly without play or binding.

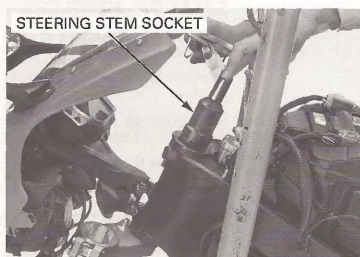

FRONT WHEEL/SUSPENSION/STEERING

Install a new lock washer onto the steering stem.


Align the tabs of the lock washer with the grooves in the adjusting nut and bend two opposite tabs down into the adjusting nut groove.

Install and finger tighten the lock nut.

Hold the adjusting nut and further tighten the lock nut within 1/4 turn (90°) enough to align its grooves with the lock washer tabs.

Bend the lock washer tabs up into the lock nut grooves.

LOCK WASHER

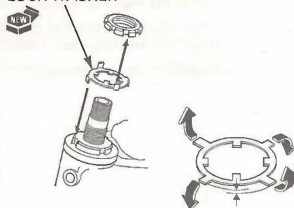

Correctly route the brake hose (page 1-20).

Install the front brake hose clamp and tighten the bolt to the specified torque.


TORQUE: 9.0 N·m (0.9 kgf-m, 6.6 lbf-ft)

Install the following:

- Front forks (page 14-32)
- Handlebars (page 14-12)

After installation, move the steering stem right and left several times.

Make sure that the steering stem moves smoothly, without play or binding.

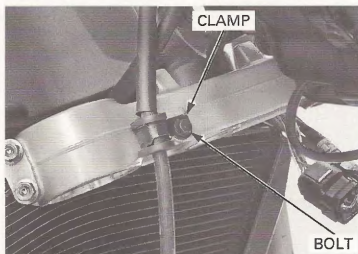

STEERING HEAD BEARING PRE-LOAD

Jack up the motorcycle to raise the front wheel off the ground.

Position the steering stem to the straight ahead position.


Make sure that there is no cable or wire harness interference.

Hook a spring scale to the fork slider and measure the steering head bearing pre-load.

Disconnect the second arm (page 14-33).

Standard: 12 – 17 N (1.2 – 1.7 kgf)

If the readings do not fall within the standard value, adjust the steering stem adjusting nut (page 14-34).

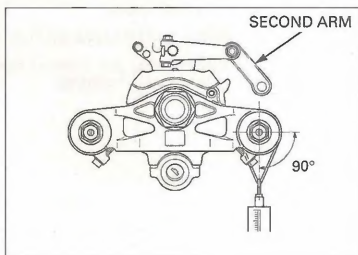


15. REAR WHEEL/SUSPENSION

COMPONENT LOCATION	15-2	SUSPENSION LINKAGE	15-13
SERVICE INFORMATION	15-3	SHOCK ABSORBER.....	15-14
TROUBLESHOOTING	15-5	SWINGARM	15-18
REAR WHEEL	15-6		

REAR WHEEL/SUSPENSION

COMPONENT LOCATION

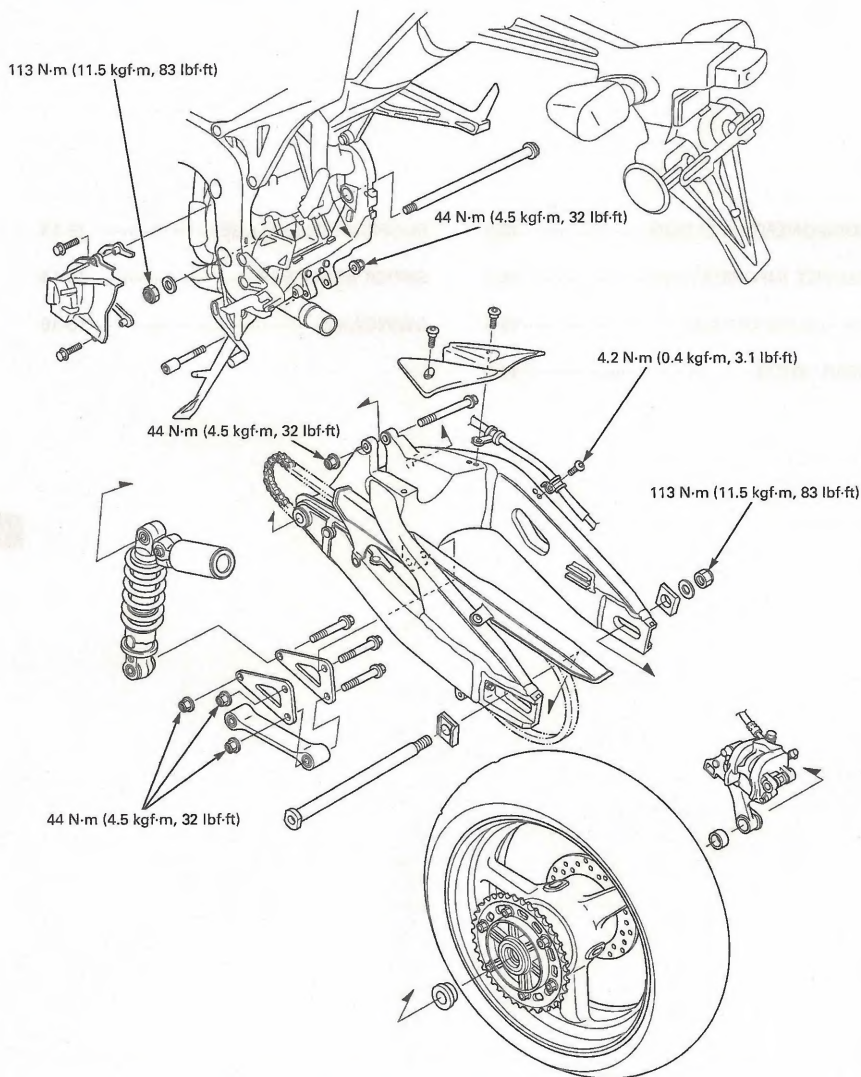

SERVICE INFORMATION

GENERAL

- A contaminated brake disc or pad reduces stopping power. Discard contaminated pads and clean a contaminated disc with a high quality brake degreasing agent.
- After the rear wheel installation, check the brake operation by applying the brake pedal.
- The shock absorber contains nitrogen under high pressure. Do not allow fire or heat near the shock absorber.
- Before disposal of the shock absorber, release the nitrogen (page 15-17).
- When servicing the rear wheel and suspension, support the motorcycle using a safety stand or hoist.
- Use only tires marked "TUBELESS" and tubeless valves on rim marked "TUBELESS TIRE APPLICATION".
- Use genuine Honda replacement bolts and nuts for all suspension pivot and mounting point.
- For brake system information (page 16-4).

SPECIFICATIONS




ITEM			STANDARD	SERVICE LIMIT
Minimum tire tread depth			—	2.0 (0.08)
Cold tire pressure	Driver only		290 kPa (2.90 kgf/cm ² , 42 psi)	—
	Driver and passenger		290 kPa (2.90 kgf/cm ² , 42 psi)	—
Axle runout			—	0.2 (0.01)
Wheel rim runout	Radial		—	2.0 (0.08)
	Axial		—	2.0 (0.08)
Wheel balance weight			—	60 g (2.1 oz) max.
Drive chain	Size/link	DID	DID50VA11-116YB	—
		RK	RK50HFOZ6-116LJFZ	—
	Slack		25 – 35 (1.0 – 1.4 in)	—
Shock absorber	Spring pre-load adjuster standard position		Position 4	—
	Rebound damping adjuster initial setting		2-1/4 turns out from full hard	—
	Compression damping adjuster initial setting		2 turns out from full hard	—

TORQUE VALUES

Rear brake disc bolt	42 N·m (4.3 kgf·m, 31 lbf·ft)	ALOC bolt; replace with a new one.
Driven sprocket nut	64 N·m (6.5 kgf·m, 47 lbf·ft)	U-nut
Rear axle nut	113 N·m (11.5 kgf·m, 83 lbf·ft)	U-nut
Shock absorber mounting nut	44 N·m (4.5 kgf·m, 32 lbf·ft)	U-nut
Shock link nut	44 N·m (4.5 kgf·m, 32 lbf·ft)	U-nut
Shock arm-to-swingarm nut	44 N·m (4.5 kgf·m, 32 lbf·ft)	U-nut
Drive chain slider bolt	9.0 N·m (0.9 kgf·m, 6.6 lbf·ft)	ALOC bolt; replace with a new one.
Drive chain case bolt	12 N·m (1.2 kgf·m, 9 lbf·ft)	
Swingarm pivot nut	113 N·m (11.5 kgf·m, 83 lbf·ft)	U-nut
Rear brake hose clamp screw	4.2 N·m (0.4 kgf·m, 3.1 lbf·ft)	

REAR WHEEL/SUSPENSION


TOOLS

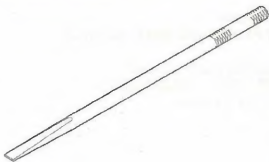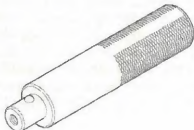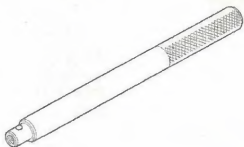Bearing remover shaft 07GGD-0010100 	Bearing remover head, 25 mm 07746-0050800 	Driver 07749-0010000 
Driver 07949-3710001 	Attachment, 42 x 47 mm 07746-0010300 	Attachment, 52 x 55 mm 07746-0010400 
Attachment, 22 x 24 mm 07746-0010800 	Attachment, 40 x 42 mm 07746-0010900 	Attachment, 28 x 30 mm 07946-1870100 
Attachment, 32 x 35 mm 07746-0010100 	Pilot, 17 mm 07746-0040400 	Pilot, 25 mm 07746-0040600 

Attachment, 30 mm I.D.
07746-0030300



Bearing driver
07GMD-KT80100

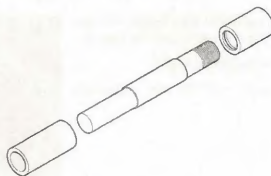

TROUBLESHOOTING

Soft suspension

- Weak shock absorber spring
- Incorrect suspension adjustment
- Oil leakage from damper unit
- Insufficient tire pressure

Hard suspension

- Incorrect suspension adjustment
- Damaged rear suspension pivot bearings
- Bent damper rod
- Bent swingarm pivot
- Tire pressure too high

Rear wheel wobbling

- Bent rim
- Worn or damaged rear wheel bearings
- Faulty rear tire
- Unbalanced rear tire and wheel
- Insufficient rear tire pressure
- Faulty swingarm pivot bearings

Rear wheel turns hard

- Faulty rear wheel bearings
- Bent rear axle
- Rear brake drag
- Drive chain too tight

Rear suspension noise

- Faulty rear shock absorber
- Loose rear suspension fasteners
- Worn rear suspension pivot bearings

Steers to one side or does not track straight

- Bent rear axle
- Axle alignment/chain adjustment not equal on both sides

REAR WHEEL

REMOVAL

Support the motorcycle securely and raise the rear wheel off the ground using a hoist or safety stand.

Fully slacken the drive chain (page 4-26).

Remove the rear axle nut, washer and adjusting plate.

Push the rear wheel forward.




Remove the rear axle and adjusting plate.

Remove the drive chain from the driven sprocket.

Do not hang the caliper by the brake hose. Do not twist the brake hose. Do not operate the brake pedal after removing the rear wheel.

Remove the rear brake caliper bracket and rear wheel.

Remove the side collars.

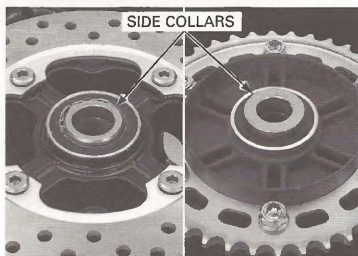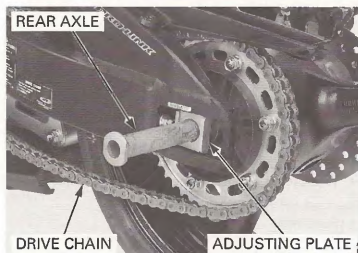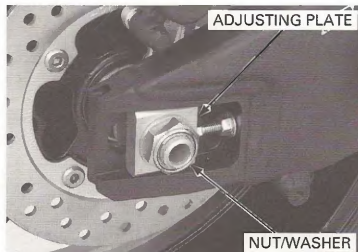





DISASSEMBLY

Remove the bolts and brake disc.
Remove the dust seal.

If you replace the driven sprocket, loosen the driven sprocket nuts before removing the driven flange from the wheel hub.
Remove the dust seal.


Remove the driven flange assembly from the left wheel hub.

To remove the driven sprocket, remove the nuts, washers, driven sprocket and bolts.

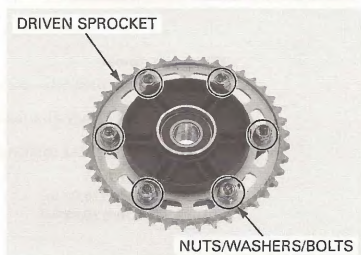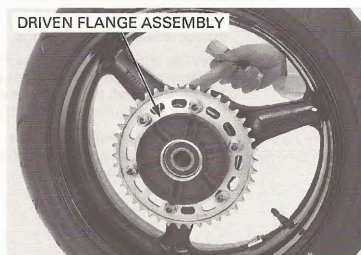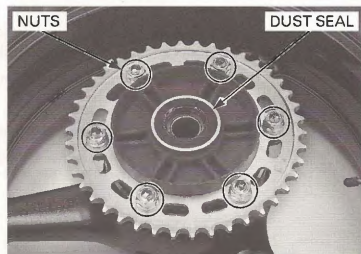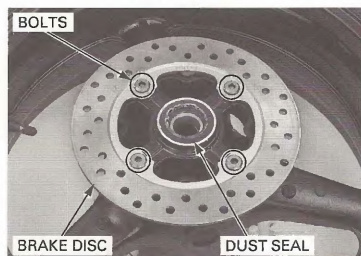

REAR WHEEL/SUSPENSION

Remove the wheel rubber dampers.
Remove the O-ring.

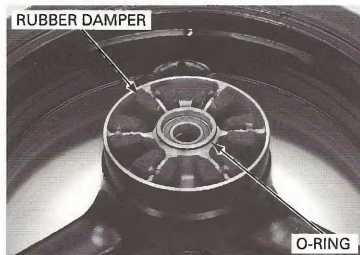

INSPECTION

Axle


Place the axle on V-blocks and measure the runout. Actual runout is 1/2 the total indicator reading.

SERVICE LIMIT: 0.2 mm (0.01 in)

Wheel balance

For wheel balance servicing (page 14-18).

- When checking wheel balance, install the brake disc onto the wheel (page 15-11).

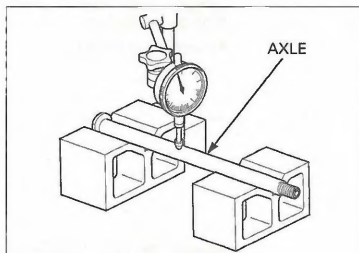


Wheel/driven flange bearings

Turn the inner race of each bearing with your finger. The bearings should turn smoothly and quietly. Also check that the outer race of the bearing fits tightly in the hub or driven flange.

Replace the wheel bearings in pairs.

Replace the bearings if the races do not turn smoothly, quietly, or if the outer race fit loosely in the hub or driven flange.

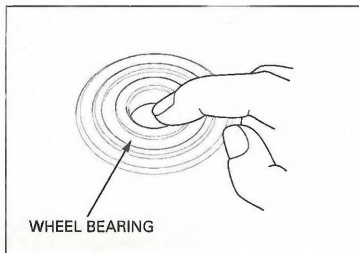

Wheel rim runout

Check the rim runout by placing the wheel in a truing stand.


Spin the wheel slowly and read the runout using a dial indicator.

Actual runout is 1/2 the total indicator reading.

SERVICE LIMITS:

Radial: 2.0 mm (0.08 in)

Axial: 2.0 mm (0.08 in)

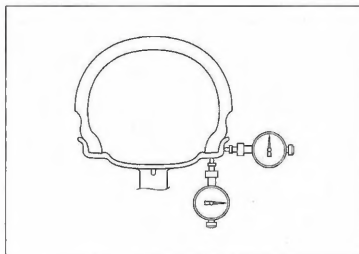


Driven sprocket

Check the condition of the final driven sprocket teeth.


Replace the sprocket if worn or damaged.

- If the final driven sprocket requires replacement, inspect the drive chain and drive sprocket.
- Never install a new drive chain on a worn sprocket or a worn chain on new sprockets. Both chain and sprocket must be in good condition or the replacement chain or sprocket will wear rapidly.

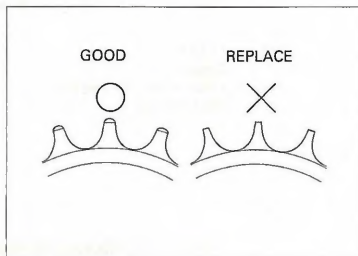


DRIVEN FLANGE BEARING REPLACEMENT


Press the collar out of the driven flange bearing.

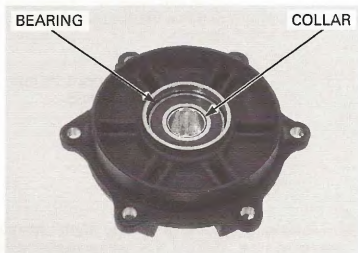

Press the bearing out of the driven flange.

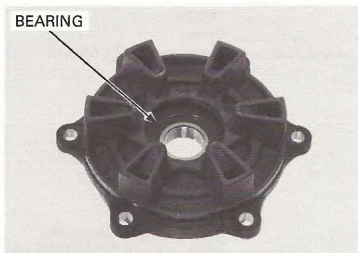

Press the driven flange collar into new driven flange bearing until it is fully seated.

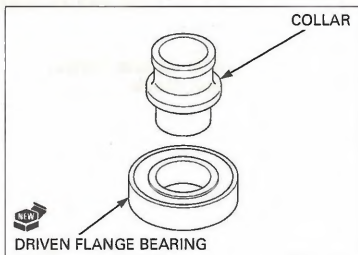


REAR WHEEL/SUSPENSION

Press the driven flange bearing/collar into the driven flange until it is fully seated using the special tools.

TOOLS:

Driver	07749-0010000
Attachment, 52 x 55 mm	07746-0010400
Pilot, 25 mm	07746-0040600

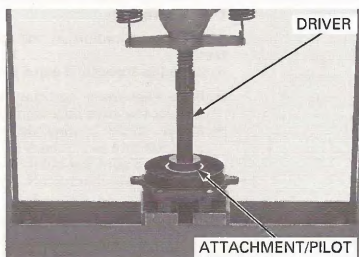


WHEEL BEARING REPLACEMENT

Install the bearing remover head into the bearing. From the opposite side, install the bearing remover shaft and drive the bearing out of the wheel hub. Remove the distance collar and drive out the other bearing.

TOOLS:

Bearing remover head, 25 mm	07746-0050800
Bearing remover shaft	07GGD-0010100

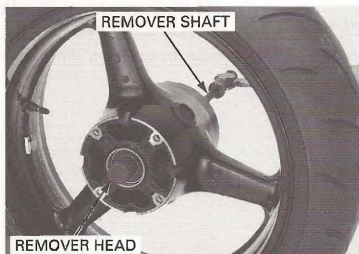


Never install the old bearing, once the bearings have been removed, the bearings must be replaced with new ones.

Drive in a new right bearing squarely with its marked side facing up until it is fully seated.

TOOLS:

Driver	07749-0010000
Attachment, 52 x 53 mm	07746-0010400
Pilot, 25 mm	07746-0040600

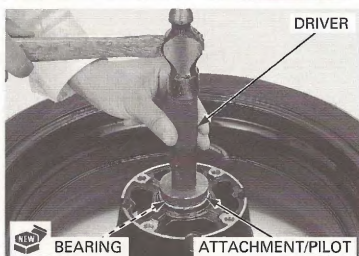


Install the distance collar.


Drive in a new left bearing squarely with its marked side facing up until it is seated to the distance collar.

TOOLS:


Driver	07749-0010000
Attachment, 42 x 47 mm	07746-0010300
Pilot, 25 mm	07746-0040600

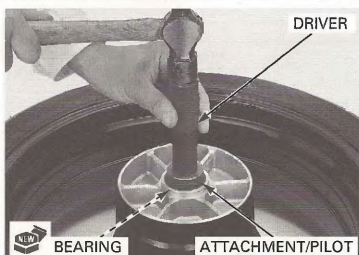

ASSEMBLY

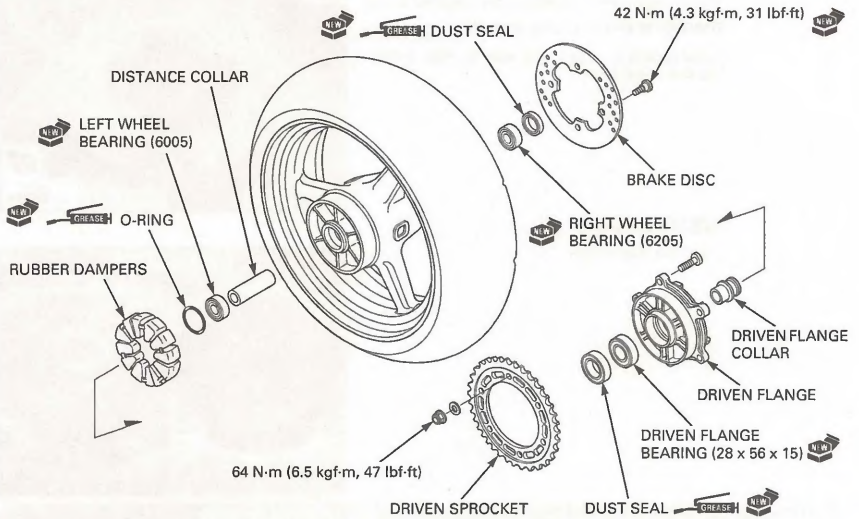

Install the rubber dampers into the wheel hub.
Apply grease to a new O-ring and install it into the groove of the wheel hub.

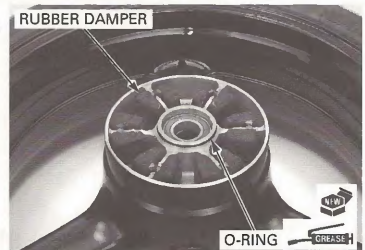


Install the driven flange assembly into the left wheel hub.

If the driven sprocket is removed, install the driven sprocket bolts, sprocket, washers and nuts onto the driven flange.

If the driven sprocket is removed, tighten the driven sprocket nuts to the specified torque.

TORQUE: 64 N-m (6.5 kgf-m, 47 lbf-ft)

Apply grease to a new dust seal lips, then install it into the driven flange.

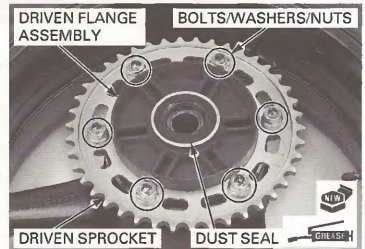


REAR WHEEL/SUSPENSION

Install the brake disc with its rotating direction mark facing out.

Tighten new brake disc bolts to the specified torque.


TORQUE: 42 N·m (4.3 kgf·m, 31 lbf·ft)

Apply grease to a new dust seal lip, then install it into the wheel hub.

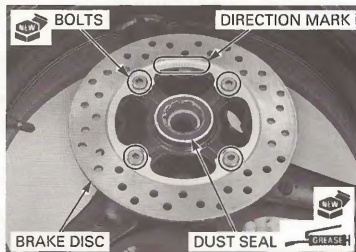


INSTALLATION

Install the side collars.

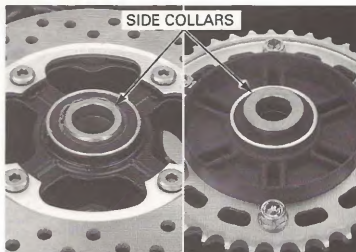


Be careful not to damage the brake pads.

Install the rear brake caliper bracket onto the guide rail of the swingarm while placing the rear wheel into the swingarm.

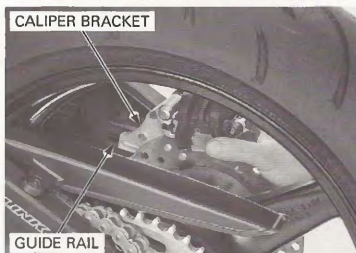


Install the drive chain over the driven sprocket.

Apply a thin coat of grease to the rear axle surface. Install the adjusting plate and rear axle from the left side.

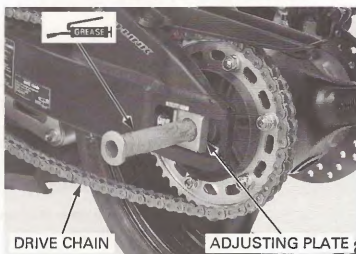

Install the adjusting plate, washer and rear axle nut.
Adjust the drive chain slack (page 4-26).

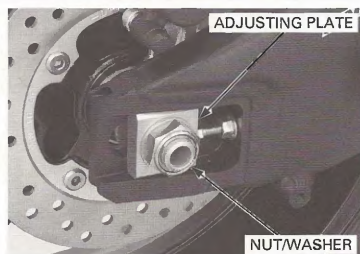

SUSPENSION LINKAGE

REMOVAL


Remove the muffler (page 3-24).

Support the motorcycle using a hoist or equivalent, and raise the rear wheel off the ground.

Support the rear wheel securely.


Remove the following:

- Bolts/nuts
- Shock link
- Shock arms

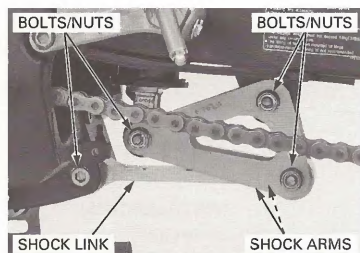

SHOCK LINK BEARING REPLACEMENT

Remove the pivot collar and dust seals.

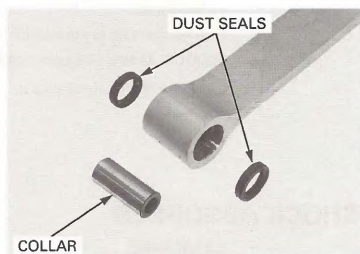


Press the needle bearings out of the shock link using the special tools.

TOOLS:

Driver
Attachment, 22 x 24 mm
Pilot, 17 mm
Attachment, 30 mm I.D.

07949-3710001
07746-0010800
07746-0040400
07746-0030300

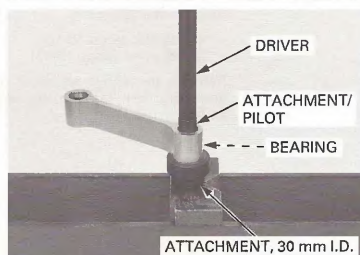

REAR WHEEL/SUSPENSION

Press the needle bearing into the shock link with the marked side facing out.

Pack new needle bearings with molybdenum disulfide grease.

Press the needle bearings into the shock link so that the needle bearing surface is 5.2 – 5.7 mm (0.20 – 0.22 in) below the end of the shock link using the special tools.

TOOLS:

Driver

07949-3710001



Attachment, 22 x 24 mm

07746-0010800

Pilot, 17 mm

07746-0040400

Apply molybdenum disulfide grease to new dust seal lips, then install the dust seals and collar into the shock link.

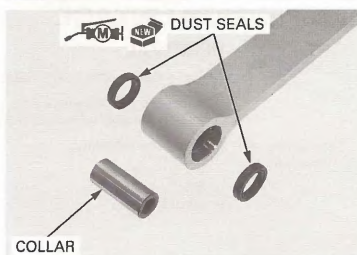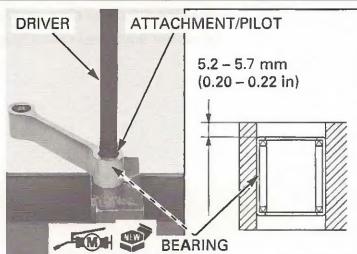

INSTALLATION

Support the rear wheel securely.


Loosely install the following:

- Shock arms
- Shock link
- Bolts/nuts

Tighten the nuts to the specified torque.

TORQUE: 44 N·m (4.5 kgf·m, 32 lbf·ft)

Install the muffler (page 3-24).

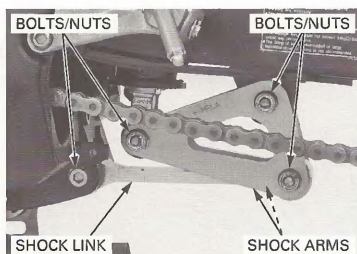


SHOCK ABSORBER

REMOVAL

Remove the following:

- Shock link (page 15-13)
- Shock arms (page 15-13)

Remove the shock absorber upper mounting nut and bolt, then remove the shock absorber downward.

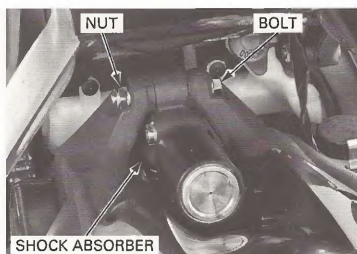

INSPECTION


Visually inspect the shock absorber for damage.

Check the following:

- Damper rod for bends or damage
- Damper unit for deformation or oil leaks

Inspect all the other parts for wear or damage.


If necessary, replace the shock absorber as an assembly.

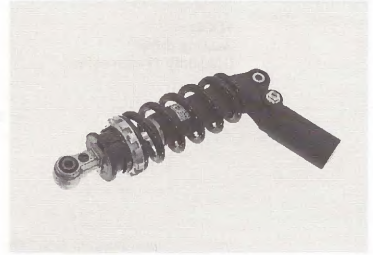

BEARING REPLACEMENT

UPPER BEARING

Remove the dust seals.

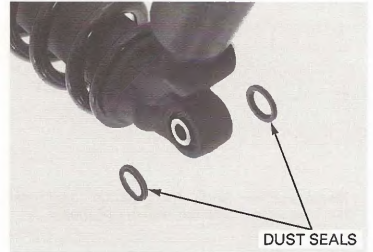


Press the spherical bearing to get the clearance necessary to remove the stopper ring using the special tool.

TOOL:

Bearing driver
(Use only 17 mm collar)

07GMD-KT80100

Remove the stopper ring.

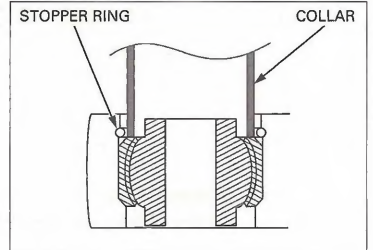


Press the spherical bearing out of the upper mount using the special tools.

TOOLS:

Bearing driver
(Use only 17 mm collar)
Attachment, 30 mm I.D.

07GMD-KT80100

07746-0030300

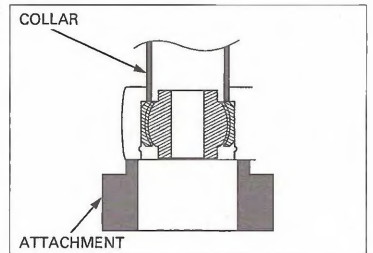

REAR WHEEL/SUSPENSION


Drive the bearing in evenly; do not allow it to tilt.

Press a new spherical bearing into the upper mount using the special tool.

TOOL:

Bearing driver
(Use only 17 mm collar)

07GMD-KT80100

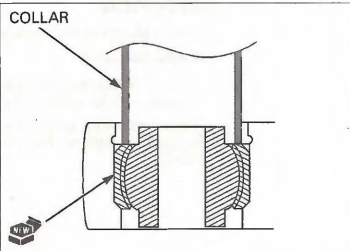


Install a new stopper ring into the groove of the upper mount securely.

Press the spherical bearing into the upper mount using the special tool, until it seats against the stopper ring.

TOOL:


Bearing driver
(Use only 17 mm collar)

07GMD-KT80100

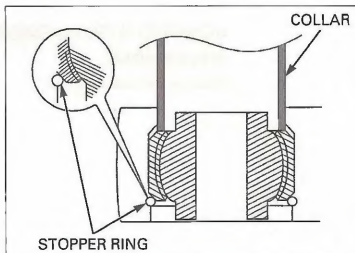


The left dust seal O.D. is larger than right dust seal O.D.

Apply molybdenum disulfide grease to new dust seal lips and install them.

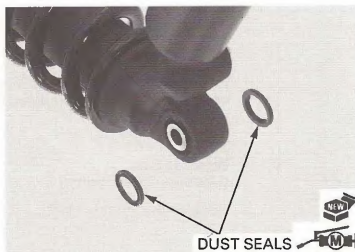

LOWER BEARING


Remove the dust seals and collar.

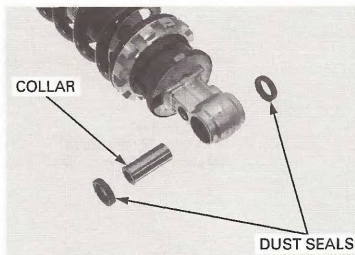

Press the needle bearing out of the lower mount using the special tools.

TOOLS:

Driver	07949-3710001
Attachment, 22 x 24 mm	07746-0010800
Pilot, 17 mm	07746-0040400
Attachment, 30 mm I.D.	07746-0030300

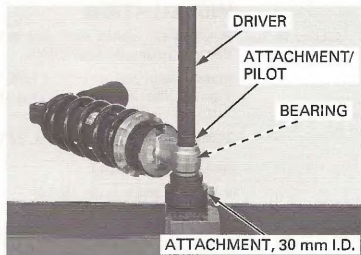


Pack a new needle bearing with molybdenum disulfide grease.

Press the needle bearing into the lower mount so that the needle bearing surface is 7.5 – 8.0 mm (0.30 – 0.31 in) below the end of the lower mount surface using the special tools.


TOOLS:

Driver	07949-3710001
Attachment, 22 x 24 mm	07746-0010800
Pilot, 17 mm	07746-0040400
Attachment, 30 mm I.D.	07746-0030300

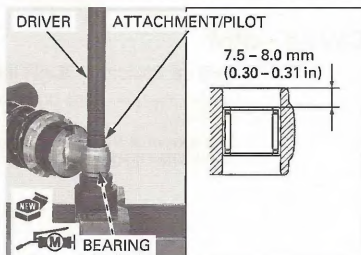

Apply molybdenum disulfide grease to new dust seal lips.


Install the collar and new dust seals.

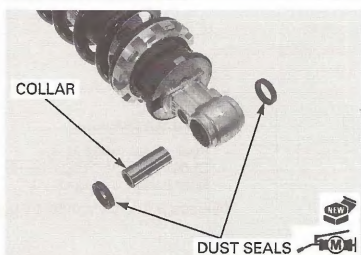

SHOCK ABSORBER DISPOSAL PROCEDURE

Release the nitrogen from the reservoir by pushing and dislodging the reservoir packing with a 2 mm (0.07 in) shaft.

- Put on safety glasses.
- Before disposal of the shock absorber, release the nitrogen from the reservoir.

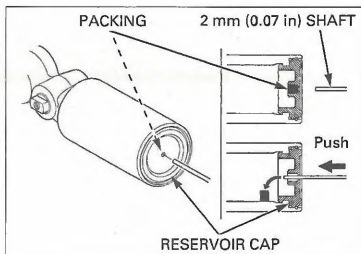

REAR WHEEL/SUSPENSION

INSTALLATION

Support the rear wheel securely.


Position the shock absorber with the compression damping adjuster facing left.

Install the upper mounting bolt. Tighten the upper mounting nut to the specified torque.

TORQUE: 44 N·m (4.5 kgf·m, 32 lbf·ft)

Install the following:

- Shock arms (page 15-14)
- Shock link (page 15-14)

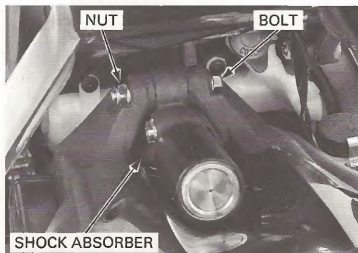


SWINGARM

DRIVE CHAIN SLIDER INSPECTION

Inspect the drive chain slider for excessive wear or damage.

If it is worn to the wear indicator, replace the drive chain slider (page 15-19).

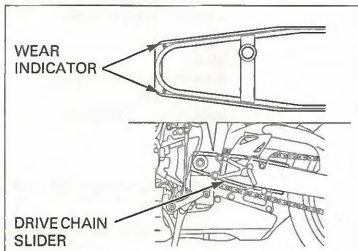


REMOVAL


Remove the following:

- Rear wheel (page 15-6)
- Shock absorber (page 15-14)
- Rear fender C (page 3-20)


Remove the screw and brake hose clamp.

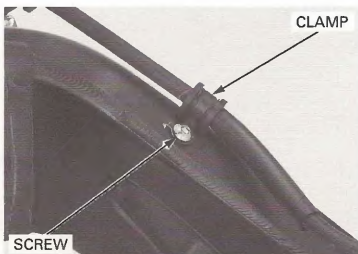

California type: Disconnect the EVAP canister hoses.

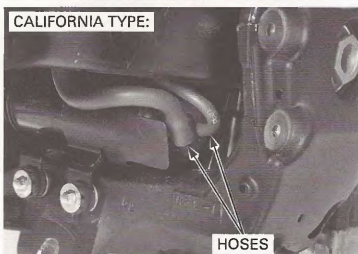


Remove the nut, washer, swingarm pivot and swingarm.

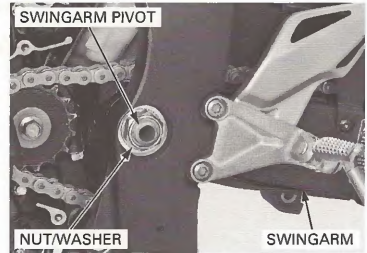


DISASSEMBLY/INSPECTION


Remove the bolts and drive chain case.

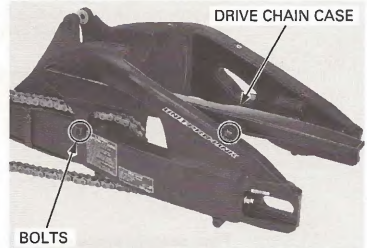

Remove the bolts, washers and drive chain slider.
Check the drive chain slider for wear or damage.

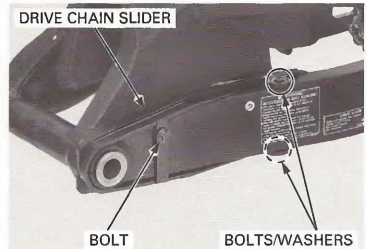


Remove the collar and dust seals from the swingarm.
Check the collar for wear or damage.

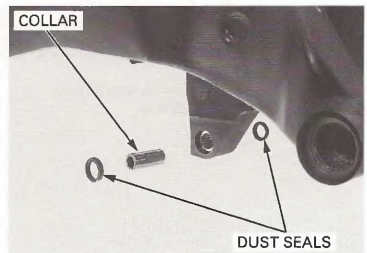

REAR WHEEL/SUSPENSION

Remove the pivot collars, dust seals and distance collar from the swingarm pivot.


Check the pivot collars for wear or damage.

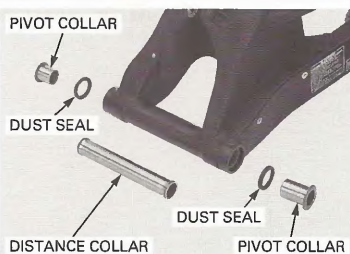

Turn the inner race of right side pivot ball bearing with your finger.


The bearing should turn smoothly and quietly. Also check that the bearing outer race fits tightly in the swingarm pivot.

Remove and discard the bearing if the races do not turn smoothly and quietly, or if they fit loosely in the swingarm pivot.

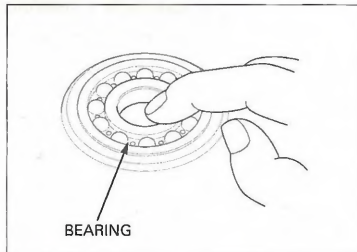

Pivot bearing replacement

Right side: Remove the snap ring from the swingarm right side pivot.

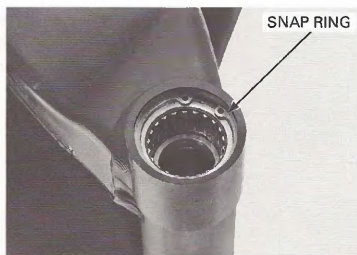


Right side: Press the right pivot needle and ball bearings out of the swingarm pivot using the special tools.

TOOLS:

Driver
Attachment, 28 x 30 mm
Pilot, 25 mm


07949-3710001
07946-1870100
07746-0040600

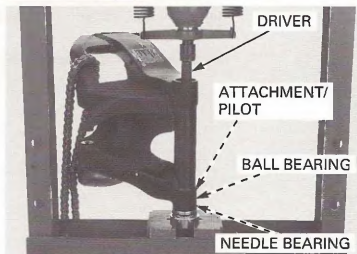

Left side: Press the left pivot needle bearing out of the swingarm pivot using the special tools.

TOOLS:

Driver 07949-3710001
Attachment, 32 x 35 mm 07746-0010100

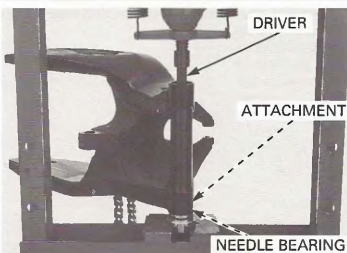


Right side: Pack a new ball bearing with molybdenum disulfide grease.

Press the ball bearing into the swingarm right pivot until it is fully seated using the special tools.

TOOLS:

Driver 07749-0010000
Attachment, 40 x 42 mm 07746-0010900
Pilot, 25 mm 07746-0040600

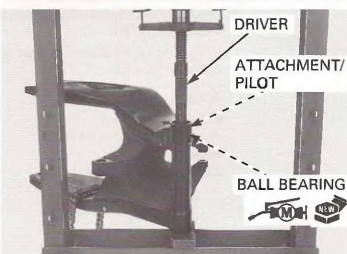


Right side: Pack a new needle bearing with molybdenum disulfide grease.

Press the needle bearing into the swingarm right pivot until it seats to the ball bearing using the special tools.

TOOLS:

Driver 07749-0010000
Attachment, 40 x 42 mm 07746-0010900

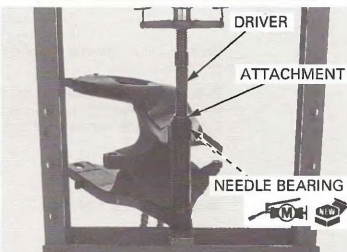


Left side: Pack a new needle bearing with molybdenum disulfide grease.

Press the needle bearing into the swingarm left pivot so that the needle bearing surface is 6.0 – 7.0 mm (0.24 – 0.28 in) below the end of the swingarm pivot surface using the special tools.

TOOLS:


Driver 07749-0010000
Attachment, 40 x 42 mm 07746-0010900

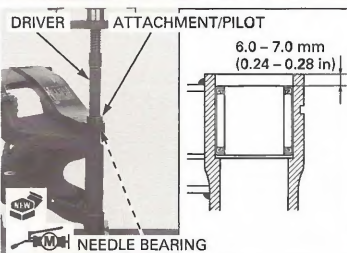

REAR WHEEL/SUSPENSION

Right side: After installing a snap ring, always rotate it in its groove to be sure it is fully seated.

Install the snap ring into the groove securely.

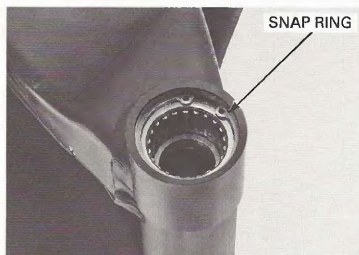


SHOCK ARM-TO-SWINGARM BEARING REPLACEMENT

Press the needle bearing out of the swingarm using the special tools.

TOOLS:

Driver
Attachment, 22 x 24 mm
Pilot, 17 mm
Attachment, 30 mm I.D.

07949-3710001
07746-0010800
07746-0040400
07746-0030300

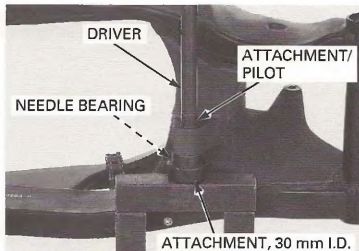


Pack a new needle bearing with molybdenum disulfide grease.

Press the needle bearing into the swingarm so that the needle bearing surface is 5.5 – 6.0 mm (0.22 – 0.24 in) below the end of the swingarm using the special tools.


TOOLS:

Driver
Attachment, 22 x 24 mm
Pilot, 17 mm

07949-3710001
07746-0010800
07746-0040400

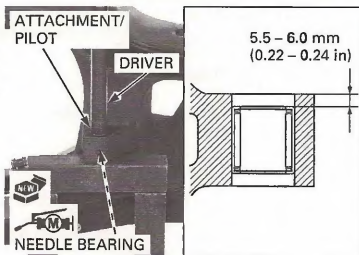


ASSEMBLY

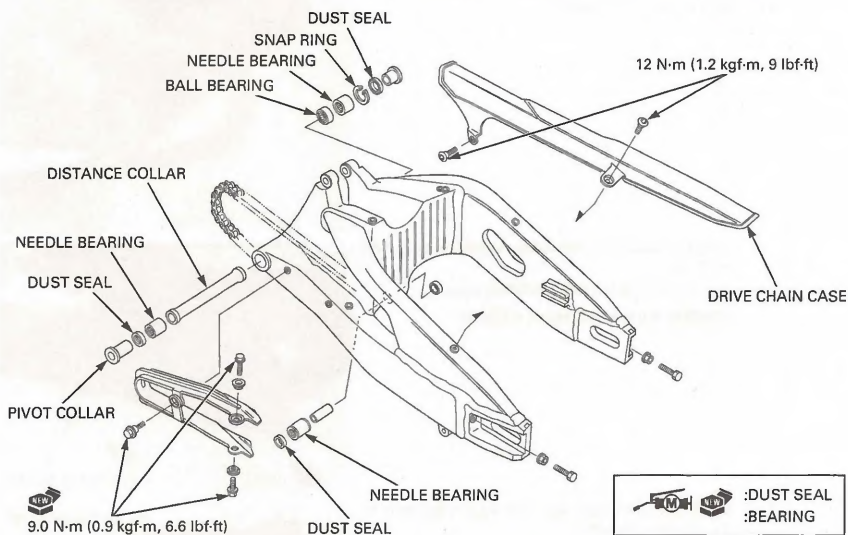


Apply molybdenum disulfide grease to new dust seal lips.

Install the distance collar, dust seals and pivot collars to the swingarm.

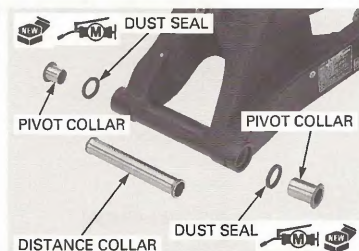


Apply molybdenum disulfide grease to new dust seal lips, then install the dust seals and collar into the swingarm.

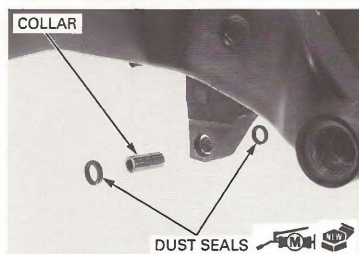

REAR WHEEL/SUSPENSION


Install the drive chain slider aligning its tab with the groove on the swingarm.

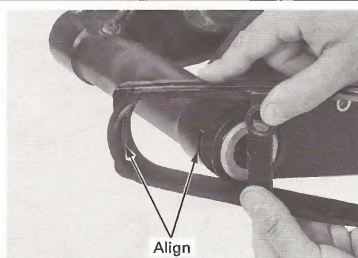

Install a new drive chain slider mounting bolts and washers.


Tighten the bolts to the specified torque.

TORQUE: 9.0 N·m (0.9 kgf·m, 6.6 lbf·ft)

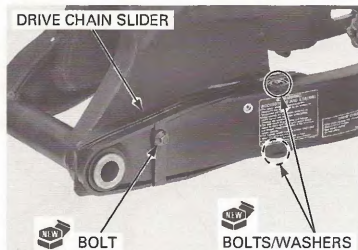

Install the drive chain case and tighten the bolts to the specified torque.


TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

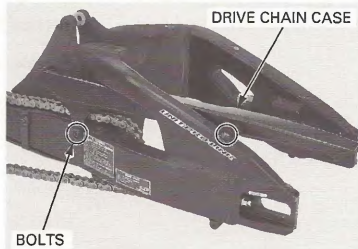

INSTALLATION

Apply a thin coat of grease to the swingarm pivot bolt sliding surface.

Install the swingarm and pivot bolt to the frame.


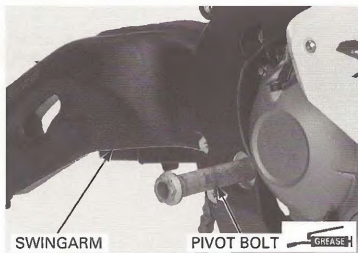


Install the washer and swingarm pivot nut.

Tighten the nut to the specified torque.

TORQUE: 113 N·m (11.5 kgf·m, 83 lbf·ft)

California type: Connect the EVAP canister hoses.

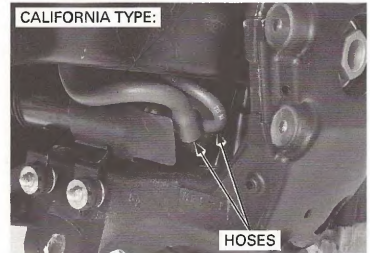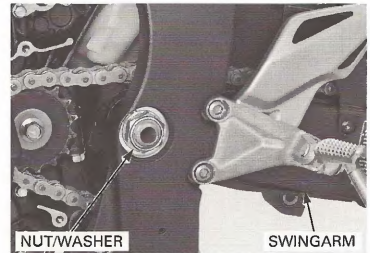


Install the brake hose clamp by aligning its tab to the swingarm hole.

Tighten the special screw to the specified torque.

TORQUE: 4.2 N·m (0.4 kgf·m, 3.1 lbf·ft)

Install the following:

- Rear fender C (page 3-20)
- Shock absorber (page 15-18)
- Rear wheel (page 15-12)

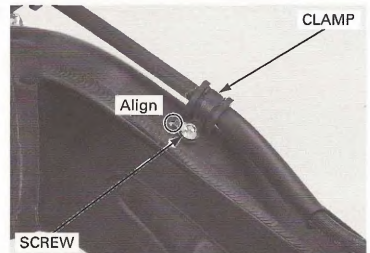


16. HYDRAULIC BRAKE

COMPONENT LOCATION	16-2	BRAKE PAD/DISC	16-8
SERVICE INFORMATION	16-4	FRONT MASTER CYLINDER.....	16-12
TROUBLESHOOTING	16-5	REAR MASTER CYLINDER	16-18
BRAKE FLUID REPLACEMENT/ AIR BLEEDING	16-6	FRONT BRAKE CALIPERS	16-27
		REAR BRAKE CALIPER	16-30


HYDRAULIC BRAKE

COMPONENT LOCATION

FRONT:

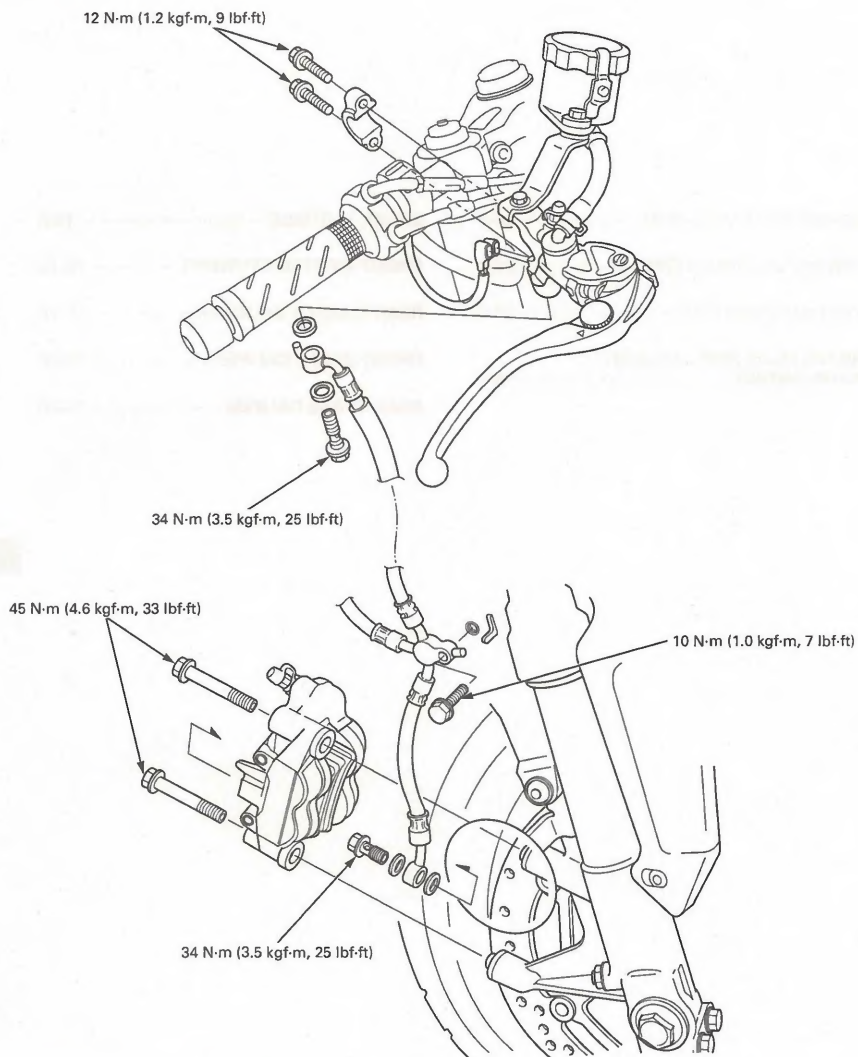

REAR:

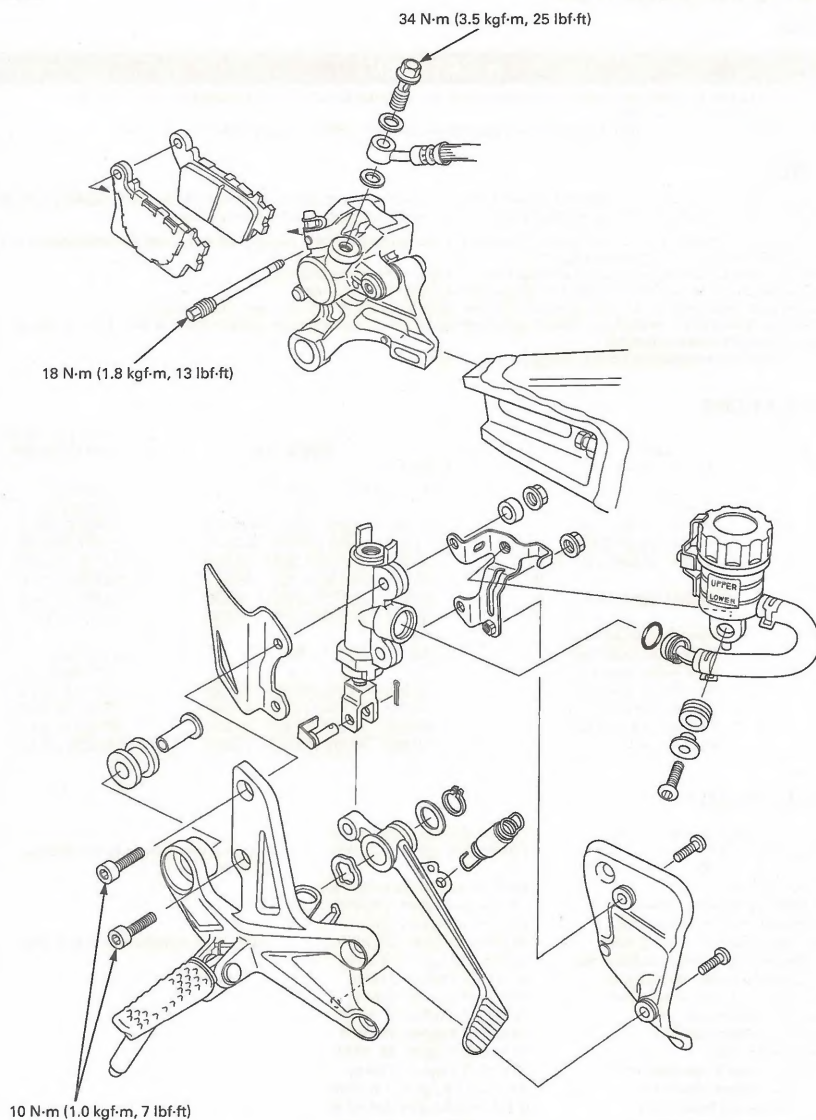

SERVICE INFORMATION

GENERAL

⚠ CAUTION

Frequent inhalation of brake pad dust, regardless of material composition, could be hazardous to your health.

- Avoid breathing dust particles.
- Never use an air hose or brush to clean brake assemblies. Use an OSHA-approved vacuum cleaner.

NOTICE

Spilled brake fluid will severely damage instrument lenses and painted surfaces. It is also harmful to some rubber parts. Be careful whenever you remove the reserve tank cap; make sure the reserve tank is horizontal first.

- A contaminated brake disc or pad reduces stopping power. Discard contaminated pads and clean a contaminated disc with a high quality brake degreasing agent.
- Check the brake system by applying the brake lever or pedal after the air bleeding.
- Never allow contaminants (dirt, water, etc.) to get into an open reserve tank.
- Once the hydraulic system has been opened, or if the brake feels spongy, the system must be bled.
- Always use fresh DOT 4 brake fluid from a sealed container when servicing the system. Do not mix different types of fluid; they may not be compatible.
- Always check brake operation before riding the motorcycle.

SPECIFICATIONS

				Unit: mm (in)
ITEM			STANDARD	SERVICE LIMIT
Front	Specified brake fluid		DOT 4	—
	Brake disc thickness		4.4 – 4.6 (0.17 – 0.18)	3.5 (0.14)
	Brake disc runout		—	0.30 (0.012)
	Master cylinder I.D.		17.460 – 17.503 (0.6874 – 0.6891)	17.503 (0.6891)
	Master piston O.D.		17.321 – 17.367 (0.6819 – 0.6837)	17.321 (0.6819)
	Caliper cylinder I.D.	A	32.080 – 32.130 (1.2630 – 1.2650)	32.130 (1.2650)
		B	30.280 – 30.330 (1.1921 – 1.1941)	30.330 (1.1941)
	Caliper piston O.D.	A	31.967 – 32.000 (1.2585 – 1.2598)	31.967 (1.2585)
		B	30.167 – 30.200 (1.1877 – 1.1890)	30.167 (1.1877)
Rear	Specified brake fluid		DOT 4	—
	Brake disc thickness		4.8 – 5.2 (0.19 – 0.20)	4.0 (0.16)
	Brake disc runout		—	0.30 (0.012)
	Master cylinder I.D.		14.000 – 14.043 (0.5512 – 0.5529)	14.043 (0.5529)
	Master piston O.D.		13.957 – 13.984 (0.5495 – 0.5506)	13.957 (0.5495)
	Caliper cylinder I.D.		30.230 – 30.280 (1.1902 – 1.1921)	30.280 (1.1921)
	Caliper piston O.D.		30.082 – 30.115 (1.1843 – 1.1856)	30.082 (1.1843)

TORQUE VALUES


Reserve tank stopper plate screw	1.2 N·m (0.1 kgf-m, 0.9 lbf-ft)
Brake lever pivot bolt	1.0 N·m (0.1 kgf-m, 0.7 lbf-ft)
Brake lever pivot nut	6.0 N·m (0.6 kgf-m, 4.4 lbf-ft)
Front brake light switch screw	1.2 N·m (0.1 kgf-m, 0.9 lbf-ft)
Front master cylinder holder bolt	12 N·m (1.2 kgf-m, 9 lbf-ft)
Front brake caliper mounting bolt	45 N·m (4.6 kgf-m, 33 lbf-ft)
Rear master cylinder push rod lock nut	18 N·m (1.8 kgf-m, 13 lbf-ft)
Rear master cylinder mounting nut	10 N·m (1.0 kgf-m, 7 lbf-ft)
Front brake reserve tank stay bolt	12 N·m (1.2 kgf-m, 9 lbf-ft)
Front brake caliper pad pin	15 N·m (1.5 kgf-m, 11 lbf-ft)
Rear brake caliper pad pin	18 N·m (1.8 kgf-m, 13 lbf-ft)
Brake hose oil bolt	34 N·m (3.5 kgf-m, 25 lbf-ft)
Front brake hose 3-way joint bolt	10 N·m (1.0 kgf-m, 7 lbf-ft)
Front brake caliper bleed valve	8.0 N·m (0.8 kgf-m, 5.9 lbf-ft)
Rear brake caliper bleed valve	6.0 N·m (0.6 kgf-m, 4.4 lbf-ft)
Main step bracket mounting bolt	37 N·m (3.8 kgf-m, 27 lbf-ft)
Heat guard mounting screw	4.2 N·m (0.4 kgf-m, 3.1 lbf-ft)

Apply silicon grease to the sliding surface.

ALOC bolt; replace with a new one.

TOOL

Snap ring pliers
07914-SA50001

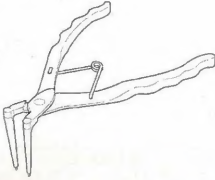**TROUBLESHOOTING****Brake lever/pedal soft or spongy**

- Air in hydraulic system
- Leaking hydraulic system
- Contaminated brake pad/disc
- Worn caliper piston seal
- Worn master cylinder piston cups
- Worn brake pad/disc
- Contaminated caliper
- Caliper not sliding properly (rear)
- Clogged fluid passage
- Warped/deformed brake disc
- Sticking/worn caliper piston
- Sticking/worn master cylinder piston
- Contaminated master cylinder
- Bent brake lever/pedal

Brake lever/pedal hard

- Sticking/worn caliper piston
- Caliper not sliding properly (rear)
- Clogged/restricted fluid passage
- Worn caliper piston seal
- Sticking/worn master cylinder piston
- Bent brake lever/pedal
- Sticking rear brake pedal sliding surface

Brake drags

- Contaminated brake pad/disc
- Misaligned wheel
- Warped/deformed brake disc
- Caliper not sliding properly (rear)
- Clogged/restricted hydraulic system
- Sticking/worn caliper piston
- Sticking master cylinder piston
- Sticking rear brake pedal sliding surface

HYDRAULIC BRAKE

BRAKE FLUID REPLACEMENT/AIR BLEEDING

NOTICE

Spilled fluid can damage painted, plastic, or rubber parts. Place a rag over these parts whenever the system is serviced.


- Do not allow foreign material to enter the system when filling the reserve tank.

BRAKE FLUID DRAINING

Front: Turn the handlebar until the reserve tank is parallel to the ground, before removing the reserve tank cap.


Remove the screw, stopper plate and reserve tank cap.

Remove the set plate and diaphragm.

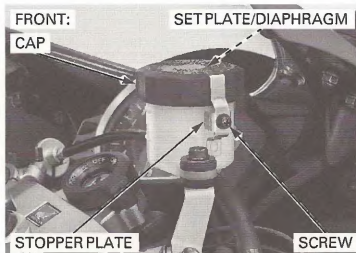

Rear: Remove the screws, stopper plate and reserve tank cap.

Remove the set plate and diaphragm.

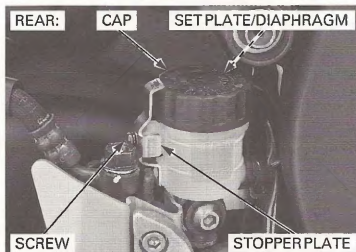

Connect a bleed hose to the caliper bleed valve.

Loosen the bleed valve and pump the brake lever or pedal.

Stop pumping the lever or pedal when no more fluid flows out of the bleed valve.



BRAKE FLUID FILLING/AIR BLEEDING

Fill the reserve tank with DOT 4 brake fluid from a sealed container.

NOTE:

- Use only DOT 4 brake fluid from a sealed container.
- Do not mix different types of fluid. There are not compatible.

Connect a commercially available brake bleeder to the caliper bleed valve.

Operate the brake bleeder and loosen the bleed valve.

If not using an automatic refill system, add brake fluid when the fluid level in the reserve tank is low.

- Check the fluid level often while bleeding the brakes to prevent air from being pumped into the system.
- When using a brake bleeding tool, follow the manufacturer's operating instructions.

Perform the bleeding procedure until the system is completely flushed/bled.

- If air is entering the bleeder from around the bleed valve threads, seal the threads with teflon tape.

For the front brake, close the bleed valve and perform air bleeding for the other side bleed valve.

Operate the brake lever or pedal. If it still feels spongy, bleed the system again.

If the brake bleeder is not available, perform the following procedures:

Connect a clear bleed hose to the bleed valve.

Pressurize the system with the brake lever or pedal until there are no air bubbles in the fluid flowing out of the reserve tank small hole and lever or pedal resistance is felt.

1. Squeeze the brake lever or push the brake pedal, open the bleed valve 1/2 turn and then close the valve.

NOTE:

- Do not release the brake lever or pedal until the bleed valve has been closed.
2. Release the brake lever or pedal slowly and wait several seconds after it reaches the end of its travel.



Repeat steps 1 and 2 until bubbles cease to appear in the fluid coming out of the bleed valve.

Tighten the bleed valve to the specified torque.

TORQUE:

Front: 8.0 N·m (0.8 kgf·m, 5.9 lbf·ft)

Rear: 6.0 N·m (0.6 kgf·m, 4.4 lbf·ft)

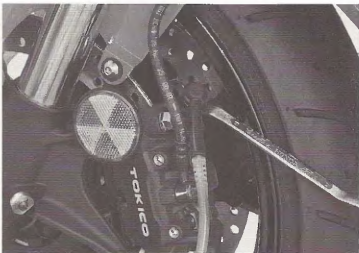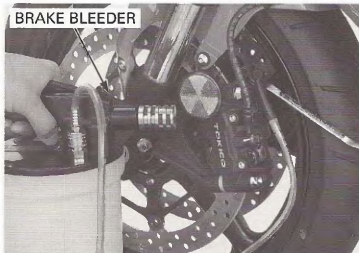

HYDRAULIC BRAKE


Front: Perform air bleeding for the other side bleed valve.

Fill each reserve tank to the upper level with DOT 4 brake fluid from a sealed container.

Reinstall the diaphragm and set plate.


Front: Install the reserve tank cap, stopper plate and tighten the screw to the specified torque.

TORQUE: 1.2 N-m (0.1 kgf-m, 0.9 lbf-ft)

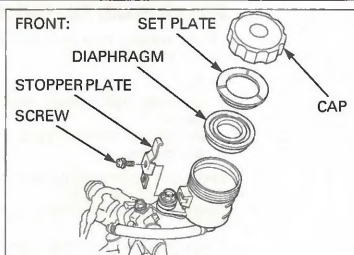

Rear: Install the reserve tank cap, stopper plate and tighten the screw to the specified torque.

TORQUE: 1.2 N-m (0.1 kgf-m, 0.9 lbf-ft)

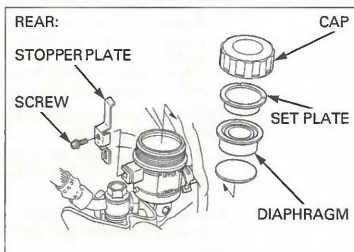

BRAKE PAD/DISC



FRONT BRAKE PAD REPLACEMENT

While servicing the front and rear brake calipers, do not let them hang from the brake hose.

Loosen the pad pins.

Remove the caliper mounting bolts and brake caliper.

Discard the brake caliper mounting bolts.

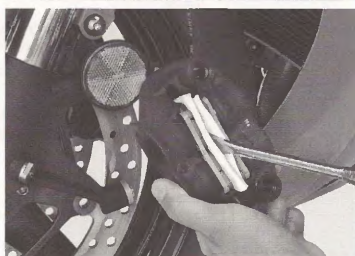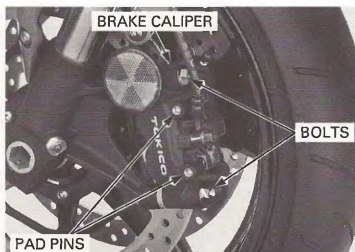

Check the brake fluid level in the brake master cylinder reserve tank, as this operation causes the level to rise.

Push the caliper pistons all the way in to allow installation of new brake pads.


Remove the pad pins, pad spring and brake pads.



Clean the inside of the caliper especially around the caliper pistons.




Install the pad spring with its bent portion side downward.

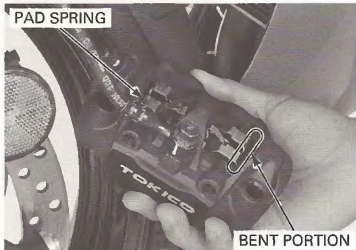

Always replace the brake pads in pairs to assure even disc pressure.

Install new brake pads to the brake caliper.

Install the pad pins while pushing in the brake pads against the pad spring.

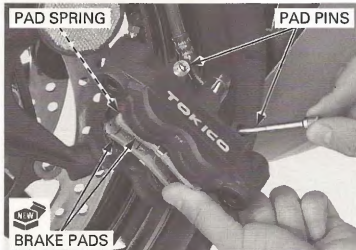


HYDRAULIC BRAKE

Install the brake caliper to the fork leg so that the disc is positioned between the pads.

NOTE:

- Make sure that the collars are installed into the caliper bracket properly.
- Be careful not to damage the brake pads.

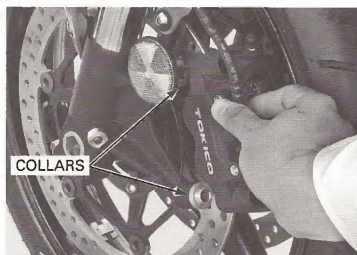


Tighten new brake caliper mounting bolts to the specified torque.

TORQUE: 45 N·m (4.6 kgf·m, 33 lbf·ft)

Tighten the pad pins to the specified torque.

TORQUE: 15 N·m (1.5 kgf·m, 11 lbf·ft)


Check the brake operation by applying the brake lever.

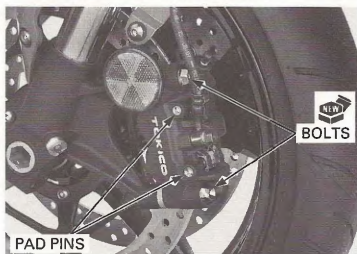


REAR BRAKE PAD REPLACEMENT

Check the brake fluid level in the brake master cylinder reserve tank, as this operation causes the level to rise.


Push the caliper piston all the way in by pushing the caliper body inward to allow installation of new brake pads.

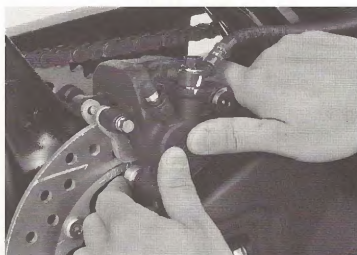

Remove the pad pin.

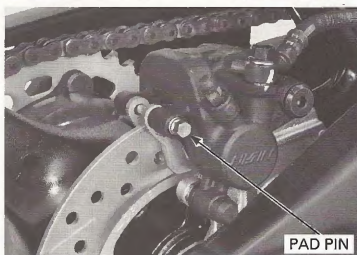


Remove the brake pads and clean the inside of the caliper especially around the caliper piston.

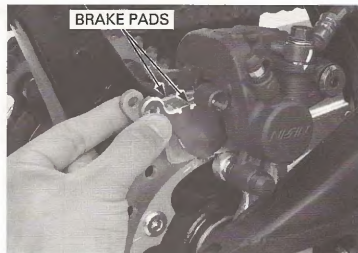

Apply silicone grease to a new O-ring and install it to the pad pin groove.


Always replace the brake pads in pairs to assure even disc pressure.

Make sure the pad spring is in place and install new brake pads securely.

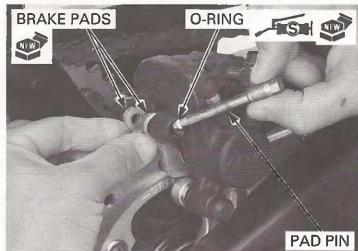

Tighten the pad pin to the specified torque.

TORQUE: 18 N-m (1.8 kgf-m, 13 lbf-ft)

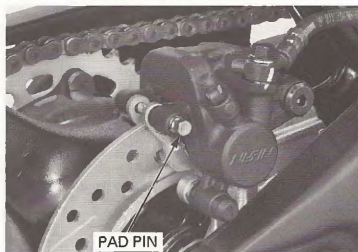

BRAKE DISC INSPECTION

Visually inspect the brake discs for damage or cracks.


Measure the brake disc thickness with a micrometer.

SERVICE LIMITS:

Front: 3.5 mm (0.14 in)

Rear: 4.0 mm (0.16 in)

Replace the brake disc if the smallest measurement is less than the service limit.

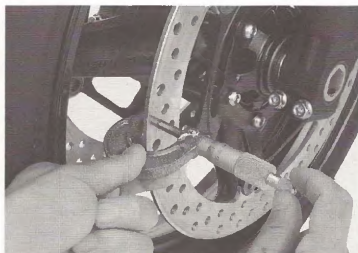

HYDRAULIC BRAKE

Measure the brake disc runout with a dial indicator.


SERVICE LIMITS:

Front: 0.30 mm (0.012 in)

Rear: 0.30 mm (0.012 in)

Check the wheel bearings for excessive play (page 14-17), if the warpage exceeds the service limit.

If the wheel bearings are normal, replace the brake disc.

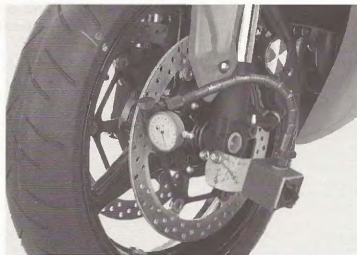

FRONT MASTER CYLINDER

NOTICE


Spilled fluid can damage painted, plastic, or rubber parts. Place a rag over these parts whenever the system is serviced.

REMOVAL


Drain the front hydraulic system (page 16-6).

Disconnect the brake light switch wire connectors.

Remove the brake hose oil bolt, sealing washers and brake hose eyelet joint.

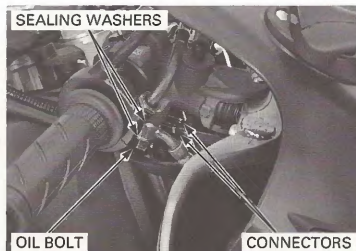

Remove the bolts from the master cylinder holder and remove the master cylinder assembly.

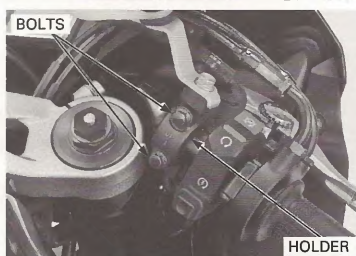

DISASSEMBLY

Remove the dust cover and snap ring.


TOOL:

Snap ring pliers


07914-SA50001

Remove the bolt and reserve tank from the master cylinder.

Remove the O-ring from the reserve tank hose joint.

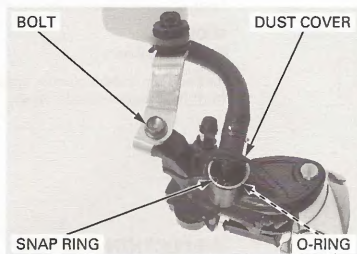

Remove the pivot nut, bolt and brake lever assembly.

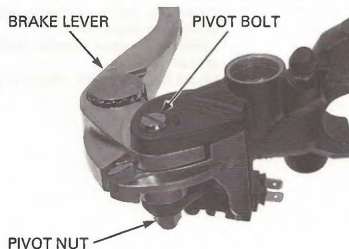

Remove the screw and brake light switch.



Be careful not to damage the boot. Remove the boot and push rod.



HYDRAULIC BRAKE


Remove the snap ring from the master cylinder body using the special tool as shown.

TOOL:

Snap ring pliers

07914-SA50001

Remove the master piston, spring and spring guide from the master cylinder body.

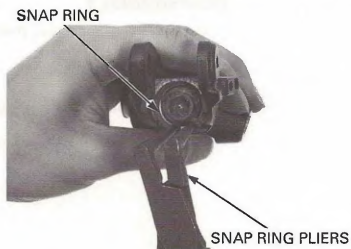


INSPECTION

Clean the inside of the cylinder and reserve tank with clean brake fluid.

Check the master cylinder and piston for abnormal scratches.

Check the spring for fatigue or damage.

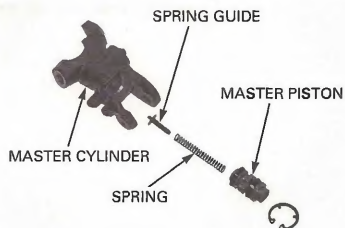

Measure the master cylinder I.D.

SERVICE LIMIT: 17.503 mm (0.6891 in)




Measure the master cylinder piston O.D.

SERVICE LIMIT: 17.321 mm (0.6819 in)



ASSEMBLY

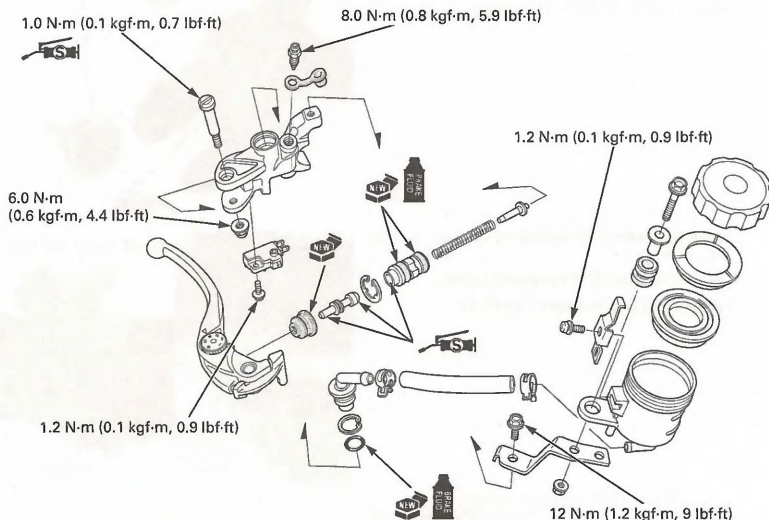

- Keep the piston, cups, spring, snap ring and boot as a set; do not replace the parts individually.


When installing the cups, do not allow the lips to turn inside out.

Coat new piston cups with clean brake fluid and install them to the master piston.

Coat the master piston and piston cups with clean brake fluid.

Install the spring guide into the spring as shown.

Install the spring guide/spring and master piston into the master cylinder.

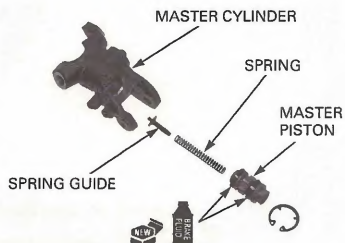


Be certain the snap ring is firmly seated in the groove.

Install the snap ring with the special tool.


TOOL:
Snap ring pliers

07914-SA50001

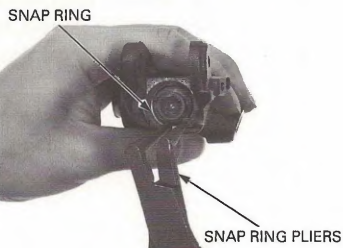

HYDRAULIC BRAKE


Apply silicone grease to contact surfaces of the push rod and master piston.
Install a new boot with the push rod.

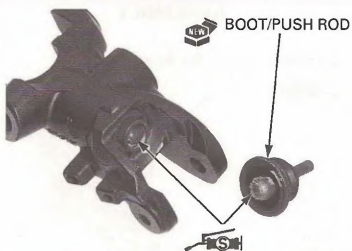


Install the brake light switch by aligning its boss with the hole.

Tighten the screw to the specified torque.

TORQUE: 1.2 N·m (0.1 kgf-m, 0.9 lbf-ft)

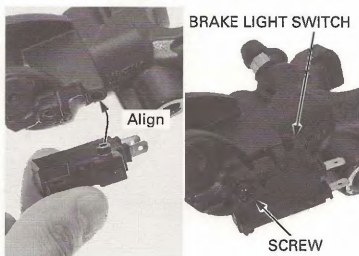

Apply silicone grease to push rod tip.
Install the brake lever by aligning the hole of the brake lever with the push rod.

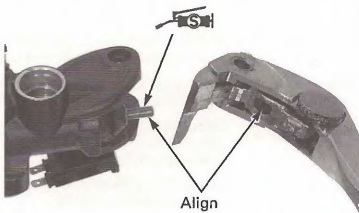

Apply silicone grease to the brake lever pivot bolt sliding surface.


Install the brake lever pivot bolt and nut.

Tighten the pivot bolt to the specified torque.


TORQUE: 1.0 N·m (0.1 kgf-m, 0.7 lbf-ft)

Hold the pivot bolt and tighten the pivot nut to the specified torque.

TORQUE: 6.0 N·m (0.6 kgf-m, 4.4 lbf-ft)

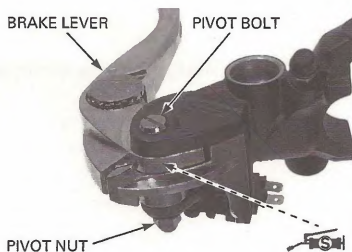

Apply brake fluid to a new O-ring and install it to the reserve tank hose joint.

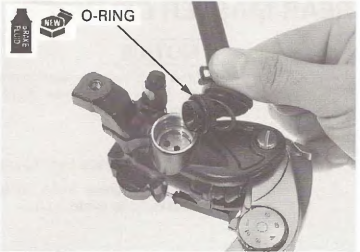

After installing a snap ring, always rotate it in its groove to be sure it is fully seated.

Install the reserve tank hose joint into the master cylinder and secure the joint with the snap ring.

TOOL:


Snap ring pliers

07914-SA50001

Install the dust cover.

Install the reserve tank stay onto the master cylinder and tighten the bolt to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

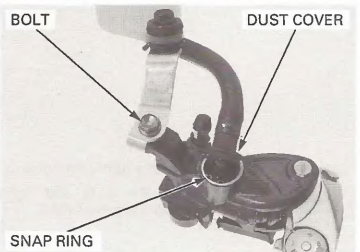

INSTALLATION


Install the master cylinder holder with its "UP" mark facing up.

Install the master cylinder assembly, master cylinder holder and bolts.

Align the end of the master cylinder with the punch mark on the handlebar.

Tighten the upper bolt first, then the lower bolt to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

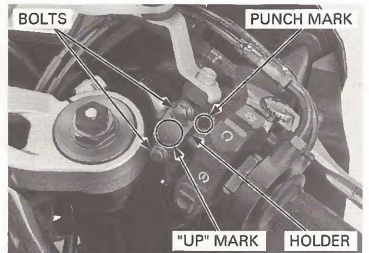


Install the brake hose eyelet joint with new sealing washers and oil bolt.

Push the eyelet joint against the stopper then tighten the oil bolt to the specified torque.

TORQUE: 34 N·m (3.5 kgf·m, 25 lbf·ft)

Connect the brake light switch connectors.

Fill and bleed the hydraulic system (page 16-7).

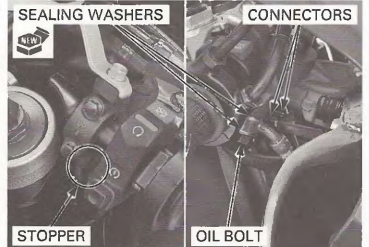

REAR MASTER CYLINDER

NOTICE

Spilled fluid can damage painted, plastic, or rubber parts. Place a rag over these parts whenever the system is serviced.

REMOVAL

Drain the rear brake hydraulic system (page 16-6).

Remove the brake hose oil bolt, sealing washers and brake hose eyelet joint.



Support the muffler securely.

Remove the muffler mounting nut and bolt.


Remove the bolts and right main step bracket assembly from the frame.

Be careful not to damage the EGCA cable.


Release the EGCA cable from the cable guide.

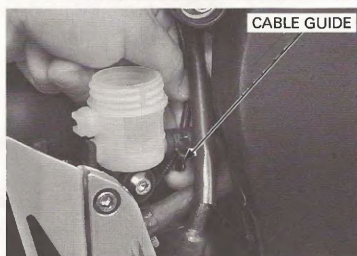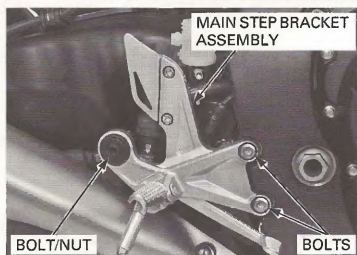


Remove the screws and main step heat guard.

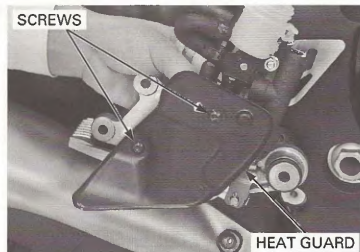


Disconnect the spring and remove the rear brake light switch.

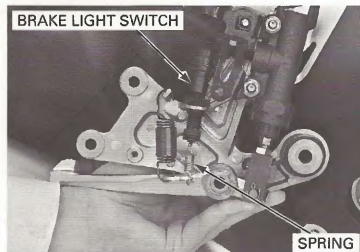

Remove the brake pedal return spring.
Remove the snap ring and washer from the brake pedal pivot.

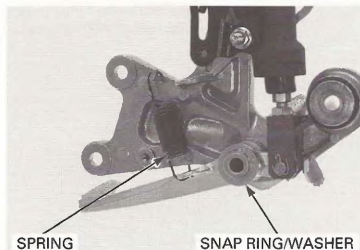


Remove the screw, washer and reserve tank.

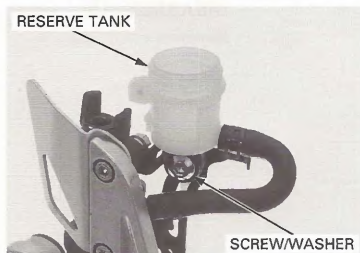


HYDRAULIC BRAKE


Remove the bolts, nuts, collar, master cylinder guard, reserve tank bracket and rear master cylinder.

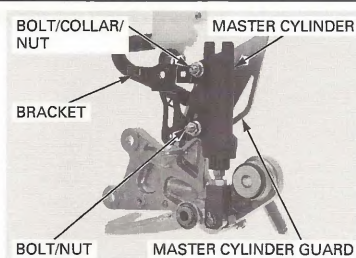

Remove the brake pedal and wave washer.

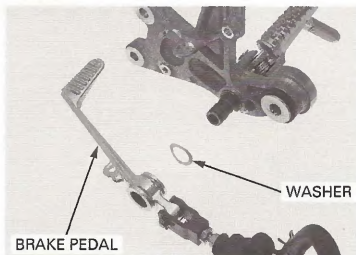


Remove the cotter pin, joint pin and brake pedal from the rear master cylinder.

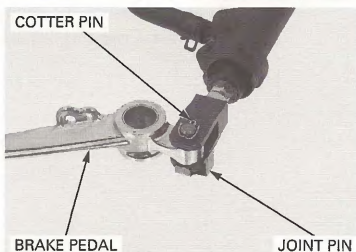


DISASSEMBLY

Remove the snap ring.

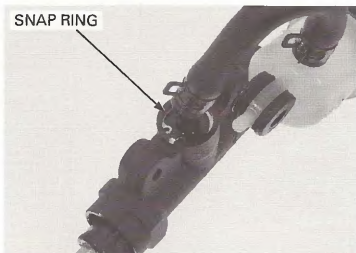

Disconnect the hose joint from the master cylinder.
Remove the O-ring from the hose joint.

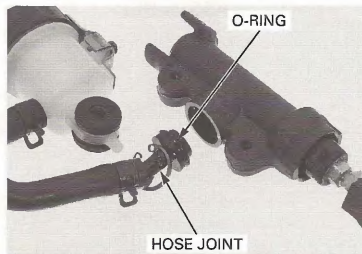


Be careful not to damage the boot.

Remove the boot from the master cylinder body.
Remove the snap ring from the master cylinder body using the special tool as shown.

TOOL:


Snap ring pliers

07914-SA50001

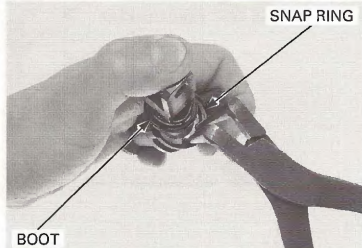

Remove the push rod assembly, master piston and spring.

Clean the inside of the cylinder with clean brake fluid.

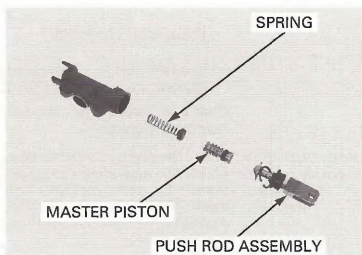

INSPECTION

Check the piston boot, primary cup and secondary cup for fatigue or damage.


Check the master cylinder and piston for abnormal scratches.

Measure the master cylinder I.D.

SERVICE LIMIT: 14.043 mm (0.5529 in)


Measure the master cylinder piston O.D.

SERVICE LIMIT: 13.957 mm (0.5495 in)

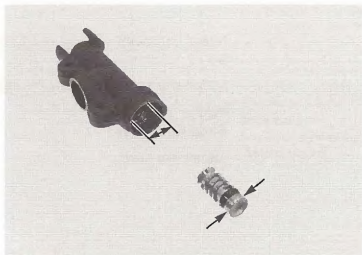

HYDRAULIC BRAKE

ASSEMBLY

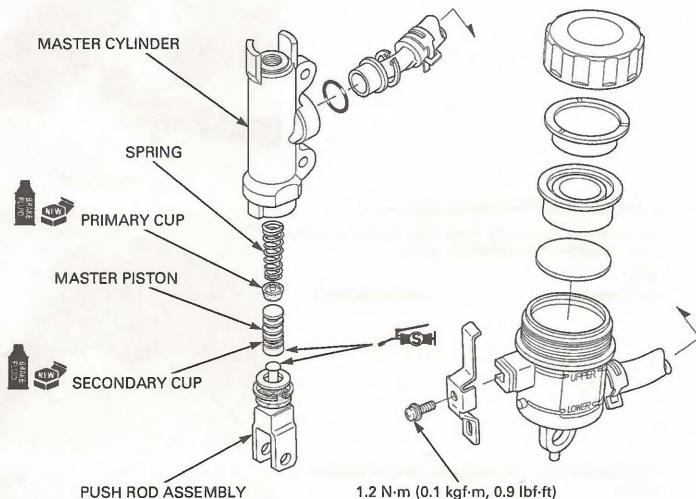

- Keep the piston, cups, spring, snap ring and boot as a set; do not replace the parts individually.

Coat new piston cups and piston with clean brake fluid before assembly.

When installing the cup, do not allow the lips to turn inside out.

Install the spring to the master piston.
Install the secondary cup to the master piston.
Install the spring/primary cup and master piston assembly into the master cylinder.
Apply silicone grease to the piston contact area of the push rod.

Install the push rod assembly into the master cylinder.


After installing the snap ring, always rotate it in its groove to be sure it is fully seated.

Install the snap ring with the special tool.

TOOL:


Snap ring pliers
Install the boot.

07914-SA50001

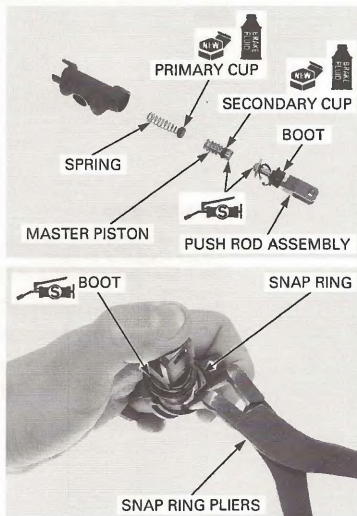


If the push rod is disassembled, adjust the push rod length so that the distance between the center of the master cylinder lower mounting bolt hole and joint pin hole is 75 ± 1 mm (3.0 ± 0.04 in). After adjustment, tighten the lock nut to the specified torque.

TORQUE: 18 N·m (1.8 kgf·m, 13 lbf·ft)

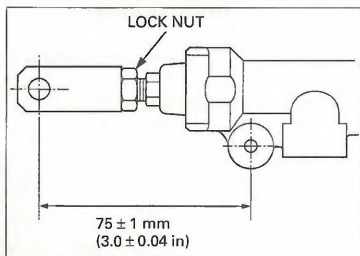


Apply brake fluid to a new O-ring and install it to the hose joint.
Connect the hose joint to the master cylinder.

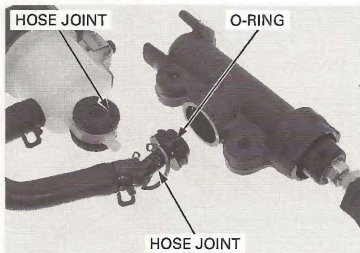


After installing the snap ring, always rotate it in its groove to be sure it is fully seated.


Install the snap ring securely.

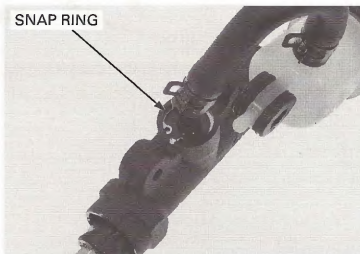

INSTALLATION

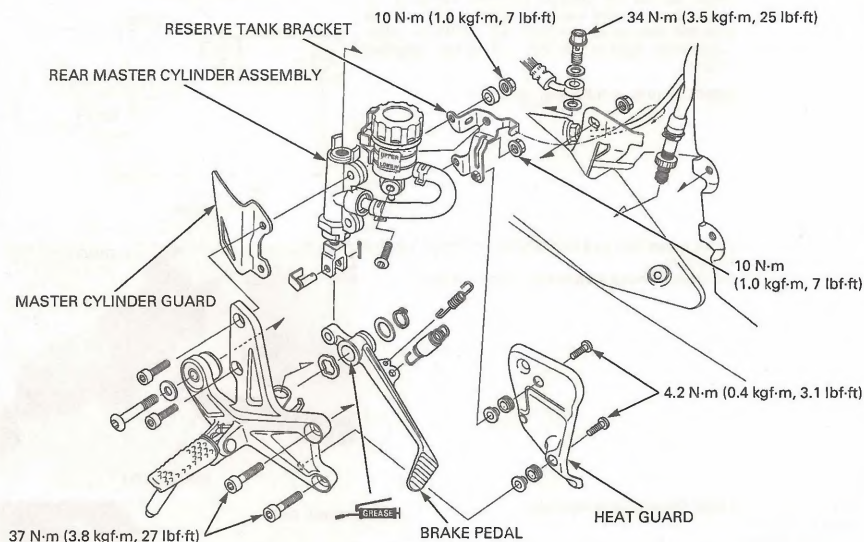


Install the brake pedal and joint pin.
Install a new cotter pin securely as shown.

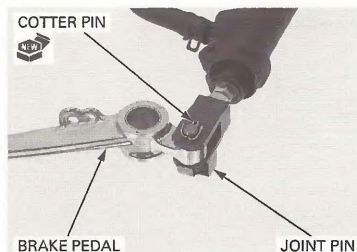


Apply grease to the rear brake pedal pivot sliding surface.

Install the wave washer and brake pedal.

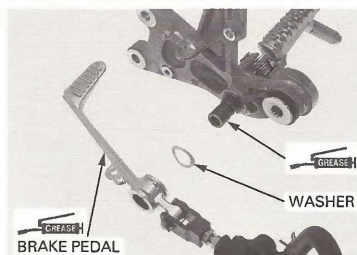


Install the master cylinder guard, rear master cylinder, reserve tank bracket, bolts, collar and tighten the nuts to the specified torque.

TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)

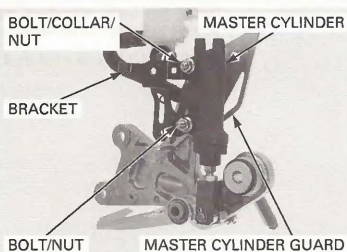


Align the reserve tank lower tab with the master cylinder guard hole.

Install the reserve tank and tighten the screw with washer securely.

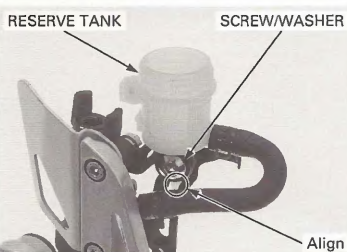


Install the washer and snap ring to the brake pedal pivot.

Install the rear brake pedal return spring securely.

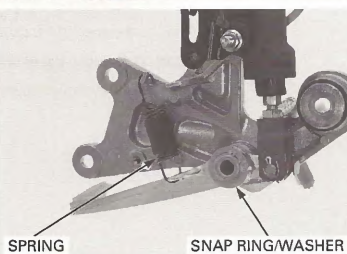


Install the rear brake light switch and connect the spring securely.

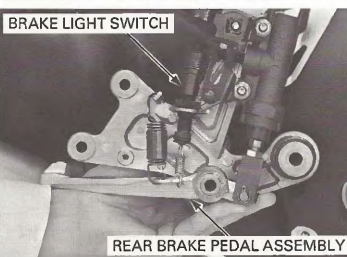


HYDRAULIC BRAKE

Install the main step heat guard and tighten the screws to the specified torque.

TORQUE: 4.2 N-m (0.4 kgf-m, 3.1 lbf-ft)

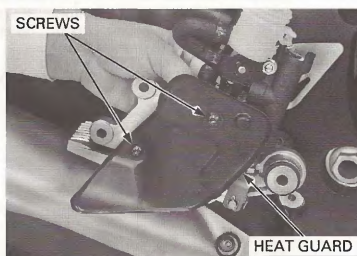


Route the EGCA cable to the cable guide.

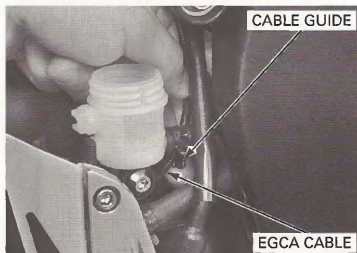

Install the main step bracket assembly and tighten the bolts to the specified torque.

TORQUE: 37 N-m (3.8 kgf-m, 27 lbf-ft)

Install the muffler mounting bolt and tighten the nut securely.

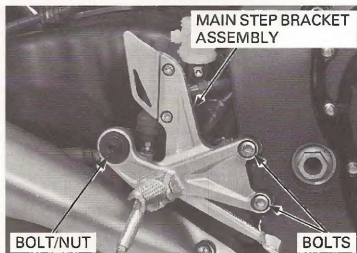


Install the brake hose with the oil bolt and new sealing washers.

Push the eyelet joint against the stopper, then tighten the oil bolt to the specified torque.

TORQUE: 34 N-m (3.5 kgf-m, 25 lbf-ft)

Fill and bleed the hydraulic system (page 16-7).

Adjust the rear brake pedal height (page 4-33).

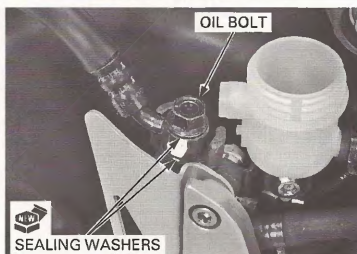

FRONT BRAKE CALIPERS

NOTICE


Spilled fluid can damage painted, plastic, or rubber parts. Place a rag over these parts whenever the system is serviced.

REMOVAL

Drain the front brake hydraulic system (page 16-6).

Remove the brake hose oil bolt, sealing washers and brake hose eyelet joint.

Remove the brake pads (page 16-8).

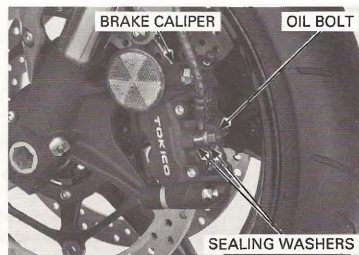

DISASSEMBLY

Place a shop towel between each piston.

Apply short bursts of air pressure to the fluid inlet to remove the pistons.

Remove the following:

- Caliper pistons A
- Caliper pistons B

NOTE:

- Be careful not to damage each piston.
- Do not use high pressure air or bring the nozzle too close to the inlet.
- Mark the pistons to ensure correct reassembly.




HYDRAULIC BRAKE

Be careful not to damage the piston sliding surface.

Push the dust seals and piston seals in and lift them out.

Clean the seal grooves with clean brake fluid.

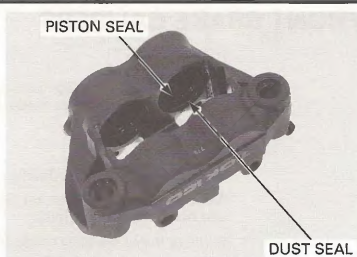

INSPECTION


Check the caliper cylinder for scoring or other damage.

Measure the caliper cylinder I.D.

SERVICE LIMITS:

Cylinder A: 32.130 mm (1.2650 in)

Cylinder B: 30.330 mm (1.1941 in)

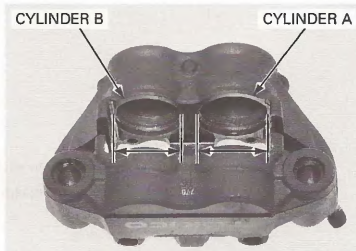


Check the caliper pistons for scratches, scoring or other damage.

Measure the O.D. of each caliper piston.

SERVICE LIMITS:


Piston A: 31.967 mm (1.2585 in)

Piston B: 30.167 mm (1.1877 in)

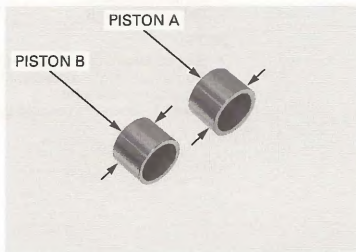

ASSEMBLY

8.0 N·m (0.8 kgf-m, 5.9 lbf-ft)

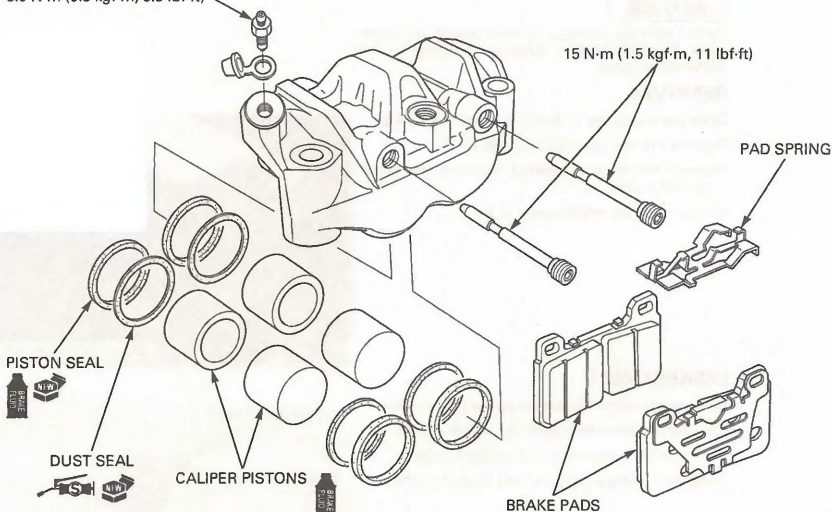


Coat new piston seals with clean brake fluid.
Coat new dust seals with silicone grease.

Install each piston seal, dust seal and caliper piston in their proper locations.

Install the piston and dust seals into the grooves of the caliper body.

Coat the caliper pistons with clean brake fluid and install them into the caliper cylinder with their open ends toward the pad.

- Piston A: large O.D.
- Piston B: small O.D.

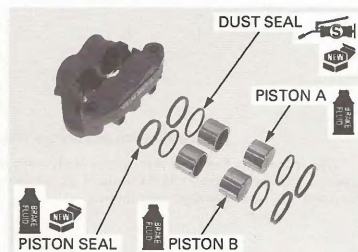

INSTALLATION


Install the brake pads (page 16-8).

Install the brake hose eyelet joint to the caliper body with new sealing washers and oil bolt.

Push the brake hose eyelet joint to the stopper on the caliper, then tighten the oil bolt to the specified torque.

TORQUE: 34 N·m (3.5 kgf-m, 25 lbf-ft)

Fill and bleed the hydraulic system (page 16-6).

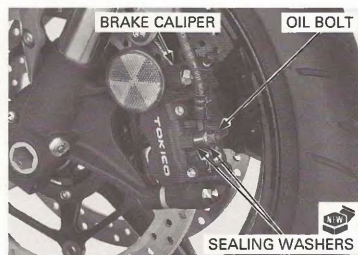

REAR BRAKE CALIPER

NOTICE

Spilled fluid can damage painted, plastic, or rubber parts. Place a rag over these parts whenever the system is serviced.


REMOVAL

Drain the rear brake hydraulic system (page 16-6).

Remove the rear brake pads (page 16-10).

Remove the oil bolt, sealing washers and brake hose eyelet joint.

Remove the rear wheel (page 15-6).

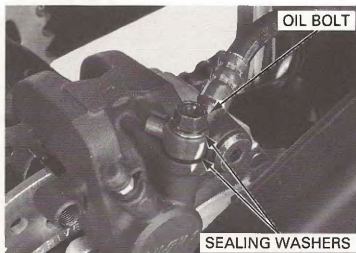


DISASSEMBLY

Remove the caliper bracket from the brake caliper.

Remove the pad spring from the caliper bracket.

Remove the retainer from the caliper bracket.

Remove the caliper pin boot and bracket pin boot.

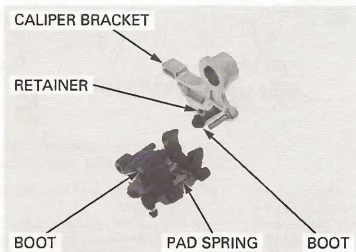

Place a shop towel over the piston.

Do not use high pressure air or bring the nozzle too close to the inlet.

Position the caliper body with the piston down and apply short bursts of air pressure to the fluid inlet to remove the piston.



Be careful not to damage the piston sliding surface.

Push the dust seal and piston seal in and lift them out.

Clean the seal grooves with clean brake fluid.




INSPECTION

Check the caliper cylinder for scoring or other damage.

Measure the caliper cylinder I.D.


SERVICE LIMIT: 30.280 mm (1.1921 in)

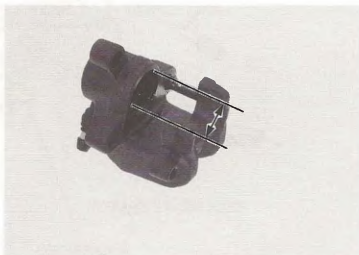

Check the caliper piston for scratches, scoring or other damage.


Measure the caliper piston O.D.

SERVICE LIMIT: 30.082 mm (1.1843 in)

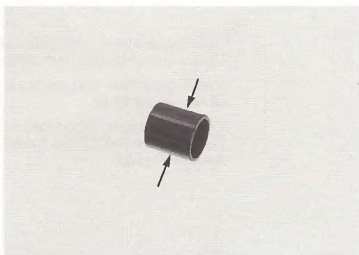

HYDRAULIC BRAKE

ASSEMBLY

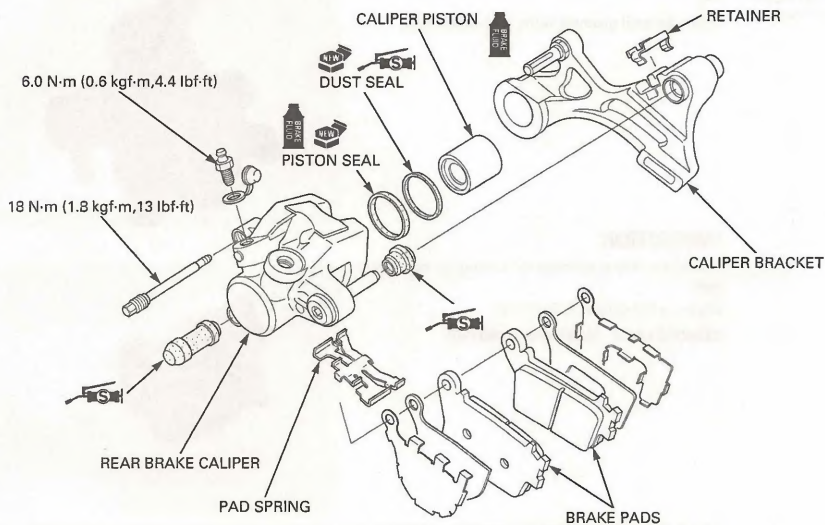

Coat a new piston seal with clean brake fluid.

Coat a new dust seal with silicone grease.

Install the piston seal and dust seal into the groove of the caliper body.

Coat the caliper piston with clean brake fluid and install it into the caliper cylinder with its open end toward the pad.


Install the retainer onto the caliper bracket.

Install the pad spring into the caliper body.

If boot is hard or deteriorated, replace it with a new one.

Apply silicone grease to the inside of the boot and its sliding surface.

Install the caliper bracket to the brake caliper.

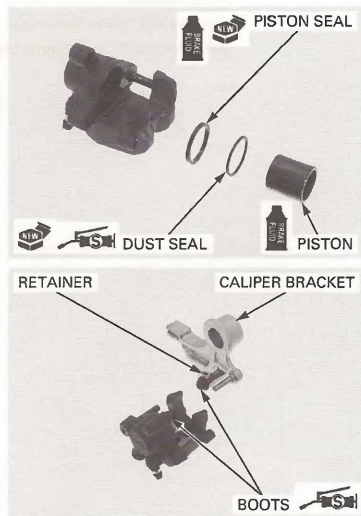

INSTALLATION

Install the rear wheel (page 15-12).

Install the brake hose eyelet joint to the caliper body with new sealing washers and oil bolt. Push the brake hose eyelet joint to the stopper on the caliper, then tighten the oil bolt to the specified torque.

TORQUE: 34 N·m (3.5 kgf·m, 25 lbf·ft)

Install the rear brake pads.



Fill and bleed the hydraulic system (page 16-7).



17. BATTERY/CHARGING SYSTEM

SYSTEM DIAGRAM	17-2	CHARGING SYSTEM INSPECTION	17-7
SERVICE INFORMATION	17-3	ALTERNATOR CHARGING COIL	17-8
TROUBLESHOOTING	17-5	REGULATOR/RECTIFIER	17-8
BATTERY	17-6		

BATTERY/CHARGING SYSTEM SYSTEM DIAGRAM

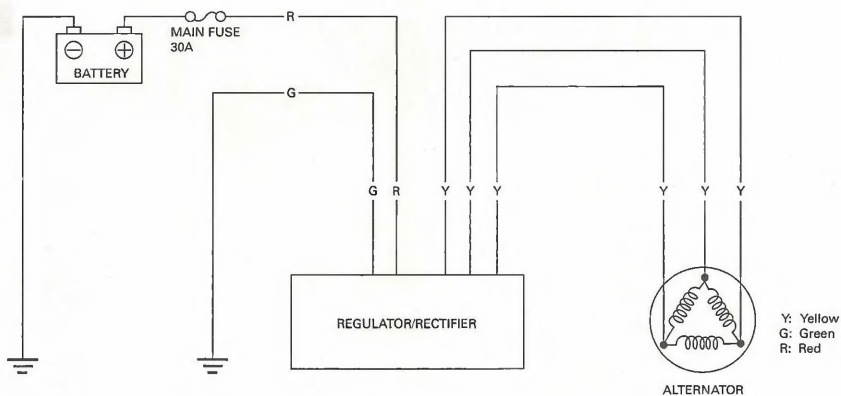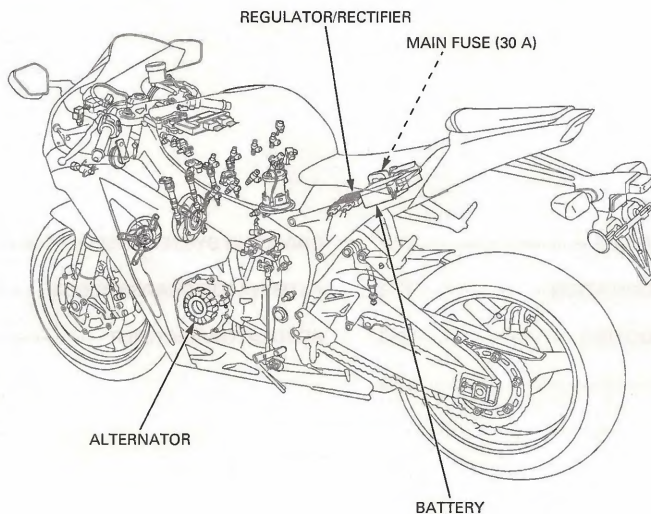

SERVICE INFORMATION

GENERAL

WARNING

- The battery gives off explosive gases; keep sparks, flames and cigarettes away. Provide adequate ventilation when charging.
- The battery contains sulfuric acid (electrolyte). Contact with skin or eyes may cause severe burns. Wear protective clothing and a face shield.
 - If electrolyte gets on your skin, flush with water.
 - If electrolyte gets in your eyes, flush with water for at least 15 minutes and call a physician immediately.
- Electrolyte is poisonous.
 - If swallowed, drink large quantities of water or milk and call your local Poison Control Center or a call a physician immediately.

NOTICE

- *Always turn OFF the ignition switch before disconnecting any electrical component.*
- *Some electrical components may be damaged if terminals or connectors are connected or disconnected while the ignition switch is ON and current is present.*
- For extended storage, remove the battery, give it a full charge, and store it in a cool, dry space. For maximum service life, charge the stored battery every two weeks.
- For a battery remaining in a stored motorcycle, disconnect the negative battery cable from the battery terminal.
- The maintenance free battery must be replaced when it reaches the end of its service life.
- The battery can be damaged if overcharged or undercharged, or if left to discharge for a long period. These same conditions contribute to shortening the "life span" of the battery. Even under normal use, the performance of the battery deteriorates after 2-3 years.
- Battery voltage may recover after battery charging, but under heavy load, battery voltage will drop quickly and eventually die out. For this reason, the charging system is often suspected as the problem. Battery overcharge often results from problems in the battery itself, which may appear to be an overcharging symptom. If one of the battery cells is shorted and battery voltage does not increase, the regulator/rectifier supplies excess voltage to the battery. Under these conditions, the electrolyte level goes down quickly.
- Before troubleshooting the charging system, check for proper use and maintenance of the battery. Check if the battery is frequently under heavy load, such as having the headlight and taillight on for long periods of time without riding the motorcycle.
- The battery will self-discharge when the motorcycle is not in use. For this reason, charge the battery every two weeks to prevent sulfation from occurring.
- When checking the charging system, always follow the steps in the troubleshooting flow chart (page 17-5).
- For battery charging, do not exceed the charging current and time specified on the battery. Use of excessive current or charging time may damage the battery.
- For alternator removal (page 11-4).

BATTERY CHARGING

- Turn power ON/OFF at the charger, not at the battery terminal.
- For battery charging, do not exceed the charging current and time specified on the battery. Using excessive current or extending the charging time may damage the battery.
- Quick charging should only be done in an emergency; slow charging is preferred.

BATTERY TESTING

Refer to the instruction in the Operation Manual for the recommended battery tester for details about battery testing. The recommended battery tester puts a "load" on the battery so that the actual battery condition can be measured.

Recommended battery tester: Micro 404XL (U.S.A. only), BM-210 or equivalent

BATTERY/CHARGING SYSTEM

SPECIFICATIONS


ITEM			SPECIFICATIONS
Battery	Capacity		12 V – 6 Ah
	Current leakage		2.0 mA max.
	Voltage (at 20°C/68°F)	Fully charged	13.0 – 13.2 V
		Needs charging	Below 12.4 V
	Charging current	Normal	0.6 A/5 – 10 h
		Quick	3 A/1 h
Alternator	Capacity		0.399 kW/5000 min ⁻¹ (rpm)
	Charging coil resistance (at 20°C/68°F)		0.1 – 1.0 Ω

TOOLS

Motorcycle battery analyzer
Micro 404XL (U.S.A. only)



Christie battery charger
MC1012/2T (U.S.A. only)

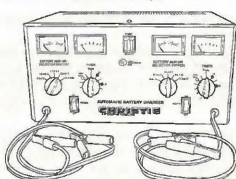

TROUBLESHOOTING

BATTERY IS DAMAGED OR WEAK

1. BATTERY TEST

Remove the battery (page 17-6).

Check the battery condition using the recommended battery tester.

Recommended battery tester: BM210 or BATTERY MATE or equivalent

Is the battery in good condition?

NO – Faulty battery

YES – GO TO STEP 2.

2. CURRENT LEAKAGE TEST

Install the battery (page 17-6).

Check the battery current leakage test (page 17-7).

Is the current leakage below 2.0 mA?

YES – GO TO STEP 4.

NO – GO TO STEP 3.

3. CURRENT LEAKAGE TEST WITHOUT REGULATOR/RECTIFIER CONNECTED

Disconnect the regulator/rectifier connector and recheck the battery current leakage.

Is the current leakage below 2.0 mA?

YES – Faulty regulator/rectifier

NO – • Shorted wire harness
• Faulty ignition switch

4. ALTERNATOR CHARGING COIL INSPECTION

Check the alternator charging coil (page 17-8).

Is the alternator charging coil resistance within 0.1 – 1.0 Ω (20°C/68°F)?

NO – Faulty charging coil

YES – GO TO STEP 5.

5. CHARGING VOLTAGE INSPECTION

Measure and record the battery voltage using a digital multimeter (page 17-6).

Start the engine.

Measure the charging voltage (page 17-7).

Compare the measurement to result of the following calculation.

Standard:

Measured BV < Measured CV < 15.5 V

- BV = Battery Voltage (page 17-6)
- CV = Charging Voltage (page 17-7)

Is the measured charging voltage within the standard voltage?

YES – Faulty battery

NO – GO TO STEP 6.

6. REGULATOR/RECTIFIER SYSTEM INSPECTION

Check the voltage and resistance at the regulator/rectifier connector (page 17-8).

Are the results of checked voltage and resistance correct?

YES – Faulty regulator/rectifier

NO – • Open circuit in related wire
• Loose or poor contacts of related terminal

BATTERY

REMOVAL/INSTALLATION

Always turn the ignition switch OFF before removing the battery.


Connect the positive terminal first and then the negative cable.

Remove the seat (page 3-6).

Disconnect the negative (-) cable and then the positive (+) cable.

Remove the battery holder band and battery.

Install the battery in the reverse order of removal.

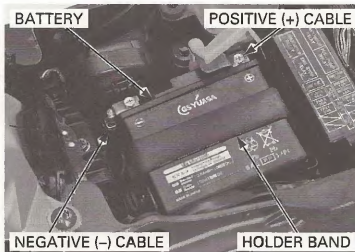

VOLTAGE INSPECTION

Measure the battery voltage using a digital multimeter.

TOOL:


Fully charged: 13.0 – 13.2 V

Under charged: Below 12.4 V

TOOL:

Battery tester

Micro 404XL (U.S.A. only),
BM-210 or equivalent

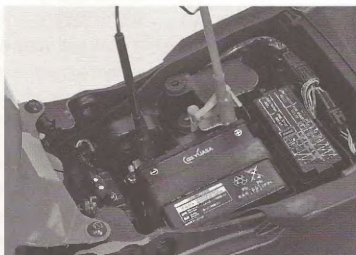

BATTERY TESTING

Remove the battery (page 17-6).

Refer to the instructions that are appropriate to the battery testing equipment available to you.

TOOL:

Battery tester

Micro 404XL (U.S.A. only),
BM210 or equivalent

BATTERY CHARGING (U.S.A. only)

Remove the battery (page 17-6).

Refer to the instructions that are appropriate to the battery charging equipment available to you.

TOOL:

Christie battery charger MC1012/2T (U.S.A. only)

CHARGING SYSTEM INSPECTION

CURRENT LEAKAGE INSPECTION

Remove the seat (page 3-6).

Turn the ignition switch OFF and disconnect the battery negative (-) cable from the battery.

Connect the ammeter (+) probe to the negative (-) cable and ammeter (-) probe to the battery (-) terminal.


With the ignition switch OFF, check for current leakage.

- When measuring current using a tester, set it to a high range, and then bring the range down to an appropriate level. Current flow higher than the range selected may blow out the fuse in the tester.
- While measuring current, do not turn the ignition switch ON. A sudden surge of current may blow out the fuse in the tester.

SPECIFIED CURRENT LEAKAGE: 2.0 mA max.

If current leakage exceeds the specified value, a short circuit is likely.

Locate the shorted circuit by disconnecting connections one by one and measuring the current.

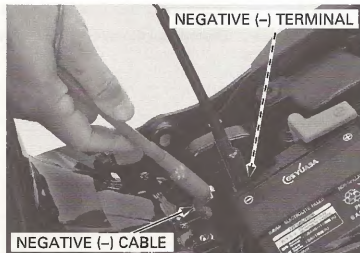

CHARGING VOLTAGE INSPECTION

Be sure the battery is in good condition before performing this test.

Warm the engine to normal operating temperature. Stop the engine, and connect the multimeter between the positive and negative terminals of the battery.

- To prevent a short, make absolutely certain which are the positive and negative terminals or cables.

Restart the engine.

With the headlight on Hi beam, measure the voltage on the multimeter with the engine running at 5,000 min⁻¹ (rpm).


Standard:

Measured BV < Measured CV < 15.5 V
at 5,000 min⁻¹ (rpm)

BV = Battery Voltage (page 17-6)

CV = Charging Voltage

Do not disconnect the battery or any cable in the charging system without first switching OFF the ignition switch. Failure to follow this precaution can damage the tester or electrical components.

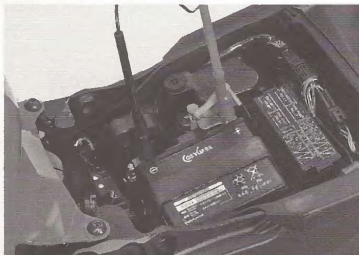

ALTERNATOR CHARGING COIL

INSPECTION

Remove the fuel tank (page 6-51).

Disconnect the alternator 3P (Black) connector.

It is not necessary to remove the stator coil to conduct this test.

Measure the resistance between all Yellow wire terminals.



Standard: 0.1 – 1.0 Ω (at 20°C/68°F)

Check for continuity between all Yellow wire terminals and ground.

There should be no continuity.

If readings are far beyond the standard, or if any wire has continuity to ground, replace the stator.

- For alternator removal (page 11-4).

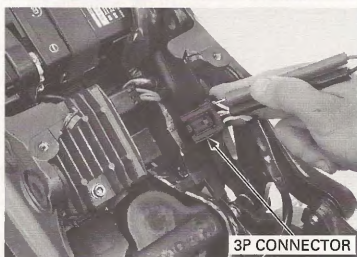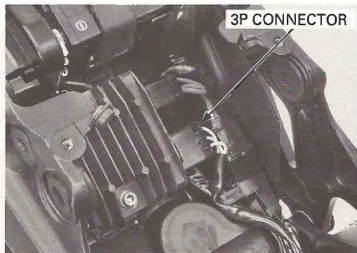

REGULATOR/RECTIFIER

SYSTEM INSPECTION

Remove the fuel tank (page 6-51).


Disconnect the regulator/rectifier 2P (Black) connector and alternator 3P (Black) connector, and check it for loose contact or corroded terminals.

It is not necessary to remove the stator coil to perform this test.

If the regulated voltage reading (page 17-3) is out of the specification, measure the voltage between connector terminals (wire side) as follows:

ITEM	TERMINAL	SPECIFICATION
Battery charging line	Red (+) and ground (-)	Battery voltage should appear
Charging coil line	Yellow and Yellow	0.1 – 1.0 Ω at (20°C/68°F)
Ground line	Green and ground	Continuity should exist

If all components of the charging system are normal and there are no loose connections at the regulator/rectifier connectors, replace the regulator/rectifier unit.

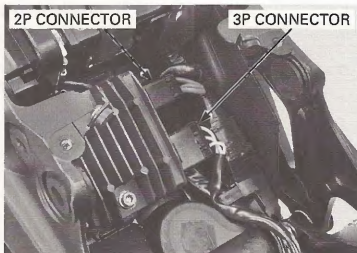


REMOVAL/INSTALLATION

Remove the fuel tank (page 6-51).

Disconnect the alternator 3P (Black) connector.
Disconnect the regulator/rectifier 2P (Black) connector.

Remove the bolts and regulator/rectifier unit.

Installation is in the reverse order of removal.


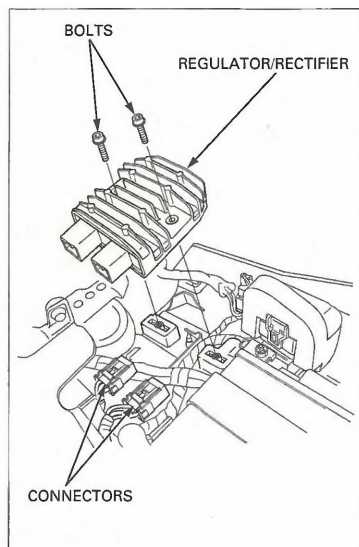


18. IGNITION SYSTEM

SYSTEM DIAGRAM	18-2	IGNITION SYSTEM INSPECTION	18-5
SERVICE INFORMATION	18-3	IGNITION TIMING	18-7
TROUBLESHOOTING	18-4		

IGNITION SYSTEM

SYSTEM DIAGRAM

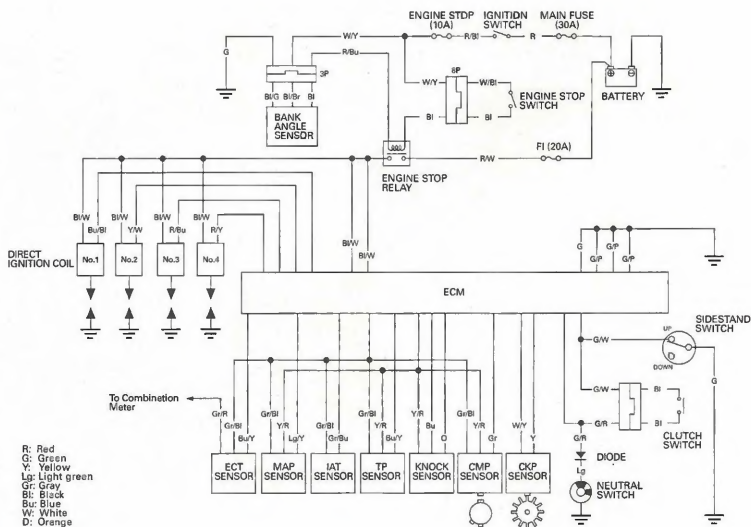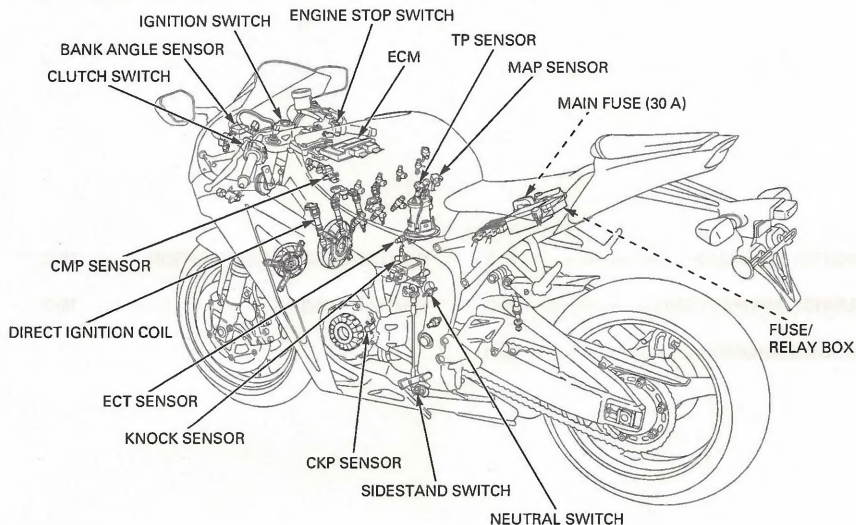

SERVICE INFORMATION

GENERAL

NOTICE

- The ECM may be damaged if dropped. Also if the connector is disconnected when current is flowing, the change in voltage may damage the module. Always turn off the ignition switch before servicing.
- Use spark plug of the correct heat range. Using spark plug with an incorrect heat range can damage the engine.
- Some electrical components may be damaged if terminals or connectors are connected or disconnected while the ignition switch is ON and current is present.
- When servicing the ignition system, always follow the steps in the troubleshooting sequence (page 18-4).
- This motorcycle's ICM is built into the ECM.
- The ignition timing does not normally need to be adjusted since the ECM is factory preset.
- A faulty ignition system is often related to poor connections. Check those connections before proceeding. Make sure the battery is adequately charged. Using the starter motor with a weak battery results in a slower engine cranking speed as well as no spark at the spark plug.
- This motorcycle features direct ignition coils, where the ignition coil and spark plug cap are integrated. There are four direct ignition coils.
- For PGM-FI troubleshooting information (page 6-12).
- The following components information
 - Ignition switch (page 20-16)
 - Sidestand switch (page 20-20)
 - Clutch switch (page 20-19)
 - Neutral switch (page 20-20)
 - Engine stop switch (page 20-17)
 - Diode (page 19-16)
 - ECM (page 6-74)

SPECIFICATIONS

ITEM		SPECIFICATIONS
Spark plug (Iridium)	NGK	IMR9E-9HES
	DENSO	VUH27ES
Spark plug gap		0.80 – 0.90 mm (0.031 – 0.035 in)
CKP sensor peak voltage		0.7 V minimum
Ignition timing ("F" mark)		3.3° BTDC at idle

TORQUE VALUE


Timing hole cap

18 N·m (1.8 kgf-m, 13 lbf-ft)

Apply grease to the threads.

TOOLS

Peak voltage adaptor
07HGJ-0020100 (Not available in
U.S.A.)

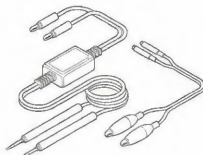


with commercially available digital
multimeter (impedance 10 MΩ/DCV
minimum)

IgnitionMate peak voltage tester
MTP07-0286 (U.S.A. only)



Test probe
07ZAJ-RDJA110

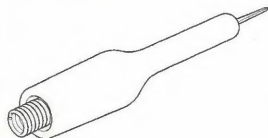

TROUBLESHOOTING

- Inspect the following before diagnosing the system.
 - Faulty spark plug
 - Loose direct ignition coil and spark plug connection
 - Loose direct ignition coil connectors
 - Water got into the direct ignition coil (shorting the ignition coil secondary voltage)
- If there is no spark at one cylinder, temporarily exchange the direct ignition coil with the other good one and perform the spark test. If there is spark, the original direct ignition coil is faulty.
- "Initial voltage" of the ignition primary coil is battery voltage with the ignition switch turned ON and engine stop switch turned "C" (The engine is not cranked by the starter motor).

No spark at all plugs

Unusual condition		Probable cause (Check in numerical order)
Ignition coil primary voltage	No initial voltage with the ignition switch ON and engine stop switch turned "C" (other electrical components are normal).	1. Faulty engine stop switch 2. Loose or poor connect of the direct ignition coil primary wire terminal, or an open circuit in primary coil (Check at the ECM connector) 3. Faulty ECM (in case when the initial voltage is normal while disconnecting ECM connector)
	Initial voltage is normal, but it drops down to 2 – 4 V while cranking the engine.	1. Undercharged battery 2. An open circuit or loose connection in ECM Green wire 3. An open circuit or loose connection in Blue/black, Yellow/white, Red/blue and Red/yellow wires between the direct ignition coils and ECM 4. Faulty sidestand switch, clutch switch, neutral switch or diode. 5. An open circuit or loose connection in No. 4 related circuit wires – Clutch switch line: Green/white and Green/red wires – Sidestand switch line: Green/white and Green wires – Neutral switch line: Light green wire 6. Faulty CKP sensor (measure the peak voltage) 7. Faulty ECM (in case when above No. 1 – 6 are normal) 8. Faulty direct ignition coil
	Initial voltage is normal, but does not spark.	1. Faulty spark plug or leaking ignition coil secondary current ampere. 2. Faulty direct ignition coil (s) 3. Faulty CKP sensor 4. Faulty CMP sensor
CKP sensor	Peak voltage is lower than standard value.	1. The multimeter impedance is too low; below 10 M Ω /DCV. 2. Cranking speed is too low (battery under charged). 3. The sampling timing of the tester and measured pulse were not synchronized (system is normal if measured voltage is over the standard voltage at least once). 4. Faulty CKP sensor (in case when above No. 1 – 3 are normal)
	No peak voltage	1. Faulty peak voltage adaptor 2. Faulty CKP sensor

IGNITION SYSTEM INSPECTION


- If there is no spark at any plug, check all connections for loose or poor contact before measuring each peak voltage.
- Use the recommended digital multimeter or commercially available digital multimeter with an impedance of 10 M Ω /DCV minimum.
- The display value differs depending upon the internal impedance of the multimeter.
- If the Imrie diagnostic tester (model 625) is used, follow the manufacturer's instruction.

Connect the peak voltage tester or peak voltage adaptor to the digital multimeter.

TOOL:

IgnitionMate peak voltage tester MTP07-0286
(U.S.A. only) or
Peak voltage adaptor 07HGJ-0020100
(Not available in
U.S.A.)

with commercially available digital multimeter
(impedance 10 M Ω /DCV minimum)

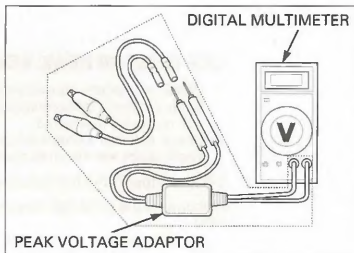


IGNITION COIL INITIAL VOLTAGE

- Check all system connections before inspection. If the system is disconnected, incorrect initial voltage might be measured.
- Check cylinder compression and check that the spark plugs are installed correctly.

Disconnect the direct ignition coils from the spark plugs (page 4-10).

Connect the following:


- ECM 33P connectors
- Secondary injector 2P (Gray) connectors
- Ignition switch 2P (Brown) connector
- Right handlebar switch 8P (White) connector
- Do not connect the fuel pump 2P (Brown) connector.

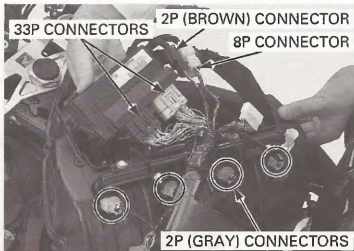

Connect the direct ignition coil 2P (White) connectors to the direct ignition coil.

Shift the transmission into neutral.

Connect a known-good spark plug to the direct ignition coil and ground the spark plug to the cylinder head as done in a spark test.

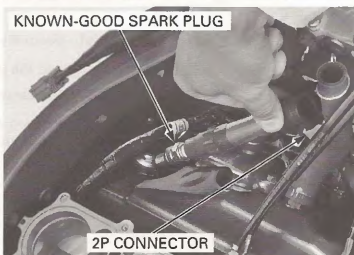

IGNITION SYSTEM

Disconnect the direct ignition coil 2P (White) connector.


Turn the ignition switch ON and engine stop switch "Q".

Measure the initial voltage.

Connection: Black/white (+) – Ground (–)

Standard: Battery voltage

2P CONNECTOR
(Wire side/female terminals)

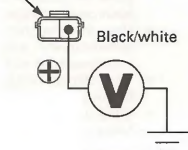

CKP SENSOR PEAK VOLTAGE

- Check all system connections before inspection. If the system is disconnected, incorrect peak voltage might be measured.
- Check cylinder compression and check that the spark plugs are installed correctly.

Lift and support the fuel tank (page 4-5).

Disconnect the ECM 33P (Gray) connector from the ECM.



Connect the peak voltage tester or peak voltage adaptor probes to the connector terminal of the wire side.

TOOLS:

IgnitionMate peak voltage tester MTP07-0286
(U.S.A. only) or
Peak voltage adaptor 07HGJ-0020100
(Not available in
U.S.A.)

with commercially available digital multimeter
(impedance 10 M Ω /DCV minimum)

Test probe 07ZAJ-RDJA110


Connection: B22 (+) – Ground (–)

Crank the engine and read the peak voltage.

PEAK VOLTAGE: 0.7 V minimum

If the peak voltage measured at ECM connector is abnormal, measure the peak voltage at the CKP sensor connector.

33P (GRAY) CONNECTOR
(Wire side/female terminals)

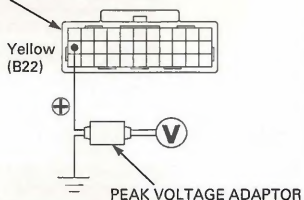

Disconnect the CKP sensor 2P (Red) connector and connect the tester probes to the terminal (Yellow and White/yellow).

In the same manner as at the ECM connector, measure the peak voltage and compare it to the voltage measured at the ECM connector.


- If the peak voltage measured at the ECM is abnormal and the one measured at the CKP sensor is normal, check the 2P (Red) connector for loose connection and the wire harness for an open circuit or loose connection.
 - If both peak voltage measured are abnormal, check each item in the troubleshooting chart (page 18-4).
- If all items are normal, the CKP sensor is faulty.
For CKP sensor replacement (page 11-5).



IGNITION TIMING

Warm up the engine.

Stop the engine and remove the timing hole cap.

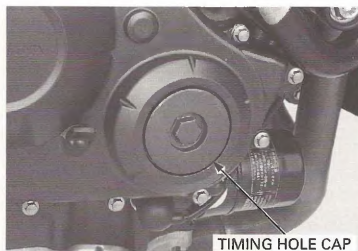


Read the instructions for timing light operation.


Connect the timing light to the No.1 direct ignition coil connector wire.

Start the engine, let it idle and check the ignition timing.

IDLE SPEED: $1,200 \pm 100 \text{ min}^{-1} (\text{rpm})$

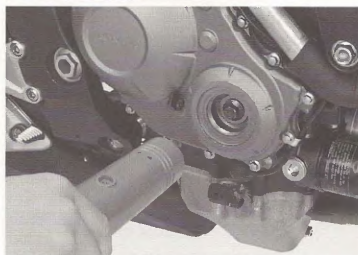

The ignition timing is correct if the index mark on the right crankcase cover aligns the "F" mark on the CKP sensor rotor as shown.

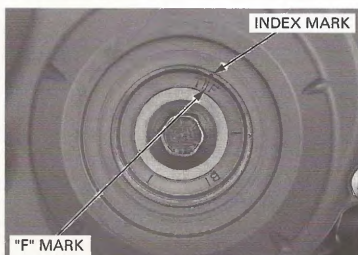


IGNITION SYSTEM

Apply oil to a new O-ring and install it to the timing hole cap.

Apply grease to the timing hole cap threads and tighten the timing hole cap to the specified torque.



TORQUE: 18 N·m (1.8 kgf·m, 13 lbf·ft)

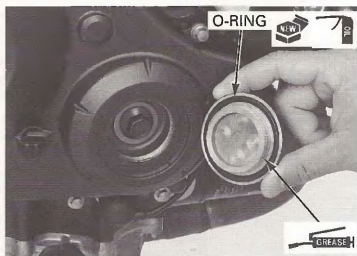

19. ELECTRIC STARTER

SYSTEM DIAGRAM.....	19-2	STARTER MOTOR.....	19-6
SERVICE INFORMATION	19-3	STARTER RELAY SWITCH.....	19-14
TROUBLESHOOTING	19-4	DIODE.....	19-16

ELECTRIC STARTER SYSTEM DIAGRAM

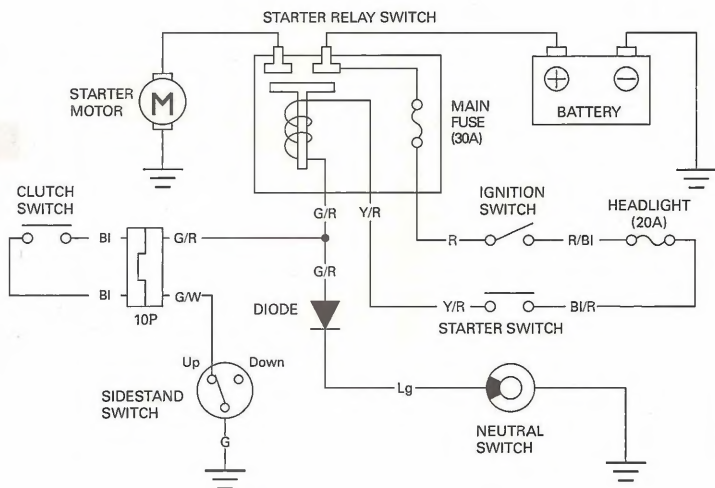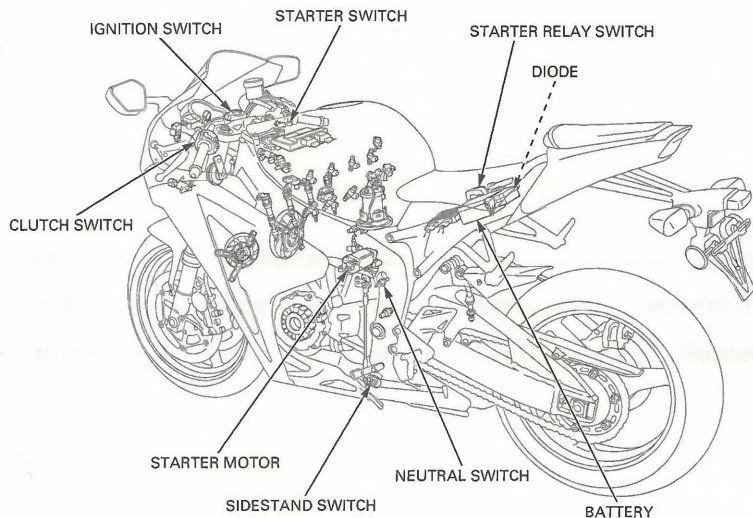

R: Red
W: White
Y: Yellow
G: Green
Bl: Black
Lg: Light green

SERVICE INFORMATION

GENERAL

NOTICE

If current is kept flowing through the starter motor to turn it while the engine is not cranking over, the starter motor may be damaged.

- Always turn the ignition switch OFF before servicing the starter motor. The motor could suddenly start, causing serious injury.
- The starter motor can be serviced with the engine in the frame.
- When checking the starter system, always follow the steps in the troubleshooting flow chart (page 19-4).
- A weak battery may be unable to turn the starter motor quickly enough, or supply adequate ignition current.
- For the starter clutch servicing (page 10-23).
- Refer to the following components information.
 - Ignition switch (page 20-16)
 - Starter switch (page 20-17)
 - Neutral switch (page 20-20)
 - Sidestand switch (page 20-20)
 - Clutch switch (page 20-19)

SPECIFICATION

ITEM	STANDARD	Unit: mm (in)
		SERVICE LIMIT
Starter motor brush length	12.0 (0.47)	6.5 (0.26)

TORQUE VALUES

Starter motor terminal nut	12 N·m (1.2 kgf·m, 9 lbf·ft)	ALOC bolt; replace with a new one.
Starter motor setting bolt	4.0 N·m (0.4 kgf·m, 3.0 lbf·ft)	
Negative brush mounting screw	3.7 N·m (0.4 kgf·m, 2.7 lbf·ft)	

TROUBLESHOOTING

Starter motor does not turn

1. Fuse Inspection

Check for blown main fuse (30 A) or sub fuse (HEADLIGHT 20 A).

Is the fuse blown?

YES – Replace the fuse.

NO – GO TO STEP 2.

2. Battery Inspection

Make sure the battery is fully charged and in good condition.

Is the battery in good condition?

YES – GO TO STEP 3.

NO – Replace the battery.

3. Starter Relay Switch Operation

Check the starter relay switch operation.

You should hear the relay "CLICK" when the starter switch button is depressed.

Is there a "CLICK"?

YES – GO TO STEP 4.

NO – GO TO STEP 5.

4. Starter Motor Inspection

Apply battery voltage to the starter motor directly and check the operation.

Does the starter motor turn?

YES –

- Poorly connected starter motor cable
- Faulty starter relay switch (page 19-14)

NO – Faulty starter motor (page 19-6)

5. Relay Coil Ground Wire Lines Inspection

Disconnect the starter relay switch connector, and check the relay coil ground wire lines as below for continuity:

1. Green/red terminal – diode – neutral switch line (with the transmission in neutral and clutch lever released).
2. Green/red terminal – clutch switch – sidestand switch line (in any gear except neutral, and with the clutch lever pulled in and sidestand up).

Is there continuity?

NO –

- Faulty neutral switch (page 20-20)
- Faulty diode (page 19-16)
- Faulty clutch switch (page 20-19)
- Faulty sidestand switch (page 20-20)
- Loose or poor contact connector
- Open circuit in wire harness

YES – GO TO STEP 6.

6. Starter Relay Voltage Inspection

With the ignition switch ON and starter switch pushed, check for continuity at the starter relay switch connector (between Red and Yellow/red).

Is the starter relay switch operation correct?

NO –

- Faulty ignition switch (page 20-16)
- Faulty starter switch (page 20-17)
- Loose or poor contact connector
- Open circuit in wire harness

YES – GO TO STEP 7.

7. Starter Relay Switch Continuity Inspection

Check the function of the starter relay switch (page 19-14).

Does the starter relay switch function properly?

NO – Faulty starter relay switch

YES – Loose or poor contact starter relay switch connector

The starter motor turns when the transmission is in neutral, but does not turn with the transmission in any position except neutral, with the sidestand up and clutch lever pulled in.

1. Clutch Switch Inspection

Check the clutch switch operation.

Is the clutch switch operation normal?

NO – Faulty clutch switch

YES – GO TO STEP 2.

2. Sidestand Switch Inspection

Check the sidestand switch operation.

Is the sidestand switch operation normal?

NO – Faulty sidestand switch (page 20-20)

YES – • Open circuit in wire harness
• Loose or poor contact connector

Starter motor turns engine slowly

- Low battery voltage
- Poorly connected battery cables
- Poorly connected starter motor cable
- Faulty starter motor

Starter motor turns, but engine does not turn

- Starter motor is running backwards
 - Case assembled improperly
 - Terminals connected improperly
- Faulty starter clutch
- Damaged or faulty starter drive gear, driven gear, idle gear and/or reduction gear

Starter relay switch "CLICK", but engine does not turn over

- Crankshaft does not turn due to engine problems

STARTER MOTOR

REMOVAL


- With the ignition switch OFF, disconnect the battery negative (-) cable before servicing the starter motor (page 17-6).

Remove the left middle cowl (page 3-10).


Open the rubber cap, then remove the terminal nut and starter motor cable from the starter motor.

Remove the starter motor mounting bolts and disconnect the battery negative (-) cable.

Remove the starter motor from the crankcase.

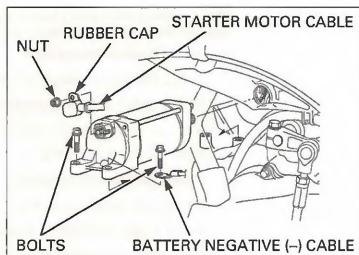


Remove the O-ring from the starter motor.

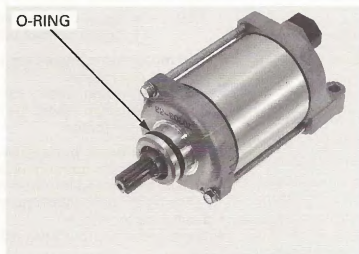


DISASSEMBLY/INSPECTION


Remove the bolts.

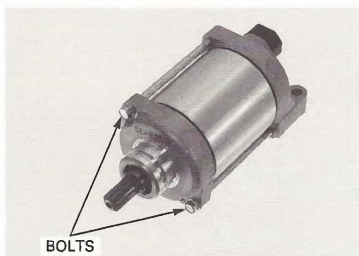

Remove the front cover and seal ring.

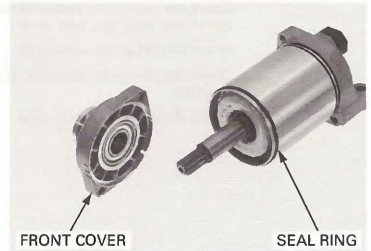


Remove the starter motor case, seal ring and armature from the rear cover.

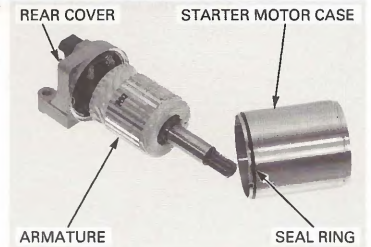

Remove the brushes and springs from the brush holder.



Check for continuity between the starter motor cable terminal and positive brushes. There should be continuity.

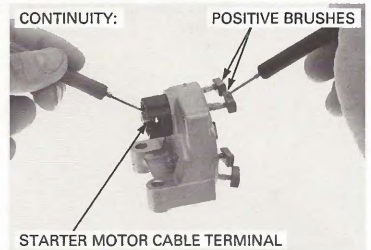

ELECTRIC STARTER

Check for continuity between positive brushes (terminal bolt side) and rear cover.


There should be no continuity.

Check for continuity between positive and negative brushes.

There should be no continuity.


NO CONTINUITY:

NEGATIVE BRUSHES

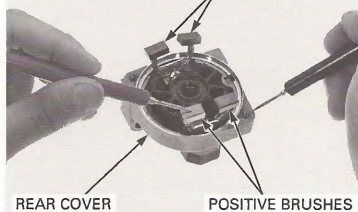


Remove the screw and negative brushes.

NEGATIVE BRUSHES

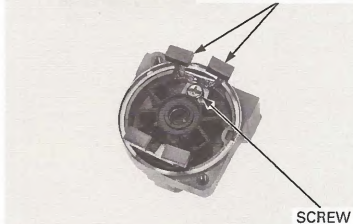

Remove the terminal nut.


NUT

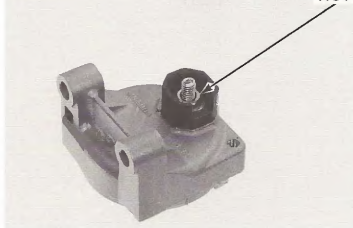


Remove the washer, insulator, terminal stopper and O-ring.

O-RING

INSULATOR

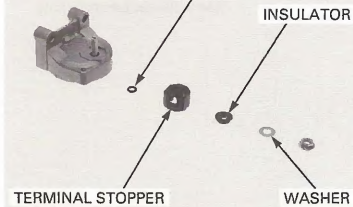


Remove the terminal bolt, positive brushes and brush holder.

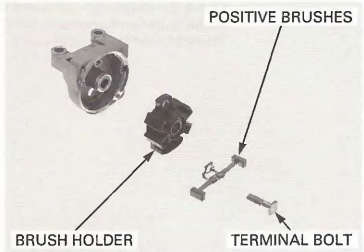

Measure each brush length.

SERVICE LIMIT: 6.5 mm (0.26 in)

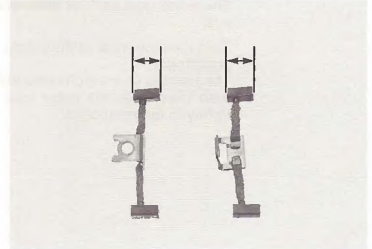


Check the commutator for damage or abnormal wear.


Do not use emery or sand paper on the commutator.

Check the commutator bar for discoloration. Clean the metallic debris off between commutator bars.

Replace the armature with a new one if necessary.

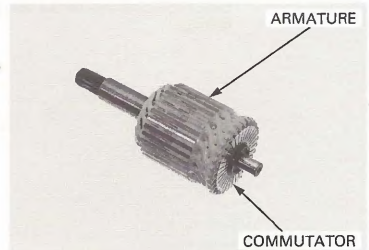


Check for continuity between pairs of commutator bars. There should be continuity.

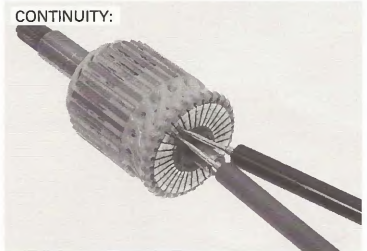

ELECTRIC STARTER


Check for continuity between each individual commutator bar and armature shaft. There should be no continuity.

NO CONTINUITY:

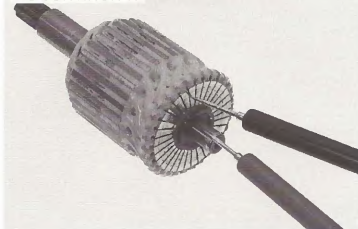


Check the dust seal for deterioration, wear or damage.


Turn the inner race of the starter motor bearing with your finger. The bearing should turn smoothly and quietly. Also check that the outer race of the bearing fits tightly in the front cover.

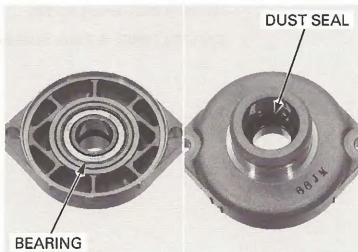


Check the bushing of the rear cover for wear or damage.

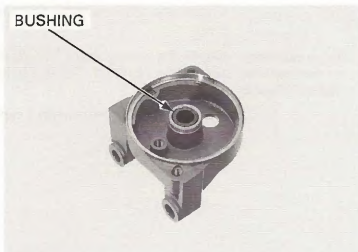


ASSEMBLY

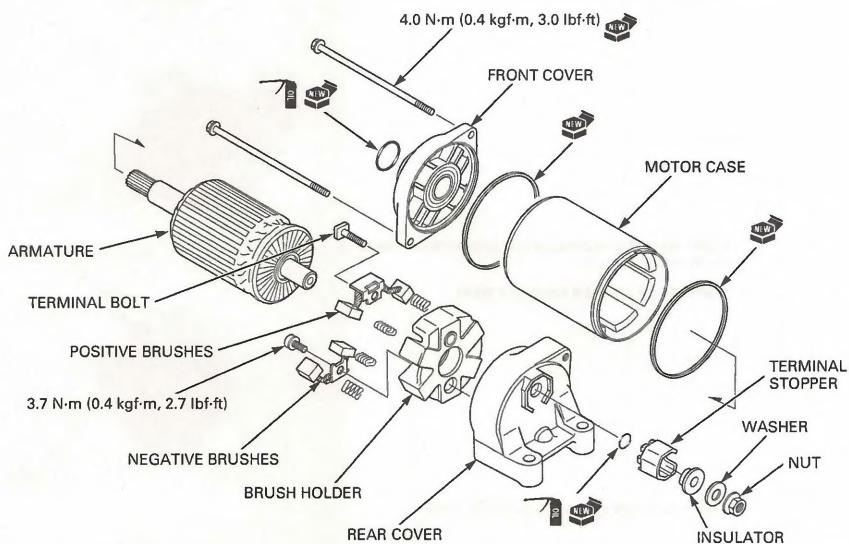

Install the brush holder, positive brushes and terminal bolt.

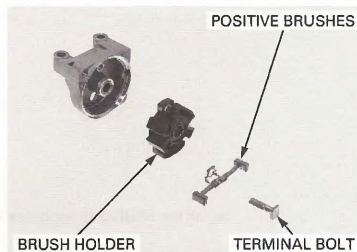


Install a new O-ring, terminal stopper, insulator and washer.

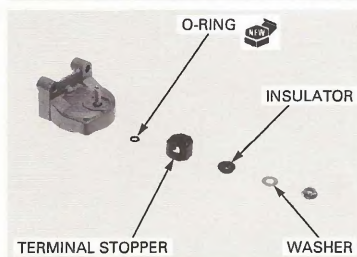


ELECTRIC STARTER

Tighten the terminal nut securely.

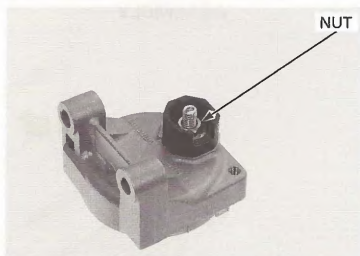


Install the negative brushes and tighten the screw to the specified torque.


TORQUE: 3.7 N-m (0.4 kgf-m, 2.7 lbf-ft)

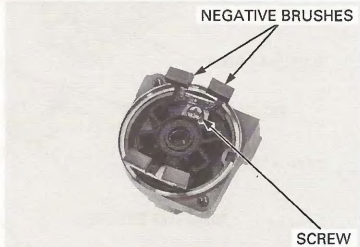


Install the brush springs to the brush holder.

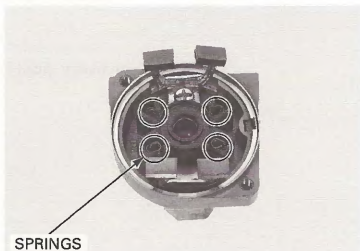

Install the brushes to the brush holder.

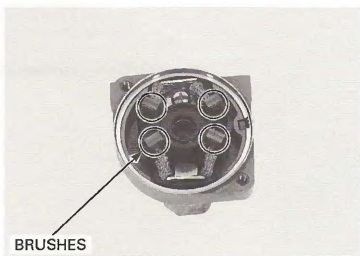


Install the armature to the rear cover.

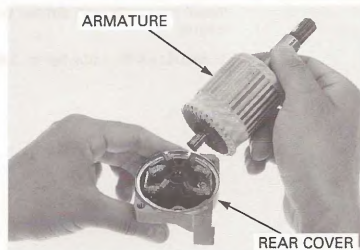

Install a new seal ring to the starter motor case.
Install the starter motor case with its groove with the tab on the rear cover.

NOTICE


The coil may be damaged if the magnet pulls the armature against the case.

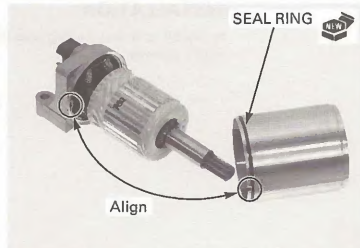


Install a new seal ring to the starter motor case.
Install the front cover to the starter motor case.

NOTE:

When installing the front cover, take care to prevent damaging the oil seal lip with the armature shaft.

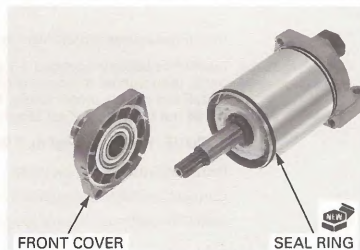


Align the index marks on the front cover, starter motor case and rear cover.

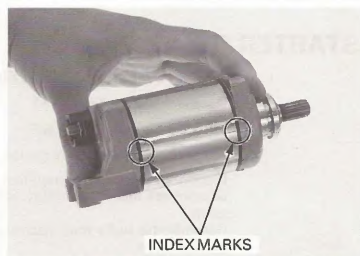

ELECTRIC STARTER

Install new bolts and tighten them to the specified torque.

TORQUE: 4.0 N·m (0.4 kgf·m, 3.0 lbf·ft)

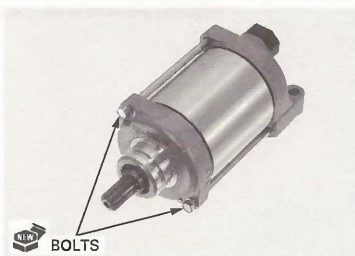

INSTALLATION

Apply oil to a new O-ring and install it to the starter motor groove.



Install the starter motor into the crankcase.

Correctly route the wires (page 1-20).


Install the battery negative (-) cable and mounting bolts, then tighten the bolts securely. Install the starter motor cable, then tighten the terminal nut to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

Install the rubber cap securely.

Connect the battery negative (-) cable (page 17-6).

Install the left middle cowl (page 3-10).

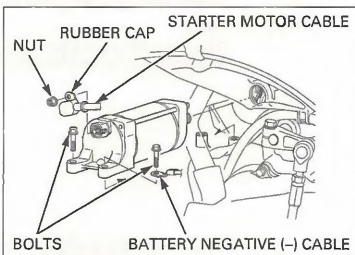

STARTER RELAY SWITCH

REMOVAL/INSTALLATION

Remove the seat (page 3-6).

Turn the ignition switch OFF.


Remove the starter relay switch cover.

Disconnect the battery negative (-) cable. Disconnect the starter relay switch 4P (Black) connector.

Remove the bolts and disconnect the starter relay switch wires.

Remove the starter relay switch.

Installation is in the reverse order of removal.

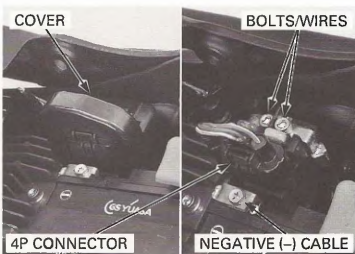

OPERATION INSPECTION


Remove the seat (page 3-6).

Shift the transmission into neutral.

Turn the ignition switch ON and press the starter switch button.

The coil is normal if the starter relay switch clicks.

If you don't hear the switch "CLICK", inspect the relay switch using the procedure below.

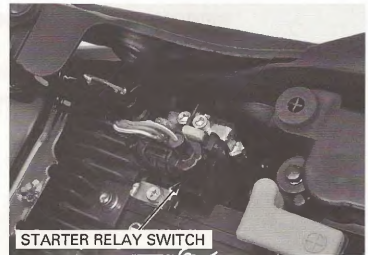


GROUND LINE INSPECTION

Disconnect the starter relay switch 4P (Black) connector.

Check for continuity between the Green/red terminal (ground line) and ground.

If there is continuity when the transmission is in neutral and clutch lever released or when the clutch lever pulled and the sidestand up, the ground circuit is normal (In neutral, there is a slight resistance due to the diode).

4P CONNECTOR
(Wire side/female terminals)

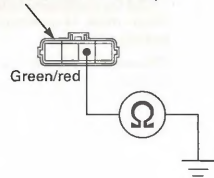


INPUT LINE INSPECTION

Check for continuity between the Red terminal and Yellow/red terminal.

If there is continuity when the ignition switch ON and starter switch pushed, the input line is normal.

4P CONNECTOR
(Wire side/female terminals)

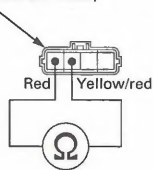


CONTINUITY INSPECTION

Remove the starter relay switch (page 19-14).

Connect an ohmmeter to the starter relay switch large terminals.

Connect a fully charged 12 V battery positive (+) wire to the starter relay switch Yellow/red terminal and negative (-) wire to the Green/red terminal.

There should be continuity between the large terminals while the battery is connected, and no continuity when the battery is disconnected.

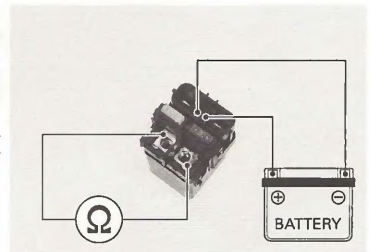


DIODE

REMOVAL/INSTALLATION

Remove the seat (page 3-6).

Open the fuse/relay box and remove the diode.


Installation is in the reverse order of removal.

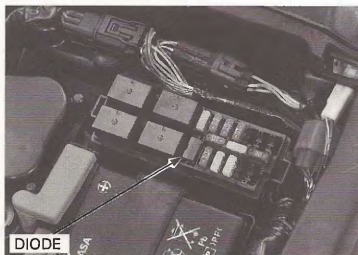

INSPECTION

Check for continuity between the diode terminals. When there is continuity, a small resistance value will register.

If there is continuity, in one direction, the diode is normal.

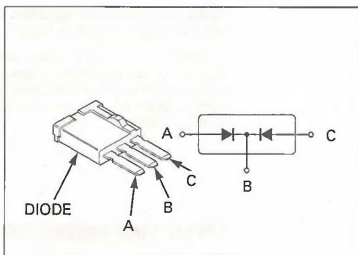


20. LIGHTS/METERS/SWITCHES

SYSTEM LOCATION.....	20-2	EOP SWITCH	20-14
SERVICE INFORMATION	20-3	FUEL RESERVE SENSOR	20-15
TROUBLESHOOTING	20-5	IGNITION SWITCH	20-16
HEADLIGHT.....	20-6	HANDLEBAR SWITCHES.....	20-17
TURN SIGNAL LIGHT	20-6	BRAKE LIGHT SWITCH	20-18
BRAKE/TAIL LIGHT	20-7	CLUTCH SWITCH	20-19
LICENCE LIGHT	20-8	NEUTRAL SWITCH.....	20-20
COMBINATION METER.....	20-8	SIDESTAND SWITCH	20-20
SPEEDOMETER/VS SENSOR	20-11	HORN	20-22
TACHOMETER	20-12	TURN SIGNAL RELAY	20-22
ECT SENSOR	20-13	HEADLIGHT RELAY.....	20-23

LIGHTS/METERS/SWITCHES

SYSTEM LOCATION

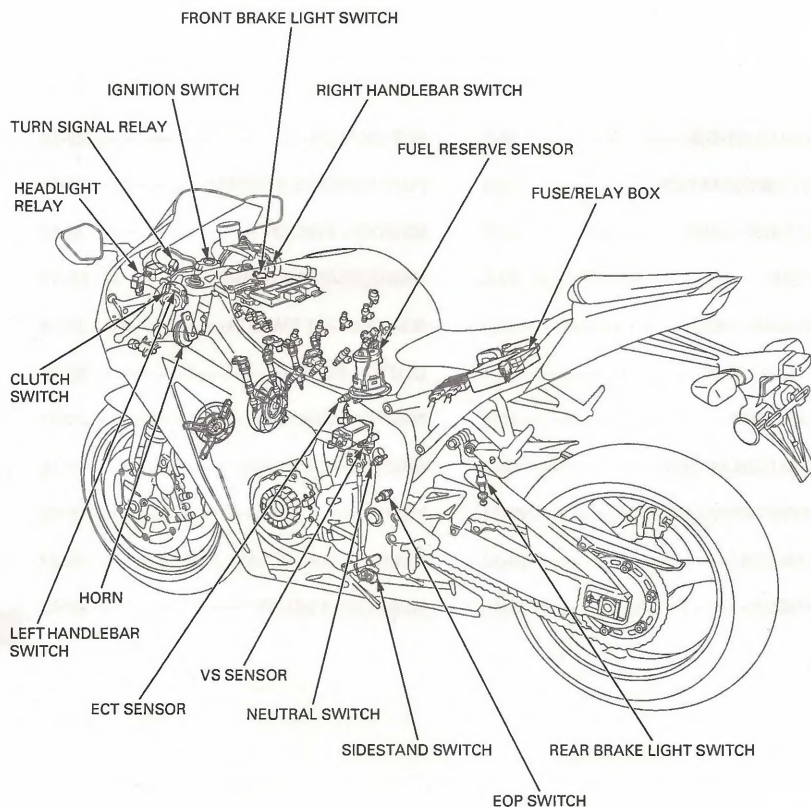

SERVICE INFORMATION

GENERAL

NOTICE

- A halogen headlight bulb becomes very hot while the headlight is on, and remains hot for a while after it is turned off. Be sure to let it cool down before servicing.
- Note the following when replacing the halogen headlight bulb.
 - Wear clean gloves while replacing the bulb. Do not put finger prints on the headlight bulb, as they may create hot spots on the bulb and cause it to break.
 - If you touch the bulb with your bare hands, clean it with a cloth moistened with denatured alcohol to prevent its early failure.
- Use an electric heating element to heat the water/coolant mixture for the ECT sensor inspection. Keep flammable materials away from the electric heating element. Wear protective clothing, insulated gloves and eye protection.
- Check the battery condition before performing any inspection that requires proper battery voltage.
- A continuity test can be made with the switches installed on the motorcycle.
- The following color codes are used throughout this section.

Bu = Blue	G = Green	Lg = Light Green	R = Red
Bl = Black	Gr = Gray	O = Orange	W = White
Br = Brown	Lb = Light Blue	P = Pink	Y = Yellow

- For headlight removal/installation (page 3-13).
- For front turn signal and position light removal/installation (page 3-11).
- For rear turn signal light removal/installation (page 20-7).
- For license light removal/installation (page 20-8).

SPECIFICATIONS


ITEM			SPECIFICATIONS
Bulbs	Headlight	Hi	12 V – 55 W
		Lo	12 V – 55 W
	Position light		LED x 2
	Brake/tail light		LED
	License light		12 V – 5 W
	Turn signal light		12 V – 21 W x 4
	Instrument light		LED
	Turn signal indicator		LED x 2
	High beam indicator		LED
	Neutral indicator		LED
	MIL		LED
	Fuel indicator		LED
	REV indicator		LED
	Engine oil pressure/ coolant temperature warning indicator		LED
Fuse	Main fuse		30 A
	Sub fuse		10 A x 4, 20 A x 4
Tachometer peak voltage			10.5 V minimum
ECT sensor resistance		50°C (122°F)	6.8 – 7.4 kΩ
		80°C (176°F)	2.1 – 2.7 kΩ

TORQUE VALUES

Sidestand switch mounting bolt	10 N·m (1.0 kgf·m, 7 lbf·ft)	ALOC bolt; replace with a new one.
EOP switch	12 N·m (1.2 kgf·m, 9 lbf·ft)	Apply sealant to the threads.
Neutral switch	12 N·m (1.2 kgf·m, 9 lbf·ft)	
Combination meter screw	1.0 N·m (0.1 kgf·m, 0.7 lbf·ft)	
EOP switch wire terminal bolt	2.0 N·m (0.2 kgf·m, 1.5 lbf·ft)	
Clutch switch mounting screw	0.6 N·m (0.06 kgf·m, 0.4 lbf·ft)	ALOC screw; replace with a new one.
Ignition switch mounting bolt	26 N·m (2.7 kgf·m, 19 lbf·ft)	Replace with a new one.
Rearview mirror front cover screw	1.0 N·m (0.1 kgf·m, 0.7 lbf·ft)	
Combination meter stay mounting bolt	32 N·m (3.3 kgf·m, 24 lbf·ft)	


TOOLS

Peak voltage adaptor
07HGJ-0020100 (Not available in
U.S.A.)

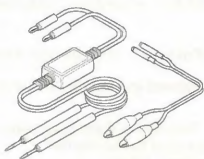


with commercially available digital
multimeter (impedance 10 M Ω /DCV
minimum)

IgnitionMate peak voltage tester
MTP07-0286 (U.S.A. only)

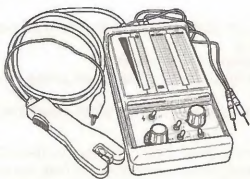

Test probe
07ZAJ-RDJA110

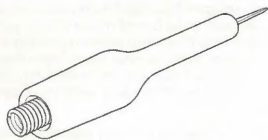

TROUBLESHOOTING

VS SENSOR/SPEEDOMETER

The speedometer and odometer/trip meter indicates "---".

Faulty EEPROM in ECM

The odometer/trip meter operates normally, but the speedometer does not operate
Faulty speedometer in combination meter

The speedometer operates normally, but the odometer/trip meter does not operate
Faulty odometer/trip meter in combination meter

The speedometer operates abnormally

1. Fuse Inspection

Check for blown main fuse (30 A) or sub fuse (CLOCK 10 A).

Is the fuse blown?

YES - Replace the fuse.

NO - GO TO STEP 2.

2. Battery Inspection

Make sure the battery is fully charged and in good condition.

Is the battery in good condition?

YES - GO TO STEP 3.

NO - Replace the battery.

3. VS Sensor Power Input Voltage Inspection (VS Sensor Side)

Disconnect the VS sensor 3P (Blue) connector and measure the voltage at the VS sensor connector Violet terminal with the Ignition switch ON.

Is there Battery Voltage?

NO -

- Loose or poor contact of related terminals
- Open circuit in Violet wires between the combination meter and VS sensor

YES - GO TO STEP 4.

4. VS Sensor Power Input Voltage Inspection (Combination Meter Side)

Connect the VS sensor 3P (Blue) connector and check for loose or poor contact of the combination meter 20P (Gray) connector.

With the ignition switch ON, and measure the voltage at bottom of the combination meter 20P (Gray) connector Violet terminal.

Is the Voltage more than 9.5 - 10.5 V (20°C/68°F)?

NO -

- Loose or poor contact of related terminals
- Faulty combination meter

YES - GO TO STEP 5.

5. VS Sensor Signal Line Inspection

With the ignition switch OFF, check for continuity of the Pink/green wire between the terminals of the VS sensor and speedometer.

Is there continuity?

NO - Open circuit in Pink/green wire

YES - GO TO STEP 6.

6. VS Sensor Signal Inspection

Support the motorcycle using a hoist or other support to raise the rear wheel off the ground.

Measure the output voltage (sensor signal) at the speedometer with the ignition switch ON while slowly turning the rear wheel with your hand (page 20-11).

Standard: Repeat 0 to 5 V

Is the voltage as specified?

NO - Faulty VS sensor

YES - Faulty speedometer

HEADLIGHT

BULB REPLACEMENT

Turn the dust cover counterclockwise and remove it.

Disconnect the headlight bulb connector.

Unhook the bulb retainer and remove the headlight bulb.

NOTICE

Avoid touching the halogen headlight bulb. Finger prints can create hot spots that cause a bulb to break.


Install a new headlight bulb aligning its tab with the groove in the headlight unit.

If you touch the bulb with your bare hands, clean it with a cloth moistened with denatured alcohol to prevent early bulb failure.

Hook the bulb retainer securely.

Connect the headlight bulb connector.

Install the removed parts in the reverse order of removal.

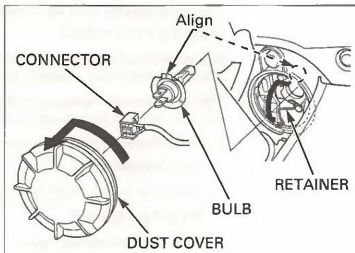

TURN SIGNAL LIGHT


FRONT

BULB REPLACEMENT

Remove the screw and turn the rearview mirror for ease removal of the front cover as shown.

Be careful not to damage the tabs.

Release the front cover tabs in the specified sequence as shown and remove the front cover.

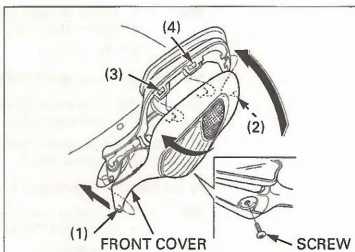

Turn the front turn signal bulb socket counterclockwise and remove it.


While pushing in, turn the bulb counterclockwise to remove it and replace with a new one.

Installation is in the reverse order of removal.

TORQUE:

Rearview mirror front cover screw:
1.0 N-m (0.1 kgf-m, 0.7 lbf-ft)

- For front turn signal light removal/installation (page 3-11).

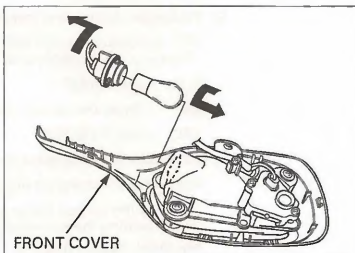


REAR

BULB REPLACEMENT

Remove the screw, turn signal lens and rubber seal.

While pushing in, turn the bulb counterclockwise to remove it and replace with a new one.

Install the rubber seal, lens and tighten the screw securely.

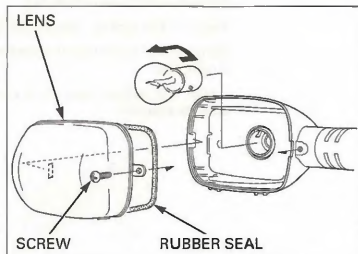


REMOVAL/INSTALLATION

Remove the rear fender A (page 3-19).

Disconnect the turn signal light 2P connector.

Remove the nut, rear turn signal light, setting plate and grommet.

Installation is in the reverse order of removal.

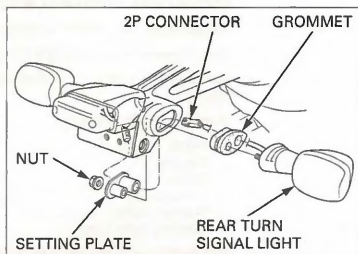


BRAKE/TAIL LIGHT

INSPECTION

Turn the ignition switch ON, and check the tail light operation.

Check that all the LED's in the brake/tail light unit illuminate with the front brake lever and/or rear brake pedal applied.

If any LED does not turn on, replace the brake/tail light (page 3-21).

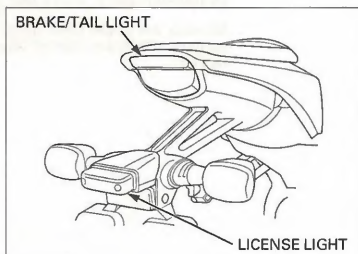


LICENCE LIGHT**BULB REPLACEMENT**

Remove the screws, lens cover and rubber seal.

Remove the bulb from the socket and replace it with a new one.

Install the rubber seal, lens cover and tighten the screws securely.

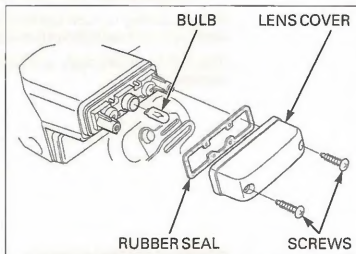**REMOVAL/INSTALLATION**

Remove the rear fender A (page 3-19).


Disconnect the license light 3P (Natural) connector.

Remove the screws and license light cover assembly.


Remove the following:

- Nuts
- Collars
- Screws
- Lens cover
- Rubber seals
- License light base

Installation is in the reverse order of removal.

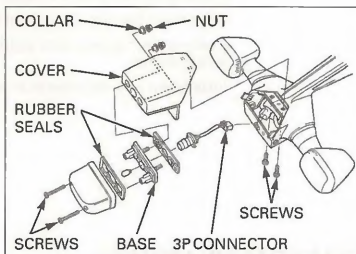**COMBINATION METER****POWER/GROUND LINES INSPECTION**

Remove the upper cowl (page 3-13) with the sub harness 20P (Black) and 8P (Black) connectors connected.

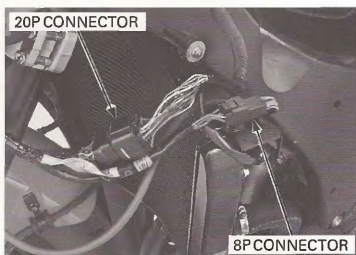

Check the following at the wire side connector terminals of the combination meter.

20P CONNECTOR




Power input line

Measure the voltage between the Brown/white wire terminal (+) and ground (-).

There should be battery voltage with the ignition switch ON.

If there is no voltage, check the fuse (METER ILL 10 A) and Brown/white wire for a loose connection or an open circuit.

20P CONNECTOR

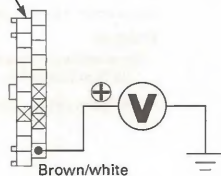


Backup line

Measure the voltage between the Red/green wire terminal (+) and ground (-).

There should be battery voltage.

If there is no voltage, check the fuse (CLOCK 10 A) and Red/green wire for a loose connection or an open circuit.

20P CONNECTOR

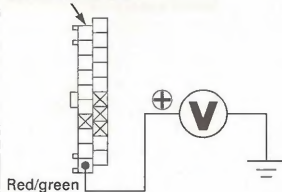


Ground line

Measure the continuity between the Green/black wire terminal and ground.

There should be continuity.

If there is no continuity, check for open circuit in Green/black wire.


20P CONNECTOR

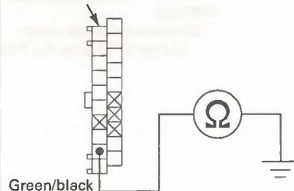

REMOVAL/INSTALLATION

Remove the upper cowl (page 3-13).

Remove the screws, washers and combination meter.

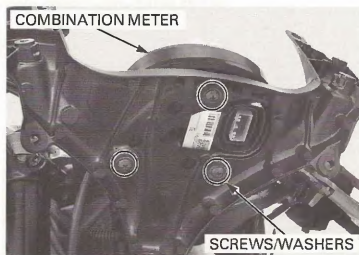


Remove the bolts, combination meter stay and grommets.

Installation is in the reverse order of removal.

TORQUE:


Combination meter stay mounting bolt:
32 N·m (3.3 kgf-m, 24 lbf-ft)

- For horn removal/installation (page 20-22).

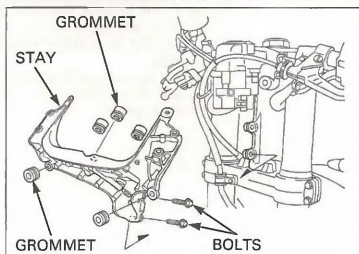

DISASSEMBLY/ASSEMBLY


Remove the screws and separate the front cover from the rear cover.

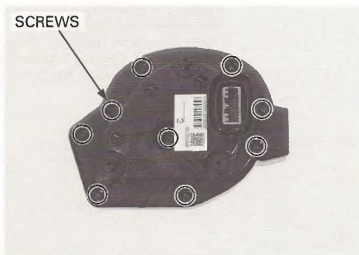

Assemble the combination meter in the reverse order of removal.

TORQUE:

Combination meter screw:
1.0 N·m (0.1 kgf-m, 0.7 lbf-ft)

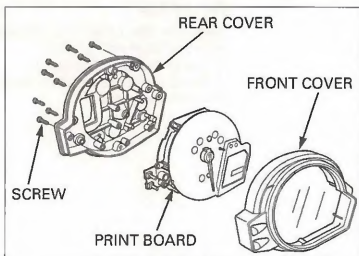


SPEEDOMETER/VS SENSOR

SYSTEM INSPECTION

Remove the upper cowl (page 3-13) with combination meter 20P (Gray) connector connected.

Check that the tachometer and coolant temperature meter function properly.

- Check for loose or poor contact terminals at the combination meter 20P (Gray) and sub harness 20P (Black) connectors.
 - If they do not function, perform the power and ground line inspection of the combination meter (page 20-8).
 - If they function, shift the transmission into neutral and turn the ignition switch ON. Measure the voltage between the Pink/green (+) and ground (-).
Slowly turn the rear wheel by hand.
There should be 0 to 5 V pulse voltage.
- If pulse voltage appears, replace the combination meter print circuit board.
 - If pulse voltage does not appear, check for open or short circuit in Pink/green wire.
If the Pink/green wire is OK, check the VS sensor (page 20-11).

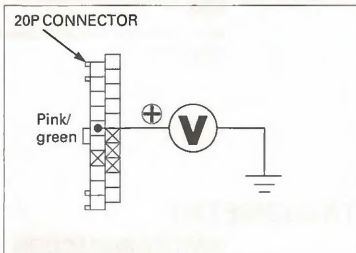

VS SENSOR INSPECTION

Lift and support the fuel tank (page 4-5).

Disconnect the VS sensor 3P (Blue) connector and check for loose or poor contact of the connector.


Turn the ignition switch ON and measure the voltage at the 3P (Blue) connector at the wire side.

Connection: Violet (+) – Green/black (-)

Standard: 9.5 – 10.5 V

If there is no voltage, check the following:

- Violet wire open circuit
- Green/black wire open circuit
- Combination meter (page 20-8)

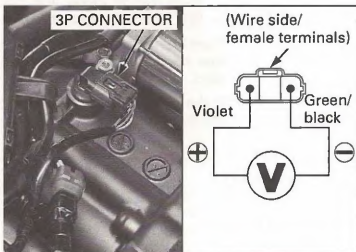


REMOVAL/INSTALLATION

Lift and support the fuel tank (page 4-5).

California type: Remove the EVAP purge control solenoid valve (page 6-84).

Disconnect the VS sensor 3P (Blue) connector.

Remove the bolt, VS sensor and O-ring.

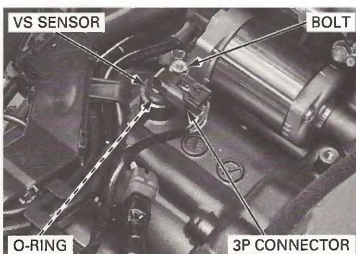

LIGHTS/METERS/SWITCHES

Apply oil to the O-ring and install it to the VS sensor.


Install the VS sensor to the crankcase.



Tighten the VS sensor mounting bolt securely and connect the VS sensor 3P (Blue) connector.

California type: Install the EVAP purge control solenoid valve (page 6-84).

Remove the support and close the fuel tank (page 4-7).

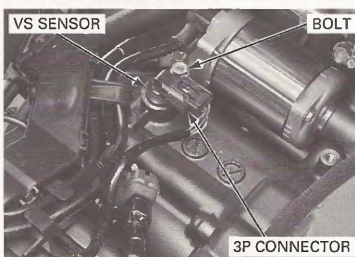


TACHOMETER

SYSTEM INSPECTION

- Check for loose or poor contact terminals at the combination meter 20P (Gray) and sub harness 20P (Black) connectors.

Turn the ignition switch ON, check that the tachometer needle moves to full scale and then returns to zero.

If the needle does not show initial function, check the combination meter power input line (page 20-8).

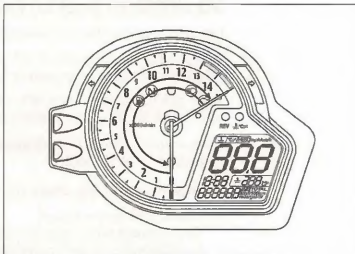

Remove the upper cowl (page 3-13) with combination meter 20P (Gray) connector connected.

Connect the peak voltage adaptor to the combination meter terminal and ground.

TOOL:

IgnitionMate peak voltage tester MTP07-0286
(U.S.A. only) or
07HGJ-0020100
(Not available in
U.S.A.)

Peak voltage adaptor

with commercially available digital multimeter
(impedance 10 M Ω /DCV minimum)

Connection: Yellow/green (+) – Ground (–)

Start the engine and measure the tachometer input peak voltage.

PEAK VOLTAGE: 10.5 V minimum

If the peak voltage is normal, replace the combination meter assembly (page 20-10).

If the measured value is below 10.5 V, replace the ECM (page 6-74).

If the value is 0 V, check for continuity between the combination meter 20P (Gray) connector and ECM 33P (Gray) connector Yellow/green terminals.

TOOL:



Test probe

07ZAJ-RDJA110

Connection: B17 – Yellow/green

If there is no continuity, check the wire harness and combination meter sub harness for an open circuit.

If there is continuity, replace the combination meter printed circuit board (page 20-10).

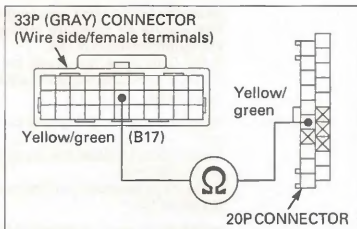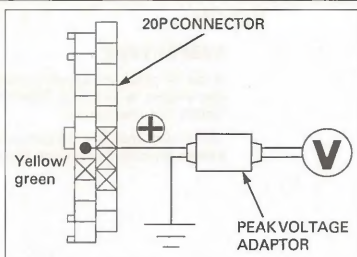

ECT SENSOR

INSPECTION

Remove the ECT sensor (page 6-70).


Suspend the ECT sensor in a pan of coolant (1:1 mixture) on an electric heating element and measure the resistance through the sensor as the coolant heats up.

- Soak the ECT sensor in coolant up to its threads with at least 40 mm (1.6 in) from the bottom of the pan to the bottom of the sensor.
- Keep the temperature constant for 3 minutes before testing. A sudden change of temperature will result in incorrect readings. Do not let the thermometer or ECT sensor touch the pan.

Replace the sensor if it is out of specification by more than 10% at any temperature listed.

Temperature	50°C (122°F)	80°C (176°F)
Resistance	6.8 – 7.4 k Ω	2.1 – 2.7 k Ω

Install the ECT sensor (page 6-70).

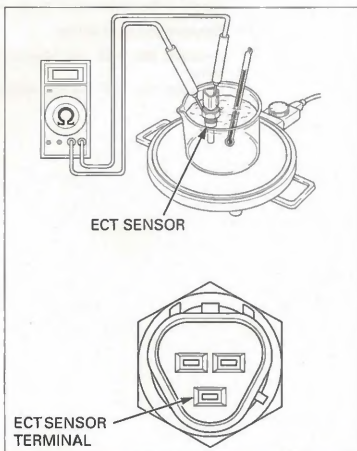


EOP SWITCH

INSPECTION

If the oil pressure warning indicator stays on while the engine is running, check the engine oil level before this inspection.

Make sure that the oil pressure warning indicator comes on with the ignition switch ON.

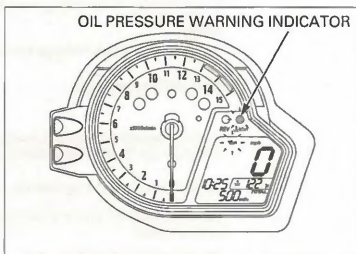

If the indicator does not come on, inspect as follows:

Remove the lower cowl (page 3-9).

Remove the dust cover, terminal bolt and wire.

Short the EOP switch wire to ground.

The engine oil pressure indicator comes on when the ignition switch is ON.


If the light does not come on, check the sub fuse (CLOCK 10 A) and wires for a loose connection or an open circuit.

Start the engine and make sure the indicator goes out.

If the indicator does not go out, check the oil pressure (page 5-5).

If the oil pressure is normal, replace the EOP switch (page 20-14).

Install the lower cowl (page 3-9).

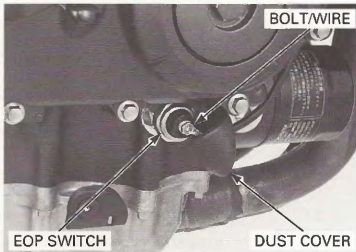


REMOVAL/INSTALLATION

Remove the lower cowl (page 3-9).

Remove the dust cover.

Remove the bolt and disconnect the EOP switch wire.


Remove the EOP switch while holding the switch base.

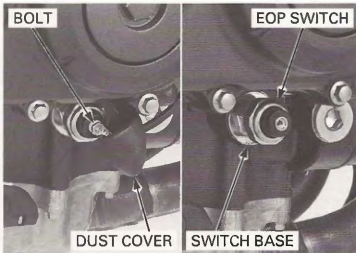

Apply sealant (TB 1207B or equivalent) to the EOP switch threads.

Tighten the EOP switch to the specified torque while holding the switch base.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

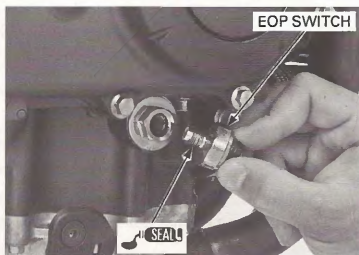

Connect the EOP switch wire terminal and tighten the bolt to the specified torque.


TORQUE: 2.0 N·m (0.2 kgf·m, 1.5 lbf·ft)

Install the dust cover.

Start the engine and check that there are no oil leaks.

Check the engine oil level (page 4-17).

Install the lower cowl (page 3-9).

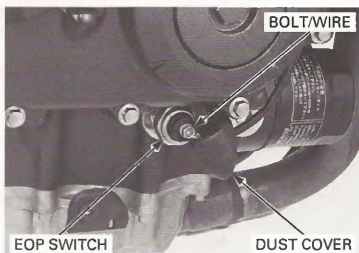

FUEL RESERVE SENSOR

INSPECTION

Fuel reserve indicator does not go off

Lift and support the fuel tank (page 4-5).

Disconnect the fuel reserve sensor 2P (Black) connector.


Turn the ignition switch ON and check the fuel reserve indicator.

If the indicator goes off, replace the fuel pump unit (page 6-47).

If the indicator is still on, check for short circuit in Brown/black wire between the fuel reserve sensor 2P (Black) and combination meter 20P (Gray) connector.

EXCEPT CALIFORNIA TYPE SHOWN:

2P (BLACK) CONNECTOR

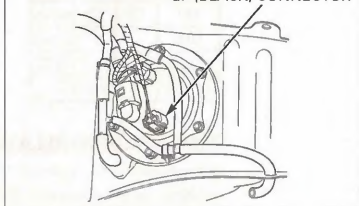

Fuel reserve indicator does not come on

Before this inspection, perform the power and ground line inspection of the combination meter (page 20-8).

Disconnect the fuel reserve sensor 2P (Black) connector.

Connect the fuel reserve sensor 2P (Black) connector at the wire side with a jumper wire.

Connection: Brown/black - Green

Turn the ignition switch ON and check the indicator.

If the indicator comes on, replace the fuel pump unit (page 6-47).

If the indicator does not come on, check for open circuit in Brown/black wire between the fuel reserve sensor 2P (Black) and combination meter 20P (Gray) connector.

If the wire harness is normal, replace the combination meter (page 20-10).

2P CONNECTOR
(Wire side/female terminals)



JUMPER WIRE

IGNITION SWITCH

INSPECTION

Lift and support the fuel tank (page 4-5).

Disconnect the ignition switch 2P (Brown) connector.

Check for continuity between the wire terminals of the ignition switch connector in each switch position.

Continuity should exist between the color coded wires as follow:

IGNITION SWITCH

	BAT1	IG	KEY
ON	○	○	KEY ON
OFF			KEY OFF
LOCK			KEY OFF LOCK PIN
COLOR	R	R/BI	




REMOVAL/INSTALLATION

Remove the top bridge (page 14-9).

Install the ignition switch to the top bridge. Tighten new ignition switch mounting bolts to the specified torque.


Installation is in the reverse order of removal.

TORQUE: 26 N·m (2.7 kgf-m, 19 lbf-ft)

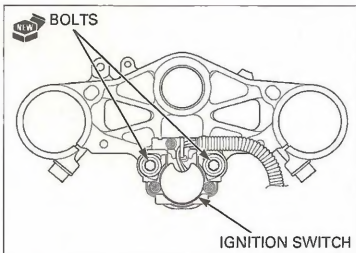

HANDLEBAR SWITCHES

Lift and support the fuel tank (page 4-5).
Disconnect the handlebar switch connectors.

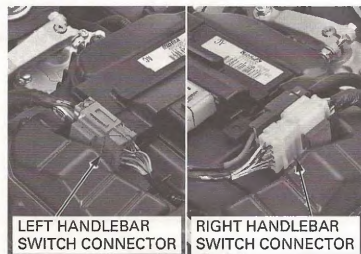

RIGHT SIDE


Check for continuity between the wire terminals of the handlebar switch connector.
Continuity should exist between the color coded wire terminals as follows:

ENGINE STOP SWITCH

	IG	BAT4
COLOR	BI	W/BI

STARTER SWITCH

	BAT5	ST
FREE		
PUSH		
COLOR	BI/R	Y/R

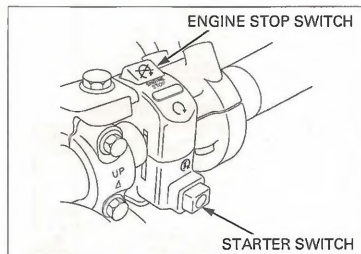

LEFT SIDE

Check for continuity between the wire terminals of the handlebar switch connector. Continuity should exist between the color coded wire terminals as follows:

TURN SIGNAL SWITCH


	W	R	L
→	○	○	
N			
←	○		○
COLOR	Gr	Lb	O

HORN SWITCH

	Ho	BAT3
FREE		
PUSH	○	○
COLOR	Bl/Gr	W/G


DIMMER SWITCHES

	HL	Lo	Hi
☐			
(N)			
☐	○		○
COLOR	Bu/W		Bu

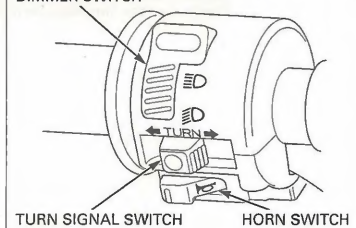DIMMER SWITCH**BRAKE LIGHT SWITCH****FRONT**

Disconnect the front brake light switch connectors and check for continuity between the terminals.

There should be continuity with the brake lever applied, and there should be no continuity with the brake lever is released.

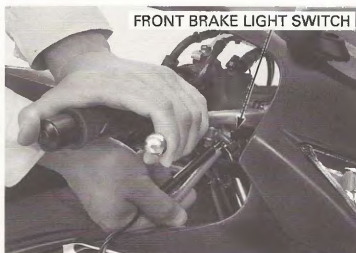**FRONT BRAKE LIGHT SWITCH**


REAR

Remove the fuel tank (page 6-51).

Disconnect the rear brake light switch 2P (Black) connector.

Check for continuity between the terminals.

There should be continuity with the brake pedal applied, and there should be no continuity with the brake pedal is released.

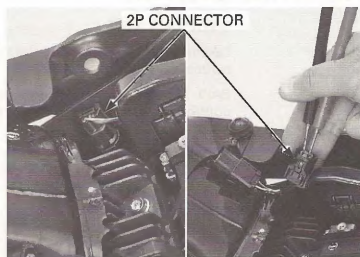**CLUTCH SWITCH****INSPECTION**

Disconnect the clutch switch connectors.

There should be continuity with the clutch lever applied, and there should be no continuity with the clutch lever is released.

**REMOVAL/INSTALLATION**

Disconnect the clutch switch connectors.

Remove the clutch switch mounting screw.


Apply the clutch lever and remove the clutch switch.

Apply the clutch lever and install the clutch switch as shown.

Tighten a new clutch switch mounting screw to the specified torque.

TORQUE: 0.6 N·m (0.06 kgf·m, 0.4 lbf·ft)

Connect the clutch switch connectors.

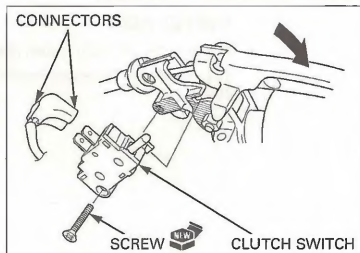

NEUTRAL SWITCH


INSPECTION

Disconnect the neutral switch connector from the switch.

Shift the transmission into neutral and check for continuity between the neutral switch terminal and ground.

There should be continuity with the transmission in neutral, and no continuity when the transmission is in gear.

NEUTRAL SWITCH

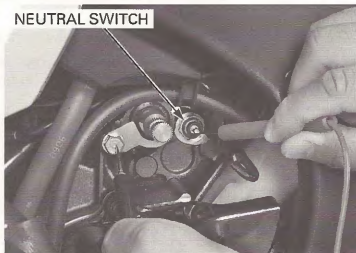

REMOVAL/INSTALLATION

Disconnect the neutral switch connector.

Remove the neutral switch and sealing washer.


Install a new sealing washer and tighten the neutral switch to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

Connect the neutral switch connector securely.

CONNECTOR

NEUTRAL SWITCH

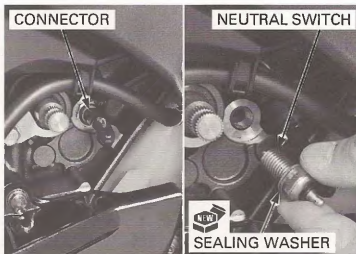


SIDESTAND SWITCH


INSPECTION

Remove the left middle cowl (page 3-10).

Disconnect the sidestand switch 2P (Green) connector.

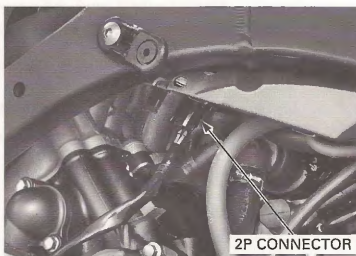


Check for continuity between the wire terminals of the sidestand switch 2P (Green) connector. Continuity should exist only when the sidestand is up.

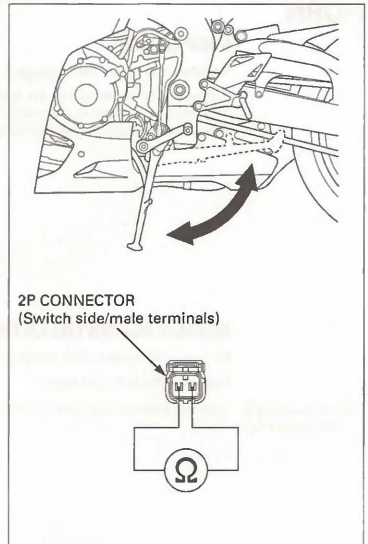

REMOVAL/INSTALLATION

Remove the left middle cowl (page 3-10).

Disconnect the sidestand switch 2P (Black) connector.

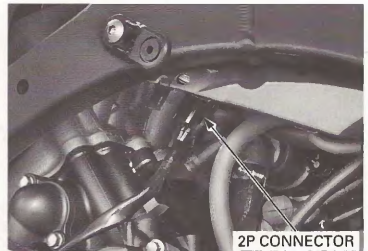

Remove the bolt and sidestand switch.


Installation is in the reverse order of removal.

Replace the sidestand switch mounting screw with a new one.

TORQUE:

Sidestand switch mounting bolt:
10 N·m (1.0 kgf·m, 7 lbf·ft)

- Align the sidestand switch pin with the hole.
- Align the sidestand switch groove with the return spring holding pin.

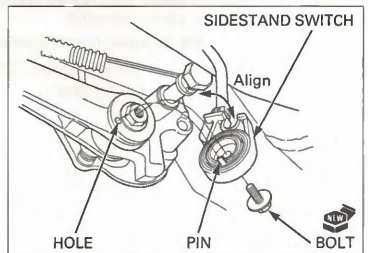


HORN

INSPECTION

Remove the upper cowl (page 3-13).

Connect a 12 V battery to the horn terminal directly. The horn is normal if it sounds when the 12 V battery is connected across the horn terminals.

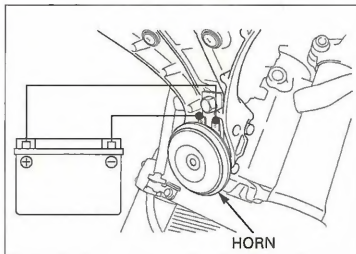


REMOVAL/INSTALLATION

Remove the upper cowl (page 3-13).

Remove the bolt and horn.

Installation is in the reverse order of removal.

Correctly route the wire (page 1-20).

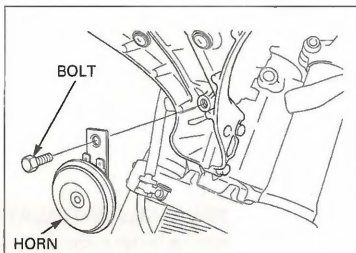

TURN SIGNAL RELAY

INSPECTION

1. Related Circuit Inspection

Support the upper cowl securely.

Remove the upper cowl (page 3-13) with sub harness 20P (Black) and 8P (Black) connectors connected.


Check the following:

- Burned bulb or non-specified wattage
- Blown fuse (MAIN 30 A, STOP/HORN 10 A)
- Ignition switch (page 20-16) and turn signal switch (page 20-18) function
- Loose connector

Are the above items in good condition?

NO - Replace or repair the failed part(s).

YES - GO TO STEP 2.

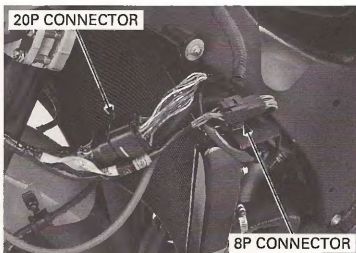

2. Turn Signal Circuit Inspection

Short the turn signal relay terminals at the wire side.


Connection: White/green – Gray

Turn the ignition switch ON and check the turn signal light by turning the turn signal switch on.

Does the light come on?

- YES – • Faulty turn signal relay
• Loose or poor contact of the connector terminals
- NO – Open circuit in White/green or Gray wires

TURN SIGNAL RELAY

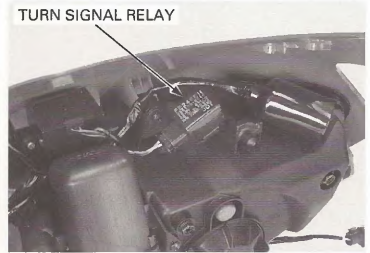

HEADLIGHT RELAY

INSPECTION

Remove the upper cowl (page 3-13).

Remove the headlight relay.

HEADLIGHT RELAY




Connect an ohmmeter to the headlight relay connector terminals.

Connect a 12 V battery to the following headlight relay connector terminals as shown.

There should be continuity only when the 12 V battery is connected.

If there is no continuity when the 12 V battery is connected, replace the headlight relay.

HEADLIGHT RELAY

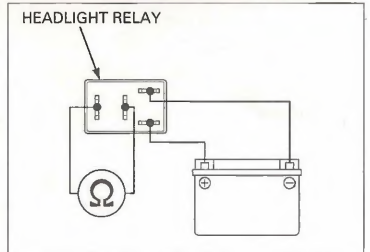

21. WIRING DIAGRAM

WIRING DIAGRAM	21-2
WIRING DIAGRAM	21-3

COMBINATION METER
GRUPPO STRUMENTAZIONE
Medidor combinado

ENGINE STOP-STARTER SWITCH
INTERRUTTORE DI ARRESTO DEL MOTORE • INTERRUTTORE DELL'AVVIAMENTO
Interruptor de parada del motor • Botón de arranque

FRONT BRAKE LIGHT SWITCH
INTERRUTTORE LUCE FRENO
ANTERIORE
Interruptor de parada del freno delantero

EXHAUST AIR INJECT SOLENOID VALVE
ELETTOVALVOLA DI INIEZIONE ARIA DI SCARICO
Válvula de solenoide de inyección de aire de escape

RIGHT FAN MOTOR
MOTORE DELLA VENTOLA DESTRA
Motor del ventilador derecho

LEFT FAN MOTOR
MOTORE DELLA VENTOLA SINISTRA
Motor del ventilador izquierdo

TURN SIGNAL RELAY
RELÉ INDICATORI DI DIREZIONE
Relé de intermitentes

BANK ANGLE SENSOR
SENSORE DELL'ANGOLO DI INCLINAZIONE
Sensor del ángulo de balanceo

HORN
AVVISATORE ACUSTICO
Bocina

LEFT INTAKE AIR DUCT CONTROL SOLENOID VALVE
ELETTOVALVOLA DI COMANDO DEL CONDOTTO DELL'ARIA ASPIRATA DI SINISTRA
Válvula de solenoide de control del conducto de aire de admisión izquierdo

IMMOBILIZER
IMMOBILIZZATORE
Immobilizador

CLUTCH SWITCH
INTERRUTTORE DELLA FRIZIONE
Interruptor del embrague

HAZARD • TURN SIGNAL • PASSING • DIMMER • HORN SWITCH
• AVVISATORE OTTICO • COMMUTATORE LUCI • INTERRUTTORE AVVISATORE ACUSTICO
Interruptor de aviso de peligro • Interruptor de señal de giro • Interruptor de la luz de paso • Interruptor anti-deslumbrante • Interruptor de bocina

HORN SWITCH
INTERRUTTORE AVVISATORE ACUSTICO
Interruptor de bocina

DIMMER SWITCH
INTERRUTTORE COMMUTATORE LUCI
Interruptor anti-deslumbrante

ENGINE STOP SWITCH
INTERRUTTORE DI ARRESTO DEL MOTORE
Interruptor de parada del motor

STARTER SWITCH
INTERRUTTORE DELL'AVVIAMENTO
Botón de arranque

NEUTRAL SWITCH
INTERRUTTORE DI FOLLE
Interruptor del punto muerto

OIL PRESSURE SWITCH
PRESSOSTATO OLIO
Interruptor del indicador de presión de aceite

ECT SENSOR
SENSORE TEMPERATURA REFRIGERANTE MOTORE (ECT)
Sensor ECT

PRIMARY INJECTORS
INIETTORI PRINCIPALI
Inyectores primarios

SECONDARY INJECTORS
INIETTORI SECONDARI
Inyectores secundarios

FUEL PUMP
POMPA CARBURANTE
Bomba de combustible

FUEL RESERVE SENSOR
SENSORE DELLA RISERVA CARBURANTE
Sensor reserva

REAR BRAKE LIGHT SWITCH
INTERRUTTORE LUCE FRENO POSTERIORE
Interruptor luz trasera de freno

FUSE MAIN
FUSIBILE PRINCIPALE
Fusible (Principal)
30A

FUSE (FI)
FUSIBILE (FI)
Fusible (FI)
20A

BATTERY
BATTERIA
Batería

STARTER MOTOR
MOTORINO DI AVVIAMENTO
Arrancador

ALTERNATOR
ALTERNATORE
Alternador

REGULATOR/RECTIFIER
REGOLATORE/RAZIONIZZATORE
Regulador/Rectificador

FUSE BOX
SCATOLA FUSIBILI
Caja de fusibles

TURN SIGNAL LIGHT
LUCE INDICATORE DI DIREZIONE POSTERIORE DESTRO
Luz indicadora de giro trasera derecha

BRAKE AND TAILLIGHTS
LUCE FRENO E LUCE POSTERIORE
Luz de parada y luz trasera

LICENSE LIGHT
LUCE TARGA
Luz de matrícula

LEFT REAR TURN SIGNAL LIGHT
LUCE INDICATORE DI DIREZIONE POSTERIORE SINISTRO
Luz indicadora de giro trasera izquierda

MAP SENSOR
SENSORE PRESSIONE ASSOLUTA COLLETTORE (MAP)
Sensor MAP

IDLE AIR CONTROL VALVE
VALVOLA DI COMANDO DELL'ARIA AL MINIMO
Válvula de control del aire de ralentí

KNOCK SENSOR
RILEVATORE BATTITO IN TESTA
Sensor de golpeteo

IAT SENSOR
SENSORE TEMPERATURA ENTRATA ARIA (IAT)
Sensor IAT

CMP SENSOR
SENSORE CMP
Sensor de CMP

TP SENSOR
SENSORE POSIZIONE FARFALLA (TP)
Sensor TP

ECT SENSOR
SENSORE TEMPERATURA REFRIGERANTE MOTORE (ECT)
Sensor ECT

NEUTRAL SWITCH
INTERRUTTORE DI FOLLE
Interruptor del punto muerto

OIL PRESSURE SWITCH
PRESSOSTATO OLIO
Interruptor del indicador de presión de aceite

ECT SENSOR
SENSORE TEMPERATURA REFRIGERANTE MOTORE (ECT)
Sensor ECT

PRIMARY INJECTORS
INIETTORI PRINCIPALI
Inyectores primarios

SECONDARY INJECTORS
INIETTORI SECONDARI
Inyectores secundarios

FUEL PUMP
POMPA CARBURANTE
Bomba de combustible

FUEL RESERVE SENSOR
SENSORE DELLA RISERVA CARBURANTE
Sensor reserva

REAR BRAKE LIGHT SWITCH
INTERRUTTORE LUCE FRENO POSTERIORE
Interruptor luz trasera de freno

FUSE MAIN
FUSIBILE PRINCIPALE
Fusible (Principal)
30A

FUSE (FI)
FUSIBILE (FI)
Fusible (FI)
20A

BATTERY
BATTERIA
Batería

STARTER MOTOR
MOTORINO DI AVVIAMENTO
Arrancador

ALTERNATOR
ALTERNATORE
Alternador

REGULATOR/RECTIFIER
REGOLATORE/RAZIONIZZATORE
Regulador/Rectificador

FUSE BOX
SCATOLA FUSIBILI
Caja de fusibles

TURN SIGNAL LIGHT
LUCE INDICATORE DI DIREZIONE POSTERIORE DESTRO
Luz indicadora de giro trasera derecha

BRAKE AND TAILLIGHTS
LUCE FRENO E LUCE POSTERIORE
Luz de parada y luz trasera

LICENSE LIGHT
LUCE TARGA
Luz de matrícula

LEFT REAR TURN SIGNAL LIGHT
LUCE INDICATORE DI DIREZIONE POSTERIORE SINISTRO
Luz indicadora de giro trasera izquierda

MAP SENSOR
SENSORE PRESSIONE ASSOLUTA COLLETTORE (MAP)
Sensor MAP

IDLE AIR CONTROL VALVE
VALVOLA DI COMANDO DELL'ARIA AL MINIMO
Válvula de control del aire de ralentí

KNOCK SENSOR
RILEVATORE BATTITO IN TESTA
Sensor de golpeteo

IAT SENSOR
SENSORE TEMPERATURA ENTRATA ARIA (IAT)
Sensor IAT

CMP SENSOR
SENSORE CMP
Sensor de CMP

TP SENSOR
SENSORE POSIZIONE FARFALLA (TP)
Sensor TP

ECT SENSOR
SENSORE TEMPERATURA REFRIGERANTE MOTORE (ECT)
Sensor ECT

NEUTRAL SWITCH
INTERRUTTORE DI FOLLE
Interruptor del punto muerto

OIL PRESSURE SWITCH
PRESSOSTATO OLIO
Interruptor del indicador de presión de aceite

ECT SENSOR
SENSORE TEMPERATURA REFRIGERANTE MOTORE (ECT)
Sensor ECT

PRIMARY INJECTORS
INIETTORI PRINCIPALI
Inyectores primarios

SECONDARY INJECTORS
INIETTORI SECONDARI
Inyectores secundarios

FUEL PUMP
POMPA CARBURANTE
Bomba de combustible

FUEL RESERVE SENSOR
SENSORE DELLA RISERVA CARBURANTE
Sensor reserva

REAR BRAKE LIGHT SWITCH
INTERRUTTORE LUCE FRENO POSTERIORE
Interruptor luz trasera de freno

FUSE MAIN
FUSIBILE PRINCIPALE
Fusible (Principal)
30A

FUSE (FI)
FUSIBILE (FI)
Fusible (FI)
20A

BATTERY
BATTERIA
Batería

STARTER MOTOR
MOTORINO DI AVVIAMENTO
Arrancador

ALTERNATOR
ALTERNATORE
Alternador

REGULATOR/RECTIFIER
REGOLATORE/RAZIONIZZATORE
Regulador/Rectificador

FUSE BOX
SCATOLA FUSIBILI
Caja de fusibles

TURN SIGNAL LIGHT
LUCE INDICATORE DI DIREZIONE POSTERIORE DESTRO
Luz indicadora de giro trasera derecha

BRAKE AND TAILLIGHTS
LUCE FRENO E LUCE POSTERIORE
Luz de parada y luz trasera

LICENSE LIGHT
LUCE TARGA
Luz de matrícula

LEFT REAR TURN SIGNAL LIGHT
LUCE INDICATORE DI DIREZIONE POSTERIORE SINISTRO
Luz indicadora de giro trasera izquierda

MAP SENSOR
SENSORE PRESSIONE ASSOLUTA COLLETTORE (MAP)
Sensor MAP

IDLE AIR CONTROL VALVE
VALVOLA DI COMANDO DELL'ARIA AL MINIMO
Válvula de control del aire de ralentí

KNOCK SENSOR
RILEVATORE BATTITO IN TESTA
Sensor de golpeteo

IAT SENSOR
SENSORE TEMPERATURA ENTRATA ARIA (IAT)
Sensor IAT

CMP SENSOR
SENSORE CMP
Sensor de CMP

TP SENSOR
SENSORE POSIZIONE FARFALLA (TP)
Sensor TP

ECT SENSOR
SENSORE TEMPERATURA REFRIGERANTE MOTORE (ECT)
Sensor ECT

NEUTRAL SWITCH
INTERRUTTORE DI FOLLE
Interruptor del punto muerto

OIL PRESSURE SWITCH
PRESSOSTATO OLIO
Interruptor del indicador de presión de aceite

ECT SENSOR
SENSORE TEMPERATURA REFRIGERANTE MOTORE (ECT)
Sensor ECT

PRIMARY INJECTORS
INIETTORI PRINCIPALI
Inyectores primarios

SECONDARY INJECTORS
INIETTORI SECONDARI
Inyectores secundarios

FUEL PUMP
POMPA CARBURANTE
Bomba de combustible

FUEL RESERVE SENSOR
SENSORE DELLA RISERVA CARBURANTE
Sensor reserva

REAR BRAKE LIGHT SWITCH
INTERRUTTORE LUCE FRENO POSTERIORE
Interruptor luz trasera de freno

FUSE MAIN
FUSIBILE PRINCIPALE
Fusible (Principal)
30A

FUSE (FI)
FUSIBILE (FI)
Fusible (FI)
20A

BATTERY
BATTERIA
Batería

STARTER MOTOR
MOTORINO DI AVVIAMENTO
Arrancador

ALTERNATOR
ALTERNATORE
Alternador

REGULATOR/RECTIFIER
REGOLATORE/RAZIONIZZATORE
Regulador/Rectificador

FUSE BOX
SCATOLA FUSIBILI
Caja de fusibles

TURN SIGNAL LIGHT
LUCE INDICATORE DI DIREZIONE POSTERIORE DESTRO
Luz indicadora de giro trasera derecha


BRAKE AND TAILLIGHTS
LUCE FRENO E LUCE POSTERIORE
Luz de parada y luz trasera

0030Z-MFL-6403

WIRING DIAGRAM

USA

Bl	Black	Br	Brown
Y	Yellow	O	Orange
Bu	Blue	Lb	Light Blue
G	Green	Lg	Light Green
R	Red	P	PINK
W	White	Gr	Gray
V	Violet		

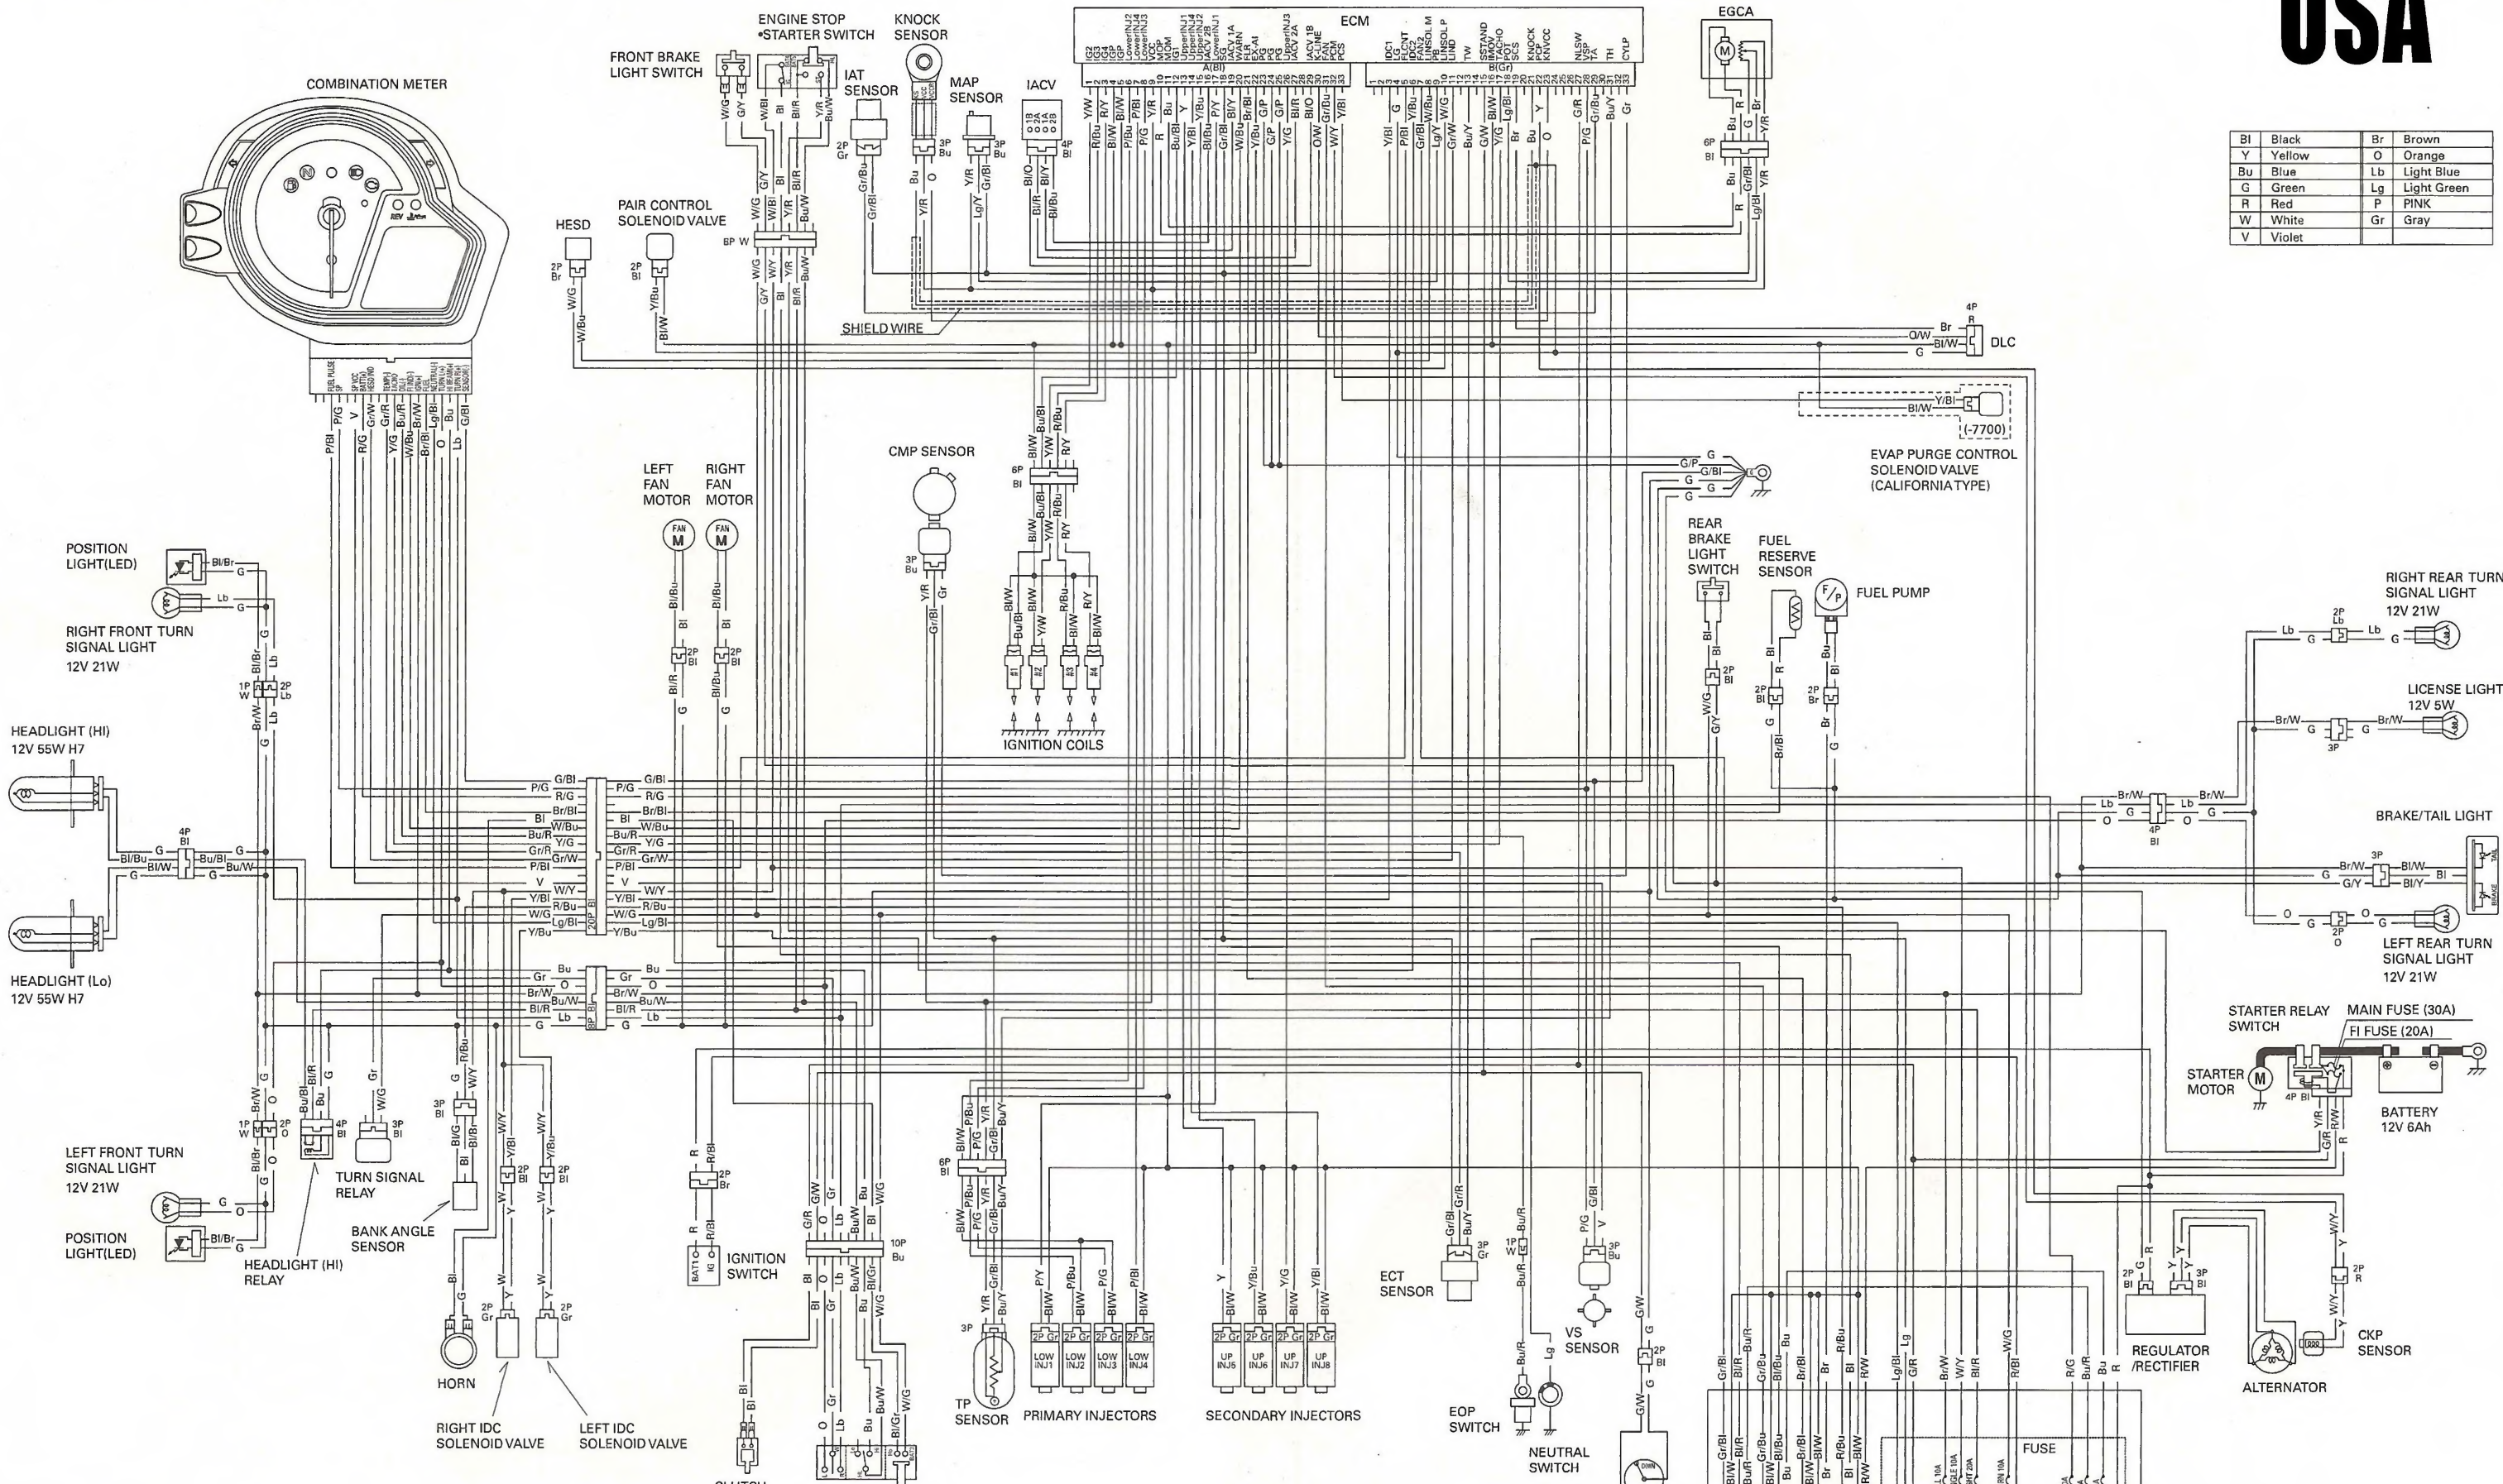

SWITCH CONTINUITY

IGNITION SWITCH		
	BAT1	IG KEY
ON	○	KEY ON
OFF	○	KEY OFF
LOCK	○	KEY OFF LOCK PIN
COLOR	R	R/BI

TURN SIGNAL SWITCH		
	W	R L
→	○	○
←	○	○
N	○	(N)
COLOR	Gr	Lb O

DIMMER SWITCH		
	HL	Lo HI
○	○	○
(N)	○	○
COLOR	Bu/W	Bu

HORN SWITCH		
	Ho	BAT3
FREE	○	○
PUSH	○	○
COLOR	Bl/Gr	W/G

ENGINE STOP SWITCH		
	IG BAT4	BAT5 ST
○	○	○
PUSH	○	○
COLOR	BI	W/BI

STARTER SWITCH		
	BAT5	ST
FREE	○	○
PUSH	○	○
COLOR	BI/R	Y/R

FUSE	
A (10A)	METER • ILLUMINATION • TAIL • POSITION
B (10A)	BANK ANGLE SENSOR
C (20A)	HEADLIGHT
D (10A)	FRONT, REAR BRAKE • HORN
E (10A)	TURN SIGNAL • CLOCK
F (20A)	FAN MOTOR B
G (20A)	FAN MOTOR A

0030Z-MFL-6700
0030Z-MFL-7700

ENGINE DOES NOT START OR IS HARD TO
START 22-2

ENGINE LACKS POWER 22-3

POOR PERFORMANCE AT LOW AND IDLE
SPEED 22-5

POOR PERFORMANCE
AT HIGH SPEED 22-6

POOR HANDLING 22-6

ENGINE DOES NOT START OR IS HARD TO START

1. Spark Plug Inspection

Remove and inspect the spark plugs.

Are the spark plugs in good condition?

- NO** - • Incorrect spark plug heat range
 • Incorrect spark plug gap
 • Dirty air cleaner

YES - GO TO STEP 2.

2. Spark Test

Perform the spark test.

Are there good sparks?

- NO** - • Loose or disconnected ignition system wire
 • Faulty direct ignition coil
 • Broken or shorted direct ignition coil connector and wire
 • Faulty CKP sensor
 • Faulty engine stop switch
 • Faulty engine stop relay
 • Faulty battery
 • Faulty bank angle sensor
 • Faulty ECM

YES - GO TO STEP 3.

3. Fuel Pump Inspection

Check for operation of the fuel pump and inspect the fuel flow.

Is the fuel pump unit normal?

- NO** - Faulty fuel pump unit (page 6-47)

YES - GO TO STEP 4.

4. PGM-FI System Inspection

Check the PGM-FI system.

Is the PGM-FI system normal?

- NO** - Faulty PGM-FI system (page 6-12)

YES - GO TO STEP 5.

5. Cylinder compression Inspection

Test the cylinder compression.

Is the compression specified?

- NO** - • Valve stuck open
 • Worn cylinder and piston rings
 • Damaged cylinder head gasket
 • Seized valves
 • Improper valve timing

YES - GO TO STEP 6.

6. Engine Start Condition

Start by following normal procedure.

Did the engine start but stops?

- YES** - • Leaking insulator
 • Faulty IACV
 • Improper ignition timing (Faulty ECM or CKP sensor)
 • Contaminated fuel

ENGINE LACKS POWER

1. Drive Train Inspection

Raise wheel off the ground and spin by hand.

Did the wheel spin freely?

- NO – • Brake dragging
• Worn or damaged wheel bearings

YES – GO TO STEP 2.

2. Tire Pressure Inspection

Check the tire pressure.

Is the tire pressure correct?

- NO – • Faulty tire valve
• Punctured tire

YES – GO TO STEP 3.

3. Clutch Inspection

Accelerate rapidly, shift from first to second.

Did the engine speed change accordingly when clutch is released?

- NO – • Clutch slipping
• Worn clutch discs/plates
• Warped clutch discs/plates
• Weak clutch spring
• Additive in engine oil

YES – GO TO STEP 4.

4. Engine Performance Inspection

Accelerate lightly.

Did the Engine speed increase?

- NO – • Dirty air cleaner
• Restricted fuel flow
• Clogged muffler
• Faulty IDC solenoid valve
• Faulty ECV

YES – GO TO STEP 5.

5. Spark Plug Inspection

Remove and inspect spark plugs.

Are the spark plugs in good condition?

- NO – • Plugs not serviced frequently enough
• Incorrect spark plug heat range
• Incorrect spark plug gap

YES – GO TO STEP 6.

6. Engine Oil Inspection

Check the oil level and condition.

Is the engine oil in good condition?

- NO – • Oil level too high
• Oil level too low
• Contaminated oil

YES – GO TO STEP 7.

7. Ignition Timing Inspection

Check the ignition timing.

Is the ignition timing as specified?

- NO –
- Faulty ECM
 - Faulty CKP sensor
 - Faulty CMP sensor
 - Faulty knock sensor
 - Improper valve timing

YES – GO TO STEP 8.

8. Cylinder compression Inspection

Test the cylinder compression.

Is the compression as specified?

- NO –
- Valve clearance too small
 - Valve stuck open
 - Worn cylinder and piston rings
 - Damaged cylinder head gasket
 - Improper valve timing

YES – GO TO STEP 9.

9. Fuel Pump Inspection

Inspect the fuel flow.

Is the fuel pump unit normal?

NO – Faulty fuel pump unit (page 6-47)

YES – GO TO STEP 10.

10. PGM-FI System Inspection

Check the PGM-FI system.

Is the PGM-FI system normal?

NO – Faulty PGM-FI system (page 6-12)

YES – GO TO STEP 11.

11. Lubrication Inspection

Remove cylinder head cover and inspect lubrication.

Is the valve train lubricated properly?

- NO –
- Faulty oil pump
 - Faulty pressure relief valve
 - Clogged oil strainer
 - Clogged oil passage

YES – GO TO STEP 12.

12. Over Heating Inspection

Check for engine over heating.

Is the engine over heating?

- YES –
- Coolant level too low
 - Fan motors not working
 - Thermostat stuck closed
 - Excessive carbon build-up in combustion chamber
 - Use of poor quality fuel
 - Wrong type of fuel
 - Clutch slipping

NO – GO TO STEP 13.

13. Engine Knocking Inspection

Accelerate or run at high speed.

Is the engine knocking?

- YES** – • Worn piston and cylinder
• Wrong type of fuel
• Excessive carbon build-up in combustion chamber
• Ignition timing too advance (Faulty ECM)
• Faulty CKP sensor
• Faulty CMP sensor
• Faulty knock sensor
- NO** – Engine does not knock

POOR PERFORMANCE AT LOW AND IDLE SPEED**1. Spark Plug Inspection**

Remove and inspect spark plugs.

Are the spark plugs in good condition?

- NO** – • Plugs not serviced frequently enough
• Incorrect spark plug heat range
• Incorrect spark plug gap

YES – GO TO STEP 2.

2. Ignition Timing Inspection

Check the ignition timing.

Is the ignition timing as specified?

- NO** – • Faulty ECM
• Faulty CKP sensor
• Faulty CMP sensor
• Faulty VS sensor
• Faulty knock sensor
• Improper valve timing

YES – GO TO STEP 3.

3. Fuel Pump Inspection

Inspect the fuel flow.

Is the fuel pump unit normal?

- NO** – Faulty fuel pump unit (page 6-47)

YES – GO TO STEP 4.

4. PGM-FI System Inspection

Check the PGM-FI system.

Is the PGM-FI system normal?

- NO** – Faulty PGM-FI system (page 6-12)

YES – GO TO STEP 5.

5. Intake Pipes Leaking Inspection

Check for leaks at the intake manifold pipes.

Are there leaks?

- YES** – • Loose insulator
• Damaged insulator

POOR PERFORMANCE AT HIGH SPEED

1. Ignition Timing Inspection

Check the ignition timing.

Is the ignition timing as specified?

- NO
- Faulty ECM
 - Faulty CKP sensor
 - Faulty CMP sensor
 - Faulty VS sensor
 - Faulty knock sensor
 - Improper valve timing

YES - GO TO STEP 2.

2. Fuel Pump Inspection

Inspect the fuel flow.

Is the fuel pump unit operation normal?

- NO - Faulty fuel pump unit (page 6-47)

YES - GO TO STEP 3.

3. PGM-FI System Inspection

Check the PGM-FI system.

Is the PGM-FI system normal?

- NO - Faulty PGM-FI system (page 6-12)

YES - GO TO STEP 4.

4. Valve Timing Inspection

Check the valve timing.

Is the valve timing correct?

- NO - Camshafts not installed properly

YES - GO TO STEP 5.

5. Valve Spring Inspection

Check for the valve springs.

Is the valve spring free length as specified?

- NO - Faulty valve springs

YES - Not weak

POOR HANDLING

Steering is heavy

- Steering stem adjusting nut too tight
- Damaged steering head bearings
- Low tire pressure
- Faulty HESD

Either wheel is wobbling

- Excessive wheel bearing play
- Bent rim
- Swingarm pivot bearing excessively worn
- Bent frame

The motorcycle pulls to one side

- Front and rear wheel not aligned
- Faulty shock absorber
- Bent fork
- Bent swingarm
- Bent axle
- Bent frame

AIR CLEANER	4-9	CYLINDER HEAD REMOVAL	9-14
AIR CLEANER HOUSING	6-52	CYLINDER HEAD/VALVES SPECIFICATIONS	1-8
AIR INTAKE COVER	3-8	DIODE	19-16
ALTERNATOR CHARGING COIL	17-8	DRIVE CHAIN	4-26
ALTERNATOR COVER INSTALLATION	11-7	DTC INDEX	6-15
ALTERNATOR COVER REMOVAL	11-4	DTC TROUBLESHOOTING	6-17
BALANCER	12-16	ECM	6-74
BANK ANGLE SENSOR	6-71	ECT SENSOR	
BATTERY	17-6	FUEL SYSTEM (PGM-FI)	6-70
BATTERY/CHARGING SYSTEM SPECIFICATIONS	1-11	LIGHTS/METERS/SWITCHES	20-13
BODY PANEL LOCATIONS	3-2	EGCA	6-79
BRAKE FLUID	4-31	EGCA CABLE	4-23
BRAKE FLUID REPLACEMENT/AIR BLEEDING	16-6	ELECTRIC STARTER SPECIFICATIONS	1-11
BRAKE LIGHT SWITCH		EMISSION CONTROL SYSTEMS	1-37
LIGHTS/METERS/SWITCHES	20-18	ENGINE DOES NOT START OR IS	
MAINTENANCE	4-33	HARD TO START	22-2
BRAKE PAD/DISC	16-8	ENGINE IDLE SPEED	6-66
BRAKE PADS WEAR	4-32	ENGINE INSTALLATION	8-8
BRAKE SYSTEM	4-32	ENGINE LACKS POWER	22-3
BRAKE/TAIL LIGHT	20-7	ENGINE OIL/OIL FILTER	4-17
CABLE & HARNESS ROUTING	1-20	ENGINE REMOVAL	8-4
CAM CHAIN TENSIONER LIFTER	9-37	ENGINE STOP RELAY	6-73
CAMSHAFT INSTALLATION	9-30	EOP SWITCH	20-14
CAMSHAFT REMOVAL	9-9	EVAP PURGE CONTROL SOLENOID VALVE/	
CHARGING SYSTEM INSPECTION	17-7	CANISTER (CALIFORNIA TYPE)	6-83
CLUTCH	10-7	EVAPORATIVE EMISSION CONTROL SYSTEM	
CLUTCH SWITCH	20-19	(CALIFORNIA TYPE)	4-22
CLUTCH SYSTEM		EXHAUST PIPE	3-31
MAINTENANCE	4-34	EXHAUST SYSTEM	2-2
TECHNICAL FEATURES	2-7	FAN MOTOR CONTROL SYSTEM	2-6
CLUTCH/STARTER CLUTCH/GEARSHIFT LINKAGE		FAN MOTOR RELAY	7-24
SPECIFICATIONS	1-8	FLYWHEEL	11-6
CMP SENSOR		FORK	14-22
FUEL SYSTEM (PGM-FI)	6-71	FRONT BRAKE CALIPERS	16-27
TECHNICAL FEATURES	2-5	FRONT FENDER	3-18
COMBINATION METER	20-8	FRONT MASTER CYLINDER	16-12
COMPONENT LOCATION		FRONT WHEEL	14-16
ALTERNATOR	11-2	FRONT WHEEL/SUSPENSION/STEERING	
CLUTCH/STARTER CLUTCH/GEARSHIFT		SPECIFICATIONS	1-10
LINKAGE	10-2	FUEL LINE	4-5
CRANKCASE/TRANSMISSION/BALANCER	12-2	FUEL LINE INSPECTION	6-41
CRANKSHAFT/PISTON/CYLINDER	13-2	FUEL PUMP RELAY	6-50
CYLINDER HEAD/VALVES	9-2	FUEL PUMP UNIT	6-47
ENGINE REMOVAL/INSTALLATION	8-2	FUEL RESERVE SENSOR	20-15
FRONT WHEEL/SUSPENSION/STEERING	14-2	FUEL SYSTEM (PGM-FI) SPECIFICATIONS	1-7
FUEL SYSTEM (PGM-FI)	6-2	FUEL TANK	6-51
HYDRAULIC BRAKE	16-2	GEARSHIFT LINKAGE	10-27
REAR WHEEL/SUSPENSION	15-2	GENERAL SPECIFICATIONS	1-5
CONNECTOR LOCATION	6-10	HANDLEBAR SWITCHES	20-17
COOLANT REPLACEMENT	7-6	HANDLEBARS	14-9
COOLING SYSTEM	4-20	HEADLIGHT	20-6
COOLING SYSTEM SPECIFICATIONS	1-7	HEADLIGHT AIM	4-34
CRANKCASE ASSEMBLY	12-22	HEADLIGHT RELAY	20-23
CRANKCASE SEPARATION	12-5	HESD	14-33
CRANKCASE/TRANSMISSION/BALANCER		HESD TROUBLESHOOTING	14-7
SPECIFICATIONS	1-9	HORN	20-22
CRANKPIN BEARING	13-12	HYDRAULIC BRAKE SPECIFICATIONS	1-11
CRANKSHAFT	13-5	IACV	6-66
CRANKSHAFT/PISTON/CYLINDER		IAT SENSOR	6-70
SPECIFICATIONS	1-9	IGNITION SWITCH	20-16
CYLINDER COMPRESSION TEST	9-7	IGNITION SYSTEM INSPECTION	18-5
CYLINDER HEAD ASSEMBLY	9-24	IGNITION SYSTEM SPECIFICATIONS	1-11
CYLINDER HEAD COVER ASSEMBLY	9-34	IGNITION TIMING	18-7
CYLINDER HEAD COVER DISASSEMBLY	9-8	INTAKE AIR DUCT CONTROL	6-81
CYLINDER HEAD COVER INSTALLATION	9-35	KNOCK SENSOR	6-68
CYLINDER HEAD COVER REMOVAL	9-7	LICENCE LIGHT	20-8
CYLINDER HEAD DISASSEMBLY	9-15	LICENSE LIGHT STAY	3-21
CYLINDER HEAD INSPECTION	9-17	LIGHTS/METERS/SWITCHES SPECIFICATIONS	1-12
CYLINDER HEAD INSTALLATION	9-26	LOWER COWL	3-9

INDEX

LUBRICATION & SEAL POINTS.....	1-18	IGNITION SYSTEM.....	18-3
LUBRICATION SYSTEM DIAGRAM.....	5-2	LIGHTS/METERS/SWITCHES.....	20-3
LUBRICATION SYSTEM SPECIFICATIONS.....	1-7	LUBRICATION SYSTEM.....	5-3
MAIN JOURNAL BEARING.....	13-9	MAINTENANCE.....	4-2
MAINTENANCE SCHEDULE.....	4-4	REAR WHEEL/SUSPENSION.....	15-3
MAP SENSOR.....	6-69	SERVICE RULES.....	1-2
MIDDLE COWL.....	3-10	SHIFT FORK/SHIFT DRUM/TRANSMISSION.....	12-6
MIL CIRCUIT TROUBLESHOOTING.....	6-40	SHOCK ABSORBER.....	15-14
MODEL IDENTIFICATION.....	1-3	SIDESTAND.....	4-35
MUFFLER.....	3-24	SIDESTAND SWITCH.....	20-20
NEUTRAL SWITCH.....	20-20	SPARK PLUG.....	4-10
NUTS, BOLTS, FASTENERS.....	4-39	SPEEDOMETER/VS SENSOR.....	20-11
OIL COOLER.....	5-13	STARTER CLUTCH.....	10-23
OIL PRESSURE INSPECTION.....	5-5	STARTER MOTOR.....	19-6
OIL PUMP.....	5-5	STARTER RELAY SWITCH.....	19-14
PGM-FI SYMPTOM TROUBLESHOOTING.....	6-7	STATOR.....	11-5
PGM-FI SYSTEM DIAGRAM.....	6-9	STEERING HEAD BEARINGS.....	4-40
PGM-FI SYSTEM LOCATION.....	6-8	STEERING STEM.....	14-34
PGM-FI TROUBLESHOOTING INFORMATION.....	6-12	SUSPENSION.....	4-35
PILLION SEAT/SEAT BELT.....	3-6	SUSPENSION LINKAGE.....	15-13
PISTON/CYLINDER.....	13-14	SWINGARM.....	15-18
POOR HANDLING.....	22-6	SYSTEM DIAGRAM	
POOR PERFORMANCE AT HIGH SPEED.....	22-6	BATTERY/CHARGING SYSTEM.....	17-2
POOR PERFORMANCE AT LOW		ELECTRIC STARTER.....	19-2
AND IDLE SPEED.....	22-5	IGNITION SYSTEM.....	18-2
PRIMARY INJECTOR.....	6-63	SYSTEM FLOW PATTERN.....	7-2
RADIATOR COOLANT.....	4-20	SYSTEM LOCATION.....	20-2
RADIATOR RESERVE TANK.....	7-24	SYSTEM TESTING.....	7-5
RADIATOR/COOLING FAN.....	7-11	TACHOMETER.....	20-12
REAR BRAKE CALIPER.....	16-30	THERMOSTAT.....	7-8
REAR FENDER A.....	3-19	THROTTLE BODY.....	6-58
REAR FENDER B.....	3-19	THROTTLE OPERATION.....	4-8
REAR FENDER C.....	3-20	TOP SHELTER.....	3-7
REAR MASTER CYLINDER.....	16-18	TORQUE VALUES.....	1-13
REAR SEAT COWL.....	3-8	TRIM CLIPS.....	3-4
REAR WHEEL.....	15-6	TROUBLESHOOTING	
REAR WHEEL/SUSPENSION SPECIFICATIONS.....	1-10	BATTERY/CHARGING SYSTEM.....	17-5
REARVIEW MIRROR/WINDSCREEN.....	3-11	CLUTCH/STARTER CLUTCH/GEARSHIFT	
REGULATOR/RECTIFIER.....	17-8	LINKAGE.....	10-4
RIGHT CRANKCASE COVER INSTALLATION.....	10-30	COOLING SYSTEM.....	7-4
RIGHT CRANKCASE COVER REMOVAL.....	10-5	CRANKCASE/TRANSMISSION/BALANCER.....	12-4
SEAT RAIL.....	3-23	CRANKSHAFT/PISTON/CYLINDER.....	13-4
SEAT/SIDE COVER.....	3-6	CYLINDER HEAD/VALVES.....	9-6
SECONDARY AIR SUPPLY SYSTEM		ELECTRIC STARTER.....	19-4
FUEL SYSTEM (PGM-FI).....	6-77	FRAME/BODY PANELS/EXHAUST SYSTEM.....	3-3
MAINTENANCE.....	4-21	FRONT WHEEL/SUSPENSION/STEERING.....	14-6
SECONDARY INJECTOR.....	6-55	HYDRAULIC BRAKE.....	16-5
SERVICE INFORMATION		IGNITION SYSTEM.....	18-4
ALTERNATOR.....	11-3	LIGHTS/METERS/SWITCHES.....	20-5
BATTERY/CHARGING SYSTEM.....	17-3	LUBRICATION SYSTEM.....	5-4
CLUTCH/STARTER CLUTCH/GEARSHIFT		REAR WHEEL/SUSPENSION.....	15-5
LINKAGE.....	10-3	TURN SIGNAL LIGHT.....	20-6
COOLING SYSTEM.....	7-3	TURN SIGNAL RELAY.....	20-22
CRANKCASE/TRANSMISSION/BALANCER.....	12-3	UPPER COWL.....	3-13
CRANKSHAFT/PISTON/CYLINDER.....	13-3	UPPER INNER COVER.....	3-9
CYLINDER HEAD/VALVES.....	9-3	VALVE CLEARANCE.....	4-12
ELECTRIC STARTER.....	19-3	VALVE GUIDE REPLACEMENT.....	9-20
ENGINE REMOVAL/INSTALLATION.....	8-3	VALVE SEAT INSPECTION/REFACING.....	9-21
FRAME/BODY PANELS/EXHAUST SYSTEM.....	3-3	WATER PUMP.....	7-21
FRONT WHEEL/SUSPENSION/STEERING.....	14-3	WHEELS/TIRES.....	4-39
FUEL SYSTEM (PGM-FI).....	6-3	WIRING DIAGRAM.....	21-3
HYDRAULIC BRAKE.....	16-4		



MADE FROM 50% RECYCLED PAPER
MINIMUM 10% POST-CONSUMER CONTENT

61MFL00

©2008 Honda Motor Co., Ltd. Tokyo, Japan - All Rights Reserved

IPC1800.2008.03
PRINTED IN U.S.A.